

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y_yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
MASS AIR FLOW SYSTEM PERFORMANCE (RATIONALITY)	P0101	Rationality Under conditions when the two should match, the Mass Air Flow reading should match calculated Mass Air Flow (based on speed density). If delta Mass Air Flow is too large, a faulty Mass Air Flow condition exists.	Mass Air Flow frequency > 50% different from speed density calculation.	No MAF, MAP or TPS DTC's System Voltage > = 10 volts System Voltage < = 16 volts TP < 50% when engine vacuum > 65 kpa Delta TP over 100 msec < 3% All above condition's are stable for 2 seconds.	50 test failures in a 100 test sample 100 ms/test Continuous.	DTC Type B
MASS AIR FLOW SENSOR CIRCUIT LOW FREQUENCY	P0102	Circuit Continuity Detects Mass Air Flow frequency readings outside normal operating range. If the frequency is outside a calibrated range, a faulty Mass Air Flow condition exists.	Mass Air Flow frequency < 10 Hz	Engine Speed > = 300 RPM System Voltage > = 8 volts Above conditions met for >= 0 seconds.	4 test failures in a 12 test sample. Reference interrupt loop Continuous.	DTC Type A
MASS AIR FLOW SENSOR CIRCUIT HIGH FREQUENCY	P0103	Circuit Continuity Detects Mass Air Flow frequency readings outside normal operating range. If the frequency is outside a calibrated range, a faulty Mass Air Flow condition exists.	Mass Air Flow frequency > 11,250 Hz	Engine Speed > = 300 RPM System Voltage > = 8 volts Above conditions met for >= 0 seconds.	6 test failures in a 12 test sample. Reference interrupt loop Continuous.	DTC Type A

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y_yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
MANIFOLD ABSOLUTE PRESSURE SENSOR CIRCUIT LOW	P0107	Circuit Continuity This DTC detects a continuous short to low or open in either the signal circuit or the MAP sensor.	Raw MAP < 0.10 Volts	No TP sensor DTC's set Engine Running Throttle Position is <= 0% when engine speed is <= 1200 RPM or Throttle Position is <= 20 % when engine speed is > 1200 RPM	150 test failures in a 300 test sample. 12.5 ms/test (Every MAP read) Continuous	DTC Type A
MANIFOLD ABSOLUTE PRESSURE SENSOR CIRCUIT HIGH	P0108	Circuit Continuity This DTC detects a continuous short to high in either the signal circuit or the MAP sensor.	Raw MAP > 4.3 Volts	No TP sensor DTC's set Engine Running Throttle Position is < 5 % when engine speed is <= 1000 RPM or Throttle Position is < 18 % when engine speed is > 1000 RPM	250 test failures in a 300 test sample. 12.5 ms/test (Every MAP read) Continuous	DTC Type A
INTAKE AIR TEMP SENSOR CIRCUIT LOW (HIGH TEMP)	P0112	Circuit Continuity This DTC detects a continuous short to ground in the IAT signal circuit or the IAT sensor	<u>Low, High Resistance Pull-up</u> Raw IAT < 0.24 Volts	No MAF sensor DTC's set No ECT sensor DTC's set No VS sensor DTC's set Vehicle Speed >= 25 mph Engine Run Time > 30 seconds	45 test failures in a 50 test sample 100 ms/test Continuous	DTC Type B
INTAKE AIR TEMP SENSOR CIRCUIT HIGH (LOW TEMP)	P0113	Circuit Continuity This DTC detects a continuous open or short to high in the IAT signal circuit or the IAT sensor	<u>Low, High Resistance Pull-up</u> Raw IAT > 4.96 Volts	No MAF sensor DTC's set No ECT sensor DTC's set No VS sensor DTC's set Coolant Temperature > 0 deg. C Air Flow < 15 g/sec Vehicle Speed < 7 mph	45 test failures in a 50 test sample. 100 ms/test Continuous	DTC Type B
ENGINE COOLANT TEMP SENSOR CIRCUIT LOW (HIGH TEMP)	P0117	Circuit Continuity This DTC detects a continuous short to ground in the ECT signal circuit or the ECT sensor.	<u>Low Resistance Pull-up</u> Raw ECT < 1.12 Volts <u>High Resistance Pull-up</u> Raw ECT < 0.039 Volts	Engine run time > 10 seconds	100 test failures in a 200 test sample. 100 ms/test Continuous	DTC Type A
ENGINE COOLANT TEMP SENSOR CIRCUIT HIGH (LOW TEMP)	P0118	Circuit Continuity This DTC detects a continuous short to high or open in the ECT signal circuit or the ECT sensor.	<u>Low, High Resistance Pull-up</u> Raw ECT > 4.9 Volts	Engine run time > 60 seconds	100 test failures in a 200 test sample. 100 ms/test Continuous	DTC Type A

97c57G_Y_yE.doc

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y__yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
ENGINE COOLANT TEMP EXCESSIVE TIME TO CLOSED LOOP	P0125	Rationality This DTC detects if a stabilized minimum closed loop is reached and maintained after engine startup.	Minimum stabilized ECT < 33.6 deg C	Engine running 10 deg. C <= Start up ECT < 40 deg. C (test must run once for a hot start) No ECT, IAT DTC's set IAT >= 10 deg. C VS >= 1 mph 2300g/s > accum air > 4500g/s 140 sec < Closed Loop timer < 300 secs (depends on start-up temp)	2 consecutive test failures Every 100 ms	DTC Type B
(B1S1) HEATED OXYGEN SENSOR CIRCUIT LOW	P0131	Circuit Continuity Detects an HO2S voltage stationary lean (low signal voltage) condition.	Oxygen sensor voltage below 200 mv	Closed Loop Fuel Control. TPS: 3-20% Minimum system voltage: 9v No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	310 test failures in a 330 test sample and polling the rear HO2S sensor twice. 100 ms/test Continuous	DTC Type A
(B1S1) HEATED OXYGEN SENSOR CIRCUIT HIGH	P0132	Circuit Continuity Detects an HO2S voltage stationary rich (high signal voltage) condition.	Oxygen sensor voltage above 775 mv	Closed Loop Fuel Control. Learn enabled - long term fuel correction TPS: 0- 100 % Minimum system voltage: 9v No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	310 test failures in a 330 test sample and polling the rear HO2S sensor twice. 100 ms/test Continuous	DTC Type A
(B1S1) HEATED OXYGEN SENSOR CIRCUIT SLOW RESPONSE	P0133	Response Detects slow rich to lean and lean to rich HO2S signal transition rates.	The oxygen sensor transitions between rich and lean states. HO2S sensor average transition time: L/R > 100 ms R/L > 100 ms	Closed Loop Fuel Control. 1000 < RPM < 2300 15 < Air Flow < 35 g/sec. Minimum system voltage: 9v ECT > 65 Deg C CCP>0 Engine Run > 2.9 sec No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	100 sec Once per trip.	DTC Type B

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y__yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
(B1S1) HEATED OXYGEN SENSOR CIRCUIT NO ACTIVITY	P0134	Circuit Continuity Detects an HO2S circuit open.	Oxygen sensor voltage remains between 350-550 mv	Closed Loop Fuel Control. Predicted Oxygen Sensor Temperature greater than 390 C. Minimum system voltage: 9v No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active Engine Run > 70 sec	570 test failures in a 600 test sample 100 ms/test Continuous.	DTC Type A
(B1S1) HEATED OXYGEN SENSOR HEATER CIRCUIT	P0135	Detects a malfunctioning HO2S heater circuit by comparing time to HO2S activity to a calibrated threshold.	Oxygen sensor time to activity exceeds a lookup table value as a function of average flow rate.	Cold Start (IAT & ECT <50 C and less than 8 degrees difference) Valid mid bias calculated 16 v > System Voltage >10 v. No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	Once per cold start trip.	DTC Type B
(B1S2) HEATED OXYGEN SENSOR CIRCUIT LOW	P0137	Circuit Continuity Detects an HO2S voltage stationary lean (low signal voltage) condition.	Oxygen sensor voltage remains below 40 mv	Closed Loop Fuel Control. TPS: 3-20% Minimum system voltage: 9v No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	380 test failures in a 400 test sample and polling the front HO2S sensor twice. 100 ms/test Continuous	DTC Type B
(B1S2) HEATED OXYGEN SENSOR CIRCUIT HIGH	P0138	Circuit Continuity Detects an HO2S voltage stationary rich (high signal voltage) condition.	Oxygen sensor voltage above 930 mv	Closed Loop Fuel Control. Learn enabled - long term fuel correction TPS: 0- 100 % Minimum system voltage: 9v No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	380 test failures in a 400 test sample and polling the front HO2S sensor twice. 100 ms/test Continuous	DTC Type B

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y_yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
(B1S2) HEATED OXYGEN SENSOR CIRCUIT NO ACTIVITY	P0140	Circuit Continuity Detects an HO2S circuit open.	Oxygen sensor voltage remains between 409-489 mv.	Closed Loop Fuel Control. Predicted Oxygen Sensor Temperature greater than 390 C. Minimum system voltage: 9v No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active Engine Run > 70 sec	1450 test failures in a 1500 test sample 100 ms/test Continuous	DTC Type B
(B1S2) HEATED OXYGEN SENSOR HEATER CIRCUIT	P0141	Detects a malfunctioning HO2S heater circuit by comparing time to HO2S activity to a calibrated threshold.	Oxygen sensor time to activity exceeds a lookup table value as a function of average flow rate.	Cold Start (IAT & ECT <50 C and less than 8 degrees difference) Valid mid bias calculated 16 v > System Voltage >10 v. No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	Once per cold start trip.	DTC Type B
(B2S1) HEATED OXYGEN SENSOR CIRCUIT LOW	P0151	Circuit Continuity Detects an HO2S voltage stationary lean (low signal voltage) condition.	Oxygen sensor voltage below 200 mv	Closed Loop Fuel Control. TPS: 3-20% Minimum system voltage: 9v No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	310 test failures in a 330 test sample and polling the rear HO2S sensor twice. 100 ms/test Continuous	DTC Type A
(B2S1) HEATED OXYGEN SENSOR CIRCUIT HIGH	P0152	Circuit Continuity Detects an HO2S voltage stationary rich (high signal voltage) condition.	Oxygen sensor voltage above 775 mv	Closed Loop Fuel Control. Learn enabled - long term fuel correction TPS: 0- 100 % Minimum system voltage: 9v No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	310 test failures in a 330 test sample and polling the rear HO2S sensor twice. 100 ms/test Continuous	DTC Type A

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y_yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
(B2S1) HEATED OXYGEN SENSOR CIRCUIT SLOW RESPONSE	P0153	Response Detects slow rich to lean and lean to rich HO2S signal transition rates.	The oxygen sensor transitions between rich and lean states. HO2S sensor average transition time: L/R > 100 ms R/L > 100 ms	Closed Loop Fuel Control. 1000 < RPM < 2300 15 < Air Flow < 35 g/sec. Minimum system voltage: 9v ECT > 65 Deg C CCP>0 Engine Run > 2.9 sec No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	100 sec Once per trip.	DTC Type B
(B2S1) HEATED OXYGEN SENSOR CIRCUIT NO ACTIVITY	P0154	Circuit Continuity Detects an HO2S circuit open.	Oxygen sensor voltage remains between 350-550 mv	Closed Loop Fuel Control. Predicted Oxygen Sensor Temperature greater than 390 C. Minimum system voltage: 9v No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active Engine Run > 70 sec	570 test failures in a 600 test sample 100 ms/test Continuous	DTC Type A
(B2S1) HEATED OXYGEN SENSOR HEATER CIRCUIT	P0155	Detects a malfunctioning HO2S heater circuit by comparing time to HO2S activity to a calibrated threshold.	Oxygen sensor time to activity exceeds a lookup table value as a function of average flow rate.	Cold Start (IAT & ECT <50 C and less than 8 degrees difference) Valid mid bias calculated 16 v > System Voltage >10 v. No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	Once per cold start trip.	DTC Type B
(B2S2) HEATED OXYGEN SENSOR CIRCUIT LOW	P0157	Circuit Continuity Detects an HO2S voltage stationary lean (low signal voltage) condition.	Oxygen sensor voltage remains below 40 mv	Closed Loop Fuel Control. TPS: 3-20% Minimum system voltage: 9v No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	380 test failures in a 400 test sample and polling the front HO2S sensor twice. 100 ms/test Continuous	DTC Type B

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y__yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
(B2S2) HEATED OXYGEN SENSOR CIRCUIT HIGH	P0158	Circuit Continuity Detects an HO2S voltage stationary rich (high signal voltage) condition.	Oxygen sensor voltage above 930 mv	Closed Loop Fuel Control. Learn enabled - long term fuel correction TPS: 0- 100 % Minimum system voltage: 9v No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	380 test failures in a 400 test sample and polling the front HO2S sensor twice. 100 ms/test Continuous	DTC Type B
(B2S2) HEATED OXYGEN SENSOR CIRCUIT NO ACTIVITY	P0160	Circuit Continuity Detects an HO2S circuit open.	Oxygen sensor voltage remains between 409-489 mv.	Closed Loop Fuel Control. Predicted Oxygen Sensor Temperature greater than 390 C. Minimum system voltage: 9v No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active Engine Run > 70 sec	1450 test failures in a 1500 test sample 100 ms/test Continuous	DTC Type B
(B2S2) HEATED OXYGEN SENSOR HEATER CIRCUIT	P0161	Detects a malfunctioning HO2S heater circuit by comparing time to HO2S activity to a calibrated threshold.	Oxygen sensor time to activity exceeds a lookup table value as a function of average flow rate.	Cold Start (IAT & ECT <50 C and less than 8 degrees difference) Valid mid bias calculated 16 v > System Voltage >10 v. No AIR, EGR, Catalyst diagnostic active No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	Once per cold start trip.	DTC Type B
BANK 1 FUEL TRIM SYSTEM LEAN	P0171	Determines if the fuel control system is in a lean condition	The normalized weighted long term fuel trim parameter > +23%	No VSS, Throttle, Purge control, Misfire, IAT, MAP, Camel Mode, Injector, EST Control, EGR Sensor, Coolant, Crank sensor, Air flow, or AIR DTC's BARO > 72.5 KPa 115°C > ECT > 60°C 150 g/s > MAF > 4 g/s 95 Kpa > MAP > 20 KPa 115°C > IAT > -25°C 4500 rpm > Engine speed > 500 rpm TP < 80% VS < 85 mph	12 seconds Continuous	DTC Type B

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y__yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
BANK 1 FUEL TRIM SYSTEM RICH	P0172	Determines if the fuel control system is in a rich condition	The normalized weighted long term fuel trim parameter < -13% and no excessive purge vapors present	No VSS, Throttle, Purge control, Misfire, IAT, MAP, Camel Mode, Injector, EST Control, EGR Sensor, Coolant, Crank sensor, Air flow, or AIR DTC's BARO > 72.5 KPa 115°C > ECT > 60°C 150 g/s > MAF > 4 g/s 95 Kpa > MAP > 20 KPa 115°C > IAT > -25°C 4500 rpm > Engine speed > 500 rpm TP < 80% VS < 85 mph	35 seconds Continuous	DTC Type B
BANK 2 FUEL TRIM SYSTEM LEAN	P0174	Determines if the fuel control system is in a lean condition	The normalized weighted long term fuel trim parameter > +23%	No VSS, Throttle, Purge control, Misfire, IAT, MAP, Camel Mode, Injector, EST Control, EGR Sensor, Coolant, Crank sensor, Air flow, or AIR DTC's BARO > 72.5 KPa 115°C > ECT > 60°C 150 g/s > MAF > 4 g/s 95 Kpa > MAP > 20 KPa 115°C > IAT > -25°C 4500 rpm > Engine speed > 500 rpm TP < 80% VS < 85 mph	12 seconds Continuous	DTC Type B
BANK 2 FUEL TRIM SYSTEM RICH	P0175	Determines if the fuel control system is in a rich condition	The normalized weighted long term fuel trim parameter < -13% and no excessive purge vapors present	No VSS, Throttle, Purge control, Misfire, IAT, MAP, Camel Mode, Injector, EST Control, EGR Sensor, Coolant, Crank sensor, Air flow, or AIR DTC's BARO > 72.5 KPa 115°C > ECT > 60°C 150 g/s > MAF > 4 g/s 95 Kpa > MAP > 20 KPa 115°C > IAT > -25°C 4500 rpm > Engine speed > 500 rpm TP < 80% VS < 85 mph	35 seconds Continuous	DTC Type B

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y__yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
FUEL PUMP CONTROL CIRCUIT	P0230	Circuit Continuity Control circuit voltage is monitored during operation. It should be low during operation and near B+ when "off".	The PCM detects that the commanded state of the driver and the actual state of the control circuit do not match.	Engine speed > 600 rpm. Ignition voltage > 6.0 volts, but < 16 volts	10 seconds Continuous.	DTC Type A
ENGINE MISFIRE DETECTED Cylinder 1 Misfire Cylinder 2 Misfire Cylinder 3 Misfire Cylinder 4 Misfire Cylinder 5 Misfire Cylinder 6 Misfire Cylinder 7 Misfire Cylinder 8 Misfire	P0300 P0301 P0302 P0303 P0304 P0305 P0306 P0307 P0308	These DTC's will determine if a multiple or a cylinder specific misfire is occurring by monitoring crankshaft velocity.	Deceleration index vs Engine speed vs Load with Distributor position FTP Threshold - 1.5% I/M Threshold - 1.5% Catalyst Damage -See speed/ load chart	No MAF DTC's No Cam Position Sensor DTC's No Crank Position Sensor DTC's No Vehicle Speed Sensor DTC's No Engine Coolant Sensor DTC's No Throttle Position Sensor DTC's No Camel Mode DTC's Engine speed > 400 RPM but < 3001 RPM System voltage > 11 volts but < 16 volts + Throttle position D < 2.0% / 100 ms - Throttle position D < 1.0% / 100 ms Engine run time > 20 revs ECT > -7C but < 130C Not a Rough Road - ABS Fuel level > 10% (Does not disable if a Fuel System DTC is active.)	Emission Level: 10 failed 200 revolution blocks out of 16 Catalyst Damaging Level: 4 failed 200 revolution block Continuous	DTC Type B Emission DTC Type A Catalyst Damaging
KNOCK SENSOR MODULE CIRCUIT	P0325	Check knock detector integrated circuit.	Delta filtered noise level greater than a defined value or instantaneous knock signal greater than a defined value for a defined time.	To run delta noise test: 1500 < engine rpm < 3500 Coolant temp > 70C TPS > 2% Engine run time > 20 sec MAP < 60 kPa. To run instantaneous knock signal test: MAP > 60 kPa.	24 failed tests within 30 tests. Each test is 100 msec.	DTC Type B
KNOCK SENSOR 1 CIRCUIT LOW	P0327	Check knock sensor filtered noise level - front knock sensor	Delta filtered noise level outside of defined range. Filtered noise counts < 12 or > 254	To run test: 1500 < engine rpm < 3500 Coolant temp > 70C TPS > 2% Engine run time > 20 sec MAP < 60 kPa.	24 failed tests within 30 tests. Each test is 100 msec.	DTC Type B

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y_yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
KNOCK SENSOR 2 CIRCUIT LOW	P0332	Check knock sensor filtered noise level - rear knock sensor	Delta filtered noise level outside of defined range. Filtered noise counts < 12 or > 254	To run test: 1500 < engine rpm < 3500 Coolant temp > 70C TPS > 2% Engine run time > 20 sec MAP < 60 kPa.	24 failed tests within 30 tests. Each test is 100 msec.	DTC Type B
CRANKSHAFT POSITION SENSOR CIRCUIT	P0335	4X signal This diagnostic will detect a low duty cycle (circuit failure) from the crankshaft position sensor.	10 % < Crank sensor duty cycle < 90 %	9 Volts < Ignition Voltage < 17 Volts 500 rpm < Engine speed < 4000 rpm Sensed mass airflow >= 2.8984 No Cam Position Sensor DTC's No Airflow DTC's	15 test failures in a 30 test sample. 100 ms/test Continuous	DTC Type B
CRANKSHAFT POSITION SENSOR CIRCUIT RANGE/PERF.	P0336	4X signal This diagnostic will detect a out of range signal from the crankshaft position sensor.	58.8 % < Crank sensor duty cycle < 77.8 %	9 Volts < Ignition Voltage < 17 Volts 500 rpm < Engine speed < 4000 rpm	50 test failures in a 3120 test sample. 50 ms/test Continuous	DTC Type B
CAMSHAFT POSITION SENSOR CIRCUIT RANGE/PERF.	P0341	Monitor for cam position state change when expected at crank-shaft sync.	Evaluated at crankshaft position synchronization.	9 Volts < Ignition Voltage < 17 Volts Engine RPM < 4000	10 Failures out of 75 100 ms/test Continuous	DTC Type B
CAMSHAFT POSITION SENSOR CIRCUIT LOW	P0342	Monitor for continuous low state when state should be high.	Evaluated at crankshaft position synchronization	9 Volts < Ignition Voltage < 17 Volts Engine RPM < 4000	15 Failures out of 50 100 msec / test Continuous	DTC Type B
CAMSHAFT POSITION SENSOR CIRCUIT HIGH	P0343	Monitor for continuous high state when state should be low.	Evaluated at crankshaft position synchronization	9 Volts < Ignition Voltage < 17 Volts Engine RPM < 4000	15 Failures out of 50 100 msec / test Continuous	DTC Type B
IGNITION CONTROL #1 CIRCUIT	P0351	Monitor EST channel A (Cylinder 1)	EST line is Stuck Low, is open, or is Stuck High. If engine speed is >= 1500 RPM test failures and samples count as 2.	9 Volts < Ignition Voltage < 17 Volts	30 Failures out of 100 12.5 msec / test Continuous	DTC Type A

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y_yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
IGNITION CONTROL #2 CIRCUIT	P0352	Monitor EST channel D (Cylinder 2)	EST line is Stuck Low, is open, or is Stuck High. If engine speed is ≥ 1500 RPM test failures and samples count as 2.	9 Volts < Ignition Voltage < 17 Volts	30 Failures out of 100 12.5 msec / test Continuous	DTC Type A
IGNITION CONTROL #3 CIRCUIT	P0353	Monitor EST channel H (Cylinder 3)	EST line is Stuck Low, is open, or is Stuck High. If engine speed is ≥ 1500 RPM test failures and samples count as 2.	9 Volts < Ignition Voltage < 17 Volts	30 Failures out of 100 12.5 msec / test Continuous	DTC Type A
IGNITION CONTROL #4 CIRCUIT	P0354	Monitor EST channel G (Cylinder 4)	EST line is Stuck Low, is open, or is Stuck High. If engine speed is ≥ 1500 RPM test failures and samples count as 2.	9 Volts < Ignition Voltage < 17 Volts	30 Failures out of 100 12.5 msec / test Continuous	DTC Type A
IGNITION CONTROL #5 CIRCUIT	P0355	Monitor EST channel F (Cylinder 5)	EST line is Stuck Low, is open, or is Stuck High. If engine speed is ≥ 1500 RPM test failures and samples count as 2.	9 Volts < Ignition Voltage < 17 Volts	30 Failures out of 100 12.5 msec / test Continuous	DTC Type A
IGNITION CONTROL #6 CIRCUIT	P0356	Monitor EST channel E (Cylinder 6)	EST line is Stuck Low, is open, or is Stuck High. If engine speed is ≥ 1500 RPM test failures and samples count as 2.	9 Volts < Ignition Voltage < 17 Volts	30 Failures out of 100 12.5 msec / test Continuous	DTC Type A
IGNITION CONTROL #7 CIRCUIT	P0357	Monitor EST channel C (Cylinder 7)	EST line is Stuck Low, is open, or is Stuck High. If engine speed is ≥ 1500 RPM test failures and samples count as 2.	9 Volts < Ignition Voltage < 17 Volts	30 Failures out of 100 12.5 msec / test Continuous	DTC Type A
IGNITION CONTROL #8 CIRCUIT	P0358	Monitor EST channel B (Cylinder 8)	EST line is Stuck Low, is open, or is Stuck High. If engine speed is ≥ 1500 RPM test failures and samples count as 2.	9 Volts < Ignition Voltage < 17 Volts	30 Failures out of 100 12.5 msec / test Continuous	DTC Type A

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y_yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
AIR INJECTION SYSTEM	P0410	<p>Passive: HO2S sensors indicate lean condition present during open loop operation. Verify proper operation of AIR pump.</p> <p>Active: HO2S sensors indicate lean condition present when AIR pump is turned on during closed loop operation.</p>	<p>Passive: HO2S sensor < approx. 400 mv during open loop operation</p> <p>Active: HO2S sensor < 222 mv for >= 1.5 seconds or fuel integrator delta of 14 counts when pump turned on during closed loop operation.</p>	<p>Passive: No MAF, MAP, IAT, ECT, TPS, HO2S, injector, misfire, EGR, fuel system, AIR pump relay IAC or EVAP DTC set. HO2S mid bias volt test passed. Engine run > 2 sec. Air flow < 30 g/s ECT < 109 deg C A/F Ratio > 13:1 Engine Load < 25% of full engine load) Ignition voltage > 11.7V PE, DFCO, COT not active</p> <p>Active Same as above except: MBV test fail will not disable Engine run >= 200 sec after closed loop operation A/F = 14.7:1 Fuel integrator >123 & < 136 RPM > 600 ECT > = 70 Deg C Engine load < 25% Air flow <= 22 g/s IAT >10 In BLM cell 0,3,4,5,6,9,10,20,21,22</p>	<p>Passive: During open loop operation. Once per trip.</p> <p>Active: 3 seconds Up to 3 times per trip if passive test fails or is inconclusive</p>	DTC Type B
AIR INJECTION SYSTEM SOLENOID CONTROL CIRCUIT MALF (ODM)	P0412	Circuit Continuity Control circuit voltage is monitored during operation. It should be low during operation and near B+ when "off".	The PCM detects that the commanded state of the driver and the actual state of the control circuit do not match.	Engine speed > 600 rpm. Ignition voltage > 6.0 volts, but < 16 volts	10 seconds Continuous.	DTC Type B

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y__yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
AIR INJECTION SYSTEM RELAY CONTROL CIRCUIT MALF (ODM)	P0418	Circuit Continuity Control circuit voltage is monitored during operation. It should be low during operation and near B+ when "off".	The PCM detects that the commanded state of the driver and the actual state of the control circuit do not match.	Engine speed > 600 rpm. Ignition voltage > 6.0 volts, but < 16 volts	10 seconds Continuous.	DTC Type B
BANK 1 CATALYTIC CONVERTER LOW OXYGEN STORAGE	P0420	Comparing rear HO2S sensor signal amplitude to the front HO2S sensor signal amplitude thereby measuring the oxygen storage capability of the catalytic converter.	Rear HO2S amplitude approaches a calibrated threshold (approx. 90% of front HO2S amplitude)	Catalyst predicted temperature $\geq 400^{\circ}\text{C}$ Δ engine load < 2%/sec ECT > 65°C Vehicle speed < 85 mph TPS > 2% Engine Speed < 4000 rpm 14 g/s < Air flow < 40 g/s 25 kPa < MAP < 80 kPa Closed loop No VSS, Transmission, Throttle, Purge control, Oxygen sensor, Misfire, IAT, MAP, Camel Mode, Injector, EST Control, EGR Sensor, Coolant, Crank sensor, Cam sensor, Air flow, AIR, IAC, or Fuel trim DTC's	50 acceptable HO2S samples collected at a 12.5 ms rate. Once per trip	DTC Type A
BANK 2 CATALYTIC CONVERTER LOW OXYGEN STORAGE	P0430	Comparing rear HO2S sensor signal amplitude to the front HO2S sensor signal amplitude thereby measuring the oxygen storage capability of the catalytic converter.	Rear HO2S amplitude approaches a calibrated threshold (approx. 90% of front HO2S amplitude)	Catalyst predicted temperature $\geq 400^{\circ}\text{C}$ Δ engine load < 2%/sec ECT > 65°C Vehicle speed < 85 mph TPS > 2% Engine Speed < 4000 rpm 14 g/s < Air flow < 40 g/s 25 kPa < MAP < 80 kPa Closed loop No VSS, Transmission, Throttle, Purge control, Oxygen sensor, Misfire, IAT, MAP, Camel Mode, Injector, EST Control, EGR Sensor, Coolant, Crank sensor, Cam sensor, Air flow, AIR, IAC, or Fuel trim DTC's	50 acceptable HO2S samples collected at a 12.5 ms rate. Once per trip	DTC Type A

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y__yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
EVAP VACUUM SWITCH CIRCUIT LOW (DURING PURGE)	P0441	Detects a purge solenoid stuck closed by monitoring the EVAP. Purge Vacuum Switch state when purge is commanded. The vacuum switch state should change to high (open) if there is vacuum (solenoid open) applied to the system.	EVAP. purge vacuum switch state = low (closed) for a period > 5 seconds.	No Vacuum Switch DTC No IAT, MAP, ECT, or TPS DTC No Purge Solenoid ODM Baro > 75 kPa ECT < 115 Deg C IAT > 3 Deg C @ power-up; < 80 Deg C run ECT/IAC Delta < 10 Deg C @ power-up Purge Duty Cycle > 90% Manifold. VAC. > 15 kpa TPS >6% but < 60% Engine RPM > 800 but < 3000	For 5 test failures Continuous	DTC Type B
EVAP CANISTER PURGE SOLENOID VALVE CIRCUIT (ODM)	P0443	Circuit Continuity Control circuit voltage is monitored during operation. It should be low during operation and near B+ when "off".	The PCM detects that the commanded state of the driver and the actual state of the control circuit do not match.	Engine speed > 600 rpm. Ignition voltage > 6.0 volts, but < 16 volts	10 seconds. continuous.	DTC Type B
PRIMARY COOLING FAN RELAY CONTROL CIRCUIT MALF (ODM)	P0480	Control circuit voltage is monitored during operation. It should be low during operation and near B+ when "off".	The PCM detects that the commanded state of the driver and the actual state of the control circuit do not match.	Engine speed greater than 600 rpm. Ignition voltage > 6.0 volts, but < 16 volts	10 seconds. Continuous.	DTC Type B
SECONDARY COOLING FAN RELAY CONTROL CIRCUIT MALF (ODM)	P0481	Control circuit voltage is monitored during operation. It should be low during operation and near B+ when "off".	The PCM detects that the commanded state of the driver and the actual state of the control circuit do not match.	Engine speed greater than 600 rpm. Ignition voltage > 6.0 volts, but < 16 volts	10 seconds. Continuous.	DTC Type B

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y__yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
VEHICLE SPEED SENSOR SYSTEM PERFORMANCE (MANUAL TRANS)	P0500	This DTC detects a missing signal from the vehicle speed sensor in a manual transmission vehicle.	Vehicle speed = 0 when enable conditions met	Manual VSS diagnostic enabled No MAP DTC's set No TPS DTC's set No ECT DTC's set No idle system DTC's set No IAC valve DTC's set Coolant >= 35 deg. C Engine speed > 1000 rpm 5 % < throttle position < 100 % A/C off: 40 kpa < MAP < 100 kpa A/C on: 45 kpa < MAP < 100 kpa Above conditions met > 2 seconds to enable diagnostic	500 test failures in a 1000 test sample 100 ms/test Continuous	DTC Type B
IDLE SYSTEM - LOW ENGINE SPEED	P0506	Determines if a low idle is a result of an engine mechanical problem. Low RPM is 100 RPM below desired	Idle > 100 RPM low from desired	Passive: No MAF, MAP, IAT, ECT, TP, Injector, Fuel System, Misfire, EGR, VSS or Purge DTC Engine Run > 60 sec. ECT >= 60 Deg C Baro > 65 kPa IGN. voltage > 9 & < 17 volts IAT > -10 deg C TP < 1% VS <= 1 MPH Time > 5 seconds to fail. > 8 seconds to pass	Passive: Must be outside the fail criteria continuously for 5 seconds. Must be within pass criteria for 8 seconds continuously.	DTC Type B

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y_yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
IDLE SYSTEM - HIGH ENGINE SPEED	P0507	Determines if a high idle is a result of an engine mechanical problem. High RPM is 200 RPM above desired	Passive: Idle > 200 RPM high from desired	Passive: No MAF, MAP, IAT, ECT, TP, Injector, Fuel System, Misfire, EGR, VSS or Purge DTC Engine Run > 60 sec. ECT >= 60 Deg C Baro > 65 kPa IGN. voltage > 9 & < 17 volts IAT > -10 deg C TP < 1% VS <= 1 MPH Time > 5 seconds to fail. > 8 seconds to pass	Passive: Must be outside the fail criteria continuously for 5 seconds. Must be within pass criteria for 8 seconds continuously.	DTC Type B
PCM - FLASH EEPROM CHECKSUM ERROR	P0601	Indicates that PCM is unable to correctly read data from the flash memory.	Calculated checksum does not match expected checksum for the program.	Ignition in Run or Crank.	One occurrence. Check is performed at power-up and every 60 seconds thereafter.	DTC Type A
PCM - PROGRAMMING ERROR	P0602	Indicates that the PCM is not flashed	PCM not flashed	Ignition on	1 test failure 100 ms after PCM powered up	DTC Type A

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y__yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
PCM - INTERNAL COMM. INTERRUPTED	P0606	Indicates that the PCM has detected an internal processor integrity fault	1) Redundant desired throttle position calculations differ by > than 5%. OR 2) ETC software is not executed in proper order. OR 3) COP1 fails to halt processor < 14 ms after toggle. OR 4) COP2 fails to halt peripheral devices < 24 ms after toggle. OR 5) Peripheral device reset line is stuck low. OR 6) 6.25 ms interrupt does not occur within 5.65 ms to 6.75 ms. OR 7) Clock control registers are not programmed correctly.	Ignition in Run or Crank.	1) Fault counter increments by 10 for every error, decrements by 1 for every pass; threshold = 60. Check runs every 18.75 ms. 2) One occurrence or Continuous error for immediate 200 ms after a reset. Check runs every 18.75 ms. 3) & 4) One occurrence. Checked every other power-down. 5) One occurrence. Checked every power-up. 6) & 7) Fault counter increments by 10 for every error, decrements by 1 for every pass; threshold = 60. Check runs every 6.25 ms.	DTC Type A

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y__yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
CLUTCH SWITCH CIRCUIT	P0704	Clutch switch state is monitored during vehicle operation.	The PCM detects that a clutch switch state transition has not occurred when the vehicle speed has gone from 0 MPH above a threshold value and back to 0 MPH.	No VSS codes present VSS > 24 MPH	100ms Continuous	DTC Type B
2ND AND 3RD GEAR BLOCKOUT RELAY CIRCUIT MALF (ODM)	P0803	Control circuit voltage is monitored during operation. It should be low during operation and near B+ when "off".	The PCM detects that the commanded state of the driver and the actual state of the control circuit do not match.	Engine speed greater than 600 rpm. Ignition voltage > 6.0 volts, but < 16 volts	10 seconds. Continuous.	DTC Type B
THROTTLE POSITION SENSOR 1 CIRCUIT RANGE/PERF.	P1120	1) TACM indicates a continuous or intermittent short or open in either the signal circuit or the TP sensor #1. OR 2) TACM indicates an invalid minimum mechanical position for the TP sensor #1.	1) Raw TP sensor signal < 0.13 V or > 4.87 V. OR 2)TP sensor minimum mechanical stop voltage < 0.33V or > 0.67 V.	Ignition in Run or Crank. Ignition voltage > 5.23 V. Valid TACM - PCM serial data. No TACM processor DTC.	1) Counter increments by 4 for every error, decrements by 1 for every pass; threshold is 122. Check runs every 3 ms. 2) One occurrence. Check runs at power-up.	DTC Type A
ACCELERATOR PEDAL POSITION SYSTEM	P1125	PCM determines a limp home mode of operation due to multiple accelerator pedal sensor faults.	This DTC is set when: 1) 2 or more APP sensors are out of range, OR 2) all 3 APP sensors disagree, OR 3) one APP sensor is out of range AND the other 2 APP sensors disagree.	Ignition in Run or Crank. Ignition voltage > 5.23 V. Valid TACM - PCM serial data. No TACM processor DTC.	One occurrence. Check runs every 18.75 ms.	DTC Type A

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y__yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
HO2S SYSTEM - TOO FEW HO2S R/L AND L/R SWITCHES (BANK 1, SENSOR 1)	P1133	The DTC determines if the HO2S sensor is functioning properly by monitoring the number of L/R and R/L switches.	Number of switches in 100 seconds: L/R switches < 30 R/L switches < 30	Closed Loop Fuel Control. 1000 < RPM < 2300 15 < Air Flow < 35 g/sec. Minimum system voltage: 9v ECT > 65 Deg C CCP>0 Engine Run > 2.9 sec No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	100 sec Once per trip.	DTC Type B
HO2S TRANSITION TIME RATIO (BANK 1, SENSOR 1)	P1134	Monitors the ratio between rich to lean and lean to rich transition times	The ratio of rich to lean and lean to rich oxygen sensor transitions. .5625 < Ratio < 2.4063	Closed Loop Fuel Control. 1000 < RPM < 2300 15 < Air Flow < 35 g/sec. Minimum system voltage: 9v ECT > 65 Deg C CCP>0 Engine Run > 2.9 sec No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	100 sec Once per trip.	DTC Type B
HO2S SYSTEM - TOO FEW HO2S R/L AND L/R SWITCHES (BANK 2, SENSOR 1)	P1153	The DTC determines if the HO2S sensor is functioning properly by monitoring the number of L/R and R/L switches.	Number of switches in 100 seconds: L/R switches < 30 R/L switches < 30	Closed Loop Fuel Control. 1000 < RPM < 2300 15 < Air Flow < 35 g/sec. Minimum system voltage: 9v ECT > 65 Deg C CCP>0 Engine Run > 2.9 sec No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	100 sec Once per trip.	DTC Type B

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y_yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
HO2S TRANSITION TIME RATIO (BANK 2, SENSOR 1)	P1154	Monitors the ratio between rich to lean and lean to rich transition times	The ratio of rich to lean and lean to rich oxygen sensor transitions. .5625 < Ratio < 2.4063	Closed Loop Fuel Control. 1000 < RPM < 2300 15 < Air Flow < 35 g/sec. Minimum system voltage: 9v ECT > 65 Deg C CCP>0 Engine Run > 2.9 sec No Throttle, IAT, Camel Mode, Injector, EST Control, Coolant, Crank Sensor, or Air Flow Faults active	100 sec Once per trip.	DTC Type B
THROTTLE POSITION SENSOR 2 CIRCUIT	P1220	1) TACM indicates a continuous or intermittent short or open in either the signal circuit or the TP sensor #2. OR 2) TACM indicates an invalid minimum mechanical position for the TP sensor #2.	1) Raw TP sensor signal < 0.13 V or > 4.87 V. OR 2) TP sensor minimum mechanical stop voltage < 4.31V or > 4.69 V.	Ignition in Run or Crank. Ignition voltage > 5.23 V. Valid TACM - PCM serial data. No TACM processor DTC.	1) Counter increments by 4 for every error, decrements by 1 for every pass; threshold is 122. Check runs every 3 ms. 2) One occurrence. Check runs at power-up.	DTC Type A
THROTTLE POSITION SENSOR 1, 2 RANGE/PERF.	P1221	1) TACM indicates a continuous or intermittent correlation fault between TP sensors #1 and #2. OR 2) TACM indicates an invalid minimum mechanical position correlation between TP sensor #1 and #2.	ABS(5 V - raw TP sensor #2 voltage - raw TP sensor #1 voltage) > 0.29 V.	Ignition in Run or Crank. Ignition voltage > 5.23 V. Valid TACM - PCM serial data. No TACM processor DTC.	1) Counter increments by 4 for every error, decrements by 1 for every pass; threshold is 126. Check runs every 3 ms. 2) One occurrence. Check runs at power-up.	DTC Type A
ENGINE PROTECTION MODE ACTIVE	P1258	Monitor for engine protection mode active.	Coolant temperature >= 132C for more than 10 seconds.	No coolant sensor DTC's.	Set immediately upon engine protection mode active.	DTC Type A

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y_yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
AIR INJECTION SYSTEM	P1415	<p>Passive: HO2S sensors indicate lean condition present during open loop operation. Verify proper operation of AIR pump.</p> <p>Active: HO2S sensors indicate lean condition present when AIR pump is turned on during closed loop operation.</p>	<p>Passive: HO2S sensor < approx. 400 mv during open loop operation</p> <p>Active: HO2S sensor < 222 mv for >= 1.5 seconds or fuel integrator delta of 14 counts when pump turned on during closed loop operation.</p>	<p>Passive: No MAF, MAP, IAT, ECT, TPS, HO2S, injector, misfire, EGR, fuel system, AIR pump relay IAC or EVAP DTC set. HO2S mid bias volt test passed. Engine run > 2 sec. Air flow < 30 g/s ECT < 109 deg C A/F Ratio > 13:1 Engine Load < 25% of full engine load) Ignition voltage > 11.7V PE, DFCO, COT not active</p> <p>Active Same as above except: MBV test fail will not disable Engine run >= 200 sec after closed loop operation A/F = 14.7:1 Fuel integrator >123 & < 136 RPM > 600 ECT >= 70 Deg C Engine load < 25% Air flow <= 22 g/s IAT >10 In BLM cell 0,3,4,5,6,9,10,20,21,22</p>	<p>Passive: During open loop operation. Once per trip.</p> <p>Active: 3 seconds Up to 3 times per trip if passive test fails or is inconclusive</p>	DTC Type B

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y_yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
AIR INJECTION SYSTEM	P1416	<p>Passive: HO2S sensors indicate lean condition present during open loop operation. Verify proper operation of AIR pump.</p> <p>Active: HO2S sensors indicate lean condition present when AIR pump is turned on during closed loop operation.</p>	<p>Passive: HO2S sensor < approx. 400 mv during open loop operation</p> <p>Active: HO2S sensor < 222 mv for >= 1.5 seconds or fuel integrator delta of 14 counts when pump turned on during closed loop operation.</p>	<p>Passive: No MAF, MAP, IAT, ECT, TPS, HO2S, injector, misfire, EGR, fuel system, AIR pump relay IAC or EVAP DTC set. HO2S mid bias volt test passed. Engine run > 2 sec. Air flow < 30 g/s ECT < 109 deg C A/F Ratio > 13:1 Engine Load < 25% of full engine load) Ignition voltage > 11.7V PE, DFCO, COT not active</p> <p>Active Same as above except: MBV test fail will not disable Engine run >= 200 sec after closed loop operation A/F = 14.7:1 Fuel integrator >123 & < 136 RPM > 600 ECT > = 70 Deg C Engine load < 25% Air flow <= 22 g/s IAT >10 In BLM cell 0,3,4,5,6,9,10,20,21,22</p>	<p>Passive: During open loop operation. Once per trip.</p> <p>Active: 3 seconds Up to 3 times per trip if passive test fails or is inconclusive</p>	DTC Type B

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y_yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
EVAP VACUUM SWITCH CIRCUIT HIGH (DURING NON-PURGE)	P1441	Detects a purge solenoid stuck open by monitoring the EVAP. Purge Vacuum Switch state when no purge is commanded. The vacuum switch state should change to low (closed) if there is no vacuum (solenoid closed) applied to the system.	EVAP. purge vacuum switch state = high (open) for a period > 5 seconds.	No Vacuum Switch DTC No IAT, MAP, ECT, or TPS DTC No Purge Solenoid ODM Baro >75 kPa ECT < 115 Deg C IAT > 3 Deg C @ power-up; <80 Deg C run ECT/IAC Delta < 10 Deg C @ power-up Purge Duty Cycle = 0% Manifold Vacuum > 20 kpa & < 80 kpa TPS > 0% & < 50% Engine RPM > 500 but < 2500	For 5 test failures	DTC Type B
TAC SYSTEM MAF PERFORMANCE	P1514	Indicates that measured engine airflow does not match estimated engine airflow as established by the TPS.	MAP based airflow - estimated airflow > 150 mg/cyl AND MAF based airflow - estimated airflow > 150 mg/cyl	Engine running = true. Ignition on > 1 sec. RPM > 500. No Throttle Actuation DTC's. No PCM-TACM Serial Data DTC. Both TPS Circuit DTC's are not set. No PCM Processor DTC's No TACM Processor DTC	Both counters are incremented by 2 for every error and decremented by 1 for every pass; both thresholds are 20; both counters must exceed threshold to set DTC. Check runs every 18.75 ms.	DTC Type A

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y_yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
COMMAND vs ACTUAL THROTTLE PERF. (PCM)	P1515	Indicates that the PCM has detected a throttle positioning error	ABS (throttle error) > 5%. [Throttle error = Measured throttle position - modeled throttle position]	Ignition in Run or Crank TACM determines PCM Desired Throttle Position is valid. Not in battery saver mode. No Airflow Actuation DTC. (Engine Running = true) OR (Ignition Voltage > 8.5 volts). No Throttle Actuation DTC. No PCM-TACM Serial Data DTC. Both TPS Circuit DTC's are not set. No PCM Processor DTC's. No TACM Processor DTC.	High counter increments by 2 for every throttle error > 5%; decrements by 1 if %<t.e.<5%; decrements by 5 if -5%<t.e.<0%; clears if t.e. < -5%. Check runs every 18.75 ms with TACM - PCM valid message received. Low counter increments by 2 for every throttle error < -5%; decrements by 1 if -5%<t.e.<0%; decrements by 5 if 0%<t.e.<5%; clears if t.e. > 5%. Check runs every 18.75 ms with TACM - PCM valid message received.	DTC Type A

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y__yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
COMMAND vs ACTUAL THROTTLE PERF. (TAC MODULE)	P1516	Indicates that the TAC Module has detected a throttle positioning error OR Either Processor cannot determine throttle positioning OR Both TP Sensors are invalid	ABS (throttle error): a) >=2 degrees for >200 ms with no change in error sign. OR b) >=2 degrees for >500 ms for throttle command changes >= 2 degrees. OR c) >=5 degrees for >200 ms for throttle command changes >= 5 degrees. OR d) >= 5 degrees for > 300 ms with no change in error sign. OR 2) PCM processor DTC's. OR 3) TACM processor DTC. OR 4) both TPS Circuit DTC's are set. OR 5) PCM-TACM Serial Data DTC w/ any APP Sensor DTC or TP Sensor DTC. [Throttle error = Measured throttle position - commanded throttle position]	Ignition in Run or Crank. Ignition voltage > 5.23 V. Valid TACM - PCM serial data. Not in battery saver mode.	One occurrence. Check runs every 3 ms.	DTC Type A

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y__yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
TAC MODULE PROCESSOR	P1517	<p>Indicates that TAC Module is unable to correctly read data from the flash memory.</p> <p>Indicates that TAC Module is unable to correctly write and read data to and from RAM.</p> <p>Indicates that the TAC Module has detected an internal processor integrity fault.</p>	<p>1) Power-up test fails to read/write data OR</p> <p>2) Max allowed Running Resets exceeded OR</p> <p>3) ROM checksum does not match expected checksum OR</p> <p>4) RAM data read does not match data written OR</p> <p>5) Failure of Interrupt process flag to match expected value. OR</p> <p>6) Program is not executed in the proper order OR</p> <p>7) Primary and Redundant RAM variables disagree OR</p> <p>8) Primary and Redundant Indicated Pedal Position calculation difference > 7.1%. OR</p> <p>9) Math/Logic test fails to equate to a predetermined value. OR</p> <p>10) Internal Register data read does not match data written. OR</p> <p>11) Internal Timer fails to increment OR</p> <p>12) Watchdog Timer fails to increment OR</p> <p>13) Failure of Processor Stack pointer to zero at Main Loop.</p>	<p>Ignition in Run or Crank. Ignition voltage > 5.23 V. Valid TACM - PCM serial data.</p>	<p>1) One occurrence Check runs at Reset initialization</p> <p>2) 12 occurrences during ignition cycle Check runs at Reset initialization</p> <p>3) One occurrence. Check runs at power up and every 24 seconds thereafter.</p> <p>4) One occurrence. Check runs at power up and every 153 milliseconds thereafter</p> <p>5) - 13) One occurrence. Check runs every 3 milliseconds</p>	DTC Type A

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y_yE.doc

Sensed Parameter	FAULT CODE	Monitor Strategy Description	Malfunction Criteria & Threshold Value (s)	Secondary Parameters & Enable Conditions	Time Required & Frequency	MIL Illum. Type
PCM TO TAC MODULE SERIAL DATA CIRCUIT	P1518	Indicates that the serial data line between the PCM and TACM has intermittently or continuously failed.	PCM: No message for 18.75 ms. Corrupted data in the message. Invalid message protocol. PCM processor DTC's. TACM processor DTC. TAC Module: No message for 25 ms. Corrupted data in the message. Invalid message protocol. PCM processor DTC's. TACM processor DTC.	(Ignition in Run or Crank) AND engine not in crank state. Time since power-up > 0. Ignition in Run or Crank. Ignition voltage > 5.23 V. Valid TACM - PCM serial data.	No valid message received for 500 ms. Invalid or missing message increments counter by 10; valid message received decrements counter by 1; threshold is 254. Check for invalid messages runs every 18.75 ms. Check for missing messages runs every 25 ms.	DTC Type A
PCM RAM FAILURE	P1624	Indicates that PCM is unable to correctly write and read data to and from RAM	Data read does not match data written	Ignition in Run or Crank	One occurrence. Check is performed at power-up and every 60 seconds thereafter.	DTC Type A
5 VOLT REFERENCE A CIRCUIT	P1635	Determines if the supply voltage for the 5 volt reference is within an acceptable limit.	Compares the ratio of the 5 volt reference circuit voltage to the 5 volt supply voltage.	5 volt reference circuit voltage differs from 5 volt supply voltage by plus or minus approximately .01 volt. PCM is powered up	Condition present > 2 seconds Continuous.	DTC Type B
5 VOLT REFERENCE A CIRCUIT	P1639	Determines if the supply voltage for the 5 volt reference is within an acceptable limit	Compares the ratio of the 5 volt reference circuit voltage to the 5 volt supply voltage.	5 volt reference circuit voltage differs from 5 volt supply voltage by plus or minus approximately .01 volt. PCM is powered up	Condition present > 2 seconds Continuous.	DTC Type B

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y__yE.doc

APP SENSOR 1 CIRCUIT	P0120	1) TACM indicates a continuous or intermittent short or open in either the signal circuit or the APP sensor #1. OR 2) TACM indicates an invalid minimum mechanical position for the APP sensor #1.	1) Raw APP sensor signal < 0.25 V or > 4.22 V. OR 2) APP sensor minimum mechanical stop voltage < 0.19 V.	Ignition in Run or Crank. Ignition voltage > 5.23 V. Valid TACM - PCM serial data. No TACM processor DTC.	1) & 2) Counter increments by 4 for every error, decrements by 1 for every pass; threshold is 106. Check runs every 3 ms.	DTC Type C
APP SENSOR 1 PERFORMANCE	P0121	1) TACM indicates a continuous or intermittent correlation fault between APP sensors #1 and #2 AND #1 and #3. OR 2) TACM indicates an invalid minimum mechanical position correlation between APP sensor #1 and #2 AND #1 and #3.	ABS(5 V - raw APP sensor #2 voltage - raw APP sensor #1 voltage) > 0.20 V. AND ABS{5 V - [(raw APP sensor #3 voltage - 0.61 V) * 53 / 32] - raw APP sensor #1 voltage} > 0.26 V.	Ignition in Run or Crank. Ignition voltage > 5.23 V. Valid TACM - PCM serial data. No TACM processor DTC.	1) Counter increments by 4 for every error, decrements by 1 for every pass; threshold is 126. Check runs every 3 ms.	DTC Type C
APP SENSOR 2 CIRCUIT	P0220	1) TACM indicates a continuous or intermittent short or open in either the signal circuit or the APP sensor #2. OR 2) TACM indicates an invalid minimum mechanical position for the APP sensor #2.	1) Raw APP sensor signal < 0.83 V or > 4.84 V. OR 2) APP sensor minimum mechanical stop voltage > 4.81 V.	Ignition in Run or Crank. Ignition voltage > 5.23 V. Valid TACM - PCM serial data. No TACM processor DTC.	1) & 2) Counter increments by 4 for every error, decrements by 1 for every pass; threshold is 106. Check runs every 3 ms.	DTC Type C

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y_yE.doc

APP SENSOR 2 PERFORMANCE	P0221	<p>1) TACM indicates a continuous or intermittent correlation fault between APP sensors #1 and #2 AND #2 and #3. OR 2) TACM indicates an invalid minimum mechanical position correlation between APP sensor #1 and #2 AND #2 and #3.</p>	<p>ABS{5 V - raw APP sensor #2 voltage - raw APP sensor #1 voltage) > 0.20 V. AND ABS{5 V - [(raw APP sensor #3 voltage - 0.61 V) * 53 / 32] - (5 V - raw APP sensor #2 voltage)} > 0.26 V.</p>	<p>Ignition in Run or Crank. Ignition voltage > 5.23 V. Valid TACM - PCM serial data. No TACM processor DTC.</p>	<p>1) Counter increments by 4 for every error, decrements by 1 for every pass; threshold is 126. Check runs every 3 ms.</p>	DTC Type C
APP SENSOR 3 CIRCUIT	P0225	<p>1) TACM indicates a continuous or intermittent short or open in either the signal circuit or the APP sensor #3. OR 2) TACM indicates an invalid minimum mechanical position for the APP sensor #3.</p>	<p>1) Raw APP sensor signal < 1.63 V or > 4.38 V. OR 2) APP sensor minimum mechanical stop voltage > 4.28 V.</p>	<p>Ignition in Run or Crank. Ignition voltage > 5.23 V. Valid TACM - PCM serial data. No TACM processor DTC.</p>	<p>1) & 2) Counter increments by 4 for every error, decrements by 1 for every pass; threshold is 106. Check runs every 3 ms.</p>	DTC Type C
APP SENSOR 1 PERFORMANCE	P0226	<p>1) TACM indicates a continuous or intermittent correlation fault between APP sensors #1 and #3 AND #2 and #3. OR 2) TACM indicates an invalid minimum mechanical position correlation between APP sensor #1 and #3 AND #2 and #3.</p>	<p>ABS{5 V - [(raw APP sensor #3 voltage - 0.61 V) * 53 / 32] - raw APP sensor #1 voltage} > 0.26 V. AND ABS{5 V - [(raw APP sensor #3 voltage - 0.61 V) * 53 / 32] - (5 V - raw APP sensor #2 voltage)} > 0.26 V.</p>	<p>Ignition in Run or Crank. Ignition voltage > 5.23 V. Valid TACM - PCM serial data. No TACM processor DTC.</p>	<p>1) Counter increments by 4 for every error, decrements by 1 for every pass; threshold is 126. Check runs every 3 ms.</p>	DTC Type C

1997 5.7L (LS1) Y-car Corvette - ENGINE DIAGNOSTIC PARAMETERS

97c57G_Y__yE.doc

CRUISE RESUME CIRCUIT	P0567	Monitor the resume circuit for a continuous high state.	Resume circuit high (Switch On) for more than 90 seconds.	Cruise control switch on.	1 test failure. Continuous	DTC Type C
CRUISE SET CIRCUIT	P0568	Monitor the set circuit for a continuous high state.	Set circuit high (Switch On) for more than 90 seconds.	Cruise control switch on.	1 test failure. Continuous	DTC Type C