SENSED PARAMETER	FAULT CODE	ACCEPTABLE OPERATING RANGE AND RATIONALITY	PRIMARY MALF DETECTION PARAMETERS	SECONDARY MONITORING PARAMETERS AND CONDITIONS	MONITORING TIME LENGTH AND FREQUENCY OF CHECK	DTC TYPE
TCM ROM Test	P0601	This DTC detects an error in the flash memory containing the program and calibration.	Checksum calculation algorithm of flash memory, fail counter >= 5 counts	Ignition is On	Continuous	А
Power up copy of NVM to RAM	P0603	This DTC detects an error in the RAM copy of NVM @ power up	Checksum calculation algorithm of NVM copy	Ignition is On	Continuous	А
RAM Test	P0604	This DTC tests the read/write capability of each RAM location	Read and write each RAM location	Ignition is On	Continuous	А
Power down copy of NVM to RAM	P062F	This DTC detects an error in the RAM copy of NVM @ power down	Checksum calculation algorithm of NVM copy	Ignition is On	Continuous	А
Transmission Range Switch Circuit	P0705	TCM detects invalid PRNDL (NSBU) range	PRNDL range = Illegal	8.0 < Ignition Voltage < 18.0 V 500 < Engine RPM < 6500 for 5.0 sec, not in fuel cutoff	60.0 sec	Special Type C

	1	1				1
SENSED PARAMETER	FAULT CODE	ACCEPTABLE OPERATING RANGE AND RATIONALITY	PRIMARY MALF DETECTION PARAMETERS	SECONDARY MONITORING PARAMETERS AND CONDITIONS	MONITORING TIME LENGTH AND FREQUENCY OF CHECK	DTC TYPE
Trans Fluid Temp Sensor Circuit Range/ Performance	P0711	The DTC detects two failure modes of the TFT: 1) A sensor that remains at a value. (Stuck Sensor) 2) A sensor that remains at a value. (Stuck Sensor) 3) An unrealistically large change in Transmission Temperature. 4) Transmission Temperature remains at a constant value below 20° C for a calibrated time dependant on startup transmission temperature.		For fail case 1. 2, and 4:Common engine speed enable, No Engine Coolant DTC's, No OSS P0722, P0723 DTCs, No ISS P0716, P0717 DTCs, P0711 has not passed this ignition cycle, -40 deg C <= trans fluid temp <= 150 deg C Fail case 1: -40 deg C <= trans fluid temp <= +20 C at startup, Engine coolant => 70 deg C, Engine coolant => 70 deg C, Singe coolant has changed => 55 deg C since startup, Vehicle speed since startup => 8 KPH for time => 300 seconds (cumulative timer)Fail case 2: +129 deg C <= trans fluid temp <= +149 C at startup, Vehicle speed since startup => 8 KPH for time => 300 seconds (cumulative timer)Fail case 2: +129 deg C <= trans fluid temp <= +149 C at startup, Vehicle speed since startup => 8 KPH for time => 300 seconds (cumulative timer)Fail case 2: +129 deg C <= trans fluid temp <= +149 C at startup, Vehicle speed since startup => 8 KPH for time => 300 seconds (cumulative timer)Fail case 3: System Voltage is between 8 – 18 Volts. Engine Speed 450-7500 for 5 seconds.Fail case 4: Valid TPS, Torque signal, and Crank Signals. S0 <= Engine Torque < 1492 8 < Throttle Position < 90 8 < Vehicle Speed < 511 500 <= Engine Speed < 6500 -39 <= Coolant Temperature < 149	Fail case 1: Time => 80.0 seconds Continuous Fail case 2: Time => 80.0 seconds Continuous Fail case 3: Time => 7.0 seconds Fail Case 4 See Table at End of Document	Special Type C
Trans Fluid Temp Sensor Circuit - Low Input (High Temperature)	P0712	0 ohms to 134217728 ohms The DTC detects a low resistance in the transmission fluid temperature sensor circuit.	Transmission fluid temperature sensor circuit resistance <= 43.18 ohms	Common ignition voltage enable, Common engine speed enable	12 seconds	Special Type C
Trans Fluid Temp. Sensor Circuit - High Input (Low Temperature)	P0713	0 ohms to 134217728 ohms The DTC detects a high resistance in the transmission fluid temperature sensor circuit.	Transmission fluid temperature sensor circuit resistance >= 171862 ohms	Common ignition voltage enable, Common engine speed enable, Transmission output speed >= 200 RPM for time >= 200 seconds, Transmission torque converter slip >= 120 RPM for time >= 200 seconds, No P0716, P0717, P0722, P0723 DTCs active	80 seconds	Special Type C

SENSED PARAMETER	FAULT CODE	ACCEPTABLE OPERATING RANGE AND RATIONALITY	PRIMARY MALF DETECTION PARAMETERS	SECONDARY MONITORING PARAMETERS AND CONDITIONS	MONITORING TIME LENGTH AND FREQUENCY OF CHECK	DTC TYPE
Input Speed Sensor Circuit- Range/PERF	P0716	0 RPM TO 8192 RPM The DTC detects an unrealistically large change in the Input Speed Circuit Input	Input Speed changes => 1000 RPM	Common ignition voltage enable, Common engine speed enable, No ISS P0717 DTC, Input speed raw >= 1050 RPM for time >= 2 seconds, Input speed delta < 500 RPM for time >= 2 seconds, Throttle position >= 8 % and throttle position valid from ECM, Vehicle speed >= 16 KPH, No OSS P0722, P0723 DTCs, No P0757, P0973, P0974 SSA Sol. DTCs, Engine torque >= 90 Nm and toque valid from ECM	Fail time >= 3.25 seconds Continuous	В
Input Speed Sensor Circuit- No Signal	P0717	0 RPM TO 8192 RPM The DTC detects a Low Input Speed when the vehicle has large Vehicle and Engine Speeds	Input Speed < 100 RPM	Common ignition voltage enable, Common engine speed enable, Vehicle speed >= 16 KPH, Engine torque >= 50 Nm and toque valid from ECM, No OSS P0722 P0723 DTCs, No ISS P0717	Fail timer >= 4.5 seconds Continuous	В
Output Speed Sensor - Low Input	P0722	0 RPM to 8192 RPM This DTC detects a low output speed when the vehicle has a large Input speed in a driving gear range with a high Engine Torque value.	Output Speed <= 200 RPM	Common engines of the second s	Fail timer >= 4.5 seconds Continuous	В
Output Speed Sensor - Intermittent	P0723	0 RPM to 8192 RPM This DTC detects an unrealistic large DROP in Output Shaft speed.	Output Speed DROP => 1200 RPM	Common ignition voltage enable, Common engine speed enable, PRNDL range change timer >= 6 seconds, 4WD Low range change timer >= 6 seconds, N0 P0716, P0717, P0974 DTCs Input speed delta < 300 RPM for time >= 2 seconds, Output speed raw >= 1000 RPM for time >= 2 seconds, Output speed change <= 500 RPM for time >= 2 seconds	Fail timer >= 3.25 seconds Continuous	В

SENSED PARAMETER	FAULT CODE	ACCEPTABLE OPERATING RANGE AND RATIONALITY	PRIMARY MALF DETECTION PARAMETERS	SECONDARY MONITORING PARAMETERS AND CONDITIONS	MONITORING TIME LENGTH AND FREQUENCY OF CHECK	DTC TYPE
TCC System Stuck OFF	P0741	This DTC detects high torque converter slip when the TCC is commanded ON in 2 nd , 3rd and/or 4 TH Gear.	TCC slip speed => 150 RPM Fail counter >= 2 counts	Common ignition voltage enable, Common engine speed enable, Throttle position 8-90% and throttle valid from ECM, 50 Nm <= engine torque <= 1492 Nm and toque valid from ECM, Transmission fluid tmperature 20-130 DegC, No TCC electrical P2763, P2764, P2769, or P2770 DTCs, Power Take Off (PTO) is not active, No ISS P0716, P0717 DTC's, No TCC stuck on P0742 DTC, 1.40 <= gear ratio <= 1.65 (2 nd gear) or 0.94 <= gear ratio <= 1.65 (3 rd gear), TCC on or locked, TCC capacity (PWM duty cycle) => 65 % TCC on time => 0.1 second	Fail timer >= 5.0 seconds Continuous	В
TCC System Stuck ON	P0742	This DTC detects low torque converter slip when the TCC is commanded off.	-20 RPM <= TCC slip speed <= 40 RPM Fail counter >= 3 counts	Common ignition voltage enable, Common engine speed enable, Throttle position 8-90 % and throttle valid from ECM, 50 Nm <= engine torque <= 1492 Nm and toque valid from ECM, 20 <= Transmission fluid tmperature <= 130 DegC, Power Take Off (PTO) is not active, No ISS P0716, P0717 DTC's, No OSS P0722, P0723 DTC's, No TCC electrical P2763, P2764, P2769, or P2770 DTCs, No TCC stuck off P0741 DTC, 500 RPM <= engine speed <= 6500 RPM, 16 KPH <= vehicle speed <= 511 KPH, 0.65 <= gear ratio <= 1.34 (2 nd , 3 rd gear), commanded gear <> 1st TCC commanded off	Fail timer >= 6 second Continuous	В

		[]	07 GRF14_	All Transmissions.DC		
SENSED PARAMETER	FAULT CODE	ACCEPTABLE OPERATING RANGE AND RATIONALITY	PRIMARY MALF DETECTION PARAMETERS	SECONDARY MONITORING PARAMETERS AND CONDITIONS	MONITORING TIME LENGTH AND FREQUENCY OF CHECK	DTC TYPE
Shift Solenoid A Performance Normal shift pattern 1234 Failure mode shift pattern 2233	P0751	This DTC detects incorrect gear ratios when 1 st gear and 4 th gear are commanded.	Fail case 1 AND Fail case 2 Are TRUE, increment fail counter P0751 set when fail counter >= 2 counts	Common ignition voltage enable, Common engine speed enable, Throttle position valid from ECM, Engine torque valid from ECM, No ISS P0716, P0717 DTC's, No OSS P0722, P0723 DTC's, No P0973, P0974, P0976, P0977 DTCs, 20 DegC = transmission fluid temperature <= 130 DegC, 150 RPM <= input speed <= 6500 RPM Transmission output speed >= 150 RPM Power Take Off (PTO) is not active, Throttle position => 8%, 50 Nm <= engine torque <= 1492 Nm Fail case 1: Command gear = 1 st 1.58 <= measured gear ratio <= 1.75 (2 nd gear) Fail case 2: Command gear = 4 th 0.95 << measured gear ratio <= 1.05 (3 rd gear) 2 Counts	<u>Fail case 1:</u> Fail timer >= 2 seconds continuous <u>Fail case 2:</u> Fail timer >= 3.0 seconds continuous	В
Shift Solenoid A Performance Normal shift pattern 1234 Failure mode shift pattern 1144	P0752	This DTC detects incorrect gear ratio when 2 nd gear is commanded.	Fail case 3 fail counter >= 2 counts	Common ignition voltage enable, Common engine speed enable, Throttle position valid from ECM, Engine torque valid from ECM, No ISS P0716, P0717 DTC's, No OSS P0722, P0723 DTC's, No P0973, P0974, P0976, P0977 DTCs, No P09741 or P0742 DTCs 20 DegC ≥ transmission fluid temperature < 130 DegC, 150 RPM ≤ input speed <= 6500 RPM Transmission output speed >= 150 RPM Power Take Off (PTO) is not active, Throttle position => 8%, 50 Nm <= engine torque <= 1492 Nm Fail case 3: Command gear = 2^{nd} 2.9 <= measured gear ratio <= 3.213 (1 st gear) Fail case 4: Command gear = 3rd .65 <= measured gear ratio <= .725 (4th gear)	Fail case 3:Fail Count 2.0Fail timer >= 2.25seconds continuousFail case 4:Fail Count 2.0Fail Count 2.0 Fail Count 2.0 Fail count 2.0 Fail count 2.0 Fail count 2.0	В

						1
SENSED PARAMETER	FAULT CODE	ACCEPTABLE OPERATING RANGE AND RATIONALITY	PRIMARY MALF DETECTION PARAMETERS	SECONDARY MONITORING PARAMETERS AND CONDITIONS	MONITORING TIME LENGTH AND FREQUENCY OF CHECK	DTC TYPE
Shift Solenoid B Performance Normal shift pattern 1234 Failure mode shift pattern 4334	P0756	This DTC detects incorrect gear ratios when 1 st gear and 2 nd gear are commanded.	Fail case 1 AND Fail case 2 Are TRUE, increment fail counter P0756 set when fail counter >= 2 counts	Common ignition voltage enable, Common engine speed enable, Throttle position valid from ECM, Engine torque valid from ECM, No ISS P0716, P0717 DTC's, No OSS P0722, P0723 DTC's, No P0973, P0974, P0976, P0977 DTCs, 20 DegC <= transmission fluid temperature <= 130 DegC, 150 RPM ≥ input speed <= 6500 RPM Transmission output speed >= 150 RPM Power Take Off (PTO) is not active, Throttle position => 8%, 50 Nm <= engine torque <= 1492 Nm <u>Fail case 5:</u> Command gear = 1 st 0.65 <= measured gear ratio <= .725 (4 th gear) <u>Fail case 6:</u> Command gear = 2 nd 0.95 <= measured gear ratio <= 1.050 (3 rd gear)	<u>Fail case 5:</u> Fail timer >= 2.0 seconds continuous <u>Fail case 6:</u> Fail timer >= 3.0 seconds continuous	A
Shift Solenoid B Performance Normal shift pattern 1234 Failure mode shift pattern 1221	P0757	This DTC detects incorrect gear ratio when 3 rd gear is commanded.	Fail Case 7 AND Fail Case 8 Are TRUE, increment fail counter P0757 set when fail counter >= 2 counts	Common ignition voltage enable, Common engine speed enable, Throttle position valid from ECM, Engine torque valid from ECM, No ISS P0716, P0717 DTC's, No OSS P0722, P0723 DTC's, No P0973, P0974, P0976, P0977 DTCs,No P0741 or P0742 DTCs, 20 DegC <= transmission fluid temperature <= 130 DegC, 150 RPM <= input speed <= 6500 RPM Transmission output speed >= 150 RPM Power Take Off (PTO) is not active, Throttle position => 8%, 50 Nm <= engine torque <= 1492 Nm	Fail case 7: Fail timer >= 2.0 seconds continuous Fail case 8: Fail timer >= 2.0 seconds continuous 2 Counts	A

SENSED PARAMETER	FAULT CODE	ACCEPTABLE OPERATING RANGE AND RATIONALITY	PRIMARY MALF DETECTION PARAMETERS	SECONDARY MONITORING PARAMETERS AND CONDITIONS	MONITORING TIME LENGTH AND FREQUENCY OF CHECK	DTC TYPE
3-2 Downshift Solenoid Circuit Low Voltage (Short to Ground or Open)	P0787	0V to 12V This DTC detects a continuous open or short to ground in the 3-2 DS circuit or the 3-2 DS solenoid.	Output State is invalid	Engine RPM between 475 & 6200 for 5 sec.System Voltage is between 8 & 18 Vehicle Speed less than 200 KPH	44 out of 50 counts. Continuous	В
3-2 Downshift Solenoid Circuit High Voltage (Short to 12 Volts)	P0788	0V to 12V This DTC detects a continuous short to battery in the 3-2 DS circuit or the 3-2 DS solenoid.	Output State is invalid	Engine RPM between 475 & 6200 for 5 sec.System Voltage is between 8 & 18 Vehicle Speed less than 200 KPH	44 out of 50 counts. Continuous	В
Shift Solenoid A Electrical (1-2 Shift Solenoid)	P0973	0V to 12V This DTC detects a continuous open or ground short in the SSA circuit or the SSA solenoid.	Hardware detects output state is invalid	Common ignition voltage enable, Common engine speed enable,	44 out of 50 counts. Continuous	В
Shift Solenoid A Electrical (1-2 Shift Solenoid)	P0974	0V to 12V This DTC detects a continuous short to power in the SSA circuit or the SSA solenoid.	Hardware detects output state is invalid	Common ignition voltage enable, Common engine speed enable,	44 out of 50 counts. Continuous	В
Shift Solenoid B Electrical (2-3 Shift Solenoid)	P0976	0V to 12V This DTC detects a continuous open or ground short in the SSB circuit or the SSB solenoid.	Hardware detects output state is invalid	Common ignition voltage enable, Common engine speed enable,	44 out of 50 counts. Continuous	A
Shift Solenoid B Electrical (2-3 Shift Solenoid)	P0977	0V to 12V This DTC detects a continuous short to power in the SSB circuit or the SSB solenoid.	Hardware detects output state is invalid	Common ignition voltage enable, Common engine speed enable,	44 out of 50 counts. Continuous	A
PSA Circuit Malfunction – PSA indcates an illegal range value	P1810	0V to 12V This DTC detects an invalid state of the PSA sensor or the PSA circuit by deciphering the PSA inputs.	PSA range = illegal value	Common ignition voltage enable,Common engine speed enable, Power Take Off (PTO) is not active, No PSA P1815, P1816, P1818 DTCs	60 seconds Continuous	В
PSA Start in Wrong Range	P1815	0V to 12V This DTC detects an invalid state of the PSA sensor or the PSA circuit by deciphering the PSA inputs.	PSA indicates D2 (ONLY) before and after Engine Start-up (625 RPM)	System Voltage is between 8.0 & 18.0 No VSS DTC's Engine Speed Transition: Below 50 RPM for => 0.25 sec. then, between 50 and 480 RPM > 0.069 sec. then => 525 RPM. (RPM must remain above the 525 RPM cal) Output Speed <= 250 RPM	3.25 seconds Continuous	В

	1	1				1
SENSED PARAMETER	FAULT CODE	ACCEPTABLE OPERATING RANGE AND RATIONALITY	PRIMARY MALF DETECTION PARAMETERS	SECONDARY MONITORING PARAMETERS AND CONDITIONS	MONITORING TIME LENGTH AND FREQUENCY OF CHECK	DTC TYPE
PSA Circuit Malfunction – PSA indicates P/N with drive gear ratio	P1816	0V to 12V This DTC detects an invalid state of the PSA sensor or the PSA circuit by deciphering the PSA inputs.	PSA range = P/N And 1.5799 >= gear ratio >= 0.6 NOTE: Ratio is measured NI/NO	Common ignition voltage enable, Common engine speed enable, Power Take Off (PTO) is not active, Throttle position valid from ECM, Engine torque valid from ECM, No ISS P0716, P0717 DTC's, No OSS P0722, P0723 DTC's, No P0973, P0974, P0976, P0977 DTCs, No P1910, P1815, or P1818 DTCs, Transmission output speed >= 350 RPM, Throttle position => 8%, 50 Nm <= engine torque <= 1492 Nm	6 seconds Continuous	В
PSA Circuit Malfunction – PSA indicates drive range with measured reverse gear ratio	P1818	0V to 12V This DTC detects an invalid state of the PSA sensor or the PSA circuit by deciphering the PSA inputs.	PSA range = D4, D3, D2, D1, or P/N and 2.11 >= gear ratio >= 2.05 NOTE: Ratio is measured	Common ignition voltage enable, Common engine speed enable, Engine torque valid from ECM, No OSS P0722, P0723 DTC's, No P1810, P1815, or P1816 DTCs, Vehicle speed >= 50 RPM, 20 Nm <= engine torque <= 1492 Nm Throttle position => 8 %	5 seconds Continuous	В
Ign. Switch Run Crank Circuit	P2534	Detcts a continuous open in the Ignition 1 switch circuit	NI/NO The Fail counter is incremented every 25ms if	Engine Running	Fail Counts = 200 out of 220 counts	A
TCC PWM Solenoid Electrical	P2764	0V to 12V This DTC detects a continuous open or ground short in TCC PWM circuit or the TCC PWM solenoid.	an open is detected. Hardware detects output state is invalid	Common ignition voltage enable, Common engine speed enable,	44 out of 50 counts. Continuous	В
TCC PWM Solenoid Electrical	P2763	OV to 12V This DTC detects a continuous short to power in the TCC PWM circuit or the TCC PWM solenoid.	Hardware detects output state is invalid	Common ignition voltage enable, Common engine speed enable,	44 out of 50 counts. Continuous	В
TCC Enable Solenoid Circuit Low Voltage Short to Ground or Open	P2769	0V to 12V This DTC detects a continuous open or short to ground in the TCC Enable Solenoid circuit or the TCC Enable Solenoid.	Output State is invalid	Engine RPM between 475 & 6200 for 5 sec.System Voltage is between 8 & 18 Vehicle Speed less than 200 KPH	44 out of 50 counts. Continuous	В
TCC Enable Solenoid Circuit High Voltage Short to 12 Volts (Sol with very low res)	P2770	0V to 12V This DTC detects a continuous short to battery in the TCC Enable Solenoid circuit or the TCC Enable Solenoid.	Output State is invalid	Engine RPM between 475 & 6200 for 5 sec.System Voltage is between 8 & 18 Vehicle Speed less than 200 KPH	44 out of 50 counts. Continuous	В
CAN Bus Error ECU	U0073	This DTC detects a communication problem between the TCM and ECU	No valid ECU CAN message for 2.0 seconds	Common ignition voltage enable	Continuous	В

SENSED PARAMETER	FAULT CODE	ACCEPTABLE OPERATING RANGE AND RATIONALITY	PRIMARY MALF DETECTION PARAMETERS	SECONDARY MONITORING PARAMETERS AND CONDITIONS	MONITORING TIME LENGTH AND FREQUENCY OF CHECK	DTC TYPE
CAN Bus Error ECU	U0100	This DTC detects a communication problem between the TCM and ECU	No valid ECU CAN message for 2.0 seconds	Common ignition voltage enable	Continuous	В

P0711 Fail Case 4 Table				
Start-Up Transmission Temperature (DegC)	Time for Transmission Temp to reach 20 DegC (sec)			
-40	1900			
-25	1000			
-10	800			
-5	520			
20	200			

	FAULT CODE	ACCEPTABLE OPERATING RANGE AND RATIONALITY	PRIMARY MALF DETECTION PARAMETERS	SECONDARY MONITORING PARAMETERS AND CONDITIONS	MONITORING TIME LENGTH AND FREQUENCY OF CHECK	DTC TYPE
--	---------------	---	--	---	---	-------------

REVISION LEVEL	DATE	COMMENT
1	9-Mar-05	Created Certification Matrix based off of 2007 GMT900 Application Matrix Information
2	22-Mar-05	Deleted P0894 and enabled P0741 to run in 4 th gear.
3	24-Mar-05	Deleted P0602 (only used on Service controllers
4		
5	9-Sep-05	Made revisions based on Certification Review Meeting – Added "Special" to Type C, Lookup Table for P0711, Clarified 4WD State for P0723, Remove reference to P0894, P1810, 15, 16, 18 were referencing themselves as part of the disable criteria – not correct.