Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Camshaft Actuator Solenoid Circuit Open – Bank 1	P0010	Diagnoses the VVT system high side driver circuit for circuit faults.	The ECM detects that voltage is high during driver off state (indicates short to power or open circuit)	Short to power: $\leq 0.5~\Omega$ impedance between signal and controller power Open Circuit: $\geq 200~\mathrm{K}~\Omega$ impedance between signal and controller ground	System supply voltage is within limits Output driver is commanded on, Ignition switch is in crank or run position	> 11 Volts	20 failures out of 25 samples250 ms / sample, continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Camshaft System Performance – Bank 1	P0011	Detects a VVT system error by comparing the desired and actual cam positions when VVT is activated	Camshaft position error [absolute value of (desired position - actual position)] is compared to thresholds to determine if excessive	(Intake cam Bank 1) Cam Position Error > 8.00 deg. (CamPosErrorLimlc1)	DTC's are NOT active: P0010, IntakeCamSensorTFTKO CrankSensorTFTKO CrankIntakeCamCorrelati onFA.	System Voltage > 11 Volts, Engine is running VVT is enabled Desired cam position > 0 Power Take Off (PTO) not active  Both Desired & Measured cam positions cannot be < 8.00 (CamPosErrorLimlc1) or have both > 18.00 deg. (PerfMaxlc1).  Desired cam position cannot vary more than 7.50 Cam Deg for at least 3.35 sec. (StablePositionTimelc1)	100.00 failures out of 1,000.00 samples100 ms / sample	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Crankshaft Position (CKP)- Camshaft Position (CMP) Correlation Bank 1 Sensor A	P0016	Detects cam to crank misalignment by monitoring if cam sensor pulse for bank 1 sensor A occurs during the incorrect crank position	2 cam sensor pulses more than -11.0 crank degrees before or 11.0 crank degrees after nominal position in one cam revolution.		Crankshaft and camshaft position signals are synchronized  Engine is Spinning  Cam phaser is in "parked" position  No Active DTCs:  Time since last execution of diagnostic	P0335, P0336 P0340,P0341 5VoltReferenceA_FA 5VoltReferenceB_FA < 1.0 seconds	2 failures out of 3 tests.  A failed test is 4 failures out of 5 samples.  There is a delay after the first failed test to allow the camshaft position to return to the park position.  This time is defined by the table "Cam Correlation Oil Temperature Threshold".  One sample per cam rotation	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank 1 Sensor 1	P0030	Diagnoses the Heater Output low side driver circuit for circuit faults.	Voltage low during driver off state (indicates open circuit)	Open Circuit: ≥ 200 K Ω impedance between signal and controller ground.	Ignition Voltage Engine Speed	= Crank or Run > 11.0 volts > 400 RPM	20 failures out of 25 samples 250 ms / sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0031 may also set

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank1 Sensor1	P0031	Diagnoses the Heater Output low side driver circuit for circuit faults.	Voltage low during driver off state (indicates short-to-ground).	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground.	Ignition Voltage Engine Speed	= Crank or Run > 11.0 volts > 400 RPM	20 failures out of 25 samples 250 ms / sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0030 may also set

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank1 Sensor1	P0032	Diagnoses the Heater Output low side driver circuit for circuit faults.	Voltage high during driver on state (indicates short to power).	Short to power: ≤ 0.5 Ω impedance between signal and controller power.	Ignition Voltage Engine Speed	= Crank or Run > 11.0 volts > 400 RPM	20 failures out of 25 samples 250 ms / sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank 1 Sensor 2	P0036	Diagnoses the Heater Output low side driver circuit for circuit faults.	Voltage low during driver off state (indicates open circuit).	Open Circuit: ≥ 200 K Ω impedance between signal and controller ground.	Ignition Voltage Engine Speed	= Crank or Run > 11.0 volts > 400 RPM	20 failures out of 25 samples 250 ms / sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0037 may also set

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank1 Sensor2	P0037	Diagnoses the Heater Output low side driver circuit for circuit faults.	Voltage low during driver off state (indicates short-to-ground).	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground.	Ignition Voltage Engine Speed	= Crank or Run > 11.0 volts > 400 RPM	20 failures out of 25 samples 250 ms / sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0036 may also set

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank1 Sensor2	P0038	Diagnoses the Heater Output low side driver circuit for circuit faults.	on state (indicates short	Short to power: ≤ 0.5 Ω impedance between signal and controller power.	Ignition Voltage Engine Speed	> 400 RPM	20 failures out of 25 samples 250 ms / sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank 2 Sensor 1	P0050	Diagnoses the Heater Output low side driver circuit for circuit faults.	Voltage low during driver off state (indicates open circuit).	Open Circuit: ≥ 200 K Ω impedance between signal and controller ground.	Ignition Voltage Engine Speed	= Crank or Run > 11.0 volts > 400 RPM	20 failures out of 25 samples 250 ms / sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0051 may also set

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank2 Sensor1	P0051	Diagnoses the Heater Output low side driver circuit for circuit faults.	Voltage low during driver off state (indicates short-to-ground).	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground.	Ignition Voltage Engine Speed	= Crank or Run > 11.0 volts > 400 RPM	20 failures out of 25 samples 250 ms / sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0050 may also set

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank2 Sensor1	P0052	Diagnoses the Heater Output low side driver circuit for circuit faults.	on state (indicates short	Short to power: ≤ 0.5 Ω impedance between signal and controller power.	Ignition Voltage Engine Speed	> 400 RPM	20 failures out of 25 samples 250 ms / sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
HO2S Heater Resistance Bank 1 Sensor 1	P0053	Detects an oxygen sensor heater having an incorrect or out of range resistance value.	Heater Resistance outside of the expected range of	2.8 < Ω < 9.5	No Active DTC's  Coolant – IAT Engine Soak Time Coolant Temp Ignition Voltage Engine Run time	ECT_Sensor_FA P2610 IAT_SensorFA < 8.0 °C > 28,800 seconds -30.0 < °C < 45.0 < 32.0 volts < 3.00 seconds	Once per valid cold start	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
HO2S Heater Resistance Bank 1 Sensor 2) (For Dual Bank Exhaust Only	P0054	Detects an oxygen sensor heater having an incorrect or out of range resistance value.	Heater Resistance outside of the expected range of	2.8 < Ω < 9.5	No Active DTC's  Coolant – IAT Engine Soak Time Coolant Temp Ignition Voltage Engine Run time	ECT_Sensor_FA P2610 IAT_SensorFA < 8.0 °C > 28,800 seconds -30.0 < °C < 45.0 < 32.0 volts < 3.05 seconds	Once per valid cold start	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank 2 Sensor 2	P0056	Diagnoses the Heater Output low side driver circuit for circuit faults.	Voltage low during driver off state (indicates open circuit).	Open Circuit: ≥ 200 K Ω impedance between signal and controller ground.	Ignition Voltage Engine Speed	= Crank or Run > 11.0 volts > 400 RPM	20 failures out of 25 samples 250 ms / sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0057 may also set

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Control Circuit Bank2 Sensor2	P0057	Diagnoses the Heater Output low side driver circuit for circuit faults.	Voltage low during driver off state (indicates short-to-ground).	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground.	Ignition Voltage Engine Speed	= Crank or Run > 11.0 volts > 400 RPM	20 failures out of 25 samples 250 ms / sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0056 may also set

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions		MIL Illum.
O2S Heater Control Circuit Bank2 Sensor2	P0058	Diagnoses the Heater Output low side driver circuit for circuit faults.	on state (indicates short	Short to power: ≤ 0.5 Ω impedance between signal and controller power.	Ignition Voltage Engine Speed	> 400 RPM	20 failures out of 25 samples 250 ms / sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
HO2S Heater Resistance Bank 2 Sensor 1	P0059	Detects an oxygen sensor heater having an incorrect or out of range resistance value.	Heater Resistance outside of the expected range of	3.8 < Ω < 10.4	No Active DTC's  Coolant – IAT Engine Soak Time Coolant Temp Ignition Voltage Engine Run time	ECT_Sensor_FA P2610 IAT_SensorFA < 8.0 °C > 28,800 seconds -30.0 < °C < 45.0 < 32.0 volts < 3.00 seconds	Once per valid cold start	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
HO2S Heater Resistance Bank 2 Sensor 2	P0060	Detects an oxygen sensor heater having an incorrect or out of range resistance value.	Heater Resistance outside of the expected range of	3.8 < Ω < 10.4	No Active DTC's  Coolant – IAT Engine Soak Time Coolant Temp Ignition Voltage Engine Run time	ECT_Sensor_FA P2610 IAT_SensorFA < 8.0 °C > 28,800 seconds -30.0 < °C < 45.0 < 32.0 volts < 3.05 seconds	Once per valid cold start	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
MAP / MAF / Throttle Position Correlation	P0068	Detect when MAP and MAF do not match estimated engine airflow as established by the TPS	Difference between MAP and estimated MAP exceeds threshold (kPa), or P0651 (5 Volt Ref), or P0107 (MAP circuit low), or P0108 (MAP circuit high) have failed this key cycle, then MAP portion of diagnostic fails	Table, f(TPS). See supporting tables: Delta MAP Threshold f(TPS)	Engine Speed	> 800 RPM  Run/Crank voltage > 6.41	Continuously fail MAP and MAF portions of diagnostic for 0.1875 s Continuous in MAIN processor	Type A, 1 Trips
			Absolute difference between MAF and estimated MAF exceed threshold (grams/sec), or P0102 (MAF circuit low), or P0103 (MAF circuit hi) have failed this key cycle, or maximum MAF versus	Table, f(TPS). See supporting tables: Delta MAF Threshold f(TPS)				
			RPM (Table) is greater than or equal to maximum MAF versus battery voltage, then MAF portion of diagnostic fails	Table, f(RPM). See supporting tables: Maximum MAF f (RPM)				
				Table, f(Volts). See supporting tables: Maximum MAF f (Volts)				

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Radiator Coolant Temp Sensor Circuit Low Voltage	P00B3	This DTC detects a short to ground in the RCT signal circuit or the RCT sensor.	RCT Resistance (@ 150°C)	< 45 Ohms	Engine run time OR IAT min	> 0.0 seconds ≤ 150.0 °C	5 failures out of 25 samples 1 sec/ sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Radiator Coolant Temp Sensor Circuit High Voltage	P00B4	Circuit Continuity This DTC detects a short to high or open in the RCT signal circuit or the RCT sensor.	RCT Resistance (@ -60°C)	>419,000 Ohms	Engine run time OR IAT min	> 10.0 seconds ≥-7.0 °C	5 failures out of 25 samples 1 sec/ sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Radiator Coolant Temp - Engine Coolant Temp (ECT) Correlation	P00B6	This DTC detects a difference between ECT and RCT after a soak condition.	A failure will be reported if any of the following occur:  1) Absolute difference between ECT at power up & RCT at power up is ≥ an IAT based threshold table lookup value(fast fail).  2) Absolute difference between ECT at power up & RCT at power up is > by 19.3 °C and a block heater has not been detected.	by these values in the Supporting tables section	No Active DTC's  Engine Off Soak Time Propulsion Off Soak Time Non-volatile memory initization  Test complete this trip Test aborted this trip IAT LowFuelCondition Diag	VehicleSpeedSensor_FA IAT_SensorCircuitFA THMR_RCT_Sensor_Ckt _FA THMR_ECT_Sensor_Ckt _FA IgnitionOffTimeValid TimeSinceEngineRunning Valid > 28,800 seconds > 0 seconds = Not occurred  = False = False ≥ -7 °C = False	1 failure 500 msec/ sample Once per valid cold start	Type B, 2 Trips
			3) ECT at power up > RCT at power up by 19.3 °C and the time spent cranking the engine without starting is greater than or equal to 10.0 seconds with the LowFuelConditionDiag	= False	Block Heater detection is enabled when either of the following occurs:  1) ECT at power up > IAT at power up by 2) Cranking time  ===================================	> 19.3 °C < 10.0 Seconds ====================================		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		1			below 1b as follows:	1b		
					1d) IAT drops from power up IAT	≥ 3.3°C		
					2a) ECT drops from power up ECT	> 1°C		
					2b) Engine run time	Within > 30 Seconds		
					Diagnostic is aborted when 3) or 4) occurs:	=======================================		
					3) Engine run time with vehicle speed below 1b	> 1800 Seconds		
					4) Minimum IAT during test	≤ -7.0 °C		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Mass Air Flow System Performance (naturally aspirated)	P0101	Determines if the MAF sensor is stuck within the normal operating range	Filtered Throttle Model Error AND ABS(Measured Flow – Modeled Air Flow) Filtered AND ABS(Measured MAP – MAP Model 2) Filtered	<= 300 kPa*(g/s) > 20 grams/sec > 20.0 kPa	Engine Speed Engine Speed Coolant Temp Coolant Temp Intake Air Temp Intake Air Temp Minimum total weight factor (all factors multiplied together)	>= 465 RPM <= 4,600 RPM >= -7 Deg C <= 125 Deg C >= -20 Deg C <= 100 Deg C  >= 0.50  Filtered Throttle Model Error multiplied by TPS Residual Weight Factor based on RPM  Modeled Air Flow Error multiplied by MAF Residual Weight Factor based on RPM and MAF Residual Weight Factor based on MAF Est  MAP Model 2 Error multiplied by MAP2 Residual Weight Factor based on RPM  See "Residual Weight	Calculation are performed every 12.5 msec	Type B, 2 Trips
					No Active DTCs:	Factor" tables.  MAP_SensorCircuitFA EGRValvePerformance_F A MAF_SensorCircuitFA CrankSensor_FA ECT_Sensor_FA IAT_SensorFA		
					No Pending DTCs:	EGRValve_FP ECT_Sensor_Ckt_FP IAT_SensorCircuitFP		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Mass Air Flow Sensor Circuit Low Frequency	P0102	Detects a continuous short to low or a open in either the signal circuit or the MAF sensor	MAF Output	<= 1,950 Hertz (~ 2.15 gm/sec)	Engine Speed	> 1.0 seconds >= 300 RPM >= 8.0 Volts >= 1.0 seconds	400 failures out of 500 samples  1 sample every cylinder firing event	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Mass Air Flow Sensor Circuit High Frequency	P0103	Detects a high frequency output from the MAF sensor	MAF Output	>= 14,500 Hertz (~ 1236.4 gm/sec)	Engine Speed	> 1.0 seconds >= 300 RPM >= 8.0 Volts >= 1.0 seconds	400 failures out of 500 samples  1 sample every cylinder firing event	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Manifold Absolute Pressure Sensor Performance (naturally aspirated)	P0106	Determines if the MAP sensor is stuck within the normal operating range	Filtered Throttle Model Error AND ABS(Measured MAP – MAP Model 1) Filtered AND ABS(Measured MAP – MAP Model 2) Filtered	<= 300 kPa*(g/s) > 20.0 kPa > 20.0 kPa	Engine Speed Engine Speed Coolant Temp Coolant Temp Intake Air Temp Intake Air Temp Minimum total weight factor (all factors multiplied together)	>= 465 RPM <= 4,600 RPM >= -7 Deg C <= 125 Deg C >= -20 Deg C <= 100 Deg C  >= 0.50  Filtered Throttle Model Error multiplied by TPS Residual Weight Factor based on RPM  MAP Model 1 Error multiplied by MAP1 Residual Weight Factor based on RPM  MAP Model 2 Error multiplied by MAP2 Residual Weight Factor based on RPM  See "Residual Weight Factor" tables.	Calculations are performed every 12.5 msec	Type B, 2 Trips
					No Active DTCs:	MAP_SensorCircuitFA EGRValvePerformance_F A MAF_SensorCircuitFA CrankSensor_FA ECT_Sensor_FA IAT_SensorFA		
		Manifold Pressure OR			No Pending DTCs:	EGRValve_FP ECT_Sensor_Ckt_FP IAT_SensorCircuitFP		
			< 50.0 kPa	Time between current ignition cycle and the last		4 failures out of 5 samples		

Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		Manifold Pressure	> 115.0 kPa	time the engine was running	> 409.6 seconds	1 sample every 12.5 msec	
				No Active DTCs:	EngineModeNotRunTimer Error MAP_SensorFA AAP_SnsrFA		
				No Pending DTCs:	MAP_SensorCircuitFP AAP_SnsrCktFP		
	Fault	Fault Code Monitor Description	Code	Code	Manifold Pressure > 115.0 kPa time the engine was running Engine is not rotating No Active DTCs:	Manifold Pressure   > 115.0 kPa   time the engine was running   > 409.6 seconds	Code  Manifold Pressure  And I sample every 12.5 msec  Engine is not rotating  No Active DTCs:  EngineModeNotRunTimer Error MAP_SensorFA AAP_SnsrFA  No Pending DTCs:  MAP SensorCircuitFP

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Manifold Absolute Pressure Sensor Circuit Low	P0107	Detects a continuous short to low or open in either the signal circuit or the MAP sensor.	MAP Voltage	< 3.0 % of 5 Volt Range (This is equal to 0.15 Volts or 3.5 kPa)	Continuous		320 failures out of 400 samples 1 sample every 12.5 msec	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Manifold Absolute Pressure Sensor Circuit High	P0108	Detects an open sensor ground or continuous short to high in either the signal circuit or the MAP sensor.	MAP Voltage	> 90.0 % of 5 Volt Range (This is equal to 4.50 Volts, or 115.1 kPa)	Continuous		320 failures out of 400 samples 1 sample every 12.5 msec	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Air Temperature Sensor Circuit Performance (applications with manifold temperature sensor, but no humidity sensor)	P0111	Detects an IAT sensor that has stuck in range by comparing to IAT2 and engine coolant temperature at startup	ABS(Power Up IAT - Power Up IAT2)  AND  ABS(Power Up ECT - Power Up IAT) > ABS(Power Up ECT - Power Up IAT2)	> 25 deg C	Time between current ignition cycle and the last time the engine was running  No Active DTCs:	> 28,800 seconds  ECT_Sensor_Ckt_FA IAT_SensorCircuitFA MnfdTempSensorCktFA HumTempSnsrCktFA	Executes once at the beginning of each ignition cycle if enable conditions are met	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Air Temperature Sensor Circuit Low	P0112	Detects a continuous short to ground in the IAT signal circuit or the IAT sensor	Raw IAT Input	< 48 Ohms (~150 deg C)	Engine Run Time	> 0.00 seconds	40 failures out of 50 samples 1 sample every 100 msec	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Air Temperature Sensor Circuit High	P0113	Detects a continuous open circuit in the IAT signal circuit or the IAT sensor	Raw IAT Input	> 404,973 Ohms (~-60 deg C)	Engine Run Time	> 0.00 seconds	40 failures out of 50 samples 1 sample every 100 msec	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Air Temperature Sensor Intermittent In-Range	P0114	Detects a noisy or erratic IAT signal circuit or IAT sensor	String Length  Where: "String Length" = sum of "Diff" calculated over  And where: "Diff" = ABS(current IAT reading - IAT reading from 100 milliseconds previous)	> 80.00 DegC  10 consecutive IAT samples	Continuous		4 failures out of 5 samples Each sample takes 1.0 seconds	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Coolant Temperature (ECT) Sensor Performance	P0116	This DTC detects ECT temp sensor stuck in mid range.	A failure will be reported if any of the following (1-3) occur after the following soak conditions, Engine off time > 28,800 seconds Propulsion system off time > 0 seconds  1) ECT at power up > IAT at power up by an IAT based table lookup value (fast fail).  2) ECT at power up > IAT at power up by 19.3 Deg C and a block heater has not been detected.  3) ECT at power up > IAT at power up by 19.3 Deg C and the time spent cranking the engine without starting is greater than 10.0 seconds with the LowFuelConditionDiag	See the table named: P0116_Fail if power up ECT exceeds IAT by these values in the Supporting tables section  = False	Non-volatile memory initization  Test complete this trip Test aborted this trip IAT LowFuelCondition Diag  ===================================	VehicleSpeedSensor_FA IAT_SensorFA ECT_Sensor_Ckt_FA IgnitionOffTime Valid TimeSinceEngineRunning Valid = Not occurred = False = False ≥ -7 °C = False ====================================	1 failure 500 msec/ sample Once per valid cold start	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					up IAT	≥3.3°C		
					2a) ECT drops from power up ECT 2b) Engine run time	≥ 1°C Within ≤ 30 seconds		
					======================================	=======================================		
					3) Engine run time with vehicle speed below 1b	> 1800 seconds		
					4) Minimum IAT during test	≤-7°C		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Coolant Temp Sensor Circuit Low	P0117	Circuit Continuity This DTC detects a short to ground in the ECT signal circuit or the ECT sensor.	ECT Resistance (@ 150°C)	< 45 Ohms			5 failures out of 6 samples 1 sec/ sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Coolant Temp Sensor Circuit High	P0118	Circuit Continuity This DTC detects a short to high or open in the ECT signal circuit or the ECT sensor.	ECT Resistance (@ -60°C)	>419,000 Ohms	Engine run time OR IAT min	> 10.0 seconds ≥ -7.0 °C	5 failures out of 6 samples  1 sec/ sample  Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Coolant Temperature (ECT) Sensor Circuit Intermittent	P0119	Circuit Continuity This DTC detects large step changes in the ECT signal circuit or the ECT sensor. Allowable high and low limits are calculated for the next sample based on the previous sample.	ECT temperature step change:  1) postive step change is greater than calculated high limit  OR  2) negitive step change is lower than calculated low limit.  The calculated high and low limits use the following calibrations:  1) Sensor time constant  2) Sensor low limit  3) Sensor high limit  *****Generic Example*****  If the last ECT reading was 90 Deg C, the Time constant was calibrated at 10 seconds, the low limit was calibrated to -80 Deg C and the high limit was calibrated to 200 Deg C the caluculated limits are 101 Deg C and 73 Deg C.  The next reading (after the 90 Deg C reading) must be between 73 Deg C and 101 Deg C to be valid.  ***********************************	13.0 seconds -70.0 Deg C 180.0 Deg C	No Active DTC's	P0117 P0118	3 failures out of 4 samples 1 sec/ sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Throttle Position Sensor Performance (naturally aspirated)	P0121	Determines if the Throttle Position Sensor input is stuck within the normal operating range	Filtered Throttle Model Error AND ABS(Measured Flow – Modeled Air Flow) Filtered AND ABS(Measured MAP – MAP Model 2) Filtered	> 300 kPa*(g/s) > 20 grams/sec <= 20.0 kPa	Engine Speed Engine Speed Coolant Temp Coolant Temp Intake Air Temp Intake Air Temp Minimum total weight factor (all factors multiplied together)	>= 465 RPM <= 4,600 RPM > -7 Deg C < 125 Deg C > -20 Deg C < 100 Deg C  >= 0.50  Filtered Throttle Model Error multiplied by TPS Residual Weight Factor based on RPM  Modeled Air Flow Error multiplied by MAF Residual Weight Factor based on RPM and MAF Residual Weight Factor based on MAF Est  See "Residual Weight Factor" tables.	Calculation are performed every 12.5 msec	Type B, 2 Trips
					No Active DTCs:	MAP_SensorCircuitFA EGRValvePerformance_F A MAF_SensorCircuitFA CrankSensor_FA ECT_Sensor_FA IAT_SensorFA		
					No Pending DTCs:	EGRValve_FP ECT_Sensor_Ckt_FP IAT_SensorCircuitFP		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
TPS1 Circuit Low	P0122	Detects a continuous or intermittent short or open in TPS1 circuit	TPS1 Voltage <	0.3250		Run/Crank voltage > 6.41  No 5V reference error or fault for # 4 5V reference circuit (P06A3)	79 / 159 counts; 57 counts continuous; 3.125 ms /count in the ECM main processor	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
TPS1 Circuit High	P0123	Detects a continuous or intermittent short or open in TPS1 circuit	TPS1 Voltage >	4.750		Run/Crank voltage > 6.41  No 5V reference error or fault for # 4 5V reference circuit (P06A3)	79 / 159 counts; 57 counts continuous; 3.125 ms /count in the ECM main processor	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Coolant Temperature Below Stat Regulating Temperature ) (time based method for Dual temp sensor applications	P0128	This DTC detects if the engine coolant temperature rises too slowly due to an ECT or Cooling system fault	Engine run time is accumulated when airflow is ≥ 17 grams per sec during Range #1 or #2:  ===================================	See the two tables named: P0128_Maximum Accumulated Time for IAT and Start-up ECT conditions (Primary Test) and P0128_Maximum Accumulated Time for IAT and Start-up ECT conditions (Alternate Test) in the Supporting tables section	Engine not run time Engine run time Fuel Condition  == Range #1 == (Primary) Test ECT at start run Average AirflowT-Stat Heater duty commanded cycle ====================================	MAF_SensorFA IAT_SensorFA THMR_RCT_Sensor_Ckt _FA THMR_ECT_Sensor_Ckt _FA  ≥ 1,800 seconds 10 ≤ Eng Run Tme ≤ 1,370 seconds  Ethanol ≤ 87 %  ===================================	1 failure to set DTC 1 sec/ sample Once per ignition key cycle	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit Low Voltage Bank 1 Sensor 1	P0131	This DTC determines if the O2 sensor circuit is shorted to low.	Oxygen Sensor Signal	< 50.0 mVolts	AIR intrusive test Fuel intrusive test Idle intrusive test Idle intrusive test EGR intrusive test System Voltage EGR Device Control Idle Device Control Fuel Device Control AIR Device Control Low Fuel Condition Diag Equivalence Ratio Air Per Cylinder Fuel Control State Closed Loop Active All Fuel Injectors for active Cylinders Fuel Condition Fuel State All of the above met for	TPS_ThrottleAuthorityDef aulted MAP_SensorFA AIR System FA Ethanol Composition Sensor FA EvapPurgeSolenoidCircuit _FA EvapFlowDuringNonPurg e_FA EvapVentSolenoidCircuit_FA EvapEmissionSystem_FA EvapEmissionSystem_FA FuelTankPressureSnsrCkt _FA FuelInjectorCircuit_FA = Not active = Talse 0.9922 < ratio < 1.0137 50 < mgram < 700 = Closed Loop = TRUE  Enabled (On) Ethanol ≤ 87 % DFCO not active > 2.0 seconds	380 failures out of 475 samples Frequency: Continuous in 100 milli - second loop	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit High Voltage Bank 1 Sensor 1	P0132	This DTC determines if the O2 sensor circuit is shorted to high.	Oxygen Sensor Signal	> 1,050 mvolts	== Open Test Criteria == No Active DTC's  System Voltage AFM Status Heater Warm-up delay Engine Run Time Engine Run Accum Fuel Condition	=====================================	100 failures out of 125 samples Frequency: Continuous in 100 milli - second loop	Type B, 2 Trips
					No Active DTC's	MAP_SensorFA EvapPurgeSolenoidCircuit _FA EvapFlowDuringNonPurg e_FA EvapVentSolenoidCircuit_ FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnsrCkt _FA FuelInjectorCircuit_FA AIR System FA		
					Low Fuel Condition Diag Fuel Condition  Initial delay after Open Test Criteria met (cold start condition)  Initial delay after Open Test Criteria met (not cold start condition)  Equivalence Ratio Air Per Cylinder Fuel Control State	= False ≤ 87 % Ethanol > 40.0 seconds when engine soak time > 28,800 seconds > 40.0 seconds when engine soak time ≤ 28,800 seconds  0.9922 ≤ ratio ≤ 1.0137 50 ≤ mgram ≤ 700 not = Power Enrichment		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					All of the above met for	> 2.0 seconds		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Slow Response Bank 1 Sensor 1) (For use with ESPD	the O2 sensor response time is degraded.	Fault condition present when the average response time is caluclated over the test time, and compared to the threshold.  OR	Refer to P0133_O2S Slow Response Bank 1 Sensor 1 "Pass/Fail Threshold table" in the Supporting Tables tab	No Active DTC's	TPS_ThrottleAuthorityDef aulted MAP_SensorFA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault MAF_SensorFA EvapPurgeSolenoidCircuit _FA EvapFlowDuringNonPurg e_FA	Sample time is 60 seconds Frequency: Once per trip	Type B, 2 Trips	
			Slope Time L/R Switches OR	< 3		EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnsrCkt FA		
	Slope Time R/L Switche	Slope Time R/L Switches	< 3		FA FuelInjectorCircuit_FA AIR System FA EthanolCompositionSens or_FA EngineMisfireDetected_F A			
					Bank 1 Sensor 1 DTC's not active	P0131, P0132, P0134		
					System Voltage EGR Device Control Idle Device Control Fuel Device Control AIR Device Control Low Fuel Condition Diag	10.0 < Volts < 32.0  = Not active  = Not active  = Not active  = Not active  = False		
					Green O2S Condition	= Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S1, B2S1 (if applicable)		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					O2 Heater on for Learned Htr resistance  Engine Coolant IAT Engine run Accum	in Supporting Tables tab.  ≥ 40 seconds = Valid ( the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's") > 50 °C > -40 °C > 120 seconds		
					Time since any AFM status change Time since Purge On to Off change Time since Purge Off to On change  Engine airflow Engine speed Fuel Condition Baro Air Per Cylinder	> 0.0 seconds > 0.0 seconds > 0.0 seconds > 0.0 seconds 20 ≤ grams/second ≤ 55 1,200 <= RPM <= 3,000 < 87 % Ethanol > 70 kpa ≥ 200 mGrams		
					Fuel Control State Closed Loop Active LTM fuel cell Transient Fuel Mass Baro Fuel Control State Fuel State Commanded Proportional Gain ====================================	= Closed Loop = TRUE = Enabled ≤ 100.0 mgrams = Not Defaulted not = Power Enrichment DFCO not active ≥ 0.0 % ====================================		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit Insufficient Activity Bank 1 Sensor 1	P0134	This DTC determines if the O2 sensor circuit is open.	Oxygen Sensor Signal	> 1,700 mvolts	No Active DTC's  System Voltage AFM Status Heater Warm-up delay Engine Run Time Engine Run Accum Fuel Condition	TPS_ThrottleAuthorityDef aulted MAF_SensorFA EthanolCompositionSens or_FA 10.0 < Volts < 32.0 = All Cylinders active = Complete > 5 seconds > 225 seconds ≤ 87 % Ethanol	200 failures out of 250 samples. Frequency: Continuous 100 msec loop	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Performance Bank 1 Sensor 1	P0135	This DTC determines if the O2 sensor heater is functioning properly by monitoring the current through the heater circuit.	Heater Current outside of the expected range of	0.3 < Amps < 3.1	No Active DTC's  System Voltage Heater Warm-up delay O2S Heater device control  B1S1 O2S Heater Duty Cycle  All of the above met for	ECT_Sensor_FA  10.0 < Volts < 32.0 = Complete = Not active > zero > 120 seconds	8 failures out of 10 samples Frequency: 1 tests per trip 5 seconds delay between tests and 1 second execution rate	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit Low Voltage Bank 1 Sensor 2) (For Dual Bank Exhaust Only	P0137	This DTC determines if the O2 sensor circuit is shorted to low.	Oxygen Sensor Signal	< 50 mvolts	AIR intrusive test Fuel intrusive test Idle intrusive test Idle intrusive test EGR intrusive test System Voltage EGR Device Control Idle Device Control Fuel Device Control AIR Device Control Low Fuel Condition Diag Equivalence Ratio Air Per Cylinder Fuel Control State Closed Loop Active All Fuel Injectors for active Cylinders Fuel Condition Fuel State All of the above met for	TPS_ThrottleAuthorityDef aultedMAP_SensorFAAIR System FAEthanol Composition Sensor FAEvapPurgeSolenoidCir cuit_FAEvapFlowDuringN onPurge_FAEvapVentSol enoidCircuit_FAEvapEmissionSy stem_FAFuelTankPressur eSnsrCkt_FAFuelInjector Circuit_FA = Not active = Talse   0.9922 ≤ ratio ≤ 1.0137   50 ≤ mgrams ≤ 700 = Closed Loop = TRUE   Enabled (On) Ethanol <= 87 % DFCO not active   > 2.0 seconds	430 failures out of 540 samples  Frequency: Continuous in 100 milli - second loop	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit High Voltage Bank 1 Sensor 2) (For Dual Bank Exhaust Only	P0138	This DTC determines if the O2 sensor circuit is shorted to high.	Oxygen Sensor Signal	> 1,050 mvolts	== Open Test Criteria == No Active DTC's  System Voltage AFM Status Heater Warm-up delay Engine Run Time Fuel Condition ====================================	=====================================	100 failures out of 125 samples  Frequency: Continuous in 100 milli - second loop	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					All of the above met for	> 2.0 seconds		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Slow Response Rich to Lean Bank 1 Sensor 2	P013A	This DTC determines if the post catalyst O2 sensor has Slow Response in a predefined Rich to Lean voltages range during Rich to Lean transition. The diagnostic is an intrusive test which runs in a DFCO mode to achieve the required response.	The EWMA of the Post O2 sensor normalized integral value  OR  The Accumulated mass air flow monitored during the Slow Response Test (between the upper and lower voltage thresholds)	> 8.3 units  > 75.0 grams (upper voltage threshold is 500 mvolts and lower voltage threshold is 200 mvolts)	B1S2 DTC's Not Active this key cycle System Voltage Learned heater resistance ICAT MAT Burnoff delay Green O2S Condition	TPS_ThrottleAuthorityDef aulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_F A EthanolCompositionSens or_FA P013B, P013E, P013F, P2270 or P2271  10.0 < Volts < 32.0 = Valid (the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's") = Not Valid = Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 (if applicable) in Supporting Tables tab.	Frequency: Once per trip Note: if NaPOPD_b_Res etFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_Rap idResponseActiv e = TRUE, multiple tests per trip are allowed.	Type A, 1 Trips EWMA
					Low Fuel Condition Diag Post fuel cell	= False = enabled		
					DTC's Passed	P2270 (and P2272 if applicable)		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
						P013E (and P014A if applicable)		
					After above conditions are met: DFCO mode is continued (wo driver initiated pedal input).	=======================================		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Slow Response Lean to Rich Bank 1 Sensor 2	P013B	This DTC determines if the post catalyst O2 sensor has Slow Response in a predefined Lean to Rich voltages range during Lean to Rich transition. The diagnostic is an intrusive test which increases the delivered A/F ratio to achieve the required rich threshold.	The EWMA of the Post O2 sensor normalized integral value  OR  The Accumulated mass air flow monitored during the Slow Response Test (between the upper and lower voltage thresholds)	> 8.3 units  > 150 grams (lower voltage threshold is 350 mvolts and upper voltage threshold is 650 mvolts)	B1S2 DTC's Not Active this key cycle System Voltage Learned heater resistance	TPS_ThrottleAuthorityDef aulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_F A EthanolCompositionSens or_FA P013A, P013E, P013F, P2270 or P2271  10.0 < Volts < 32.0 = Valid ( the heater resistance has learned since NVM reset, see enable conditions for "H02S Heater Resistance DTC's" )	Frequency: Once per trip Note: if NaPOPD_b_Res etFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_Rap idResponseActiv e = TRUE, multiple tests per trip are allowed.	Type A, 1 Trips EWMA
					ICAT MAT Burnoff delay Green O2S Condition	= Not Valid = Not Valid, See definition		
					Green Cat System Condition	of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 (if applicable) in Supporting Tables tab.  = Not Valid, System is not valid until accumulated airflow is greater than		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Low Fuel Condition Diag Post fuel cell DTC's Passed	720,000 grams. Airflow accumulation is only enabled when estimated Cat temperature is above 600 Deg C. (Note: This feature is only enabled when the vehicle is new and cannot be enabled in service).  = False = enabled  P2270 (and P2272 if applicable) P013E (and P014A if applicable) P013A (and P013C if applicable) P2271 (and P2273 if applicable) P013F (and P014B if applicable)		
					After above conditions are met: Fuel Enrich mode continued.  ===================================	=======================================		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Slow Response Rich to Lean Bank 2 Sensor 2	P013C	This DTC determines if the post catalyst O2 sensor has Slow Response in a predefined Rich to Lean voltages range during Rich to Lean transition. The diagnostic is an intrusive test which runs in a DFCO mode to achieve the required response.	The EWMA of the Post O2 sensor normalized integral value OR The Accumulated mass air flow monitored during the Slow Response Test (between the upper and lower voltage thresholds)	> 8.3 units  > 75.0 grams (upper voltage threshold is 500 mvolts and lower voltage threshold is 200 mvolts)	B2S2 DTC's Not Active this key cycle System Voltage Learned heater resistance	TPS_ThrottleAuthorityDef aulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_F A EthanolCompositionSens or_FA P013D, P014A, P014B, P2272 or P2273  10.0 < Volts < 32.0 = Valid ( the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's" )	Frequency: Once per trip Note: if NaPOPD_b_Res etFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_Rap idResponseActiv e = TRUE, multiple tests per trip are allowed.	Type A, 1 Trips EWMA
					ICAT MAT Burnoff delay Green O2S Condition  Low Fuel Condition Diag Post fuel cell	= Not Valid  = Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 in Supporting Tables tab.  = False = enabled		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					DTC's Passed	P2270 (and P2272 if applicable) P013E (and P014A if applicable)		
					After above conditions are met: DFCO mode is continued (wo driver initiated pedal input).	========		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Slow Response Lean to Rich Bank 2 Sensor 2	P013D	This DTC determines if the post catalyst O2 sensor has Slow Response in a predefined Lean to Rich voltages range during Lean to Rich transition. The diagnostic is an intrusive test which increases the delivered A/F ratio to achieve the required rich threshold.	The EWMA of the Post O2 sensor normalized integral value  OR  The Accumulated mass air flow monitored during the Slow Response Test (between the upper and lower voltage thresholds)	> 8.3 units  > 150 grams (lower voltage threshold is 350 mvolts and upper voltage threshold is 650 mvolts)	No Active DTC's  B2S2 DTC's Not Active this key cycle  System Voltage Learned heater resistance	TPS_ThrottleAuthorityDef aulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_F A EthanolCompositionSens or_FA P013C, P014A, P014B, P2272 or P2273  10.0 < Volts < 32.0 = Valid ( the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's" )	Frequency: Once per trip Note: if NaPOPD_b_Res etFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_Rap idResponseActiv e = TRUE, multiple tests per trip are allowed.	Type A, 1 Trips EWMA
					ICAT MAT Burnoff delay	= Not Valid		
					Green O2S Condition	= Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 in Supporting Tables tab.		
					Green Cat System Condition	= Not Valid, System is not valid until accumulated airflow is greater than		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Low Fuel Condition Diag Post fuel cell DTC's Passed  ==================================	720,000 grams. Airflow accumulation is only enabled when estimated Cat temperature is above 600 Deg C. (Note: This feature is only enabled when the vehicle is new and cannot be enabled in service).  = False = enabled  P2270 (and P2272 if applicable) P013E (and P014A if applicable) P013A (and P013C if applicable) P2271 (and P2273 if applicable) P2271 (and P2273 if applicable) P013F (and P014B if applicable) ====================================		
					During this test the following must stay TRUE or the test will abort: 0.95 ≤ Fuel EQR ≤ 1.10			

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Delayed Response Rich to Lean Bank 1 Sensor 2	P013E	This DTC determines if the post catalyst O2 sensor has an initial delayed response to an A/F change from Rich to Lean. The diagnostic is an intrusive test which runs in a DFCO mode to achieve the required response.	Post O2 sensor voltage  AND  The Accumulated mass air flow monitored during the Delayed Response Test under DFCO  DFCO begins after: 1) Catalyst has been rich for a minimum of AND 2) Catalyst Rich Accumulation Air Flow is greater or equal to	> 500 mvolts  > 78 grams  > 0 secs  > 10 grams	B1S2 DTC's Not Active this key cycle  System Voltage Learned heater resistance	TPS_ThrottleAuthorityDef aulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_F A EthanolCompositionSens or_FA P013A, P013B, P013F, P2270 or P2271  10.0 < Volts < 32.0 = Valid ( the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's")	Frequency: Once per trip Note: if NaPOPD_b_Res etFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_Rap idResponseActiv e = TRUE, multiple tests per trip are allowed.	Type B, 2 Trips
					ICAT MAT Burnoff delay Green O2S Condition	= Not Valid  = Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 (if applicable) in Supporting Tables tab.		
					Low Fuel Condition Diag Post fuel cell	= False = enabled		

Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
				DTC's Passed	P2270 (and P2272 if applicable)		
				Number of fueled cylinders	≤6 cylinders		
				After above conditions are met: DFCO mode entered (wo driver initiated pedal input).			
	Fault	Fault Code Monitor Description	Fault Code Monitor Description Malfunction Criteria	Fault Code Monitor Description Malfunction Criteria Threshold Value	Number of fueled cylinders  ===================================	DTC's Passed  P2270 (and P2272 if applicable)  Number of fueled cylinders ====================================	DTC's Passed  P2270 (and P2272 if applicable)  Number of fueled cylinders  ===================================

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Delayed Response Lean to Rich Bank 1 Sensor 2	P013F	This DTC determines if the post catalyst O2 sensor has an initial delayed response to an A/F change from Lean to Rich. The diagnostic is an intrusive test which increases the delivered A/F ratio to achieve the required rich threshold.	Post O2 sensor voltage AND The Accumulated mass air flow monitored during the Delayed Response Test	< 350 mvolts > 1,185 grams	B1S2 DTC's Not Active this key cycle System Voltage Learned heater resistance	TPS_ThrottleAuthorityDef aulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_F A EthanolCompositionSens or_FA P013A, P013B, P013E, P2270 or P2271  10.0 < Volts < 32.0 = Valid ( the heater resistance has learned since NVM reset, see enable conditions for "H02S Heater Resistance DTC's" )	Frequency: Once per trip Note: if NaPOPD_b_Res etFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_Rap idResponseActiv e = TRUE, multiple tests per trip are allowed	Type B, 2 Trips
					ICAT MAT Burnoff delay	= Not Valid		
					Green Cat System	= Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 (if applicable) in Supporting Tables tab.		
					Condition	= Not Valid, System is not valid until accumulated airflow is greater than		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Low Fuel Condition Diag Post fuel cell  DTC's Passed  Number of fueled cylinders ====================================	720,000 grams. Airflow accumulation is only enabled when estimated Cat temperature is above 600 Deg C. (Note: This feature is only enabled when the vehicle is new and cannot be enabled in service).  = False = enabled  P2270 (and P2272 if applicable) P013E (and P014A if applicable) P013A (and P013C if applicable) P2271 (and P2273 if applicable) P2271 (and P2273 if applicable)  ≥ 2 cylinders ====================================		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit Insufficient Activity Bank 1 Sensor 2) (For Dual Bank Exhaust Only	P0140	This DTC determines if the O2 sensor circuit is open.	Oxygen Sensor Signal	> 1,700 mvolts	No Active DTC's  System Voltage AFM Status Heater Warm-up delay Engine Run Time Engine Run Accum Fuel Condition	TPS_ThrottleAuthorityDef aulted MAF_SensorFA EthanolCompositionSens or_FA 10.0 < Volts < 32.0 = All Cylinders active = Complete > 5 seconds > 225 seconds ≤ 87 % Ethanol	200 failures out of 250 samples. Frequency: Continuous 100 msec loop	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Performance Bank 1 Sensor 2) (For Dual Bank Exhaust Only	P0141	This DTC determines if the O2 sensor heater is functioning properly by monitoring the current through the heater circuit.	Heater Current outside of the expected range of	0.3 > amps > 2.9	No Active DTC's System Voltage Heater Warm-up delay O2S Heater device control B1S1 O2S Heater Duty Cycle All of the above met for	ECT_Sensor_FA 10.0 < Volts < 32.0 = Complete = Not active > zero > 120 seconds	8 failures out of 10 samples Frequency: 1 tests per trip 5 seconds delay between tests and 1 second execution rate.	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Delayed Response Rich to Lean Bank 2 Sensor 2	P014A	This DTC determines if the post catalyst O2 sensor has an initial delayed response to an A/F change from Rich to Lean. The diagnostic is an intrusive test which runs in a DFCO mode to achieve the required response.	Post O2 sensor voltage  AND  The Accumulated mass air flow monitored during the Delayed Response Test under DFCO  DFCO begins after: 1) Catalyst has been rich for a minimum of AND 2) Catalyst Rich Accumulation Air Flow is greater or equal to	> 500 mvolts  > 78 grams  > 0 secs  > 10 grams	B2S2 DTC's Not Active this key cycle  System Voltage Learned heater resistance	TPS_ThrottleAuthorityDef aulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_F A EthanolCompositionSens or_FA P013C, P013D, P014B, P2272 or P2273  10.0 < Volts < 32.0 = Valid ( the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's" )	Frequency: Once per trip Note: if NaPOPD_b_Res etFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_Rap idResponseActiv e = TRUE, multiple tests per trip are allowed	Type B, 2 Trips
					ICAT MAT Burnoff delay  Green O2S Condition  Low Fuel Condition Diag Post fuel cell	= Not Valid  = Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 in Supporting Tables tab.  = False = enabled		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					DTC's Passed  Number of fueled cylinders	P2270 (and P2272 if applicable) ≤ 6 cylinders ====================================		
					met: DFCO mode entered (wo driver initiated pedal input).			

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Delayed Response Lean to Rich Bank 2 Sensor 2	P014B	This DTC determines if the post catalyst O2 sensor has an initial delayed response to an A/F change from Lean to Rich. The diagnostic is an intrusive test which increases the delivered A/F ratio to achieve the required rich threshold.	Post O2 sensor  AND  The Accumulated mass air flow monitored during the Delayed Response Test	< 350 mvolts > 1,185 grams.	No Active DTC's  B2S2 DTC's Not Active this key cycle  System Voltage Learned heater resistance	TPS_ThrottleAuthorityDef aulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FAFuelInjectorCircuit_FAF uelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_F A EthanolCompositionSens or_FA P013C, P013D, P014A, P2272 or P2273  10.0 < Volts < 32.0 = Valid ( the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's")	Frequency: Once per trip Note: if NaPOPD_b_Res etFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_Rap idResponseActiv e = TRUE, multiple tests per trip are allowed	Type B, 2 Trips
					ICAT MAT Burnoff delay	= Not Valid		
					Green O2S Condition	= Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 in Supporting Tables tab.		
					Green Cat System Condition	= Not Valid, System is not valid until accumulated airflow is greater than		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Low Fuel Condition Diag Post fuel cell  DTC's Passed  Number of fueled cylinders ====================================	720,000 grams. Airflow accumulation is only enabled when estimated Cat temperature is above 600 Deg C. (Note: This feature is only enabled when the vehicle is new and cannot be enabled in service).  = False = enabled  P2270 (and P2272 if applicable) P013E (and P014A if applicable) P013A (and P013C if applicable) P2271 (and P2273 if applicable)  ≥ 2 cylinders ====================================		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit Low Voltage Bank 2 Sensor 1	P0151	This DTC determines if the O2 sensor circuit is shorted to low.	Oxygen Sensor Signal	< 50 mvolts	AIR intrusive test Fuel intrusive test Idle intrusive test Idle intrusive test EGR intrusive test System Voltage EGR Device Control Idle Device Control Fuel Device Control AIR Device Control Low Fuel Condition Diag Equivalence Ratio  Air Per Cylinder Fuel Control State Closed Loop Active All Fuel Injectors for active Cylinders Fuel Condition Fuel State  All of the above met for	TPS_ThrottleAuthority DefaultedMAP_SensorFA AIR System FA Ethanol Composition Sensor FA EvapPurgeSolenoidCircuit _FA EvapFlowDuringNonPurg e_FA EvapVentSolenoidCircuit_FA EvapEmissionSystem_FA EvapEmissionSystem_FA FuelTankPressureSnsrCkt _FA FuelInjectorCircuit_FA = Not active = Talse 0.9922 ≤ equiv. ratio ≤ 1.0137 50 ≤ APC ≤ 700 mgrams = Closed Loop = TRUE  Enabled (On) ≤ 87 % Ethanol DFCO not active > 2.0 seconds	380 failures out of 475 samples  Frequency: Continuous in 100 milli - second loop	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit High Voltage Bank 2 Sensor 1	P0152	This DTC determines if the O2 sensor circuit is shorted to high.	Oxygen Sensor Signal	> 1,050 mvolts	== Open Test Criteria == No Active DTC's  System Voltage AFM Status Heater Warm-up delay Engine Run Accum Fuel Condition ====================================	=====================================	100 failures out of 125 samples Frequency: Continuous in 100 milli - second loop	Type B, 2 Trips
				Initial delay after Open Test Criteria met (not cold start condition)	> 85.0 seconds when engine soak time ≤ 28,800 seconds			
				Equivalence Ratio Air Per Cylinder	0.9922 ≤ ratio ≤ 1.0137 50 ≤ mgrams ≤ 700			

		Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		Fuel Control State	not = Power Enrichment		
		All of the above met for	> 2 seconds		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Slow Response Bank 2 Sensor 1) (For use with ESPD	the O2 sensor response time is degraded.	Fault condition present when the average response time is caluclated over the test time, and compared to the threshold.	Refer to P0153_O2S Slow Response Bank 2 Sensor 1 "Pass/Fail Threshold table" in the Supporting Tables tab	No Active DTC's	TPS_ThrottleAuthorityDef aulted MAP_SensorFA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault MAF_SensorFA EvapPurgeSolenoidCircuit	Sample time is 60 seconds Frequency: Once per trip	Type B, 2 Trips	
		OR			_FA EvapFlowDuringNonPurg e_FA EvapVentSolenoidCircuit_			
			Slope Time L/R Switches	< 3		FA EvapSmallLeak_FA EvapEmissionSystem_FA		
		OR	OR			FuelTankPressureSnsrCkt _FA FuelInjectorCircuit_FA		
			Slope Time R/L Switches	< 3		AIR System FA EthanolCompositionSens or_FA EngineMisfireDetected_F		
					Bank 2 Sensor 1 DTC's not active	A = P0151, P0152 or P0154		
					System Voltage EGR Device Control Idle Device Control Fuel Device Control AIR Device Control	10.0 < Volts < 32.0 = Not active		
				Low Fuel Condition Diag Green O2S Condition	= False = Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow			
					and Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S1, B2S1 in Supporting			

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
System	Code				O2 Heater on for Learned Htr resistance  Engine Coolant IAT Engine run Accum  Time since any AFM status change Time since Purge On to Off change Time since Purge Off to On change  Engine airflow Engine airflow Engine speed Fuel Condition Baro Air Per Cylinder  Fuel Control State Closed Loop Active LTM fuel cell Transient Fuel Mass Baro Fuel Control State Fuel State Commanded Proportional Gain  ===================================	Tables tab.  ≥ 40 seconds = Valid ( the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's" ) > 50 °C > -40 °C > 120 seconds  > 0.0 seconds  = 0.0 seconds  > 0.0 seconds  > 0.0 seconds  = 0.0 seconds  > 1,200 ≤ RPM ≤ 3,000 < 87 % Ethanol > 70 kpa >= 200 mGrams  = Closed Loop = TRUE = Enabled ≤ 100.0 mgrams = Not Defaulted not = Power Enrichment DFCO not active  ≥ 0.0 %  ===================================		
					7 and the above met for	- 0.0 00001100		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit Insufficient Activity Bank 2 Sensor 1	P0154	This DTC determines if the O2 sensor circuit is open.	Oxygen Sensor Signal	> 1,700 mvolts	No Active DTC's  System Voltage AFM Status Heater Warm-up delay Engine Run Time Engine Run Accum Fuel Condition	MAF_SensorFA	200 failures out of 250 samples. Frequency: Continuous 100 msec loop	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Performance Bank 2 Sensor 1	P0155	This DTC determines if the O2 sensor heater is functioning properly by monitoring the current through the heater circuit.	Heater Current outside of the expected range of	0.3 > amps > 3.1	No Active DTC's System Voltage Heater Warm-up delay O2S Heater device control B1S1 O2S Heater Duty Cycle All of the above met for	ECT_Sensor_FA 10.0 < Volts < 32.0 = Complete = Not active > zero > 120 seconds	8 failures out of 10 samples Frequency: 1 tests per trip 5 seconds delay between tests and 1 second execution rate	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit Low Voltage Bank 2 Sensor 2	P0157	This DTC determines if the O2 sensor circuit is shorted to low.	Oxygen Sensor Signal	< 50 mvolts	AIR intrusive test Fuel intrusive test Idle intrusive test Idle intrusive test EGR intrusive test System Voltage EGR Device Control Idle Device Control Fuel Device Control Low Fuel Condition Diag Equivalence Ratio Air Per Cylinder Fuel Control State Closed Loop Active All Fuel Injectors for active Cylinders Fuel Condition Fuel State All of the above met for	TPS_ThrottleAuthorityDef aulted MAP_SensorFA AIR System FA Ethanol Composition Sensor FA EvapPurgeSolenoidCircuit _FA EvapFlowDuringNonPurg e_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnsrCkt _FA FuelInjectorCircuit_FA = Not active = Talse 0.9922 ≤ ratio ≤ 1.0137 50 ≤ mgrams ≤ 700 = Closed Loop = TRUE  Enabled (On) ≤ 87 % Ethanol DFCO not active > 2.0 seconds	430 failures out of 540 samples  Frequency: Continuous in 100 milli - second loop	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit High Voltage Bank 2 Sensor 2	P0158	This DTC determines if the O2 sensor circuit is shorted to high.	Oxygen Sensor Signal	> 1,050 mvolts	== Open Test Criteria == No Active DTC's  System Voltage AFM Status Heater Warm-up delay Engine Run Time Engine Run Accum Fuel Condition ====================================	=====================================	100 failures out of 125 samples Frequency: Continuous in 100 milli - second loop	Type B, 2 Trips
					No Active DTC's	MAP_SensorFA EvapPurgeSolenoidCircuit _FA EvapFlowDuringNonPurg e_FA EvapVentSolenoidCircuit_ FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnsrCkt _FA FuelInjectorCircuit_FA AIR System FA = False	3 - A	
				Fuel Condition  Initial delay after Open Test Criteria met (cold start condition)  Initial delay after Open Test Criteria met (not cold start condition)	<ul> <li>≤ 87 % Ethanol</li> <li>&gt; 85.0 seconds when engine soak time &gt; 28,800 seconds</li> <li>&gt; 85.0 seconds when engine soak time ≤ 28,800 seconds</li> </ul>			
				Equivalence Ratio Air Per Cylinder Fuel Control State	0.9922 ≤ ratio ≤ 1.0137 50 ≤ mgrams ≤ 700 not = Power Enrichment			

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					All of the above met for	> 2 seconds		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Delayed Response Rich to Lean Bank 1 Sensor 1	P015A	This DTC determines if the pre catalyst O2 sensor has an initial delayed response to an A/F change from Rich to Lean. The diagnostic is an intrusive test which runs in a DFCO mode to achieve the required response.	The EWMA of the Pre O2 sensor normalized R2L time delay value  OR  [The Accumulated time monitored during the R2L Delayed Response Test (Gross failure).  AND  Pre O2 sensor voltage is	> 0.4 EWMA (sec)  ≥ 1.8 Seconds  > 550 mvolts	System Voltage EGR Device Control Idle Device Control Fuel Device Control AIR Device Control Low Fuel Condition Diag Green O2S Condition	TPS_ThrottleAuthorityDef aulted MAP_SensorFA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault MAF_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurg e_FA EvapVentSolenoidCircuit_FA EvapEmissionSystem_FA EvapEmissionSystem_FA FuelTankPressureSnsrCkt_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EulTrimSystemB2_FA EthanolCompositionSens or_FA EngineMisfireDetected_F A P0131, P0132, P0134  10.0 < Volts < 32.0 = Not active = Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for	Frequency: Once per trip Note: if NaESPD_b_Fast InitResplsActive = TRUE for the given Fuel Bank OR NaESPD_b_Rap idResponselsAct ive = TRUE, multiple tests per trip are allowed	Type A, 1 Trips EWMA

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					O2 Heater (pre sensor) on for Learned Htr resistance	the following locations: B1S1, B2S1 (if applicable) in Supporting Tables tab.  ≥ 40 seconds = Valid ( the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's")		
					Engine Coolant IAT Engine run Accum	> 50 °C > -40 °C > 120 seconds		
					Engine Speed to initially enable test Engine Speed range to keep test enabled (after initially enabled)	1,100 ≤ RPM ≤2,500 1,050 ≤ RPM ≤2,650		
					Engine Airflow Vehicle Speed to initially enable test Vehicle Speed range to keep test enabled (after initially enabled)	$3 \le \text{gps} \le 20$ $40.4 \le \text{MPH} \le 82.0$ $36.0 \le \text{MPH} \le 87.0$		
					Closed loop integral Closed Loop Active Evap Ethanol Post fuel cell	0.74 ≤ C/L Int ≤ 1.08 = TRUE not in control of purge not in estimate mode = enabled		
					EGR Intrusive diagnostic All post sensor heater delays O2S Heater (post sensor) on Time Predicted Catalyst temp Fuel State	= not active = not active ≥ 80.0 sec 600 ≤ °C ≤ 900 = DFCO possible		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					All of the above met for at least 2.0 seconds, and then the Force Cat Rich intrusive stage is requested.  Pre O2S voltage B1S1 at end of Cat Rich stage Fuel State Number of fueled cylinders  After above conditions are met: DFCO Mode is entered (wo driver initiated pedal input).	=====================================		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Delayed Response Lean to Rich Bank 1 Sensor 1	P015B	This DTC determines if the pre catalyst O2 sensor has an initial delayed response to an A/F change from Lean to Rich. The diagnostic is an intrusive test which runs in an enriched fuel mode to achieve the required response.	The EWMA of the Pre O2 sensor normalized L2R time delay value  OR  [The Accumulated time monitored during the L2R Delayed Response Test (Gross failure).  AND  Pre O2 sensor voltage is  OR  At end of Cat Rich stage the Pre O2 sensor output is	> 0.4 EWMA (sec)  ≥ 1.8 Seconds  < 350 mvolts  < 690 mvolts	System Voltage EGR Device Control Idle Device Control Fuel Device Control AIR Device Control Low Fuel Condition Diag Green O2S Condition	TPS_ThrottleAuthorityDef aulted MAP_SensorFA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault MAF_SensorFA EvapPurgeSolenoidCircuit _FA EvapFlowDuringNonPurg e_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnsrCkt _FA FuelInjectorCircuit_FA AIR System FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EthanolCompositionSens or_FA EngineMisfireDetected_F A P0131, P0132, P0134  10.0 < Volts < 32.0 = Not active = Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for	Frequency: Once per trip Note: if NaESPD_b_Fast InitResplsActive = TRUE for the given Fuel Bank OR NaESPD_b_Rap idResponselsAct ive = TRUE, multiple tests per trip are allowed	Type A, 1 Trips EWMA

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					O2 Heater (pre sensor) on for Learned Htr resistance	the following locations: B1S1, B2S1 (if applicable) in Supporting Tables tab.  ≥ 40 seconds = Valid ( the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance		
					Engine Coolant IAT Engine run Accum	DTC's") > 50 °C > -40 °C > 120 seconds		
					Engine Speed to initially enable test Engine Speed range to keep test enabled (after initially enabled)	1,100 ≤ RPM ≤ 2,500 1,050 ≤ RPM ≤ 2,650		
					Engine Airflow Vehicle Speed to initially enable test Vehicle Speed range to keep test enabled (after initially enabled)	$3 \le \text{gps} \le 20$ $40.4 \le \text{MPH} \le 82.0$ $36.0 \le \text{MPH} \le 87.0$		
					Closed loop integral Closed Loop Active Evap Ethanol Post fuel cell EGR Intrusive diagnostic All post sensor heater delays O2S Heater (post sensor) on Time	0.74 ≤ C/L Int ≤ 1.08 = TRUE not in control of purge not in estimate mode = enabled = not active = not active ≥ 80.0 sec		
					Predicted Catalyst temp	600 ≤ °C ≤ 900		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Fuel State Number of fueled cylinders	= DFCO inhibit ≥ 2 cylinders		
					When above conditions are met: Fuel Enrich mode is entered.	=======================================		
					During this test: Engine Airflow must stay between: and the delta Engine Airflow over 12.5msec must be:	=====================================		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Delayed Response Rich to Lean Bank 2 Sensor 1	P015C	This DTC determines if the pre catalyst O2 sensor has an initial delayed response to an A/F change from Rich to Lean. The diagnostic is an intrusive test which runs in a DFCO mode to achieve the required response.	The EWMA of the Pre O2 sensor normalized R2L time delay value  OR  [The Accumulated time monitored during the R2L Delayed Response Test (Gross failure).  AND  Pre O2 sensor voltage is above]	> 0.4 EWMA (sec)  ≥ 1.8 Seconds  > 550 mvolts	System Voltage EGR Device Control Idle Device Control Fuel Device Control AIR Device Control Low Fuel Condition Diag Green O2S Condition	TPS_ThrottleAuthorityDef aulted MAP_SensorFA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault MAF_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurg e_FA EvapVentSolenoidCircuit_FA EvapEmissionSystem_FA EvapEmissionSystem_FA FuelTankPressureSnsrCkt_FA FuelInjectorCircuit_FA AIR System FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EthanolCompositionSens or_FA EngineMisfireDetected_F A P0131, P0132, P0134  10.0 < Volts < 32.0 = Not active = Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for	Frequency: Once per trip Note: if NaESPD_b_Fast InitResplsActive = TRUE for the given Fuel Bank OR NaESPD_b_Rap idResponselsAct ive = TRUE, multiple tests per trip are allowed	Type A, 1 Trips EWMA

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters  O2 Heater (pre sensor) on for Learned Htr resistance  Engine Coolant IAT Engine run Accum  Engine Speed to initially enable test Engine Speed range to keep test enabled (after initially enabled)  Engine Airflow  Vehicle Speed to initially enable test Vehicle Speed range to keep test enabled (after initially enabled)  Closed loop integral Closed Loop Active	the following locations: B1S1, B2S1 in Supporting Tables tab.  ≥ 40 seconds = Valid (the heater resistance has learned since NVM reset, see enable conditions for "HO2S Heater Resistance DTC's") > 50 °C > -40 °C > 120 seconds  1,100 ≤ RPM ≤2,500  1,050 ≤ RPM ≤2,650  3 ≤ gps ≤20  40.4 ≤ MPH ≤82.0  36.0 ≤ MPH ≤87.0  0.74 ≤ C/L Int ≤1.08 = TRUE	Time Required	
					Evap Ethanol Post fuel cell	not in control of purge not in estimate mode = enabled		
					EGR Intrusive diagnostic All post sensor heater delays O2S Heater (post sensor) on Time	= not active = not active ≥ 80.0 sec		
					Predicted Catalyst temp	600 ≤ °C ≤ 900		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Fuel State	= DFCO possible		
					All of the above met for at least 2.0 seconds, and then the Force Cat Rich intrusive stage is requested.	=======================================		
					Pre O2S voltage B1S1 at end of Cat Rich stage Fuel State Number of fueled cylinders	≥ 690 mvolts = DFCO active ≤ 6 cylinders ========		
					After above conditions are met: DFCO Mode is entered (wo driver initiated pedal input).			

	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
,	P015D	This DTC determines if the pre catalyst O2 sensor has an initial delayed response to an A/F change from Lean to Rich. The diagnostic is an intrusive test which runs in an enriched fuel mode to achieve the required response.	The EWMA of the Pre O2 sensor normalized L2R time delay value  OR  [The Accumulated time monitored during the L2R Delayed Response Test (Gross failure).  AND  Pre O2 sensor voltage is below]  OR  At end of Cat Rich stage the Pre O2 sensor output is	> 0.4 EWMA (sec)  ≥ 1.8 Seconds  < 350 mvolts  < 690 mvolts	System Voltage EGR Device Control Idle Device Control Fuel Device Control AIR Device Control Low Fuel Condition Diag Green O2S Condition	TPS_ThrottleAuthorityDef aulted MAP_SensorFA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault MAF_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurg e_FA EvapVentSolenoidCircuit_FA EvapEmissionSystem_FA EvapEmissionSystem_FA FuelTankPressureSnsrCkt_FA FuelInjectorCircuit_FA AIR System FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EthanolCompositionSens or_FA EngineMisfireDetected_F A P0131, P0132, P0134  10.0 < Volts < 32.0 = Not active	Frequency: Once per trip Note: if NaESPD_b_Fast InitRespIsActive = TRUE for the given Fuel Bank OR NaESPD_b_Rap idResponseIsAct ive = TRUE, multiple tests per trip are allowed	Type A, 1 Trips EWMA

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					O2 Heater (pre sensor) on for Learned Htr resistance	the following locations: B1S1, B2S1 in Supporting Tables tab.  ≥ 40 seconds = Valid ( the heater resistance has learned since NVM reset, see enable conditions for		
					Engine Coolant IAT Engine run Accum	"HO2S Heater Resistance DTC's" ) > 50 °C > -40 °C > 120 seconds		
					Engine Speed to initially enable test Engine Speed range to keep test enabled (after	1,100 ≤ RPM ≤2,500		
					initially enabled)  Engine Airflow Vehicle Speed to initially enable test Vehicle Speed range to keep test enabled (after initially enabled)	$1,050 \le \text{RPM} \le 2,650$ $3 \le \text{gps} \le 20$ $40.4 \le \text{MPH} \le 82.0$ $36.0 \le \text{MPH} \le 87.0$		
					Closed loop integral Closed Loop Active Evap Ethanol Post fuel cell EGR Intrusive diagnostic All post sensor heater delays O2S Heater (post sensor)	0.74 ≤ C/L Int ≤ 1.08 = TRUE not in control of purge not in estimate mode = enabled = not active = not active		
					on Time  Predicted Catalyst temp Fuel State	≥ 80.0 sec 600 ≤ °C ≤ 900 = DFCO inhibit		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Number of fueled cylinders	≥ 2 cylinders		
					When above conditions are met: Fuel Enrich mode is entered.	=======================================		
						=======================================		
					During this test: Engine Airflow must stay between: and the delta Engine	6≤ gps ≤ 20		
					Airflow over 12.5msec must be :	≤1.5 gps		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Circuit Insufficient Activity Bank 2 Sensor 2	P0160	This DTC determines if the O2 sensor circuit is open.	Oxygen Sensor Signal	> 1,700 mvolts	System Voltage	TPS_ThrottleAuthorityDef aulted MAF_SensorFA EthanolCompositionSens or_FA 10.0 < Volts < 32.0 = All Cylinders active = Complete > 5 seconds > 225 seconds ≤ 87 % Ethanol	200 failures out of 250 samples. Frequency: Continuous 100 msec loop	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2S Heater Performance Bank 2 Sensor 2	P0161	This DTC determines if the O2 sensor heater is functioning properly by monitoring the current through the heater circuit.		0.3 > amps > 2.9	No Active DTC's System Voltage Heater Warm-up delay O2S Heater device control B1S1 O2S Heater Duty Cycle All of the above met for	ECT_Sensor_FA 10.0 < Volts < 32.0 = Complete = Not active > zero > 120 seconds	8 failures out of 10 samples Frequency: 1 tests per trip 5 seconds delay between tests and 1 second execution rate	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel System Too Lean Bank 1	P0171	Determines if the fuel control system is in a lean condition, based on the filtered long-term and short-term fuel trim.	The filtered long-term fuel trim metric  AND  The filtered short-term fuel trim metric (a value < 0.95 effectively nullifies the short-term fuel trim criteria)	>= 1.295 >= 0.100	Engine speed BARO Coolant Temp MAP Inlet Air Temp MAF Fuel Level  Long Term Fuel Trim data accumulation:	375 <rpm< 7,000=""> 70 kPa -40 &lt;°C&lt; 150 10 <kpa< -20="" 1.0="" 150="" 255="" 510.0="" <g="" <°c<="" s<=""> 10 % or if fuel sender is faulty &gt; 33.0 seconds of data must accumulate on each trip, with at least 23.0 seconds of data in the current fuel trim cell before a pass or fail decision can be made.</kpa<></rpm<>		Type B, 2 Trips
					Sometimes, certain Long- Term Fuel Trim Cells are not utilized for control and/or diagnosis	(Please see "Long-Term Fuel Trim Cell Usage" in Supporting Tables for a list of cells utilized for diagnosis)		
					Closed Loop Long Term FT	Enabled Enabled (Please see "Closed Loop Enable Criteria" and "Long Term FT Enable Criteria" in Supporting Tables.)		
					Fuel Consumed	> 0.1 liters of fuel consumed after a fuel fill event ("Virtual Flex Fuel Sensor applications only)		
					EGR Diag.	Intrusive Test Not Active Intrusive Test Not Active		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Catalyst Diag. Post O2 Diag. Device Control EVAP Diag.	Intrusive Test Not Active Not Active "tank pull down" Not Active		
					No active DTC:	IAC_SystemRPM_FA MAP_SensorFA MAF_SensorFA MAF_SensorTFTKO AIR System FA EvapExcessPrgePsbl_FA Ethanol Comp Snsr FA FuelInjectorCkt_FA EngMisfireDetected_FA EGRValvePerf_FA EGRValveCkt_FA MAP_EngVacuumStatus AmbPresDfltdStatus TC_BoostPresSnsrFA O2Snsr_B1_Snsr_1_FA		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel System Too Rich Bank 1	P0172	Determines if the fuel control system is in a rich condition, based on the filtered longterm fuel trim metric.	Passive Test: The filtered Non-Purge Long Term Fuel Trim metric	<= 0.710		Secondary Parameters and Enable Conditions are identical to those for P0171, with the exception that fuel level is not considered.	Frequency: 100 ms Continuous Loop	Type B, 2 Trips
		There are two methods to determine a Rich fault. They are Passive and Intrusive. A Passive Test decision cannot be made when Purge is enabled. The Intrusive test is	The filtered Short Term Fuel Trim metric (a value > 1.05 effectively nullifies the short-term fuel trim criteria)	<= 2.000		considered.		
		described below: Intrusive Test: When the filtered Purge Long Term Fuel Trim metric is <= 0.715, purge is ramped off to determine if excess	Intrusive Test: For 3 out of 5 intrusive segments, the filtered Purge Long Term Fuel Trim metric AND	<= 0.715				
		purge vapor is the cause of the rich condition. If the filtered Purge Long Term Fuel Trim metric > 0.715, the test passes without	The filtered Non-Purge Long Term Fuel Trim metric AND	<= 0.710				
		checking the filtered Non-Purge Long Term Fuel Trim metric.	The filtered Short Term Fuel Trim metric (a value > 1.05 effectively nullifies the short-term	<= 2.000				
		Performing intrusive tests too frequently may also affect EVAP	fuel trim criteria)					
		and EPAIII emissions, and the execution frequency of other diagnostics.	Segment Def'n: Segments can last up to 30 seconds and are separated by the lesser of 20 seconds of purge-on time or enough time to purge 16 grams of vapor.					

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			A maximum of 5 completed segments or 20 attempts are allowed for each intrusive test. After an intrusive test report is completed, another intrusive test cannot occur for 300 seconds to allow sufficient time to purge excess vapors from the canister. During this period, fuel trim will pass if the filtered Purge-on Long Term fuel trim > 0.715 for at least 200 seconds, indicating that the canister has been purged.					

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel System Too Lean Bank 2	P0174	Determines if the fuel control system is in a lean condition, based on the filtered long-term and short-term fuel trim.	The filtered long-term fuel trim metric  AND  The filtered short-term fuel trim metric (a value < 0.95 effectively nullifies the short-term fuel trim criteria)	>= 1.295 >= 0.100	Engine speed BARO Coolant Temp MAP Inlet Air Temp MAF Fuel Level  Long Term Fuel Trim data accumulation:	375 <rpm< 7,000=""> 70 kPa -40 &lt;°C&lt; 150 10 <kpa< -20="" 1.0="" 150="" 255="" 510.0="" <g="" <°c<="" s<=""> 10 % or if fuel sender is faulty &gt; 33.0 seconds of data must accumulate on each trip, with at least 23.0 seconds of data in the current fuel trim cell before a pass or fail decision can be made.</kpa<></rpm<>	Frequency: 100 ms Continuous Loop	Type B, 2 Trips
					Sometimes, certain Long- Term Fuel Trim Cells are not utilized for control and/or diagnosis	(Please see "Long-Term Fuel Trim Cell Usage" in Supporting Tables for a list of cells utilized for diagnosis)		
					Closed Loop Long Term FT	Enabled Enabled (Please see "Closed Loop Enable Criteria" and "Long Term FT Enable Criteria" in Supporting Tables.)		
					Fuel Consumed	> 0.1 liters of fuel consumed after a fuel fill event ("Virtual Flex Fuel Sensor applications only)		
					EGR Diag.	Intrusive Test Not Active Intrusive Test Not Active		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Catalyst Diag. Post O2 Diag. Device Control EVAP Diag.	Intrusive Test Not Active Not Active "tank pull down" Not Active		
					No active DTC:	IAC_SystemRPM_FA MAP_SensorFA MAF_SensorFA MAF_SensorFTKO AIR System FA EvapExcessPrgePsbl_FA Ethanol Comp Snsr FA FuelInjectorCkt_FA EngMisfireDetected_FA EGRValvePerf_FA EGRValveCkt_FA MAP_EngVacuumStatus AmbPresDfltdStatus TC_BoostPresSnsrFA O2Snsr_B2_Snsr_1_FA		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel System Too Rich Bank 2	P0175	Determines if the fuel control system is in a rich condition, based on the filtered long-term fuel trim metric.	Passive Test: The filtered Non-Purge Long Term Fuel Trim metric AND	<= 0.710		Secondary Parameters and Enable Conditions are identical to those for P0174, with the exception that fuel level is not considered.	Frequency: 100 ms Continuous Loop	Type B, 2 Trips
		There are two methods to determine a Rich fault. They are Passive and Intrusive. A Passive Test decision cannot be made when Purge is enabled. The	The filtered Short Term Fuel Trim metric (a value > 1.05 effectively nullifies the short-term fuel trim criteria)	<= 2.000		considered.		
		Intrusive test is described below:Intrusive Test: When the filtered Purge Long Term Fuel Trim metric is <= 0.715, purge is ramped off to	Intrusive Test: For 3 out of 5 intrusive segments, the filtered Purge Long Term Fuel Trim metric AND	<= 0.715				
		determine if excess purge vapor is the cause of the rich condition. If the filtered Purge Long Term Fuel Trim metric > 0.715,	The filtered Non-Purge Long Term Fuel Trim metric AND	<= 0.710				
		the test passes without checking the filtered Non-Purge Long Term Fuel Trim metric.  Performing intrusive	The filtered Short Term Fuel Trim metric (a value > 1.05 effectively nullifies the short-term fuel trim criteria)	<= 2.000				
		tests too frequently may also affect EVAP and EPAIII emissions, and the execution frequency of other diagnostics.	Segment Defn: Segments can last up to 30 seconds and are separated by the lesser of 20 seconds of purge-on time or enough time to purge 16 grams of vapor.					

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			A maximum of 5 completed segments or 20 attempts are allowed for each intrusive test.					
			After an intrusive test report is completed, another intrusive test cannot occur for 300 seconds to allow sufficient time to purge excess vapors from the canister. During this period, fuel trim will pass if the filtered Purge-on Long Term fuel trim > 0.715 for at least 200 seconds, indicating that the canister has been purged.					

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 1 Open Circuit (PFI) - 3 DTC Implmentatio n	P0201	This DTC Diagnoses Injector 1 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Open circuit: ≥ 200 K Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0261 may also set (Injector 1 Short to Ground)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 2 Open Circuit (PFI) - 3 DTC Implmentatio n	P0202	This DTC Diagnoses Injector 2 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Open circuit: ≥ 200 K Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0264 may also set (Injector 2 Short to Ground)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 3 Open Circuit (PFI) - 3 DTC Implmentatio n	P0203	This DTC Diagnoses Injector 3 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Open circuit: ≥ 200 K Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0267 may also set (Injector 3 Short to Ground)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 4 Open Circuit (PFI) - 3 DTC Implmentatio n	P0204	This DTC Diagnoses Injector 4 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Open circuit: ≥ 200 K Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0270 may also set (Injector 4 Short to Ground)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 5 Open Circuit (PFI) - 3 DTC Implmentatio n	P0205	This DTC Diagnoses Injector 5 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Open circuit: ≥ 200 K Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0273 may also set (Injector 5 Short to Ground)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 6 Open Circuit (PFI) - 3 DTC Implmentatio n	P0206	This DTC Diagnoses Injector 6 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Open circuit: ≥ 200 K Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips  Note: In certain controlle rs P0276 may also set (Injector 6 Short to Ground)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 7 Open Circuit (PFI) - 3 DTC Implmentatio n	P0207	This DTC Diagnoses Injector 7 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Open circuit: ≥ 200 K Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0279 may also set (Injector 7 Short to Ground)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 8 Open Circuit (PFI) - 3 DTC Implmentatio n	P0208	This DTC Diagnoses Injector 8 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Open circuit: ≥ 200 K Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0282 may also set (Injector 8 Short to Ground)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
TPS2 Circuit Low	P0222	Detects a continuous or intermittent short or open in TPS2 circuit	TPS2 Voltage <	0.250		Run/Crank voltage > 6.41  No 5V reference error or fault for # 4 5V reference circuit (P06A3)	79 / 159 counts; 57 counts continuous; 3.125 ms /count in the ECM main processor	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
TPS2 Circuit High	P0223	Detects a continuous or intermittent short or open in TPS2 circuit	TPS2 Voltage >	4.590		Run/Crank voltage > 6.41  No 5V reference error or fault for # 4 5V reference circuit (P06A3)	79 / 159 counts; 57 counts continuous; 3.125 ms /count in the ECM main processor	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 1 Low side circuit shorted to ground (PFI)	P0261	This DTC Diagnoses Injector 1 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration  Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0201 may also set (Injector 1 Open Circuit)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions		MIL Illum.
Injector 1 Low side circuit shorted to power (PFI)	P0262	This DTC Diagnoses Injector 1 low side driver circuit for circuit faults.	on state indicates short to power	Short to power: ≤ 0.5 Ω impedance between signal and controller power	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 2 Low side circuit shorted to ground (PFI)	P0264	This DTC Diagnoses Injector 2 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0202 may also set (Injector 2 Open Circuit)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 2 Low side circuit shorted to power (PFI)	P0265	This DTC Diagnoses Injector 2 low side driver circuit for circuit faults.	on state indicates short to power	Short to power: ≤ 0.5 Ω impedance between signal and controller power	within range for a duration	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 3 Low side circuit shorted to ground (PFI)	P0267	This DTC Diagnoses Injector 3 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0203 may also set (Injector 3 Open Circuit)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions		MIL Illum.
Injector 3 Low side circuit shorted to power (PFI)	P0268	This DTC Diagnoses Injector 3 low side driver circuit for circuit faults.	on state indicates short to power	Short to power: ≤ 0.5 Ω impedance between signal and controller power	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 4 Low side circuit shorted to ground (PFI)	P0270	This DTC Diagnoses Injector 4 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0204 may also set (Injector 4 Open Circuit)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions		MIL Illum.
Injector 4 Low side circuit shorted to power (PFI)	P0271	This DTC Diagnoses Injector 4 low side driver circuit for circuit faults.	on state indicates short to power	Short to power: ≤ 0.5 Ω impedance between signal and controller power	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 5 Low side circuit shorted to ground (PFI)	P0273	This DTC Diagnoses Injector 4 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0205 may also set (Injector 5 Open Circuit)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions		MIL Illum.
Injector 5 Low side circuit shorted to power (PFI)	P0274	This DTC Diagnoses Injector 5 low side driver circuit for circuit faults.	on state indicates short to power	Short to power: ≤ 0.5 Ω impedance between signal and controller power	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 6 Low side circuit shorted to ground (PFI)	P0276	This DTC Diagnoses Injector 6 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0206 may also set (Injector 6 Open Circuit)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions		MIL Illum.
Injector 6 Low side circuit shorted to power (PFI)	P0277	This DTC Diagnoses Injector 6 low side driver circuit for circuit faults.	on state indicates short to power	Short to power: ≤ 0.5 Ω impedance between signal and controller power	within range for a duration	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 7 Low side circuit shorted to ground (PFI)	P0279	This DTC Diagnoses Injector 7 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0207 may also set (Injector 7 Open Circuit)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions		MIL Illum.
Injector 7 Low side circuit shorted to power (PFI)	P0280	This DTC Diagnoses Injector 7 low side driver circuit for circuit faults.	on state indicates short to power	Short to power: ≤ 0.5 Ω impedance between signal and controller power	within range for a duration	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Injector 8 Low side circuit shorted to ground (PFI)	P0282	This DTC Diagnoses Injector 8 low side driver circuit for circuit faults.	Voltage low during driver off state indicates short-to-ground or open circuit	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground	Powertrain Relay Voltage within range for a duration Engine Running	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips Note: In certain controlle rs P0208 may also set (Injector 8 Open Circuit)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions		MIL Illum.
Injector 8 Low side circuit shorted to power (PFI)	P0283	This DTC Diagnoses Injector 8 low side driver circuit for circuit faults.	on state indicates short to power	Short to power: ≤ 0.5 Ω impedance between signal and controller power	within range for a duration	>= 11 Volts >= 5 Seconds >= 0 Seconds	50 failures out of 63 samples 100 ms /sample Continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Random Misfire Detected Cylinder 1 Misfire Detected Cylinder 2 Misfire Detected	P0300 P0301 P0302	These DTC's will determine if a random or a cylinder specific misfire is occurring by monitoring various terms derived from crankshaft velocity. The rate of misfire over an interval is compared to both emissions and catalyst damaging thresholds. The pattern of crankshaft acceleration after the	Deceleration Value vs. Engine Speed and Engine load  The equation used to calculate deceleration value is tailored to specific vehicle operating conditions. The selection of the equation used is based on the 1st tables	[     (>IdleSCD_Decel     AND     > IdleSCD_Jerk)  OR     (>SCD_Decel AND     > SCD_Jerk)  OR     (>IdleCylModeDecel     AND	Engine Run Time  Engine Coolant Temp Or If ECT at startup Then ECT  System Voltage + Throttle delta - Throttle delta	> 2 crankshaft revolution -7°C < ECT < 130°C < -7°C 21°C < ECT < 130°C 9.00 < volts < 32.00 < 85.00 % per 25 ms < 85.00 % per 25 ms	Emission Exceedence = any (5) failed 200 rev blocks out of (16) 200 rev block tests  Failure reported for (1) Exceedence in 1st (16) 200 rev block tests, or	Type B, 2 Trips (Mil Flashes with Catalyst damage level of Misfire)
Cylinder 3 Misfire Detected	P0303	pattern of crankshaft acceleration after the misfire is checked to differentiate between	encountered that are not max of range. If all tables are max of range at a given speed/load, that	> IdleCylModeJerk) OR (>CylMode_Decel			(4) Exceedences thereafter.	
Cylinder 4 Misfire Detected	P0304	real misfire and other sources of crank shaft noise.	speed load region is an <i>Undetectable region</i> see Algorithm Description Document for additional	AND > CylMode_Jerk) OR	Early Termination option: (used on plug ins that may not have enough	Not Enabled	OR when Early Termination Reporting =	
Cylinder 5 Misfire Detected	P0305		details.	(>RevMode_Decel) OR WHILE in Cylinder Deactivation mode:	engine run time at end of trip for normal interval to complete.)		Enabled and engine rev > 1,000 revs and < 3,200	
Cylinder 6 Misfire Detected	P0306			(> AFM_Decel) ] - see details on Supporting Tables Tab			revs at end of trip any Catalyst	
Cylinder 7 Misfire Detected	P0307			(P0300 Section)			Exceedence = (1) 200 rev block as data	
Cylinder 8 Misfire	P0308		Misfire Percent Emission Failure Threshold	≥ 0.81 % P0300			supports for catalyst damage.	
Detected							Failure reported with (1 or 3) Exceedences in FTP, or (1)	
			Misfire Percent Catalyst Damage	> Catalyst_Damage_ Misfire_Percentage in Supporting Tables	(at low speed/loads, one cylinder may not cause cat damage)		Exceedence outside FTP.	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			When engine speed and load are less than the FTP cals (3) catalyst damage exceedences are allowed.	whenever secondary conditions are met.  ≤ 0 FTP rpm AND ≤ 0 FTP % load	Engine Speed Engine Load Misfire counts	> 1,200 rpm AND > 20 % load AND < 180 counts on one cylinder	Continuous	
				disable conditions:	Engine Speed	350 < rpm < ((Engine Over Speed Limit) - 400 Engine speed limit is a function of inputs like Gear and temperature see EngineOverSpeedLimit in supporting tables	4 cycle delay	
					No active DTCs:	TPS_FA EnginePowerLimited MAF_SensorTFTKO MAP_SensorTFTKO IAT_SensorTFTKO ECT_Sensor_Ckt_TFTKO 5VoltReferenceB_FA CrankSensorTFTKO CrankSensorFA CamLctnIntFA CamLctnExhFA CamSensorAnyLctnTFTK O AnyCamPhaser_FA AnyCamPhaser_TFTKO AmbPresDfltdStatus	4 cycle delay	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					P0315 & engine speed	> 1,000 rpm	4 cycle delay	
					Fuel Level Low	LowFuelConditionDiagnos	500 cycle delay	
					Cam and Crank Sensors	in sync with each other	4 cycle delay	
					Misfire requests TCC unlock	Not honored because Transmission in hot mode or POPD intrusive diagnostic running	4 cycle delay	
					Fuel System Status	≠ Fuel Cut	4 cycle delay	
					Active FuelManagement	Transition in progress	7 cycle delay	
					Undetectable engine speed and engine load region	Undetectable region from Malfunction Criteria	4 cycle delay	
					Abusive Engine Over Speed	> 8,192 rpm	0 cycle delay	
					Below zero torque (except CARB approved 3000 rpm to redline triangle.)	< ZeroTorqueEngLoad in Supporting Tables	4 cycle delay	
					Below zero torque: TPS Vehicle Speed	≤ 1 % > 30 mph	4 cycle delay	
					EGR Intrusive test	Active	0 cycle delay	
					Manual Trans	Clutch shift	4 cycle delay	
					Accel Pedal Position AND Automatic transmission shift	> 95.00 %	7 cycle delay	
					Driveline Ring Filter active			

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					After a low level misfire, another misfire may not be detectable until driveline ringing ceases. If no ringing seen, stop filter early.  Filter Driveline ring:	> "Ring Filter" # of engine cycles after misfire in Supporting Tables		
					Stop filter early:	> "Number of Normals" # of engine cycles after misfire in Supporting Tables tab		
					Abnormal engine speed oscillations: (Rough road etc) Off Idle, number of consecutive decelerating cylinders after "misfire": (Number of decels can vary with misfire detection equation)  TPS Engine Speed	> 3 %		
					Veh Speed			
					Consecutive decels while in SCD Mode Cyl Mode Rev Mode	> Abnormal SCD Mode > Abnormal Cyl Mode > Abnormal Rev Mode in Supporting Tables		
					Misfire Crankshaft Pattern Recognition checks each "misfire" candidate in 100 engine Cycle test to see if it looks like real misfire, or some disturbance like rough road. The check is			

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					based on a multiplier times the ddt_jerk value used to detect misfire at that speed and load. At the end of 100 engine cycle test, the ratio of unrecog/recognized is checked to confirm if real misfire is present.			
					Pattern Recog Enabled: Engine Speed Veh Speed	Enabled 900 < rpm < 3,000 > 0.6 mph		
					"misfire" unrecognized if: Crankshaft snap after: isolated "misfire" repetative "misfire"	> Min_PatternMultiplier > Max_PatternMultiplier in Supporting Tables		
					Ratio of Unrecog/Recog	> 0.60	discard test	
					Rough Road: Non-Crankshaft based:	Enabled		
					Rough Road Source	Wheel Speed processed in ABS		
					IF Rough Road Source = WheelSpeedInECM ABS/TCS Wheel speed noise VSES	active > WSSRoughRoadThres active	discard test	
					IF Rough Road Source = "FromABS" ABS/TCS RoughRoad VSES	active detected	discard test	
					IF Rough Road Source = "TOSS"	active		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					TOSS dispersion  AND No Active DTCs	>TOSSRoughRoadThres in supporting tables  Transmission Output Shaft Angular Velocity Validity TransmissionEngagedStat e_FA (Auto Trans only) Clutch Sensor FA (Manual Trans only)	discard test 4 cycle delay	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Crankshaft Position System Variation Not Learned	P0315	Monitor for valid crankshaft error compensation factors	Sum of Compensation factors. Each Cylinder pair shares one compensation factor. A perfect factor would be 1.0000. Unlearned factors are defaulted out of range so the sum of factors would be out of range.	≥ 4.0040 OR ≤ 3.9960	OBD Manufacturer Enable Counter	MEC = 0	0.50 seconds  Frequency Continuous100 msec	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Performance Per Cylinder	P0324	This diagnostic checks for knock sensor performance out of the normal expected range on a per cylinder basis due to:  1. Excessive knock or  2. Abnormal engine noise or  3. Flat signal	Common Enable Criteria (Applies to all 3 parts of the performance diag)  Specific Enable Criteria and Thresholds for 3		Diagnostic Enabled? Engine Run Time Engine Speed Engine Air Flow  ECT IAT	Yes  ≥ 2.0 seconds  ≤ 8,500 RPM  ≥ 10 mg/cylinder and ≤ 2,000 mg/cylinder  ≥ -40 deg's C  ≥ -40 deg's C	First Order Lag	Type B, 2 Trips
			individual parts of the performance diag:  1. Excessive Knock Diag: Filtered Knock Intensity	> 1.70 (no units)	Engine Speed	≥ 1,500 RPM	Weight Coefficients Excessive Knk Weight	
			VaKNKD_k_PerfCylKnock IntFilt (where 'Knock Intensity' = 0 with no knock; and > 0 & proportional to knock magnitude with knock)		Cumlative Number of Engine Revs Above Min Eng Speed (per key cycle)	≥ 84 Revs	Coefficient = 0.0480  Updated each engine event	
			Abnormal Noise Diag:     Filtered FFT Intensity	<pre></pre>	Individual Cylinders enabled for Abnormal Noise	See AbnormalNoise_ CylsEnabled (Supporting Tables)	Abn Noise Weight Coefficient = 0.0480	
	Ň	(where 'FFT Intensity' = Non-knocking, background noise)	Tables)	Engine Speed  Cumlative Number of Engine Revs Above Min Eng Speed (per key	≥ 2,500 RPM ≥ 84 Revs	Updated each engine event		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					cycle)			İ
			3. Flat Signal Diag: Filtered Signal Delta (Current FFT Intensity - Ave_Intensity_No-Knock)  VaKNKD_k_PerfCylFlatFil tInt	< 0.008 (no units)	Engine Speed  Cumlative Number of Engine Revs Above Min Eng Speed (per keycycle)	≥ 8,500 RPM ≥ 400 Revs	Flat Signal Weight Coefficient = 0.010 Updated each engine event	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Circuit Bank	P0325	This diagnostic checks for an open in the knock sensor circuit	Filtered FFT Output	> OpenCktThrshMin and < OpenCktThrshMax	Diagnostic Enabled? Engine Run Time	Yes ≥ 2.0 seconds	First Order Lag Filter with Weight Coefficient	Type B, 2 Trips
1				See Supporting Tables	Engine Speed	≥ 400 RPM and ≤ 8,500 RPM	Weight Coefficient = 0.0100	
				Thresholds for OpenMethod = 20 kHz: OpenCktThrshMin (20 kHz) & OpenCktThrshMax (20 kHz)	Cumulative Number of Engine Revs (per key cycle) within min/max Engine Speed enable (above)	≥ 100 revs	Updated each engine event	
				Thresholds for OpenMethod = NormalNoise: OpenCktThrshMin (Normal Noise) & OpenCktThrshMax	Engine Air Flow	≥ 10 mg/cylinder and ≤ 2,000 mg/cylinder		
				(Normal Noise)	IAT	≥ -40 deg's C ≥ -40 deg's C		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Performance Bank 1	P0326	This diagnostic checks for knock sensor performance out of the normal expected range, on a per sensor basis, due to 1. Excessive knock or 2. Abnormal engine noise or 3. Flat signal	Common Enable Criteria  (Applies to all 3 parts of the performance diag)  Specific Enable Criteria and Thresholds for 3 individual parts of the performance diag:  1. Excessive Knock Diag: Filtered Knock Intensity  (where 'Knock Intensity' = 0 with no knock; and > 0 & proportional to knock magnitude with knock)	> 1.50 (no units)	Diagnostic Enabled? Engine Run Time Engine Speed Engine Air Flow  ECT IAT  Engine Speed Cumlative Number of Engine Revs Above Min Eng Speed (per key cycle)	Yes  ≥ 2.0 seconds  ≤ 8,500 RPM  ≥ 10 mg/cylinder and  ≤ 2,000 mg/cylinder  ≥ -40 deg's C  ≥ -40 deg's C  ≥ 1,500 RPM  ≥ 167 Revs	First Order Lag Filters with Weight Coefficients Excessive Knk Weight Coefficient = 0.0060 Updated each engine event	Type B, 2 Trips
			2. Abnormal Noise Diag: Filtered FFT Intensity: (where 'FFT Intensity' = Non-knocking, background noise)	< AbnormalNoise_ Threshold (see Supporting Tables)	Individual Cylinders enabled for Abnormal Noise  Engine Speed  Cumlative Number of Engine Revs Above Min Eng Speed (per key	See AbnormalNoise_ CylsEnabled (Supporting Tables)  ≥ 2,500 RPM ≥ 167 Revs	Abnormal Noise Weight Coefficient = 0.0060 Updated each engine event	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					cycle)			
			3. Flat Signal Diag: Filtered Signal Delta (Current FFT Intensity - Ave_Intensity_No-Knock)	< 0.008 (no units)	Engine SpeedCumlative Number of Engine Revs Above Min Eng Speed (per keycycle)	≥ 8,500 RPM ≥ 100 Revs	Flat Signal  Weight Coefficient =  0.010  Updated each engine event	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Circuit Low Bank 1	P0327	This diagnostic checks for an out of range low knock sensor signal	Sensor Input or Return Signal Line	< 8.0 Percent (of 5 V reference)	Diagnostic Enabled? Engine Speed	Yes > 0 RPM and < 8,500 RPM	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Circuit High Bank 1	P0328	This diagnostic checks for an out of range high knock sensor signal	Sensor Input or Return Signal Line	> 39.0 Percent (of 5 Volt Reference)	Diagnostic Enabled? Engine Speed	Yes > 0 RPM and < 8,500 RPM	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Circuit Bank	P0330	This diagnostic checks for an open in the knock sensor circuit	Filtered FFT Output	> OpenCktThrshMin and < OpenCktThrshMax	Diagnostic Enabled? Engine Run Time	Yes ≥ 2.0 seconds	First Order Lag Filter with Weight Coefficient	Type B, 2 Trips
2				See Supporting Tables	Engine Speed	≥ 400 RPM and ≤ 8,500 RPM	Weight Coefficient = 0.0100	
				Thresholds for OpenMethod = 20 kHz: OpenCktThrshMin (20 kHz) & OpenCktThrshMax (20 kHz)	Cumlative Number of Engine Revs (per key cycle) within min/max Engine Speed enable (above)  Engine Air Flow	100 revs ≥ 10 mg/cylinder and	Updated each engine event	
				Thresholds for OpenMethod = NormalNoise:	ECT	≤ 2,000 mg/cylinder ≥ -40 deg's C		
				OpenCktThrshMin (Normal Noise) & OpenCktThrshMax (Normal Noise)	IAT	≥ -40 deg's C		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Performance Bank 2	P0331	This diagnostic checks for knock sensor performance out of the normal expected range, on a per sensor basis, due to 1. Excessive knock or 2. Abnormal engine noise on a per bank basis or 3. Flat signal	Common Enable Criteria (Applies to all 3 parts of the performance diag)		Diagnostic Enabled? Engine Run Time Engine Speed Engine Air Flow ECT	Yes  ≥ 2.0 seconds  ≤ 8,500 RPM  ≥ 10 mg/cylinder and ≤ 2,000 mg/cylinder  ≥ -40 deg's C		Type B, 2 Trips
			Specific Enable Criteriaand Thresholds for 3 individual parts of the performance diag:  1. Excessive Knock Diag: Filtered Knock Intensity  (where 'Knock Intensity' = 0 with no knock; and > 0 & proportional to knock magnitude with knock)	> 1.50 (no units)	Engine Speed  Cumlative Number of Engine Revs Above Min Eng Speed (per key cycle)	≥ -40 deg's C  ≥ 1,500 RPM ≥ 167 Revs	First Order Lag Filters with Weight Coefficients Excessive knk Weight Coefficient = 0.0060 Updated each engine event	
		& proportional to k magnitude with kn	2. Abnormal Noise Diag: Filtered FFT Intensity:  (where 'FFT Intensity' = Non-knocking, background noise)	<pre></pre>	Individual Cylinders enabled for Abnormal Noise Engine Speed Cumlative Number of Engine Revs Above Min Eng Speed (per key cycle)	See AbnormalNoise_ CylsEnabled(Supporting Tables) ≥ 2,500 RPM ≥ 167 Revs	Abnormal Noise Weight Coefficient = 0.0060 Updated each engine event	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			3. Flat Signal Diag: Filtered Signal Delta (Current FFT Intensity - Ave_Intensity_No-Knock)	< 0.008 (no units)	Engine SpeedCumlative Number of Engine Revs Above Min Eng Speed (per keycycle)	≥ 8,500 RPM≥ 100 Revs	Flat Signal Weight Coefficient = 0.010 Updated each engine event	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Circuit Low Bank 2	P0332	This diagnostic checks for an out of range low knock sensor signal	Sensor Input or Return Signal Line	< 8.0 Percent (of 5 Volt Reference)	Diagnostic Enabled? Engine Speed	Yes > 0 RPM and < 8,500 RPM	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Knock Sensor (KS) Circuit High Bank 2	P0333	This diagnostic checks for an out of range high knock sensor signal	Sensor Input or Return Signal Line	> 39.00 Percent (of 5 Volt Reference)	Diagnostic Enabled? Engine Speed	Yes > 0 RPM and < 8,500 RPM	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Crankshaft Position (CKP) Sensor A Circuit	P0335	Determines if a fault exists with the crank position sensor signal	Time since last crankshaft position sensor pulse received	>= 4.0 seconds	Starter engaged AND (cam pulses being received OR ( DTC P0101 AND DTC P0102 AND DTC P0103 AND Engine Air Flow	= FALSE = FALSE = FALSE > 3.0 grams/second))	Continuous every 100 msec	Type B, 2 Trips
			No crankshaft pulses received	>= 0.3 seconds	Engine is Running Starter is not engaged No DTC Active:	5VoltReferenceB_FA	Continuous every 12.5 msec	
			No crankshaft pulses received		Engine is Running OR Starter is engaged No DTC Active:	5VoltReferenceA_FA 5VoltReferenceB_FA P0340 P0341	2 failures out of 10 samples One sample per engine revolution	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Crankshaft Position (CKP) Sensor A Performance	P0336	Determines if a performance fault exists with the crank position sensor signal	Time in which 10 or more crank re- synchronizations occur	< 10.0 seconds	Engine Air Flow Cam-based engine speed No DTC Active:	>= 3.0 grams/second > 450 RPM 5VoltReferenceB_FA P0335	Continuous every 250 msec	Type B, 2 Trips
			No crankshaft synchronization gap found	>= 0.4 seconds	Engine is Running Starter is not engaged No DTC Active:	5VoltReferenceB_FA	Continuous every 12.5 msec	
			Time since starter engaged without detecting crankshaft synchronization gap	>= 1.5 seconds	Starter engaged AND (cam pulses being received OR ( DTC P0101 AND DTC P0102 AND DTC P0103 AND Engine Air Flow	= FALSE = FALSE = FALSE > 3.0 grams/second ) )	Continuous every 100 msec	
			Crank pulses received in one engine revolution OR Crank pulses received in one engine revolution	< 51 > 65	Engine is Running OR Starter is engaged No DTC Active:	5VoltReferenceA_FA 5VoltReferenceB_FA P0340 P0341	8 failures out of 10 samples One sample per engine revolution	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Camshaft Position (CMP) Sensor Circuit Bank 1 Sensor A	P0340	Determines if a fault exists with the cam position bank 1 sensor A signal	Time since last camshaft position sensor pulse received  OR  Time that starter has been engaged without a camshaft sensor pulse	>= 5.5 seconds >= 4.0 seconds	Starter engaged AND (cam pulses being received OR ( DTC P0101 AND DTC P0102 AND DTC P0103 AND Engine Air Flow	= FALSE = FALSE = FALSE > 3.0 grams/second))	Continuous every 100 msec	Type B, 2 Trips
			Fewer than 4 camshaft pulses received in a time	> 3.0 seconds	Engine is running Starter is not engaged No DTC Active:	5VoltReferenceA_FA	Continuous every 100 msec	
			No camshaft pulses received during first 24 MEDRES events (There are 24 MEDRES events per engine cycle		Crankshaft is synchronized  Starter must be engaged to enable the diagnostic, but the diagnostic will not disable when the starter is disengaged  No DTC Active:	5VoltReferenceA_FA 5VoltReferenceB_FA CrankSensor_FA	Continuous every MEDRES event	
			The number of camshaft pulses received during 100 engine cycles	= 0	Crankshaft is synchronized  No DTC Active:	5VoltReferenceA_FA 5VoltReferenceB_FA CrankSensor_FA	8 failures out of 10 samples Continuous every engine cycle	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Camshaft Position (CMP) Sensor Performance Bank 1 Sensor A	P0341	Determines if a performance fault exists with the cam position bank 1 sensor A signal	The number of camshaft pulses received during first 24 MEDRES events is OR  (There are 24 MEDRES events per engine cycle)	< 4 > 8	Crankshaft is synchronized  Starter must be engaged to enable the diagnostic, but the diagnostic will not disable when the starter is disengaged  No DTC Active:	5VoltReferenceA_FA 5VoltReferenceB_FA CrankSensorFA	Continuous every MEDRES event	Type B, 2 Trips
			The number of camshaft pulses received during 100 engine cycles OR	< 398 > 402	Crankshaft is synchronized  No DTC Active:	5VoltReferenceA_FA 5VoltReferenceB_FA CrankSensorFA	8 failures out of 10 samples Continuous every engine cycle	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #1 CIRCUIT	P0351	Diagnoses the Ignition Control (EST) low side driver circuit for circuit faults. Monitors EST for Cylinder 1 (Cylinders 1 and 4 for V6 with waste spark).	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.  Voltage low during driver off state (indicates short-to-ground or open circuit)	Short to ground:  ≤ 0.5 Ω impedance between signal and controller ground  Open Circuit:  ≥ 200 kΩ impedance between signal and controller ground	Engine running Ignition Voltage	> 5.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips
			Voltage high during driver on state (indicates short-to-power)	Short to power: ≤ 0.5 Ω impedance between signal and controller power				

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #2 CIRCUIT	P0352	Diagnoses the Ignition Control (EST) low side driver circuit for circuit faults. Monitors EST for Cylinder 2 (Cylinders 2 and 5 for V6 with waste spark).	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.  Voltage low during driver off state (indicates short-to-ground or open circuit)	Short to ground: $\leq 0.5 \Omega$ impedance between signal and controller ground  Open Circuit: $\geq 200 \text{ k}\Omega$ impedance between signal and controller ground	Engine running Ignition Voltage	> 5.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips
			Voltage high during driver on state (indicates short- to-power)	Short to power: ≤ 0.5 Ω impedance between signal and controller power				

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #3 CIRCUIT	P0353	Diagnoses the Ignition Control (EST) low side driver circuit for circuit faults. Monitors EST for Cylinder 3 (Cylinders 3 and 6 for V6 with waste spark).	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.  Voltage low during driver off state (indicates short-to-ground or open circuit)	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground  Open Circuit: ≥ 200 kΩ impedance between signal and controller ground	Engine running Ignition Voltage	> 5.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips
			Voltage high during driver on state (indicates short- to-power)	Short to power: ≤ 0.5 Ω impedance between signal and controller power				

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #4 CIRCUIT	P0354	Diagnoses the Ignition Control (EST) low side driver circuit for circuit faults. Monitors EST for Cylinder 4 (if applicable).	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.  Voltage low during driver off state (indicates short-to-ground or open circuit)	Short to ground: $\leq 0.5 \Omega$ impedance between signal and controller ground $\frac{\text{Open Circuit}}{\text{200 k}\Omega}$ impedance between signal and controller ground	Engine running Ignition Voltage	> 5.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips
			Voltage high during driver on state (indicates short- to-power)	Short to power: ≤ 0.5 Ω impedance between signal and controller power				

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #5 CIRCUIT	P0355	Diagnoses the Ignition Control (EST) low side driver circuit for circuit faults. Monitors EST for Cylinder 5 (if applicable).	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.  Voltage low during driver off state (indicates short-to-ground or open circuit)	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground  Open Circuit: ≥ 200 kΩ impedance between signal and controller ground	Engine running Ignition Voltage	> 5.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips
			Voltage high during driver on state (indicates short-to-power)	Short to power: ≤ 0.5 Ω impedance between signal and controller power				

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #6 CIRCUIT	P0356	Diagnoses the Ignition Control (EST) low side driver circuit for circuit faults. Monitors EST for Cylinder 6 (if applicable).	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.  Voltage low during driver off state (indicates short-to-ground or open circuit)	Short to ground: $\leq 0.5 \Omega$ impedance between signal and controller ground $\frac{\text{Open Circuit}}{\text{Detween signal and controller ground}}$	Engine running Ignition Voltage	> 5.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips
			Voltage high during driver on state (indicates short- to-power)	Short to power: ≤ 0.5 Ω impedance between signal and controller power				

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #7 CIRCUIT	P0357	Diagnoses the Ignition Control (EST) low side driver circuit for circuit faults. Monitors EST for Cylinder 7 (if applicable).	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.  Voltage low during driver off state (indicates short-to-ground or open circuit)	Short to ground:  ≤ 0.5 Ω impedance between signal and controller ground  Open Circuit:  ≥ 200 kΩ impedance between signal and controller ground	Engine running Ignition Voltage	> 5.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips
			Voltage high during driver on state (indicates short- to-power)	Short to power: ≤ 0.5 Ω impedance between signal and controller power				

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
IGNITION CONTROL #8 CIRCUIT	P0358	Diagnoses the Ignition Control (EST) low side driver circuit for circuit faults. Monitors EST for Cylinder 8 (if applicable).	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.  Voltage low during driver off state (indicates short-to-ground or open circuit)  Voltage high during driver on state (indicates short-to-power)	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground Open Circuit: ≥ 200 kΩ impedance between signal and controller ground Short to power: ≤ 0.5 Ω impedance between signal and controller power	Engine running Ignition Voltage	> 5.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Catalyst System Low Efficiency Bank 1	P0420	NOTE: The information below applies to applications that use the Decel Catalyst Monitor Algorithm  Oxygen StorageThe catalyst washcoat contains Cerium Oxide. Cerium Oxide reacts with NO and O2 during lean A/F excursions to store the excess oxygen (I.e. Cerium Oxidation). During rich A/F excursions, Cerium Oxide reacts with CO and H2 to release this stored oxygen (I.e. Cerium Reduction). This is referred to as the Oxygen Storage Capacity, or OSC. CatMon's strategy is to "measure" the OSC of the catalyst through forced Rich (intrusive rich) and Lean (decel fuel cutoff) A/F excursions  Normalized Ratio OSC Value Calculation Information and Definitions = 1. Raw OSC Calculation = (post cat O2 Resp time - pre cat O2 Resp time) 2. BestFailing OSC value from a calibration	Normalized Ratio OSC Value (EWMA filtered)	< 0.35	All enable criteria associated with P0420 can be found under P2270 - (O2 Sensor Signal Stuck Lean Bank 1 Sensor 2)  Rapid Step Response (RSR) feature will initiate multiple tests:  If the difference between current EWMA value and the current OSC Normalized Ratio value is and the current OSC Normalized Ratio value is  Maximum number of RSR tests to detect failure when RSR is enabled.  General Enable Criteria  In addition to the p-codes listed under P2270, the following DTC's shall also not be set:	> 0.46 < 0.10 12  O2S_Bank_1_Sensor_1_FA O2S_Bank_1_Sensor_2_FA O2S_Bank_2_Sensor_1_FA O2S_Bank_2_Sensor_1_FA	1 test attempted per valid decel period  Minimum of 1 test per trip  Maximum of 8 tests per trip  Frequency: Fueling Related: 12.5 ms  OSC Measurements: 100 ms  Temp Prediction: 12.5ms	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		table (based on temp and exhaust gas flow) 3. WorstPassing OSC value (based on temp and exhaust gas flow)						
		Normalized Ratio Calculation = (1-2) / (3-2)						
		A Normalized Ratio of 1 essentially represents a good part and a ratio of 0 essentially represents a very bad part.						
		The Catalyst Monitoring Test is completed during a decel fuel cutoff event. This fuel cutoff event occurs following a rich instrusive fueling event initiated by the O2 Sensor Signal Stuck Lean Bank 1 Sensor 2 test (P2270). Several conditions must be met in order to execute this test.						
		These conditions and their related values are listed in the "Secondary Parameters" and "Enable Conditions" section of this document for P2270 (O2 Sensor Signal Stuck Lean Bank 1 Sensor 2)						

Catalyst System Low P0430 Note: The information below applies to Value				Time Required	MIL Illum.
Efficiency Bank 2  applications that use the Decel Catalyst Monitor Algorithm  Oxygen StorageThe catalyst washcoat contains Cerium Oxide. Cerium Oxide reacts with NO and O2 during lean A/F excursions to store the excess oxygen (I.e. Cerium Oxidation). During rich A/F excursions, Cerium Oxide reacts with CO and H2 to release this stored oxygen (I.e. Cerium Reduction). This is referred to as the Oxygen Storage Capacity, or OSC. CatMon's strategy is to "measure" the OSC of the catalyst through forced Rich (intrusive rich) and Lean (decel fuel cutoff) A/F excursions  Normalized Ratio OSC Value Calculation Information and Definitions = 1. Raw OSC Calculation = (post cat O2 Resp time)	OSC < 0.35	All enable criteria associated with P0430 can be found under P2272 - (O2 Sensor Signal Stuck Lean Bank 2 Sensor 2)  Rapid Step Response (RSR) feature will initiate multiple tests:  If the difference between current EWMA value and the current OSC Normalized Ratio value is and the current OSC Normalized Ratio value is Maximum number of RSR tests to detect failure when RSR is enabled.  General Enable Criteria  In addition to the p-codes listed under P2272, the following DTC's shall also not be set:	> 0.46 < 0.10 12  O2S_Bank_1_Sensor_1_FA O2S_Bank_1_Sensor_2_FA O2S_Bank_2_Sensor_1_FA O2S_Bank_2_Sensor_1_FA	1 test attempted per valid decel period  Minimum of 1 test per trip  Maximum of 8 tests per trip  Frequency: Fueling Related: 12.5 ms  OSC  Measurements: 100 ms  Temp Prediction: 12.5ms	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		table (based on temp and exhaust gas flow) 3. WorstPassing OSC value (based on temp and exhaust gas flow)						
		Normalized Ratio Calculation = (1-2) / (3-2)						
		A Normalized Ratio of 1 essentially represents a good part and a ratio of 0 essentially represents a very bad part.						
		The Catalyst Monitoring Test is completed during a decel fuel cutoff event. This fuel cutoff event occurs following a rich instrusive fueling event initiated by the O2 Sensor Signal Stuck Lean Bank 2 Sensor 2 test (P2272). Several conditions must be met in order to execute this test.						
		These conditions and their related values are listed in the "Secondary Parameters" and "Enable Conditions" section of this document for P2272 (O2 Sensor Signal Stuck Lean Bank 2 Sensor 2)						

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission (EVAP) System Small Leak Detected (Not Sealed Fuel System)	P0442	This DTC will detect a small leak (≥ 0.020") in the EVAP system between the fuel fill cap and the purge solenoid. On some applications a small leak is defined as ≥ 0.025", 0.030", or 0.150". The engine off natural vacuum method (EONV) is used. EONV is an evaporative system leak detection diagnostic that runs when the vehicle is shut off when enable conditions are met. Prior to sealing the system and performing the diagnostic, the fuel volatility is analyzed. In an open system (Canister Vent Solenoid [CVS] open) high volatility fuel creates enough flow to generate a measurable pressure differential relative to atmospheric.After the volatility check, the vent solenoid will close. After the vent is closed, typically a build up of pressure from the hot soak begins (phase-1). The pressure typically will peak and then begin to decrease as the fuel cools. When	calibration pressure threshold table that is based upon fuel level and ambient temperature. (Please see P0442: EONV Pressure Threshold (Pascals) Table in Supporting Tables). The normalized value is calculated by the following equation: 1 - (peak pressure - peak vacuum) / pressure threshold. The normalized value is entered into EWMA (with 0= perfect pass and 1= perfect fail).	> 0.70 (EWMA Fail Threshold), ≤ 0.35 (EWMA Re- Pass Threshold)	Fuel Level Drive Time Drive length ECT Baro Distance since assembly plant Engine not run time before key off must be  Time since last complete test if normalized result and EWMA is passing  OR Time since last complete test if normalized result or EWMA is failing  Estimated ambient temperature at end of drive  Estimate of Ambient Air Temperature Valid ************************************	10 % ≤ Percent ≤ 90 % ≥ 900 seconds ≥ 9.7 miles ≥ 63 °C ≥ 70 kPa ≥ 10.0 miles  ≤ refer to P0442: Engine Off Time Before Vehicle Off Maximum as a Function of Estimated Ambient Temperature Table in Supporting Tables.  ≥ 17 hours  ≥ 10 hours  0 °C≤Temperature≤ 34 °C	Once per trip, during hot soak (up to 2,400 sec.). No more than 2 unsuccessful attempts between completed tests.	Type A, 1 Trips  EWMA  Average run length is 8 to 12 trips under normal condition s  Run length is 3 to 6 trips after code clear or non-volatile reset

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
System	Code	the pressure drops (-62.27) Pa from peak pressure, the vent is then opened for 60 seconds to normalize the system pressure. The vent is again closed to begin the vacuum portion of the test (phase-2). As the fuel temperature continues to fall, a vacuum will begin forming. The vacuum will continue until it reaches a vacuum peak. When the pressure rises 62.27 Pa from vacuum peak, the test then completes. If the key is turned on while the diagnostic test is in progress, the test will abort.			Startup delta deg C (ECT-IAT)  OR 2. Short Soak and Previous EAT Valid  Previous time since engine off  OR 3. Less than a short soak and Previous EAT Not Valid  Previous time since engine off  AND  Vehicle Speed  AND  Mass Air Flow  Must expire Estimate of Ambient Temperature Valid Conditioning Time. Please see P0442: Estimate of Ambient Temperature Valid Conditioning Time Table in Supporting Tables.  OR 4. Not a Cold Start and greater than a Short Soak  Previous time since engine off AND  Vehicle Speed  AND  Vehicle Speed  AND	≤ 8 °C  ≤ 7,200 seconds  ≤ 7,200 seconds  ≥ 10.0 mph  ≥ 10 g/sec  > 7,200 seconds  ≥ 10.0 mph		Illum.
					Mass Air Flow	≥ 10 g/sec		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Must expire maximum value in Estimate of Ambient Temperature Valid Conditioning Time. Please see P0442: Estimate of Ambient Temperature Valid Conditioning Time Table in Supporting Tables.			
					High Fuel Volatility  During the volatility phase, pressure in the fuel tank is integrated vs. time. If the integrated pressure is then test aborts and unsuccessful attempts is incremented.  OR     Vacuum Refueling Detected	< -5		
					See P0454 Fault Code for information on vacuum refueling algorithm.  OR 3. Fuel Level Refueling Detected  See P0464 Fault Code for information on fuel level			
					refueling.			

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Vacuum Out of Range and No Refueling			
					See P0451 Fault Code for information on vacuum sensor out of range and P0464 Fault Code for information on fuel level refueling.			
					OR 5. Vacuum Out of Range and Refueling Detected			
					See P0451 Fault Code for information on vacuum sensor out of range and P0464 Fault Code for information on fuel level refueling.			
					OR 6. Vent Valve Override Failed			
					Device control using an off-board tool to control the vent solenoid, cannot exceed during the EONV test	0.50 seconds		
					OR 7. Key up during EONV test			
					No active DTCs:	MAF_SensorFA ECT_Sensor_FA IAT_SensorFA VehicleSpeedSensor_FA IgnitionOffTimeValid AmbientAirDefault		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
						P0443 P0446 P0449 P0452 P0453 P0455 P0496		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission (EVAP) Canister Purge Solenoid Valve Circuit (ODM)  (Not Sealed Fuel System and For Single DTC Implementati on Only)	P0443	Diagnoses the canister purge solenoid low side driver circuit for circuit faults	Voltage low during driver off state (indicates open circuit or short-to-ground)  Voltage high during driver on state (indicates short to power)	Open circuit: ≥ 200 K Ω impedence between signal and controller ground: ≤ 0.5 Ω impedence between signal and controller ground  Short to power: ≤ 0.5 Ω impedence between signal and controller ground	PT Relay Voltage	Voltage ≥ 11.0 volts	20 failures out of 25 samples 250 ms / sample	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission (EVAP) Vent System Performance (Not Sealed Fuel System)	P0446	This DTC will determine if a restriction is present in the vent solenoid, vent filler, vent hose or EVAP canister.  This test runs with normal purge and vent valve is open.	Vent Restriction Prep Test: Vented Vacuum for OR Vented Vacuum for  Vent Restriction Test: Tank Vacuum for before Purge Volume  After setting the DTC for the first time, 2 liters of fuel must be consumed before setting the DTC for the second time.	<-623 Pa 60 seconds >1,245 Pa 60 seconds  > 2,989 Pa 5 seconds ≥ 14 liters	Fuel Level System Voltage  Startup IAT  Startup ECT BARO  No active DTCs:	10 % ≤ Percent ≤ 90 % 11 volts ≤ Voltage ≤ 32 volts 4 °C ≤ Temperature ≤ 30 °C ≤ 35 °C ≥ 70 kPa  MAP_SensorFA TPS_FA VehicleSpeedSensor_FA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault EnginePowerLimited  P0443 P0449 P0452 P0453 P0454	Once per Cold Start  Time is dependent on driving conditions  Maximum time before test abort is 1,000 seconds	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission (EVAP) Vent Solenoid Control Circuit (ODM)  (Not Sealed Fuel System and For Single DTC Implementati on Only)	P0449	Diagnoses the vent solenoid low side driver circuit for circuit faults.	Voltage low during driver off state (indicates open circuit or short-to-ground)  Voltage high during driver on state (indicates short to power)  If the P0449 is active, an intrusive test is performed with the vent solenoid commanded closed for 15 seconds.	Open circuit: ≥ 200 K Ω impedence between signal and controller ground: ≤ 0.5 Ω impedence between signal and controller ground  Short to power: ≤ 0.5 Ω impedence between signal and controller power:			20 failures out of 25 samples 250 ms / sample	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Tank Pressure (FTP) Sensor Circuit Performance (Not Sealed Fuel System)	Pressure (FTP) Sensor Circuit Performance (Not Sealed Fuel  the fuel sensor i when it prior to phase-2 engine-i vacuum vacuum	The DTC will be set if the fuel tank vacuum sensor is out of range when it tries to re-zero prior to the phase-1 or phase-2 portions of the engine-off natural vacuum small leak test.	The tank vacuum sensor voltage is compared to a window about the nominal sensor voltage offset (~1.5 volts)  Upper voltage threshold (voltage addition above the nominal voltage)  Lower voltage threshold (voltage subtraction below the nominal voltage)  The difference between tank vacuum sensor voltage and the nominal offset voltage is then normalized against the appropriate threshold listed above to produce a ratio between 0.0 and 1.0. This normalized re-zero ratio is then filtered with a EWMA (with 0= perfect pass and 1=perfect fail).	0.2 volts 0.2 volts	This test will execute whenever the engine-off natural vacuum small leak test (P0442) executes		This test is executed during an engine-off natural vacuum small leak test. The number of times that it executes can range from zero to two per engine-off period. The length of the test is determined by the refueling rationality test, which can take up to 600 seconds to complete.	Type A, 1 Trips EWMA Average run length: 6 Run length is 2 trips after code clear or non- volatile reset
			When EWMA is the DTC light is illuminated.	> 0.73 (EWMA Fail Threshold),				
			The DTC light can be turned off if the EWMA is and stays below the EWMA fail threshold for 3 additional consecutive trips.	≤ 0.40 (EWMA Re-Pass Threshold)				

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Tank Pressure (FTP) Sensor Circuit Low Voltage  (Not Sealed Fuel System)	P0452	This DTC will detect a Fuel Tank Pressure (FTP) sensor signal that is too low out of range.	The normal operating range of the FTP sensor is 0.5 volts (~1245 Pa) to 4.5 volts (~-3736 Pa).	< 0.15 volts ( 3.0 % of Vref or ~ 1,681 Pa)	Time delay after sensor power up for sensor warm-up is	0.10 seconds	640 failures out of 800 samples 12.5 ms / sample	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Tank Pressure (FTP) Sensor Circuit High Voltage (Not Sealed Fuel System)	P0453	This DTC will detect a Fuel Tank Pressure (FTP) sensor signal that is too high out of range.	FTP sensor signal  The normal operating range of the FTP sensor is 0.5 volts (~1245 Pa) to 4.5 volts (~-3736 Pa).	> 4.85 volts ( 97 % of Vref or ~ -4,172 Pa)	Time delay after sensor power up for sensor warm-up is	0.10 seconds	640 failures out of 800 samples 12.5 ms / sample	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Tank Pressure (FTP) Sensor Circuit Intermittent (Not Sealed Fuel System)	P0454	This DTC will detect intermittent tank vacuum sensor signals that would have caused the engine-off natural vacuum small leak test to abort due to an apparent re-fueling event.	If an abrupt change in tank vacuum is detected the engine-off natural vacuum test is aborted due to an apparent refueling event.  Subsequent to the abort, a refueling rationality test is executed to confirm that a refueling event occurred. If a refueling is confirmed, then the test sample is considered passing. Otherwise, the sample is considered failing indicating an intermittent signal problem. An abrupt change is defined as a change in vacuum: in the span of 1.0 seconds. But in 12.5 msec. A refueling event is confirmed if the fuel level has a persistent change of for 30 seconds.	> 112 Pa < 249 Pa 10 %	This test will execute whenever the engine-off natural vacuum small leak test (P0442) executes and the canister vent solenoid is closed		This test is executed during an engine-off natural vacuum small leak test. The test can only execute up to once per engine-off period. The length of the test is determined by the refueling rationality test, which can take up to 600 seconds to complete. The test will report a failure if 2 out of 3 samples are failures.	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission (EVAP) System Large Leak Detected (Not Sealed Fuel System)	P0455	This DTC will detect a weak vacuum condition (large leak or purge blockage) in the EVAP system.  Purge valve is controlled (to allow purge flow) and vent valve is commanded closed.	Purge volume while Tank vacuum  After setting the DTC for the first time, 2 liters of fuel must be consumed before setting the DTC for the second time.  Weak Vacuum Follow-up Test (fuel cap replacement test) Weak Vacuum Test failed.  Passes if tank vacuum  Note: Weak Vacuum Follow-up Test can only report a pass.	> 64 liters ≤2,740 Pa ≥2,740 Pa	Fuel Level System Voltage  BARO Purge Flow  No active DTCs:  Cold Start Test  If ECT > IAT, Startup temperature delta (ECT-IAT): Cold Test Timer Startup IAT  Startup ECT  Weak Vacuum Follow-up Test This test can run following a weak vacuum failure or on a hot restart.	10 % ≤ Percent ≤ 90 % 11 volts ≤ Voltage ≤ 32 volts ≥ 70 kPa ≥ 3.75 %  MAP_SensorFA TPS_FA VehicleSpeedSensor_FA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault EnginePowerLimited  P0443 P0449 P0452 P0453 P0454  ≤8 °C ≤1,000 seconds 4 °C≤Temperature≤ 30 °C ≤35 °C	Once per cold start  Time is dependent on driving conditions  Maximum time before test abort is 1,000 seconds  Weak Vacuum Follow-up Test  With large leak detected, the follow-up test is limited to 1,300 seconds. Once the MIL is on, the follow-up test runs indefinitely.	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Level Sensor 1 Performance (For use on vehicles with	P0461	This DTC will detect a fuel sender stuck in range in the primary fuel tank.	Delta fuel volume change over an accumulated 83 miles.	< 3 liters	Engine Running No active DTCs:	VehicleSpeedSensor_FA	250 ms / sample	Type B, 2 Trips
a single fuel tank)								

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions		MIL Illum.
Fuel Level Sensor 1 Circuit Low	P0462	fuel sender stuck out of range low in the	Fuel level Sender % of 5V range	< 10 %			100 failures out of 125 samples	Type B, 2 Trips
Voltage		primary fuel tank.					100 ms / sample	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions		MIL Illum.
Fuel Level Sensor 1 Circuit High	P0463	This DTC will detect a fuel sender stuck out of range high in the	Fuel level Sender % of 5V range	> 60 %			100 failures out of 125 samples	Type B, 2 Trips
Voltage		primary fuel tank.					100 ms / sample	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Fuel Level Sensor 1 Circuit Intermittent (Not Sealed Fuel System)	P0464	This DTC will detect intermittent fuel level sensor signals that would have caused the engine-off natural vacuum small leak test to abort due to an apparent re-fueling event.	If a change in fuel level is detected, the engine-off natural vacuum test is aborted due to an apparent refueling event. Subsequent to the abort, a refueling rationality test is executed to confirm that an actual refueling event occurred. If a refueling event is confirmed, then the test sample is considered passing. Otherwise, the sample is considered failing indicating an intermittent signal problem.  An intermittent change in fuel level is defined as:  The fuel level changes by and does not remain for 30 seconds during a 600 second refueling rationality test.	10 % > 10 %	This test will execute whenever the engine-off natural vacuum small leak test (P0442) executes		This test is executed during an engine-off natural vacuum small leak test. The test can only execute up to once per engine-off period. The length of the test is determined by the refueling rationality test, which can take up to 600 seconds to complete. The test will report a failure if 2 out of 3 samples are failures.	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Evaporative Emission (EVAP) System Flow During Non- Purge (Not Sealed Fuel System)	P0496	This DTC will determine if the purge solenoid is leaking to engine manifold vacuum.  This test will run with the purge valve closed and the vent valve closed.	Tank Vacuum for Test time	> 2,491 Pa 5 seconds  ≥ refer to P0496: Purge Valve Leak Test Engine Vacuum Test Time (Cold Start) as a Function of Fuel Level Table in Supporting Tables.	Fuel Level System Voltage  BARO Startup IAT  Startup ECT Engine Off Time  No active DTCs:	10 % ≤ Percent ≤ 90 % 11 volts ≤ Voltage ≤ 32 volts ≥ 70 kPa 4 °C≤Temperature≤ 30 °C ≤ 35 °C ≥ 28,800.0 seconds  MAP_SensorFA TPS_FA VehicleSpeedSensor_FA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault EnginePowerLimited  P0443 P0443 P0449 P0452 P0453 P0454	Once per cold start  Cold start: max time is 1,000 seconds	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Low Engine Speed Idle System	P0506	This DTC will determine if a low idle exists	Filtered Engine Speed Error	> 89.00 rpm	Baro	> 70 kPa	Diagnostic runs in every 12.5 ms loop	Type B, 2 Trips
			filter coefficient	0.00275	Coolant Temp	> 60 °C and < 128 °C	Diagnostic reports pass or fail in 10 seconds once all enable conditions are met	
						2 60 000		
					Engine run time	≥ 60 sec		
					Ignition voltage	32 ≥ volts ≥ 11		
					Time since gear change	≥ 3 sec		
					Time since a TCC mode change	> 3 sec		
					IAT	> -20 °C		
					Vehicle speed	≤ 1.24 kph		
					Commanded RPM delta	≤ 25 rpm		
					Idle time	> 10 sec		
			For manual transmissions: Clutch Pedal Position or Clutch Pedal Position	> 88.00 pct < 20.00 pct				

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
						PTO not active  Transfer Case not in 4WD LowState  Off-vehicle device control (service bay control) must not be active.  following conditions not TRUE: (VeTESR_e_EngSpdReql ntvType = CeTESR_e_EngSpdMinLi mit AND VeTESR_e_EngSpdReqR espType = CeTESR_e_NoSuggestio n)  Clutch is not depressed		
					No active DTCs	TC_BoostPresSnsrFA ECT_Sensor_FA EnginePowerLimited EGRValveCircuit_FA EGRValvePerformance_F A IAT_SensorCircuitFA EvapFlowDuringNonPurg e_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA FuelInjectorCircuit_FA MAF_SensorFA EngineMisfireDetected_F A IgnitionOutputDriver_FA		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
						TPS_FA TPS_Performance_FA VehicleSpeedSensor_FA FuelLevelDataFault LowFuelConditionDiagnos tic Clutch Sensor FA AmbPresDfltdStatus P2771		
					All of the above met for Idle time	> 10 sec		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
High Engine Speed Idle System	P0507	This DTC will determine if a high idle exists	Filtered Engine Speed Error	< -178.00 rpm	Baro	> 70 kPa	Diagnostic runs in every 12.5 ms loop	Type B, 2 Trips
			filter coefficient	0.00275	Coolant Temp	> 60 °C and < 128 °C	Diagnostic reports pass or fail in 10 seconds once all enable conditions are met	
					Engine run time	≥ 60 sec		
					Ignition voltage	32 ≥ volts ≥ 11		
					Time since gear change	≥ 3 sec		
					Time since a TCC mode change	> 3 sec		
					IAT	> -20 °C		
					Vehicle speed	≤ 1.24 kph		
					Commanded RPM delta	≤ 25 rpm		
					For manual transmissions: Clutch Pedal Position or Clutch Pedal Position	> 88.00 pct < 20.00 pct		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
						PTO not active  Transfer Case not in 4WD LowState  Off-vehicle device control (service bay control) must not be active.  following conditions not TRUE: (VeTESR_e_EngSpdReqIntvType = CeTESR_e_EngSpdMinLimit AND VeTESR_e_EngSpdReqRespType = CeTESR_e_NoSuggestion)		
					No active DTCs	Clutch is not depressed  TC_BoostPresSnsrFA ECT_Sensor_FA EnginePowerLimited EGRValveCircuit_FA EGRValvePerformance_F A IAT_SensorCircuitFA EvapFlowDuringNonPurg e_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA FuelInjectorCircuit_FA MAF_SensorFA EngineMisfireDetected_F A IgnitionOutputDriver_FA TPS_FA TPS_Performance_FA VehicleSpeedSensor FA		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
						FuelLevelDataFaultLow FuelConditionDiagnostic Clutch SensorFA AmbPresDfltdStatus P2771		
					All of the above met for Idle time	> 10 sec		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Oil Pressure (EOP)	P0521	Determines if the Engine Oil Pressure (EOP) Sensor is stuck	If enabled:		Diagnostic enabled/ disabled	Enabled	Performed every 100 msec	Type B, 2 Trips
Sensor Performance		or biased in range		Oil Pressure Sensor In Use	Present			
			To pass a currently failing test:  The filtered, weighted difference between measured EOP and predicted EOP (a function of engine speed and engine oil temp.):	< -50.0 kPa OR > 50.0 kPa	Quality or weighting factor values less than "1" indicate that we don't have 4sigma/2sigma robustness in that region. The quality of the data is determined via statistical analysis of Variance data. Regions where diagnosis is possible have a quality or weighting factor value that is a function of engine speed, engine oil temperature, predicted oil pressure, and engine load stability.			
			To fail a currently passing test:  The filtered, weighted difference between measured EOP and predicted EOP (a function of engine speed and engine oil temp.):	> -47.0 kPa AND < 47.0 kPa	(RPM_Weighting_Factor * Oil_Temp_Weighting_Fa ctor * Eng_Load_Stability_Wei ghting_Factor * Eng_Oil_Pred_Weightin g_Factor) with a first order filter coefficient of 0.01  Details on P0521 Supporting Tables Tab: RPM_Weighting_Factor RPM_Weighting_Factor X_Axis Oil_Temp_Weighting_Fa ctor	>= 0.30 weighting		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Oil_Temp_Weighting_Fa ctor_Axis Eng_Load_Stability_Wei ghting_Factor Eng_Load_Stability_Wei ghting_Factor_Axis Eng_Oil_Pred_Weightin g_Factor Eng_Oil_Pred_Weightin g_Factor_Axis No active DTC's	Fault bundles: EngOilPressureSensorCkt FA CrankSensorFA ECT_Sensor_FA MAF_SensorFA IAT_SensorFA		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Oil Pressure (EOP) Sensor Circuit Low Voltage	P0522	Determines if the Engine Oil Pressure (EOP) Sensor circuit voltage is too low	(Engine Oil Pressure Sensor Circuit Voltage) / 5 Volts	< 5.00 percent	Engine Speed Enable Engine Speed Disable  Sensor Present  Diagnostic enabled/ disabled	> 400 rpm < 350 rpm Present Enabled	50 failures out of 63 samples Performed every 100 msec	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Oil Pressure (EOP) Sensor Circuit High Voltage	P0523	Determines if the Engine Oil Pressure (EOP) Sensor circuit voltage is too high	(Engine Oil Pressure Sensor Circuit Voltage) / 5 Volts	> 85.00 percent	Sensor Present  Diagnostic enabled/ disabled	Present Enabled	204 failures out of 255 samples Performed every 100 msec	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control Mutil- Functon Switch Circuit	P0564	Detect when cruise control multi-function switch circuit (analog) voltage is in an illegal range	Cruise Control analog circuit voltage must be in an "illegal range" or "between ranges" for greater than a calibratable period of time for cruise switch states that are received over serial data		CAN cruise switch diagnostic enable in ECM	1.00	fail continuously for greater than 0.500 seconds	MIL: Type C, No MIL

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control Resume Circuit	P0567	Detects a failure of the cruise resume switch in a continously applied state	Cruise Control Resume switch remains applied for greater than a calibratable period of time for architecture where cruise switch states are received over serial data		CAN cruise switch diagnostic enable in ECM	1.00	fail continuously for greater than 90.000 seconds	MIL: Type C, No MIL

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control Set Circuit	P0568	Detects a failure of the cruise set switch in a continously applied state	Cruise Control Set switch remains applied for greater than a calibratable period of time for architecture where cruise switch states are received over serial data		CAN cruise switch diagnostic enable in ECM	1.00	fail continuously for greater than 90.000 seconds	MIL: Type C, No MIL

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control Input Circuit	P0575	Detects rolling count or protection value errors in Cruise Control Switch Status serial data signal	If x of y rolling count / protection value faults occur, disable cruise for duration of fault		Cruise Control Switch Serial Data Error Diagnostic Enable	1.00	10 / 16 counts	MIL: Type C, No MIL

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.	
Control Module Read Only Memory (ROM)	P0601	P0601 This DTC will be stored if the calibration check sum is incorrect or the flash memory detects an uncorrectable error via the Error Correcting Code.	The Primary Processor's calculated checksum does not match the stored checksum value. Covers all software and calibrations.	1 failure if the fault is detected during the first pass. 5 failures if the fault occurs after the first pass is complete.			Diagnostic runs continuously in the background.	Type A, 1 Trips	
				The Primary Processor's Error Correcting Code hardware in the flash memory detects an error. Covers all software and calibrations.	254 failures detected via Error Correcting Code			Diagnostic runs continuously via the flash hardware.	
			The Primary Processor's calculated checksum does not match the stored checksum value for a selected subset of the calibrations.	2 consecutive failures detected or 5 total failures detected.			Diagnostic runs continuously. Will report a detected fault within 200 ms.		
		The Secondary Processor's calculated checksum does not match the stored checksum value. Covers all software and calibrations.	1 failure if the fault is detected during the first pass. 5 failures if the fault occurs after the first pass is complete.			Diagnostic runs continuously in the background.			
				In all cases, the failure count is cleared when controller shuts down					

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Control Module Not Programmed	P0602	This DTC will be stored if the PCM is a service PCM that has not been programmed.	Output state invalid		PCM State	= crank or run  PCM is identified through calibration as a Service PCM	Diagnostic runs at powerup and once per second continuously after that	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Control Module Long Term Memory Reset	P0603	Non-volatile memory checksum error at controller power-up	Checksum at power-up does not match checksum at power-down				Diagnostic runs at powerup  Diagnostic reports a fault if 1 failure occurs	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
ECM RAM Failure	has detected a RAM fault  processor is correctly read or write data RAM. Detect does not may written >=  Indicates that processor is correctly read or write data RAM. Detect does not may written >=  Indicates that processor is correctly read or write data RAM. Detect does not may written >=  Indicates that processor is correctly read or write data Detects data not match data Detects data not match data and dual found during updates. Detects during updates. Detects detects detects detects and dual found during updates. Detects de	Indicates that the primary processor is unable to correctly read data from or write data to system RAM. Detects data read does not match data written >=	254 counts			Will finish first memory scan within 30 seconds at all engine conditions - diagnostic runs continuously (background loop)	Type A, 1 Trips	
		Indicates that the primary processor is unable to correctly read data from or write data to cached RAM. Detects data read does not match data written >=	254 counts			Will finish first memory scan within 30 seconds at all engine conditions - diagnostic runs continuously (background loop)		
		Indicates that the primary processor is unable to correctly read data from or write data to TPU RAM. Detects data read does not match data written >=	5 counts			Will finish first memory scan within 30 seconds at all engine conditions - diagnostic runs continuously (background loop)		
		Indicates that the primary processor detects a mismatch between the data and dual data is found during RAM updates. Detects a mismatch in data and dual data updates >	0.47088 s			When dual store updates occur.		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Indicates that the primary processor detects an illegal write attempt to protected RAM. Number of illegal writes are >	65,534 counts			Diagnostic runs continuously (background loop)	
			Indicates that the secondary processor is unable to correctly read data from or write data to system RAM. Detects data read does not match data written >=	5 counts			Will finish first memory scan within 30 seconds at all engine conditions - diagnostic runs continuously (background loop)	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.	
Internal ECM Processor Integrity Fault	P0606	Indicates that the ECM has detected an internal processor integrity fault	Loss or invalid message of SPI communication from the Secondary Processor at initialization detected by the Primary Processor or loss or invalid message of SPI communication from the Secondary Processor after a valid message was received by the Primary Processor	Loss or invalid message at initialization detected or loss or invalid message after a valid message was recieved		Run/Crank voltage >= 6.41 or Run/Crank voltage >= 11.00, else the failure will be reported for all conditions	In the primary processor, 159 / 399 counts intermittent or 39 counts continuous; 39 counts continuous @ initialization. 12.5 ms /count in the ECM main processor	Type A, 1 Trips	
			Loss or invalid message of SPI communication from the Primary Processor at initialization detected by the Secondary Processor or loss or invalid message of SPI communication from the Primary Processor after a valid message was received by the Secondary Processor	Loss or invalid message at initialization detected or loss or invalid message after a valid message was recieved			In the secondary processor, 20/200 counts intermittent or 0.1875 s continuous; 0.4750 s continuous @ initialization. 12.5 ms /count in the ECM secondary processor		
				Checks for stack over or underflow in secondary processor by looking for corruption of known pattern at stack boundaries. Checks number of stack over/ under flow since last powerup reset >=	5		KeMEMD_b_StackLimitTe stEnbl == 1 Value of KeMEMD_b_StackLimitTe stEnbl is: 1 . (If 0, this test is disabled)	variable, depends on length of time to corrupt stack	
		MAIN processor is verified by responding to a seed sent from the secondary with a key response to secondary. Checks number of incorrect keys	2 incorrect seeds within 8 messages, 0.2000 seconds		ignition in Run or Crank	150 ms for one seed continually failing			

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			received > or Secondary processor has not received a new within time limit					
			Time new seed not received exceeded			always running	0.450 seconds	
			MAIN processor receives seed in wrong order			always running	3 / 17 counts intermittent. 50 ms/count in the ECM main processor	
			2 fails in a row in the Secondary processor's ALU check			KePISD_b_ALU_TestEnbl d == 1 Value of KePISD_b_ALU_TestEnbl d is: 1. (If 0, this test is disabled)	25 ms	
			2 fails in a row in the Secondary processor's configuration register masks versus known good data			KePISD_b_ConfigRegTes tEnbId == 1 Value of KePISD_b_ConfigRegTes tEnbId is: 1. (If 0, this test is disabled)	12.5 to 25 ms	
			Secondary processor detects an error in the toggling of a hardware discrete line controlled by the MAIN processor: number of discrete changes > = or < = over time window(50ms)	7 17		KePISD_b_MainCPU_SO H_FItEnbld == 1 Value of KePISD_b_ConfigRegTes tEnbld is: 1 . (If 0, this test is disabled) time from initialization >= 0.4875 seconds	50 ms	
			memory and complement memory do not agree				0.19 seconds	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Software background task first pass time to complete exceeds			Run/Crank voltage > 6.41	360.000 seconds	
			2 fails in a row in the MAIN processor's ALU check			KePISD_b_ALU_TestEnbl d == 1 Value of KePISD_b_ALU_TestEnbl d is: 1. (If 0, this test is disabled)	25 ms	
			2 fails in a row in the MAIN processor's configuration register masks versus known good data			KePISD_b_ConfigRegTes tEnbId == 1 Value of KePISD_b_ConfigRegTes tEnbId is: 1. (If 0, this test is disabled)	12.5 to 25 ms	
			Checks number of stack over/under flow since last powerup reset >=	5		KeMEMD_b_StackLimitTe stEnbl == 1 Value of KeMEMD_b_StackLimitTe stEnbl is: 1 . . (If 0, this test is disabled)	variable, depends on length of time to corrupt stack	
			Voltage deviation >	0.4950		KePISD_b_A2D_CnvrtrTe stEnbId == 1 Value of KePISD_b_A2D_CnvrtrTe stEnbId is: 1. (If 0, this test is disabled)	5 / 10 counts or 0.150 seconds continuous; 50 ms/count in the ECM main processor	
			Checks for ECC (error correcting code) circuit test errors reported by the hardware for flash memory. Increments counter during controller initialization if ECC error occured since last	3 (results in MIL), 5 (results in MIL and remedial action)		KeMEMD_b_FlashECC_ CktTestEnbl == 1 Value of KeMEMD_b_FlashECC_ CktTestEnbl is: 1. (If 0, this test is disabled)	variable, depends on length of time to access flash with corrupted memory	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			controller initialization. Counter >=					
			Checks for ECC (error correcting code) circuit test errors reported by the hardware for RAM memory circuit. Increments counter during controller initialization if ECC error occured since last controller initialization. Counter >=	3 (results in MIL), 5 (results in MIL and remedial action)		KeMEMD_b_RAM_ECC_ CktTestEnbl == 1 Value of KeMEMD_b_RAM_ECC_ CktTestEnbl is: 1. (If 0, this test is disabled)	variable, depends on length of time to write flash to RAMvariable, depends on length of time to write flash to RAM	
			MAIN processor DMA transfer from Flash to RAM has 1 failure			KePISD_b_DMA_XferTest EnbId == 1 Value of KePISD_b_DMA_XferTest EnbId is: 0. (If 0, this test is disabled)	variable, depends on length of time to write flash to RAM	
			Safety critical software is not executed in proper order.	>= 1 incorrect sequence.		Table, f(Loop Time). See supporting tables: Program Sequence Watch Enable f(Loop Time)  (If 0, this Loop Time test is disabled)	Fail Table, f(Loop Time). See supporting tables: PSW Sequence Fail f (Loop Time)	
							Sample Table, f (Loop Time)See supporting tables: PSW Sequence Sample f(Loop Time)	
							counts	
							50 ms/count in	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
							the ECM main processor	
			MAIN processor determines a seed has not changed within a specified time period within the 50ms task.	Previous seed value equals current seed value.		KePISD_b_SeedUpdKey StorFItEnbl == 1 Value of KePISD_b_SeedUpdKey StorFItEnbl is: 1. (If 0, this test is disabled)	Table, f(Loop Time). See supporting tables: Last Seed Timeout f (Loop Time)	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions		MIL Illum.
Fuel Pump Relay Control	P0628	side driver circuit for	Voltage low during driver on state (indicates short to ground)	Short to ground: ≤ 0.5 Ω impedance between signal and		Voltage ≥ 11 volts	8 failures out of 10 samples	Type B, 2 Trips
Circuit Low Voltage		circuit faults		controller ground	Engine Speed	≥0RPM	250 ms / sample	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Control Module EEPROM Error	P062F	Indicates that the NVM Error flag has not been cleared	The next write to NVM will not succeed or the assembly calibration integrity check failed.		Ignition State	= unlock/accessory, run, or crank	1 test failure  Diagnostic runs once at powerup	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
VIN Not Programmed or Mismatched - Engine Control Module (ECM)	P0630	This DTC checks that the VIN is correctly written	At least one of the programmed VIN digits	= 00 or FF	OBD Manufacturer Enable Counter	= 0	250 ms / test Continuous	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
5 Volt Reference #1 Circuit	P0641			4.8750 5.1250 0.0495		Run/Crank voltage > 6.41	19/39 counts or 0.1875 sec continuous; 12.5 ms/count in main processor	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Malfunction Indicator Lamp (MIL) Control Circuit (ODM) Open - For 3 DTC implementati on only	P0650	Diagnoses the malfunction indicator lamp control low side driver circuit for circuit faults.	Voltage low during driver off state (indicates open circuit)	Open circuit: ≥ 200 K Ω impedance between signal and controller ground	Run/Crank Voltage  Remote Vehicle Start is not active	Voltage ≥ 11 volts	20 failures out of 25 samples 250 ms / sample	Type B, No MIL Note: In certain controlle rs P263A may also set (MIL Control Short to Ground)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
5 Volt Reference #2 Circuit	P0651	Detects a continuous or intermittent short on the 5 volt reference circuit #2		4.8750 5.1250 0.0495		Run/Crank voltage > 6.41	19/39 counts or 0.1875 sec continuous; 12.5 ms/count in main processor	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Powertrain Relay Control (ODM) Open - For 3 DTC implementati on only	P0685	Diagnoses the powertrain relay control low side driver circuit for circuit faults	Voltage low during driver off state (indicates open circuit)	Open Circuit: ≥ 200 K Ω ohms impedance between signal and controller ground	Run/Crank Voltage	Voltage ≥ 11 volts	8.00 failures out of 10.00 samples 250 ms / sample	Type B, 2 Trips  Note: In certain controlle rs P0686 may also set (Powertr ain Relay Control Short to Ground).

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Powertrain Relay Control (ODM) Low	P0686	Diagnoses the powertrain relay control low side driver circuit for circuit faults	Voltage low during driver off state (indicates short- to-ground)	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground	Run/Crank Voltage	Voltage ≥ 11 volts	8.00 failures out of 10.00 samples 250 ms / sample	Type B, 2 Trips  Note: In certain controlle rs P0685 may also set (Powertr ain Relay Control Open Circuit).

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Powertrain Relay Control (ODM) High	P0687	Diagnoses the powertrain relay control low side driver circuit for circuit faults	on state (indicates short	Short to power: ≤ 0.5 Ω impedance between signal and controller power	Run/Crank Voltage	Voltage ≥ 11 volts	8.00 failures out of 10.00 samples 250 ms / sample	Type B, 2 Trips

	ault ode	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions		MIL Illum.
Powertrain Relay Feedback Circuit High		This DTC is a check to determine if the Powertrain relay is functioning properly.	Powertrain Relay Voltage	>= 4.0 volts will increment the fail counter	Powertrain relay commanded "OFF"  No active DTCs:	>= 2.00 seconds PowertrainRelayStateOn_	50.00 failures out of 63.00 samples 100ms / Sample	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
5 Volt Reference #3 Circuit	P0697	Detects a continuous or intermittent short on the 5 volt reference circuit #3		4.8750 5.1250 0.0495		Run/Crank voltage > 6.41	19/39 counts or 0.1875 sec continuous; 12.5 ms/count in main processor	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
5 Volt Reference #4 Circuit	P06A3	Detects a continuous or intermittent short on the 5 volt reference circuit #4		4.8750 5.1250 0.0495		Run/Crank voltage > 6.41	19/39 counts or 0.1875 sec continuous; 12.5 ms/count in main processor	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Internal Control Module Knock Sensor Processor 1 Performance	P06B6	This diagnostic checks for a fault with the internal test circuit used only for the '20 kHz' method of the Open Circuit Diagnostic	FFT Diagnostic Output	> OpenTestCktThrshMin and < OpenTestCktThrshMax See Supporting Tables	Diagnostic Enabled?  Engine Run Time  Engine Speed  Cumlative Number of Engine Revs (per key cycle) within min/max Engine Speed enable (above)  Engine Air Flow	Yes  ≥ 2.0 seconds  > 400 RPM and  < 3,500 RPM  ≥ 200 Revs  ≥ 10 mg/cylinder and  ≤ 2,000 mg/cylinder	First Order Lag Filter with Weight Coefficient  Weight Coefficient =  0.0100  Updated each engine event	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Internal Control Module Knock Sensor Processor 2 Performance	P06B7	This diagnostic checks for a fault with the internal test circuit used only for the '20 kHz' method of the Open Circuit Diagnostic	FFT Diagnostic Output	> OpenTestCktThrshMin and  < OpenTestCktThrshMax See Supporting Tables	Diagnostic Enabled?  Engine Run Time  Engine Speed  Cumlative Number of Engine Revs (per key cycle) within min/max Engine Speed enable (above)  Engine Air Flow	Yes  ≥ 2.0 seconds  > 400 RPM and  < 3,500 RPM  ≥ 200 Revs  ≥ 10 mg/cylinder and  ≤ 2,000 mg/cylinder	First Order Lag Filter with Weight Coefficient  Weight Coefficient =  0.0100  Updated each engine event	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Transmissio n Control Module (TCM) Requested MIL Illumination	P0700	Monitors the TCM MIL request line to determine when the TCM has detected a MIL illuminating fault.	Transmission Emissions- Related DTC set			Time since power-up > 3 seconds	Continuous	Type A, No MIL

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Inlet Airflow System Performance (naturally aspirated)	P1101	Determines if there are multiple air induction problems affecting airflow and/or manifold pressure.	Filtered Throttle Model Error  AND  (ABS(Measured Flow – Modeled Air Flow) Filtered OR ABS(Measured MAP – MAP Model 1) Filtered  AND  ABS(Measured MAP – MAP Model 2) Filtered	<= 300 kPa*(g/s)  > 20 grams/sec  > 20.0 kPa)  > 20.0 kPa	Engine Speed Coolant Temp Coolant Temp Intake Air Temp Intake Air Temp Minimum total weight factor (all factors multiplied together)	>= 465 RPM <= 4,600 RPM > -7 Deg C < 125 Deg C > -20 Deg C < 100 Deg C  >= 0.50  Filtered Throttle Model Error multiplied by TPS Residual Weight Factor based on RPM  Modeled Air Flow Error multiplied by MAF Residual Weight Factor based on RPM and MAF Residual Weight Factor based on MAF Est  MAP Model 1 Error multiplied by MAP1 Residual Weight Factor based on RPM  MAP Model 2 Error multiplied by MAP2 Residual Weight Factor based on RPM  MAP Model 2 Error multiplied by MAP2 Residual Weight Factor based on RPM  See "Residual Weight Factor" tables.	Calculation are performed every 12.5 msec	Type B, 2 Trips
				No Active DTCs:	MAP_SensorCircuitFA EGRValvePerformance_F A MAF_SensorCircuitFA CrankSensor_FA ECT_Sensor_FA			

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					No Pending DTCs:	IAT_SensorFA  EGRValve_FP  ECT_Sensor_Ckt_FP  IAT_SensorCircuitFP		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Metal Over temperature Active	P1258	The objective of the algorithm is to protect the engine in the event of engine metal overtemperature, mainly due to loss of coolant	Engine Coolant For a period	>= 129 °C >= 10 seconds	Engine Run Time  If feature was active and it set the coolant sensor fault then feature will be enabled on coolant sensor fault pending on the next trip.		Fault present for >= 0 seconds	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
ABS Rough Road malfunction	P1380	This diagnostic detects if the ABS controller is indicating a fault, and misfire is present. When this occurs, misfire will continue to run. If Misfire P0300 then sets while the ABS fault is present, P1380 will set as a diagnostic aid.	Sensor Rough Road Magnitude Validity"	= FALSE	Vehicle Speed Engine Speed Engine LoadRunCrankActive Active DTC	VSS ≥ 5 mph rpm < 8,192 load < 60 = TRUE P0300, MIL Request	40 failures out of 80 samples 250 ms /sample Continuous	Type C, No MIL "Special Type C"

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Transmissio n Engine Speed Request	P150C	Determines if engine speed request from the TCM is valid	Serial Communication rolling count value	+ 1 from previous \$19D message (PTEI3)	Diagnostic enable bit	1	Diagnostic runs in 12.5 ms loop	Type B, 2 Trips
Circuit			Transmission engine speed protection	not equal to 2's complement of transmission engine speed request + Transmission alive rolling count	Engine run time	0.50 sec		
					# of Protect Errors	10 protect errors out of 10 samples		
					# of Alive Rolling Errors	6 rolling count errors out of 10 samples		
					No idle diagnostic 506/507 code	IAC_SystemRPM_FA		
					No Serial communication loss to TCM	(U0101)		
					Engine Running	= TRUE		
					Power mode	Run Crank Active		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Steady State Actuation Fault	P1516	Detect an inablity to maintain a steady state throttle position	The absolute difference between desired and indicated throttle position is >	2.00 percent		Run/Crank voltage > 6.41  Ignition voltage failure is false (P1682)  TPS minimum learn is not active and Throttle is being Controlled Throttle is considered in a steadystate condition when the desired throttle position over a 12.5 ms period is < 0.25 percent for a settling time period > 4.00 s	0.49 ms	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cruise Control Switch State Undertermin ed	P155A	Detects when cruise switch state cannot be determined, such as low voltage conditions	cruise switch state remains undetermined for greater than a calibratable time				fail continuously for greater than 15.5 seconds	MIL: Type C, No MIL

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Ignition Voltage Correlation	P1682	Detect a continuous or intermittent out of correlation between the Run/Crank Ignition Voltage & the Powertrain Relay Ignition Voltage	Run/Crank – PT Relay  gnition  >	3.00 Volts		Powertrain commanded on  AND  (Run/Crank voltage > Table, f(IAT). See supporting tables: PT Relay Pull-in Run/Crank Voltage f(IAT)  OR PT Relay Ignition voltage > 5.50 )  AND  Run/Crank voltage > 5.50 .	240 / 480 counts or 0.1750 sec continuous; 12.5 ms/count in main processor	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Internal Control Module Redundant Memory Performance	P16F3	Calculation faults due to RAM corruptions, ALU failures and ROM failures  For all of the following cases: If the individual diagnostic threshold is equal to 2048 ms, this indivudual case is not applicable. If any of the following cases are X out of Y diagnostics and the fail (x) is greater than the sample (Y), this individual case is also not applicable.	Desired Throttle Area calculated does not equal its redundant calculation	N/A	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	Type A, 1 Trips
			Equivance Ratio torque compensation exceeds threshold	-100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	_
			Absolute difference between Equivance Ratio torque compensation and its dual store out of bounds given by threshold	100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	
			Absolute difference of Accessory torque and its redundant calculation is out of bounds given by threshold range	100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Absolute difference of Filtered Air-per-cylinder and its redundant calculation is out of bounds given by threshold range	118.03 mg	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	_
			Absolute difference between the previous Final Advance and the current Final Advance not Adjusted for Equivalence Ratio is out of bounds given by threshold range	8.09 degrees		Engine speed >0rpm	Up/down timer 158 ms continuous, 0.5 down time multipier	
			Torque Learn offset is out of bounds given by threshold range	High Threshold 0.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5	_

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
				Low Threshold 0.00 Nm			multipier	
			One step ahead calculation of air-per-cylinder and two step ahead is greater than threshold	80.00 mg		Engine speed > 515 rpm	Up/down timer 458 ms continuous, 0.5 down time multipier	-
			Difference between Unmanaged Spark and PACS Spark is greater than threshold	8.10 degrees	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	
			Commanded Predicted Engine Torque and its dual store do not match	N/A	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time	_

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
							multipier	
			Zero pedal axle torque is out of bounds given by threshold range	High Threshold  1,503.00 Nm Low Threshold  -65,535.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	_
			Creep Coast Axle Torque is out of bounds given by threshold range	High Threshold  1,503.00 Nm Low Threshold  -65,535.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multipier	-
			Absolute difference of Friction torque and its redundant calculation is out of bounds given by threshold range	100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time	_

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
							multipier	
			Arbitrated Air-Per-Cylinder filter coefficient is out of bounds given by threshold range		Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	
			Launch spark is active but the launch spark redundant path indicates it should not be active	N/A		Engine speed < 7,900.00 or 8,000.00 rpm (hysteresis pair)	Up/down timer 158 ms continuous, 0.5 down time multipier	
			Rate limited vehicle speed and its dual store do not equal	N/A		Time since first CAN message with vehicle speed >= 0.500 sec	10 / 20 counts; 25.0msec/count	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Preload Throttle Area and its dual store do not equal	N/A	Ignition State	Accessory, run or crank  AFM apps only	Up/down timer 2,048 ms continuous, 0.5 down time multipier	
			Commanded engine torque due to fast actuators and its dual store do not equal	N/A	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	
			Commanded engine torque due to slow actuators and its dual store do not equal	N/A	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	
			TOS to wheel speed conversion factor is out of bounds given by threshold	High Threshold:	Ignition State	Accessory, run or crank	255 / 6 counts; 25.0msec/count	

Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		range	T/C Range Hi 0.10 T/C Range Lo				
			Low Threshold:  1.10 T/C Range Hi				
			0.10 T/C Range Lo				
		TOS to wheel speed conversion factor and its dual store do not equal	N/A	Ignition State	Accessory, run or crank	255 / 6 counts; 25.0msec/count	
		Cylinders active greater than commanded	2 cylinders		Engine run flag = TRUE > 2.00	Up/down timer 158	
			,,		s Number of cylinder events since engine run > 24	ms continuous, 0.5 down time multipier	
	Fault Code	Fault Code Monitor Description	TOS to wheel speed conversion factor and its dual store do not equal	range  T/C Range Hi  0.10 T/C Range Lo  Low Threshold: 1.10 T/C Range Hi  0.10 T/C Range Hi  0.10 T/C Range Lo  T/C Range Hi  0.10 T/C Range Lo   T/C Range Hi  0.10 T/C Range Lo	range  T/C Range Hi 0.10 T/C Range Lo  Low Threshold: 1.10 T/C Range Hi 0.10 T/C Range Lo  TOS to wheel speed conversion factor and its dual store do not equal  Cylinders active greater 2	TOS to wheel speed conversion factor and its dual store do not equal  Cylinders active greater than commanded  Ti/C Range Hi 0.10 Ti/C Range Lo  Injuition State  Accessory, run or crank  Engine run flag = TRUE > 2.00 Number of cylinder events since engine run > 8 Number of cylinder events since engine run > 8 Number of cylinder events since engine run > 8	TOS to wheel speed conversion factor and its dual store do not equal  Cylinders active greater than commanded  Tos to wheel speed conversion factor and its dual store of not equal  Cylinders active greater than commanded  Cylinders active greater than commanded  Tos to wheel speed conversion factor and its dual store of not equal  Cylinders active greater than commanded

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
						active		
			Transfer case neutral request from four wheel drive logic does not match with operating conditions	N/A	Ignition State	Accessory, run or crank  Transfer case range valid and not over-ridden  FWD Apps only	32 / 0 counts; 25.0msec/count	
			Transfer case neutral and its dual store do not equal	N/A	Ignition State	Accessory, run or crank	8 / 16 counts; 25.0msec/count	-
			Driver progression mode and its dual store do not equal	N/A	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	_
							Папары	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Predicted torque for uncorrected zero pedal determination is greater than calculated limit.	Table, f(Engine, Oil Temp). See supporting tables + 100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	
			Engine Predicted Request Without Motor is greater than its redundant calculation plus threshold	99.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	
			Engine Immediate Request Without Motor is greater than its redundant calculation plus threshold	99.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Positive Torque Offset is greater than its redundant calculation plus threshold  OR  Positive Torque Offset is less than its redundant calculation minus threshold	100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	
			Commanded Predicted Engine Request is greater than its redundant calculation plus threshold	100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Commanded Hybrid Predicted Crankshaft Request is greater than its redundant calculation plus threshold	4,096.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multipier	_
			Commanded Hybrid Immediate Crankshaft Request is less than its redundant calculation	4,096.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5	_
			minus threshold				down time multipier	
			Regeneration Brake Assist is not within a specified range	Brake Regen Assist < 0 Nm or Brake Regen Assist >	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous.	-

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
				0.00 Nm			0.5 down time multipier	
			Cylinder Spark Delta Correction exceeds the absolute difference as compared to Unadjusted Cylinder Spark Delta	8.10 degrees	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	
			Cylinder Torque Offset exceeds step size threshold  OR	1. 100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	
			Sum of Cylinder     Torque Offset exceeds     sum threshold	2. 100.00 Nm			muniplei	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Engine Capacity Minimum Immediate Without Motor is greater than its dual store plus threshold	100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	
			Engine Capacity Minimum Engine Off is greater than threshold	0 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	
			Engine Capacity Minimum	0 Nm	Ignition State	Accessory, run or crank	Up/down timer	
			Engine Immediate Without Motor is greater than threshold				2,048 ms continuous, 0.5 down time multipier	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
				100.00	Investiga Chake			
			Commanded Immediate Engine Request is greater than its redundant calculation plus threshold	100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multipier	
			PTO Torque Request exceeds allowed rate limited PTO Torque Request	12.50 Nm/25ms	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multipier	-
			Engine Speed Lores Intake Firing (event based) calculation does not equal its redundant	N/A		Engine speed greater than 0rpm	Up/down timer 158 ms continuous, 0.5	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			calculation				down time multipier	
			Engine Speed Lores Intake Firing timing (event based) calculation does not equal its redundant calculation	N/A		Engine speed greater than 0rpm	Up/down timer 158 ms continuous, 0.5 down time multipier	
			Idle speed control calculated predicted minimum torque request exceeds calculated torque limit	Table, f(Oil Temp, RPM). See supporting tables: <b>Speed Control</b> <b>External Load f(Oil</b> <b>Temp, RPM)</b> + 100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	
			Idle speed control calculated predicted minimum torque without reserves exceeds calculated torque limit	Table, f(Oil Temp, RPM). See supporting tables: <b>Speed Control</b> <b>External Load f(Oil</b> <b>Temp, RPM)</b> + 100.00	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
				Nm				
			Difference between Driver Requested Immediate Torque primary path and its secondary exceeds threshold	1,503.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multipier	_
			Driver Immediate Request is less than its redundant calculation minus threshold	1,503.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	-
			Commanded Immediate Request is greater than its redundant calculation plus threshold	1,503.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multipier	-

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			OR  Commanded Immediate Request is less than its redundant calculation minus threshold					
			Commanded Immediate Response Type is set to Inactive	N/A	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multipier	
			Cylinders active greater than commanded	1 cylinder		Engine speed greater than 0rpm and less than 3,200 rpm AFM apps only	Up/down timer 2,048 ms continuous, 0.5 down time multipier	
			Difference between			Cruise has been engaged	Up/down timer	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Cruise Axle Torque Arbitrated Request and Cruise Axle Torque Request exceeds threshold	187.88 Nm		for more than 4.00 seconds	2,048 ms continuous, 0.5 down time multipier	
			Desired engine torque request greater than redundant calculation plus threshold	99.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	
			Engine min capacity above threshold	100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 75 ms continuous, 0.5 down time multipier	_
			No fast unmanaged retarded spark above the applied spark plus the threshold	Table, f(RPM,APC). See supporting tables: Delta Spark Threshold f (RPM,APC)		Engine speed greater than 0rpm	Up/down timer 175 ms continuous, 0.5 down time multipier	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Absolute difference of adjustment factor based on temperature and its dual store above threshold	2.76 m/s	Ignition State	Accessory, run or crank	Up/down timer 104 ms continuous, 0.5 down time multipier	-
			Absolute difference of redundant calculated engine speed above threshold	500 RPM		Engine speed greater than 0 RPM	Up/down timer 158 ms continuous, 0.5 down time multipier	
			After throttle blade pressure and its dual store do not match	N/A	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Speed Control's Preditcted Torque Request and its dual store do not match	N/A	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	
			Engine oil temperature and its dual store do not match	N/A	Ignition State	Accessory, run or crank	Up/down timer 250 ms continuous, 0.5 down time multipier	-
			Desired throttle position greater than redundant calculation plus threshold	8.41 percent	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	-

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Absolute difference of the rate limited pre-throttle pressure and its redundant calculation greater than threshold	0.06 kpa	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	
			Throttle desired torque above desired torque plus threshold	100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	
			Desired filtered throttle torque exceeds the threshold plus the higher of desired throttle torque or modeled throttle torque	100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	
			Torque feedback	High Threshold	Ignition State	Accessory, run or crank	Up/down timer	1

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			allowable range or its dual store copy does not match	50.00 Nm			ms continuous, 0.5 down time multipier	
				Low Threshold				
				-50.00 Nm				
			<del>-</del>					
			Torque feedback integral term magnitude or rate of change is out of allowable range or its dual store copy do not match	High Threshold 93.75 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time	
				Low Threshold			multipier	
				-100.00 Nm				
				Rate of change threshold				
				6.25 Nm/loop				
			Difference of Final Torque	High Threshold	Ignition State	Accessory, run er erank	Up/down timer	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			feedback proportional plus integral term and its redundant calculation is out of bounds given by threshold range	100.00 Nm			475 ms continuous, 0.5 down time multipier	
				Low Threshold				
				- 100.00 Nm				
			Difference of torque desired throttle area and its redundant calculation is out of bounds given by threshold range	High Threshold 0.50 %  Low Threshold - 0.50 %	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	
			Difference of torque model coefficients and its redundant calculation is out of bounds given by threshold range	High Threshold 0.0001266 Low Threshold - 0.0001266	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	_

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Difference of base friction torque and its redundant calculation is out of bounds given by threshold range	High Threshold  100.00 Nm  Low Threshold  -100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	
			Accessory drive friction torque is out of bounds given by threshold range	High Threshold  100.00 Nm  Low Threshold  0.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	-
			AC friction torque is	Hiah Threshold	Ignition State	Accessory, run or crank	Up/down timer	-

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			greater than commanded by AC control software or less than threshold limit	55.00 Nm Low Threshold 0.00 Nm			475 ms continuous, 0.5 down time multipier	
			Difference of Oil temperature delta friction torque and its redundant calculation is out of bounds given by threshold range	High Threshold  100.00 Nm  Low Threshold  -100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multipier	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Generator friction torque is out of bounds given by threshold range	High Threshold  100.00 Nm  Low Threshold  0.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	
			Supercharger friction torque is out of bounds given by threshold range	High Threshold 100.00 Nm  Low Threshold 0.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	
			Filtered Torque error magnitude or its increase rate of change is out of allowable range or its dual store copy do not match	High Threshold 100.00 Nm		Engine speed >0rpm MAF, MAP and Baro DTCs are false	Up/down timer 475 ms continuous, 0.5 down time	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
				Low Threshold -100.00 Nm  Rate of change threshold 6.25 Nm/loop			multipier	
			Torque error compensation is out of bounds given by threshold range	High Threshold  100.00 Nm  Low Threshold  0.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	
			Delta Torque Baro compensation is out of bounds given by threshold range	High Threshold 10.92 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
				Low Threshold 0.00 Nm			multipier	
			1. Difference of reserve torque value and its redundant calculation exceed threshold  OR  2. Reserve request does not agree with operating conditions or Difference of final predicted torque and its redundant calculation exeed threshold	1. 99.00 Nm 2. N/A 3. 99.00 Nm 4. 99.00 Nm		1. & 2.: Torque reserve (condition when spark control greater than optimum to allow fast transitions for torque disturbances) > 100.00 Nm	Up/down timer 475 ms continuous, 0.5 down time multipier	
			OR  3. Rate of change of reserve torque exceeds threshold, increasing direction only  OR  4. Reserve engine torque above allowable capacity threshold		3. & 4.: Ignition State	3. & 4.: Accessory, run or crank		
			Engine Vacuum and its	N/A	Ignition State	Accessory, run or crank	Up/down timer	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
							ms continuous, 0.5 down time multipier	
			Absolute difference of the calculated Intake Manifold Pressure during engine event versus during time event is greater than threshold	Table, f(Desired Engine Torque). See supporting tables: Delta MAP Threshold f(Desired Engine Torque)		Engine speed >0rpm	Up/down timer 158 ms continuous, 0.5 down time multipier	_
			Min. Axle Torque Capacity is greater than threshold	0.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	
			Driver Predicted Request is greater than its redundant calculation plus threshold  OR	1,503.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	_
			Driver Predicted Request					<u> </u>

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			is less than its redundant calculation minus threshold					
			Cold Delta Friction Torque and its dual store do not match	N/A	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	-
			Predicted torque for zero pedal determination is greater than calculated limit.	Table, f(Oil Temp, RPM). See supporting tables: <b>Speed Control</b> <b>External Load f(Oil</b> <b>Temp, RPM)</b> + 100.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 175 ms continuous, 0.5 down time multipier	
			Commanded Predicted Axle Torque and its dual store do not match	1 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous.	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
							0.5 down time multipier	
			Steady State Estimated Engine Torque and its dual store are not equal	N/A		AFM not changing from Active to Inactive and preload torque not changing and one loop after React command Engine speed >0rpm	Up/down timer 1,988 ms continuous, 0.5 down time multipier	_
			Difference of Weighting factor for number of cylinders fueled and its redundant calculation is above threshold	0.26		Engine run flag = TRUE > 10.00 s	Up/down timer 175 ms continuous, 0.5 down time multipier	-
			Difference of minimum spark advance limit and its redundant calculation is out of bounds given by threshold range	8.09 degrees	Ignition State	Accessory, run or crank	Up/down timer 158 ms continuous, 0.5 down time multipier	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Difference of commanded spark advance and adjusted delivered is out of bounds given by threshold range	8.09 degrees		Engine speed >0rpm	Up/down timer 158 ms continuous, 0.5 down time multipier	-
			Absolute difference between Estimated Engine Torque and its dual store are above a threshold	100.00 Nm		Engine speed >0rpm	Up/down timer 475 ms continuous, 0.5 down time multipier	-
			Absolute difference between Estimated Engine Torque without reductions due to torque control and its dual store are above a threshold	100.00 Nm		Engine speed >0rpm	Up/down timer 475 ms continuous, 0.5 down time multipier	-
			Difference of desired spark advance for	8.09 degrees		Torque reserve (condition when spark control	Up/down timer 458	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			managed torque and its redundant calculation is out of bounds given by threshold range			greater than optimum to allow fast transitions for torque disturbances) > 100.00 Nm	ms continuous, 0.5 down time multipier	
			Absolute difference of Engine Capacity Minimum Running Immediate Brake Torque Excluding Cylinder Sensitivity and its redundant calculation is out of bounds given by threshold range	100.00 Nm		Engine speed >0rpm	Up/down timer 175 ms continuous, 0.5 down time multipier	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			One step ahead calculation of air-per-cylinder greater than two step ahead calculation by threshold for time	Threshold: Dynamically calculated based on current engine conditions Fault Pending Threshold:  100 ms		Engine speed > 515 rpm	Up/down timer 458 ms continuous, 0.5 down time multipier	
			Rate limited cruise axle torque request and its dual store do not match within a threshold	187.88 Nm	Ignition State	Accessory, run or crank	Up/down timer 163 ms continuous, 0.5 down time multipier	
			Absolute difference of Calculated accelerator pedal position compensated for carpet learn and error conditions and its redundant calculation is out of bounds given by threshold range	1. 5.00 % 2. N/A 3. N/A	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	
			OR  2. Absolute difference of					

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Calculated accelerator pedal position compensated for carpet learn and error conditions and its dual store do not equal					
			OR					
			3. Absolute difference of Calculated accelerator pedal position and its dual store do not equal					
			Commanded axle torque is greater than its redundant calculation by threshold	1,503.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Commanded axle torque is less than its redundant calculation by threshold	-65,535.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 475 ms continuous, 0.5 down time multipier	
			Preload Throttle Area is greater than its redundant calculation by threshold	0.10 %		Engine speed >0rpm  AFM apps only	Up/down timer 2,048 ms continuous, 0.5 down time multipier	
			Preload timer and its redundant calculation do not equal	N/A	Ignition State	Accessory, run or crank  AFM apps only	Up/down timer 2,048 ms continuous, 0.5 down time multipier	-
			AC friction torque is greater than commanded by AC control software	55.00 Nm	Ignition State	Accessory, run or crank	Up/down timer 2,048 ms continuous, 0.5 down time multipier	•
			Engine Speed Lores	N/A		Engine speed >0rpm	Up/down timer	<u> </u>

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			Intake Firing (time based) calculation does not equal its redundant calculation				175 ms continuous, 0.5 down time multipier	
			Absolute difference of the calculated spark offset for equivalence ratio and its redundant cacluation is greater than a threshold	8.09 degrees		Engine speed >0rpm	Up/down timer 158 ms continuous, 0.5 down time multipier	_
			Transmission Torque Request cacluations do not equal their dual stores	N/A		Run or Crank = TRUE > 0.50 s	6/10 counts; 25.0msec/count	
			Absolute difference of the predicted motor torque ACS and its redundant cacluation is greater than a threshold	0.01 Nm			Up/down timer 2,048 ms continuous, 0.5 down time multipier	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Camshaft Actuator Solenoid Circuit Low– Bank 1	P2088	Diagnoses the VVT system high side driver circuit for circuit faults.	commanded state of the driver and the actual state of the control circuit do not match.	Short to ground: ≤ 0.5 Ω to a voltage source within the Vehicle Ground Voltage Range relative to PWRGND	System supply voltage is within limits. Output driver is commanded on, Ignition switch is in crank or run position	> 11 Volts	failures out of 25 samples250 ms / sample, continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Intake Camshaft Actuator Solenoid Circuit High – Bank 1	P2089	Diagnoses the VVT system high side driver circuit for circuit faults.	The ECM detects that voltage is high during driver off state (indicates short to power or open circuit)	Short to power: ≤ 0.5 Ω impedance between signal and controller power Open Circuit: ≥ 200 K Ω impedance between signal and controller ground	System supply voltage is within limits. Output driver is commanded on, Ignition switch is in crank or run position	> 11 Volts	failures out of 25 samples250 ms / sample, continuous	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Post Catalyst Fuel Trim System Low Limit Bank 1 (Too Rich)	P2096	Determines if the post catalyst O2 sensor based fuel control system has reached it's low limit authority, indicating a rich emissions/exhaust gas condition.  Note: If the post catalyst O2 voltage is too rich, the post catalyst O2 integral offset control is decreased. This results in lean bias fuel control in an attempt to correct the rich post O2 voltage.	Rich Fail counter  High Vapor Feature: The diagnostic is at risk of reporting a false fail when excessively High Vapor (HV) conditions are present. This HV condition is indicated when the purge valve is open AND percent vapor is >= 18 % for >= 5.0 seconds. Diagnosis resumes if the purge valve is closed OR the percent vapor is <= 15 % for >= 20.0 seconds.	>= 300 counts per 375 sample counts  Note: Counters increment at a rate of 10 per second when enable conditions are met. If the fail count threshold is reached, a fail is reported and the diagnostic will not report again until the next trip. If the sample count threshold is reached before a fail is reported, a pass is reported, the counters are reset to 0, and evaluation starts again.	The diagnostic is enabled during: Deceleration Idle Cruise Light Acceleration Heavy Acceleration The following conditions must be true for > 0.0 seconds:  Ambient Air Pressure Engine AirFlow Intake Manifold Pressure Induction Air Temperature Start-up Coolant Temp. PTO Intrusive diag. fuel control  Long Term Secondary Fuel Trim Enabled (see "Long Term Secondary Fuel Trim Enable Criteria" in Supporting Tables)	No No Yes Yes Yes >= 70 kPa >= 0.0 g/s <= 10,000.0 >= 0 kPa <= 200 >= -20 deg. C <= 45 >= -20 deg. C Not Active Not Active	Frequency: Continuous Monitoring in 100ms loop. Counters increment when enable conditions are met. When sample count threshold is reached or fail threshold is reached, counters are reset to 0 and start over.	Type B, 2 Trips
					High Vapor Conditions  No Fault Active for:	Not Present  AmbientAirDefault AIR System FA Ethanol Composition Sensor FA ECT_Sensor_FA EGRValveCircuit_FA EGRValvePerformance_F A IAT_SensorFA CamSensorAnyLocationF A EvapEmissionSystem_FA		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					The above general enable conditions must be true for:  Minimum accumulated counts in each cell required before counters will increment: Deceleration Idle Cruise Light Acceleration Heavy Acceleration Fail counter will increment if sample counter increments AND Post oxygen sensor control integral offset (in	EvapFlowDuringNonPurg e_FA FuelTankPressureSnsrCkt _FA EvapPurgeSolenoidCircuit _FA EvapSmallLeak_FA EvapVentSolenoidCircuit_FA MAF_SensorFA MAF_SensorFA MAP_SensorFA MAP_EngineVacuumStat us EngineMisfireDetected_F A A/F Imbalance Bank1 O2S_Bank_1_Sensor_1_ FA O2S_Bank_1_Sensor_2_ FA > 0.0 seconds  300 300 300 300 300 300 300 300 300 3		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					mV) is Deceleration Idle Cruise Light Acceleration Heavy Acceleration AND Post O2 Voltage is Deceleration Idle Cruise Light Acceleration Heavy Acceleration	<= -140 (control min.= -150) -140 (control min.= -150) -390 (control min.= -400) -390 (control min.= -400) -390 (control min.= -400) > 800 mV 800 mV 780 mV 780 mV 780 mV 780 mV		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Post Catalyst Fuel Trim System High Limit Bank 1 (Too Lean)	P2097	Determines if the post catalyst O2 sensor based fuel control system has reached it's high limit authority, indicating a lean emissions/exhaust gas condition.  Note: If the post catalyst O2 voltage is too lean, the post catalyst O2 integral offset control is increased. This results in rich bias fuel control in an attempt to correct the lean post O2 voltage.	High Vapor Feature: The diagnostic is at risk of reporting a false fail when excessively High Vapor (HV) conditions are present. This HV condition is indicated when the purge valve is open AND percent vapor is >= 18 % for >= 5.0 seconds. Diagnosis resumes if the purge valve is closed OR the percent vapor is <= 15 % for >= 20.0 seconds.	>= 300 counts per 375 sample counts  Note: Counters increment at a rate of 10 per second when enable conditions are met. If the fail count threshold is reached, a fail is reported and the diagnostic will not report again until the next trip. If the sample count threshold is reached before a fail is reported, a pass is reported, the counters are reset to 0, and evaluation starts again.	Same as P2096 except for the following:  Fail counter will increment if sample counter increments AND Post oxygen sensor control integral offset (in mV) is Deceleration Idle Cruise Light Acceleration Heavy Acceleration AND Post O2 Voltage is Deceleration Idle Cruise Light Acceleration	>= 130 (control max.= 150) 130 (control max.= 150) 380 (control max.= 400) 380 (control max.= 400) 380 (control max.= 400) < 660 mV 660 mV 660 mV 660 mV 660 mV	Frequency: Continuous Monitoring in 100ms loop. Counters increment when enable conditions are met. When sample count threshold is reached or fail threshold is reached, counters are reset to 0 and start over.	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Post Catalyst Fuel Trim System Low Limit Bank 2 (Too Rich)	P2098	Determines if the post catalyst O2 sensor based fuel control system has reached it's low limit authority, indicating a rich emissions/exhaust gas condition.  Note: If the post catalyst O2 voltage is too rich, the post catalyst O2 integral offset control is decreased. This results in lean bias fuel control in an attempt to correct the rich post O2 voltage.	Rich Fail counter  High Vapor Feature: The diagnostic is at risk of reporting a false fail when excessively High Vapor (HV) conditions are present. This HV condition is indicated when the purge valve is open AND percent vapor is >= 18 % for >= 5.0 seconds. Diagnosis resumes if the purge valve is closed OR the percent vapor is <= 15 % for >= 20.0 seconds.	>= 300 counts per 375 sample counts  Note: Counters increment at a rate of 10 per second when enable conditions are met. If the fail count threshold is reached, a fail is reported and the diagnostic will not report again until the next trip. If the sample count threshold is reached before a fail is reported, a pass is reported, the counters are reset to 0, and evaluation starts again.	Same as P2096 except for the following:  Bank1 Fault Active criteria are replaced by the equivalent Bank2 Fault Active criteria.  Fail counter will increment if sample counter increments AND Post oxygen sensor control integral offset is Deceleration Idle Cruise Light Acceleration Heavy Acceleration Hole Cruise Light Acceleration Heavy Acceleration Heavy Acceleration Heavy Acceleration Heavy Acceleration Heavy Acceleration	<= -140 (control min.= -150) -140 (control min.= -150) -390 (control min.= -400) -390 (control min.= -400) -390 (control min.= -400) > 800 mV 800 mV 780 mV 780 mV 780 mV 780 mV	Frequency: Continuous Monitoring in 100ms loop. Counters increment when enable conditions are met. When sample count threshold is reached or fail threshold is reached, counters are reset to 0 and start over.	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Post Catalyst Fuel Trim System High Limit Bank 2 (Too Lean)	P2099	Determines if the post catalyst O2 sensor based fuel control system has reached it's high limit authority, indicating a lean emissions/exhaust gas condition.  Note: If the post catalyst O2 voltage is too lean, the post catalyst O2 integral offset control is increased. This results in rich bias fuel control in an attempt to correct the lean post O2 voltage.	High Vapor Feature: The diagnostic is at risk of reporting a false fail when excessively High Vapor (HV) conditions are present. This HV condition is indicated when the purge valve is open AND percent vapor is >= 18 % for >= 5.0 seconds. Diagnosis resumes if the purge valve is closed OR the percent vapor is <= 15 % for >= 20.0 seconds.	>= 300 counts per 375 sample counts  Note: Counters increment at a rate of 10 per second when enable conditions are met. If the fail count threshold is reached, a fail is reported and the diagnostic will not report again until the next trip. If the sample count threshold is reached before a fail is reported, a pass is reported, the counters are reset to 0, and evaluation starts again.	Same as P2096 except for the following:  Bank1 Fault Active criteria are replaced by the equivalent Bank2 Fault Active criteria.  Fail counter will increment if sample counter increments AND Post oxygen sensor control integral offset is Deceleration Idle Cruise Light Acceleration Heavy Acceleration Host O2 Voltage is Deceleration Idle Cruise Light Acceleration Light Acceleration Heavy Acceleration Heavy Acceleration Heavy Acceleration Heavy Acceleration	>= 130 (control max.= 150) 130 (control max.= 150) 380 (control max.= 400) 380 (control max.= 400) 380 (control max.= 400) < 660 mV 660 mV 660 mV 660 mV 660 mV	Frequency: Continuous Monitoring in 100ms loop. Counters increment when enable conditions are met. When sample count threshold is reached or fail threshold is reached, counters are reset to 0 and start over.	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Module position Throttle Throttle Actuator driving Position the inc Performance Thrott excee	1) Detect a throttle positioning error2) Throttle control is driving the throttle in the incorrect direction3) Throttle control exceeds the reduced power limit	Difference between measured throttle position and modeled throttle position >  OR  Difference between modeled throttle position and measured throttle position and measured throttle position >	8.41 percent  8.41 percent	TPS minimum learn is not active and Throttle is being Controlled and (Engine Running or Ignition Voltage > or Ignition Voltage > )	Run/Crank voltage > 6.41  Ignition voltage failure is false (P1682)  TPS minimum learn is not active and Throttle is being Controlled  AND  ((Engine Running AND Ignition Voltage > 5.50 ) OR Ignition Voltage > 11.00 )	15 counts; 12.5 ms/count in the primary processor	Type A, 1 Trips	
			Throttle Position >	39.26 percent		Powertrain Relay voltage > 6.41  TPS minimum learn is active	11 counts; 12.5 ms/count in the primary processor	
			Throttle Position >	38.26 percent		Powertrain Relay voltage > 6.41 Reduced Power is True	11 counts; 12.5 ms/count in the primary processor	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Throttle return to default	rn to return to default throttle	(Normalized TPS1 Voltage > AND Normalized TPS2 Voltage > On the main processor)  OR  (Normalized TPS1 Voltage < AND Normalized TPS2 Voltage < On the main processor)	1.6890 1.7890 1.1150 1.0150		Throttle de-energized for Actuator, Controller, or Ignition Faults (P21104, P2100, P2101, P2102, P2103, P1682, P0068, P16F3) No TPS circuit faults PT Relay Voltage > 5.500  No 5V reference error or fault for # 4 5V reference circuit (P06A3)	0.4969 s	Type C, No MIL	
			(Normalized TPS1 Voltage > AND Normalized TPS2 Voltage > On the main processor)  OR  (Normalized TPS1 Voltage < AND Normalized TPS2 Voltage < On the main processor)	1.6890 1.7890 1.1150 1.0150		Throttle de-energized for Battery Saver Mode  Engine not running No TPS circuit faults PT Relay Voltage > 5.500  No 5V reference error or fault for # 4 5V reference circuit (P06A3)	1.5000 s	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Accelerator Pedal Position (APP) Sensor 1 Lo	P2122	Detect a continuous or intermittent short or open in the APP sensor #1 on Main processor	APP1 Voltage <	0.4625		Run/Crank voltage > 6.41  No 5V reference error or	19/39 counts or 14 counts continuous; 12.5 ms/count in the main processor	Type A, 1 Trips
						fault for # 4 5V reference circuit (P06A3)		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Accelerator Pedal Position (APP) Sensor 1 Hi	P2123	Detect a continuous or intermittent short or open in the APP sensor #1 on Main processor	APP1 Voltage >	4.7500		Run/Crank voltage > 6.41	19/39 counts or 14 counts continuous; 12.5 ms/count in the main processor	Type A, 1 Trips
						No 5V reference error or fault for # 4 5V reference circuit (P06A3)		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Accelerator Pedal Position (APP) Sensor 2 Lo	P2127	Detect a continuous or intermittent short or open in the APP sensor #2 on Main processor	APP2 Voltage <	0.3250		Run/Crank voltage > 6.41  No 5V reference error or fault for # 4 5V reference circuit (P0697)	19/39 counts or 14 counts continuous; 12.5 ms/count in the main processor	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Accelerator Pedal Position (APP) Sensor 2 Hi	P2128	Detect a continuous or intermittent short or open in the APP sensor #2 on Main processor	APP2 Voltage >	2.6000		Run/Crank voltage > 6.41  No 5V reference error or fault for # 4 5V reference circuit (P0697)	19/39 counts or 14 counts continuous; 12.5 ms/count in the main processor	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
_	P2135	Detects a continuous or intermittent correlation fault between TPS sensors #1 and #2 on Main processor	Difference between TPS1 displaced and TPS2 displaced >	6.999 % offset at min. throttle position with a linear threshold to 9.673 % at max. throttle position		Run/Crank voltage > 6.41  No TPS sensor faults (P0122, P0123, P0222, P0223)  No 5V reference error or fault for # 4 5V reference circuit (P06A3)	79 / 159 counts or 58 counts continuous; 3.125 ms/count in the main processor	Type A, 1 Trips
			Difference between (normalized min TPS1) and (normalized min TPS2) >	5.000 % Vref		Run/Crank voltage > 6.41  No TPS sensor faults (P0122, P0123, P0222, P0223)  No 5V reference error or fault for # 4 5V reference circuit (P06A3)	79 / 159 counts or 58 counts continuous; 3.125 ms/count in the main processor	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Accelerator Pedal Position (APP) Sensor 1-2 Correlation	Pedal i Position (APP) s	Detects a continuous or intermittent correlation fault between APP sensors #1 and #2 on Main processor	Difference between APP1 displaced and APP2 displaced >	5.000 % offset at min. pedal position with a linear threshold to 10.001 % at max. pedal position		Run/Crank voltage > 6.41  No APP sensor faults (P2122, P2123,P2127, P2128)  No 5V reference errors or faulst for # 3 & # 4 5V reference circuits (P06A3, P0697)	19/39 counts intermittent or 15 counts continuous, 12.5 ms/count in the main processor	Type A, 1 Trips
			Difference between (normalized min APP1) and (normalized min APP2) >	5.000 % Vref		Run/Crank voltage > 6.41  No APP sensor faults (P2122, P2123,P2127, P2128)  No 5V reference errors or faulst for # 3 & # 4 5V reference circuits (P06A3, P0697)	19/39 counts intermittent or 15 counts continuous, 12.5 ms/count in the main processor	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Minimum Throttle Position Not Learned	P2176	TP sensors were not in the minmum learn window after multiple attempts to learn the minimum.	During TPS min learn on the Main processor, TPS Voltage >	0.9350		Run/Crank voltage > 6.41  TPS minimum learn is active	2.0 secs	Type A, 1 Trips
			Number of learn attempts >	10 counts				

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Cooling System Performance	P2181	This DTC detects thermostat malfunction (i.e. stuck open)	Engine Coolant Temp (ECT) is ≤ commanded temperature minus 11 Deg C and normalized ratio is ≤ than 1.75. When above is present for more than 5 seconds, fail counts start. Engine total airgrams is accumulated when 17 ≤ AirFlow ≤ 450 grams per second.  == Ratio Definition:=== Current temp difference between ECT and RCT minus PwrUp difference divided by total airgrams. Note: Minimum total airgrams is 500.0 grams.		Engine not run time  Engine run time  Fuel Condition ECT at Power Up IAT min T-Stat Heater duty cycle commanded  Airflow	MAF_SensorFA IAT_SensorFA THMR_RCT_Sensor_Ckt _FA THMR_ECT_Sensor_Ckt _FA ≥ 1,800 seconds 90 ≤ Time ≤ 1,370 seconds Ethanol ≤ 87% _40.0 ≤ ECT ≤ 70.0 °C _7 °C ≤ IAT ≤ 55 °C. ≤ 0 %  17.0 ≤ Airflow ≤ 450.0 gps	30 failures out of 90 samples  1 sec/ sample  Once per ignition key cycle	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Bank 1 Air- Fuel Ratio Imbalance	P219A	This monitor determines if a cylinder-to-cylinder airfuel ratio imbalance is present on bank 1.	Filtered Ratio >  Note: The input to this metric is the pre catalyst oxygen sensor voltage. This voltage is used to generate a Variance metric that represents the statistical variation of the O2 sensor voltage over a given engine cycle. This metric is proportional to the air-fuel ratio	1.55  If the diagnostic has reported a failure on the prior trip, the Filtered Ratio must fall below 1.49 in order to report a pass. This feature prevents the diagnostic from toggling between failing and passing when the Filtered Ratio	System Voltage  Fuel Level  Engine Coolant Temperature  Cumulative engine run time  Diagnostic enabled at Idle	no lower than 11.0 Volts for more than 0.2 seconds  > 10.0 percent AND no fuel level sensor fault  > -20 degrees C  > 120.0 seconds	Minimum of 1 test per trip, up to 18 tests per trip during RSR or FIR.  The front O2 sensor voltage is sampled once per cylinder event. Therefore, the time required to	Type A, 1 Trips
			imbalance (variance is higher with an imbalance than without). Multiple samples are collected in making a decision.	remains near the initial failure threshold of 1.55.	(regardless of other operating conditions)  Engine speed range  Engine speed delta during	No 1,160 to 3,150 RPM	complete a single test (when all enable conditions are met) decreases as engine speed	
			The observed Variance is dependant on engine speed and load and so		a short term sample period	<100 RPM	increases. For example, 7.20 seconds of data	
			each result is normalized for speed and load by comparing it to a known		Mass Airflow (MAF) range Cumulative delta MAF	10 to 1,000 g/s	is required at 1000 rpm while double this time	
			"good system" result for that speed and load, and generating a Ratio metric.		during a short term sample period Filtered MAF delta	<3 g/s	is required at 500 rpm and half this time is required at 2000	
			The Ratio metric is calculated by selecting the appropriate threshold calibration from a 17x17		between samples Note: first order lag filter coefficient applied to MAF = 0.050	<2.20 g/s	rpm. This data is collected only when enable conditions are	
		table (Supporting Table "Variance Threshold Bank1") and subtracting it from the measured		Air Per Cylinder (APC)	160 to 585 mg/cylinder	met, and as such significantly more operating time is required		
		fr V	Variance. The result is then divided by a normalizer calibration	S A	APC delta during short term sample period Filtered APC delta	< 25 mg/cylinder	than is indicated above. Generally, a	
			from another 17 x 17 table		between samples	<8.00 percent	report will be	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
	1		(Supporting Table		Note: first order lag filter		made within 5	1
			"Normalizer Bank1").		coefficient applied to APC		minutes of	
			This quotient is then		= 0.050		operation.	
			multiplied by a quality					
			factor calibration from a 17 x 17 table (Supporting		Spark Advance	0 to 40 degrees	For RSR or FIR, 36 tests must	
			Table "Quality Factor		Throttle Area (percent of	1 to 200 percent	complete before	
			Bank1"). This result is referred to as the Ratio.		max)	The 200 percent	the diagnostic can report.	
			Note that the quality factor ranges between 0 and 1		Intake Cam Phaser Angle	0 to 25 degrees	can report.	
			and represents		Exhaust Cam Phaser	0 to 25 degrees		
			robustness to false		Angle	0 to 25 degrees		
			diagnosis in the current operating region. Regions		Quality Factor (QF)	>= 0.99		
			with low quality factors		QF calibrations are			
			are not used.		located in a 17x17 lookup table versus engine speed			
			Finally, a EWMA filter is applied to the Ratio metric		and load (Supporting Table "Quality Factor			
			to generate the Filtered		Bank1"). QF values less			
			Ratio malfunction criteria		than "1" indicate that we			
			metric. Generally, a		don't have 4sigma/2sigma			
			normal system will result		robustness in that region.			
			in a negative Filtered		The quality of the data is			
			Ratio while a failing		determined via statistical			
			system will result in a		analysis of Variance data.			
			positive Filtered Ratio.		Fuel Control Status			
			The range of the Filtered		Closed Loop and Long	>= 2.0 seconds		
			Ratio metric is application		Term FT Enabled for:	(Please see "Closed		
			specific since both the			Loop Enable Criteria"		
			emissions sensitivity and			and "Long Term FT		
			relationship between			Enable Criteria" in		
			imbalance and the			Supporting Tables)		
			Variance metric are		AIR pump not on	l ''		
			application specific.		CASE learn not active EGR - no device control,			
			Some applications may		no intrusive diagnostics			
			need to command a		EVAP - no device control,			
			unique cam phaser value		no intrusive diagnostics			
			before performing the		Engine OverSpeed			

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			above calculations since cam phasing has been shown to have an impact on overall signal quality. This application Does Not Use this feature.		Protection Not Active Idle speed control normal PTO Not Active Injector base pulse width above min limit Rapid Step Response (RSR): RSR will trigger if the Ratio result from the last test is AND it exceeds the last Filtered ratio by  Once triggered, the filtered ratio is reset to:  Fast Initial Response (FIR): FIR will trigger when an NVM reset or code clear occurs. Once triggered, the filtered ratio is reset to:  No Fault Active for:	>= 1.55 >= 1.55  0.00  EngineMisfireDetected_F A MAP_SensorFA MAF_SensorFA ECT_Sensor_FA TPS_ThrottleAuthorityDef aulted FuelInjectorCircuit_FA AIR System FA EvapExcessPurgePsbl_F A CamSensorAnyLocationF A		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
		Monitor Description  This monitor determines if a cylinder-to-cylinder airfuel ratio imbalance is present on bank 2.	Filtered Ratio >  Note: The input to this metric is the pre catalyst oxygen sensor voltage. This voltage is used to generate a Variance metric that represents the statistical variation of the O2 sensor voltage over a given engine cycle. This metric is proportional to the air-fuel ratio imbalance (variance is higher with an imbalance than without). Multiple samples are collected in making a decision.  The observed Variance is dependant on engine speed and load and so each result is normalized for speed and load by comparing it to a known "good system" result for that speed and load, and generating a Ratio metric.  The Ratio metric is calculated by selecting the appropriate threshold	Threshold Value  0.65  If the diagnostic has reported a failure on the prior trip, the Filtered Ratio must fall below 0.62 in order to report a pass. This feature prevents the diagnostic from toggling between failing and passing when the Filtered Ratio remains near the initial failure threshold of 0.65.	See Bank 1 (P219A) Secondary Parameters and Enable Conditions.  Quality Factor (QF) QF calibrations are located in a 17x17 lookup table versus engine speed and load (Supporting Table "Quality Factor Bank2"). QF values less than "1" indicate that we don't have 4sigma/2sigma robustness in that region. The quality of the data is determined via statistical analysis of Variance data.  Rapid Step Response (RSR): RSR will trigger if the Ratio result from the last test is AND it exceeds the last Filtered ratio by Once triggered, the filtered ratio is reset to:  Fast Initial Response (FIR): FIR will trigger when an NVM reset or code clear occurs. Once triggered, the	>= 0.99 >= 0.65 >= 0.65 0.00	See Bank 1 info	
			the appropriate threshold calibration from a 17x17 table (Supporting Table "Variance Threshold Bank2") and subtracting it from the measured Variance. The result is then divided by a normalizer calibration from another 17 x 17 table		Once triggered, the filtered ratio is reset to:	0.00		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			(Supporting Table "Normalizer Bank2"). This quotient is then multiplied by a quality factor calibration from a 17 x 17 table (Supporting Table "Quality Factor Bank2"). This result is referred to as the Ratio. Note that the quality factor ranges between 0 and 1 and represents robustness to false diagnosis in the current operating region. Regions with low quality factors are not used.					
			Finally, a EWMA filter is applied to the Ratio metric to generate the Filtered Ratio malfunction criteria metric. Generally, a normal system will result in a negative Filtered Ratio while a failing system will result in a positive Filtered Ratio.					
			The range of the Filtered Ratio metric is application specific since both the emissions sensitivity and relationship between imbalance and the Variance metric are application specific.					
			Some applications may need to command a unique cam phaser value before performing the					

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
			above calculations since cam phasing has been shown to have an impact on overall signal quality. This application Does Not Use this feature.					

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Barometric Pressure (BARO) Sensor Performance (naturally aspirated)	P2227	7 Compares baro sensor to the calculated baro estimate (part throttle calculation or unthrottled MAP)	Difference between baro sensor reading and estimated baro when distance since last estimated baro update  OR  Difference between baro sensor reading and estimated baro when distance since last estimated baro update	> 15.0 kPa <= 0.06 miles > 20.0 kPa > 0.06 miles	Engine Run Time  No Active DTCs:	> 0.00 seconds  AmbPresSnsrCktFA ECT_Sensor_Ckt_FA IAT_SensorFA MAF_SensorFA AfterThrottlePressureFA TPS_FA TPS_Performance_FA VehicleSpeedSensor_FA	320 failures out of 400 samples 1 sample every 12.5 msec	Type B, 2 Trips
			Barometric Pressure OR Barometric Pressure	< 50.0 kPa > 115.0 kPa	Time between current ignition cycle and the last time the engine was running  Engine is not rotating  No Active DTCs:	> 409.6 seconds  EngineModeNotRunTimer Error MAP_SensorFA TC_BoostPresSnsrCktFA AAP2_SnsrFA  MAP_SensorCircuitFP AAP_SnsrCktFP AAP2_SnsrCktFP	4 failures out of 5 samples  1 sample every 12.5 msec	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Barometric Pressure (BARO) Sensor Circuit Low (non- boosted applications)	P2228	Detects a continuous short to low or open in either the signal circuit or the BARO sensor.	BARO Voltage	< 40.0 % of 5 Volt Range (2.0 Volts = 51.0 kPa)	Engine Run Time	> 0.00 seconds	320 failures out of 400 samples 1 sample every 12.5 msec	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Barometric Pressure (BARO) Sensor Circuit High (non- boosted applications)	P2229	Detects an open sensor ground or continuous short to high in either the signal circuit or the BARO sensor.	BARO Voltage	> 90.0 % of 5 Volt Range (4.5 Volts = 115.1 kPa)	Engine Run Time	> 0.00 seconds	320 failures out of 400 samples 1 sample every 12.5 msec	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Barometric Pressure (BARO) Sensor Circuit Intermittent	P2230	Detects a noisy or erratic barometric pressure input	String Length  Where: "String Length" = sum of "Diff" calculated over  And where: "Diff" = ABS(current BARO reading - BARO reading from 12.5 milliseconds previous)	> 100 kPa 80 consecutive BARO samples	No Active DTCs:	AmbPresSnsrCktFA ECT_Sensor_Ckt_FA IAT_SensorFA MAF_SensorFA AfterThrottlePressureFA TPS_FA TPS_Performance_FA VehicleSpeedSensor_FA	4 failures out of 5 samples Each sample takes 1.00 seconds	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Signal Stuck Lean Bank 1 Sensor 2	P2270	This DTC determines if the post catalyst O2 sensor is stuck in a normal lean voltage range and thereby can no longer be used for post oxygen sensor fuel control or for catalyst monitoring. The diagnostic is an intrusive test (during coast) which increases the delivered fuel to achieve the required rich threshold.	Post O2 sensor signal AND The Accumulated mass air flow monitored during the Stuck Lean Voltage Test	< 825 mvolts > 183 grams	B1S2 DTC's Not active this key cycle System Voltage ICAT MAT Burnoff delay Green O2S Condition	TPS_ThrottleAuthorityDef aulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_F A EthanolCompositionSens or_FA P013A, P013B, P013E, P013F, P2270 or P2271  10.0 < Volts < 32.0 = Not Valid = Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 (if applicable) in Supporting Tables tab.	Frequency: Once per trip Note: if NaPOPD_b_Res etFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_Rap idResponseActiv e = TRUE, multiple tests per trip are allowed.	Type B, 2 Trips
					Low Fuel Condition Diag Pedal position	= False ≤ 100.0 %		
					Engine Speed to initially enable test Engine Speed range to keep test enabled (after initially enabled)	1,100 ≤ RPM ≤2,500 1,050 ≤ RPM ≤2,650		
					Engine Airflow	3 ≤ gps ≤ 20		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Vehicle Speed to initially enable test Vehicle Speed range to	40.4≤ MPH ≤82.0		
					keep test enabled (after initially enabled)	36.0 ≤ MPH ≤ 87.0		
					Closed loop integral Closed Loop Active Evap Ethanol Post fuel cell EGR Intrusive diagnostic All post sensor heater delays O2S Heater (post sensor) on Time  Predicted Catalyst temp Fuel State  =========== All of the above met for at least 2.0 seconds, and	0.74 ≤ C/L Int ≤ 1.08 = TRUE not in control of purge not in estimate mode = enabled = not active = not active ≥ 80.0 sec 600 ≤ °C ≤ 900 = DFCO possible ====================================		
					then the Force Cat Rich intrusive stage is requested.  ===================================			

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Signal Stuck Rich Bank 1 Sensor 2	P2271	This DTC determines if the post catalyst O2 sensor is stuck in a normal rich voltage range and thereby can no longer be used for post oxygen sensor fuel control or for catalyst monitoring. The diagnostic is an intrusive test which requests the DFCO mode to achieve the required lean threshold.	Post O2 sensor signal AND The Accumulated mass air flow monitored during the Stuck Rich Voltage Test	> 150 mvolts  > 82 grams	B1S2 DTC's Not Active this key cycle System Voltage ICAT MAT Burnoff delay Green O2S Condition	TPS_ThrottleAuthorityDef aulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_F A EthanolCompositionSens or_FA P013A, P013B, P013E, P013F or P2270  10.0 < Volts < 32.0 = Not Valid = Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 (if applicable) in Supporting Tables tab.	Frequency: Once per trip Note: if NaPOPD_b_Res etFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_Rap idResponseActiv e = TRUE, multiple tests per trip are allowed.	Type B, 2 Trips
					Low Fuel Condition Diag Engine Speed Engine Airflow Vehicle Speed Closed loop integral Closed Loop Active Evap	= False 1,100 ≤ RPM ≤2,500 3 ≤ gps ≤ 20 40.4 ≤ MPH ≤ 82.0 0.74 ≤ C/L Int ≤ 1.08 = TRUE not in control of purge		
					Ethanol Post fuel cell	not in estimate mode = enabled		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Power Take Off EGR Intrusive diagnostic All post sensor heater delays O2S Heater (post sensor) on Time  Predicted Catalyst temp Fuel State  DTC's Passed  =========  After above conditions are met: DFCO mode is continued (wo driver initiated pedal input).	= not active = not active  = not active  ≥ 80.0 sec  600 ≤ °C ≤ 900 DFCO possible  = P2270 (and P2272 if applicable) = P013E (and P014A if applicable) = P013A (and P013C if applicable)  ===================================		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Signal Stuck Lean Bank 2 Sensor 2	P2272	This DTC determines if the post catalyst O2 sensor is stuck in a normal lean voltage range and thereby can no longer be used for post oxygen sensor fuel control or for catalyst monitoring. The diagnostic is an intrusive test (during coast) which increases the delivered fuel to achieve the required rich threshold.	Post O2 sensor signal AND The Accumulated mass air flow monitored during the Stuck Lean Voltage Test	< 825 mvolts > 183 grams.	B2S2 DTC's Not Active this key cycle System Voltage ICAT MAT Burnoff delay Green O2S Condition	TPS_ThrottleAuthorityDef aulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_F A EthanolCompositionSens or_FA P013C, P013D, P014A, P014B, P2272 or P2273  10.0 < Volts < 32.0 = Not Valid = Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 in Supporting Tables tab.	Frequency: Once per trip Note: if NaPOPD_b_Res etFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_Rap idResponseActiv e = TRUE, multiple tests per trip are allowed.	Type B, 2 Trips
					Low Fuel Condition Diag Pedal position	= False ≤ 100.0 %		
					Engine Speed to initially enable test Engine Speed range to keep test enabled (after initially enabled)	1,100 ≤ RPM ≤ 2,500 1,050 ≤ RPM ≤ 2,650		
					Engine Airflow	3 ≤ gps ≤ 20		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Vehicle Speed to initially enable test Vehicle Speed range to keep test enabled (after initially enabled)	40.4 ≤ MPH ≤ 82.0 36.0 ≤ MPH ≤ 87.0		
					Closed loop integral Closed Loop Active Evap Ethanol Post fuel cell EGR Intrusive diagnostic All post sensor heater delays O2S Heater (post sensor) on Time  Predicted Catalyst temp Fuel State  ============= All of the above met for at least 2.0 seconds, and then the Force Cat Rich intrusive stage is requested. ======== During Stuck Lean test the following must stay TRUE or the test will abort: 0.95 ≤ Fuel EQR ≤ 1.10	0.74 ≤ C/L Int ≤ 1.08 = TRUE not in control of purge not in estimate mode = enabled = not active = not active ≥ 80.0 sec 600 ≤ °C ≤ 900 = DFCO possible ====================================		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
O2 Sensor Signal Stuck Rich Bank 2 Sensor 2	P2273	This DTC determines if the post catalyst O2 sensor is stuck in a normal rich voltage range and thereby can no longer be used for post oxygen sensor fuel control or for catalyst monitoring. The diagnostic is an intrusive test which requests the DFCO mode to achieve the required lean threshold.	Post O2 sensor signal AND The Accumulated mass air flow monitored during the Stuck Rich Voltage Test	> 150 mvolts > 82 grams.	B2S2 DTC's Not Active this key cycle System Voltage ICAT MAT Burnoff delay Green O2S Condition	TPS_ThrottleAuthorityDef aulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_F A EthanolCompositionSens or_FA P013C, P013D, P014A, P014B or P2272  10.0 < Volts < 32.0 = Not Valid = Not Valid, See definition of Multiple DTC Use_Green Sensor Delay Criteria - Airflow and Multiple DTC Use_Green Sensor Delay Criteria - Limit for the following locations: B1S2, B2S2 in Supporting Tables tab.	Frequency: Once per trip Note: if NaPOPD_b_Res etFastRespFunc = FALSE for the given Fuel Bank OR NaPOPD_b_Rap idResponseActiv e = TRUE, multiple tests per trip are allowed.	Type B, 2 Trips
					Low Fuel Condition Diag Engine Speed Engine Airflow  Vehicle Speed Closed loop integral Closed Loop Active Evap Ethanol Post fuel cell	= False 1,100 ≤ RPM ≤2,500 3 ≤ gps ≤ 20  40.4 ≤ MPH ≤ 82.0 0.74 ≤ C/L Int ≤ 1.08 = TRUE not in control of purge not in estimate mode = enabled		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					Power Take Off EGR Intrusive diagnostic All post sensor heater delays O2S Heater (post sensor) on Time  Predicted Catalyst temp Fuel State DTC's Passed  =========  After above conditions are met: DFCO mode is continued (wo driver initiated pedal input).	= not active = not active  = not active  ≥ 80.0 sec  600 ≤ °C ≤ 900 = DFCO possible = P2270 (and P2272 if applicable) = P013E (and P014A if applicable) = P013A (and P013C if applicable) = ===================================		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Transmissio n Control Torque Request	P2544	Determines if the torque request from the TCM is valid	Protect error - Serial Communication message - (\$199 - PTEI3)	Message <> two's complement of message	Diagnostic enabled/ disabled	Enabled	>= 16 Protect errors during key cycle.	Type B, 2 Trips
Circuit			OR		Power Mode	= Run	Performed on every received message	
			Rolling count error - Serial Communication message (\$199 - PPEI3) rolling count value	Message <> previous message rolling count value + one	Ignition Voltage	> 6.41 volts	>= 6 Rolling count errors out of 10 samples.	
			OR		Engine Running Run/Crank Active	= True > 0.50 Sec	Performed on every received message	
			Range Error - Serial Communication message - (\$199 - PTEI3) TCM Requested Torque Increase	> 450 Nm	No Serial communication loss to TCM (U0101)	No loss of communication	>= 6 range errors out of 10 samples. Performed on every received message	
			OR  Multi-transition error - Trans torque intervention type request change	Requested torque intervention type toggles from not increasing request to increasing request			>= 3 multi- transitions out of 5 samples. Performed every 200 msec	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Control Module Power Off Timer Performance	P262B	This DTC determines if the hardware timer does not initialize or count properly. There are two tests to ensure proper functioning of the timer: Count Up Test (CUT) and Range Test (RaTe).  Count Up Test (CUT): Verifies that the HWIO timer is counting up with the proper increment.	Count Up Test:  Time difference between the current read and the previous read of the timer	>1.50 seconds			Count Up Test: 4 failures out of 20 samples  1 sec / sample  Continuous while run/crank is not active and until controller shutdown is initiated.	Type B, 2 Trips
		Range Test (RaTe): When the run/crank is not active both the hardware and mirror timers are started. The timers are compared when module shutdown is initiated or run/crank becomes active.	Range Test: The variation of the HWIO timer and mirror timer is	> 25 %.			Range Test: Once per trip when controller shutdown is initiated or run/ crank becomes active.	

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Malfunction Indicator Lamp (MIL) Control Circuit (ODM) Low	P263A	Diagnoses the malfunction indicator lamp control low side driver circuit for circuit faults.	Voltage low during driver off state (indicates short-to-ground)	Short to ground: ≤ 0.5 Ω impedance between signal and controller ground	Run/Crank Voltage  Remote Vehicle Start is not active	Voltage ≥ 11 volts	20 failures out of 25 samples 250 ms / sample	Type B, No MIL Note: In certain controlle rs P0650 may also set (MIL Control Open Circuit)

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Engine Serial Number (ESN) Not Programmed or Incompatible	P264F	This DTC will be stored if the Engine Serial Number (ESN) has not been programmed.	Any ESN digits	= FF	OBD Manufacturer Enable Counter	= 0	250 ms / test Continuous	Type A, 1 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Control Module Communicati on Bus A Off	U0073	This DTC monitors for a BUS A off condition	Bus off failures exceeds before the sample time of is reached	5 counts (equivalent to 0.06 seconds)  0.56 seconds	General Enable Criteria:  U0073  Normal CAN transmission on Bus A  Device Control  High Voltage Virtual Network Management  Ignition Voltage Criteria:  Ignition voltage  Power Mode  Off Cycle Enable Criteria:  KeCAND_b_OffKeyCycle DiagEnbl  Ignition Accessory Line and Battery Voltage  General Enable Criteria and either Ignition Voltage Criteria or Off Cycle Enable Criteria met for > 3.0000 seconds  CAN hardware is bus OFF for	Not Active on Current Key Cycle Enabled Not Active  Not Active  >= 11.00 or >= 6.41 = run  = 0 ( 1 indicates enabled) = Active > 11.00  > 0.1125 seconds	Diagnostic runs in 12.5 ms loop	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Lost Communicati on With TCM	U0101	This DTC monitors for a loss of communication with the transmission control module	Message is not received from controller for  Message \$0AB  Message \$0BD  Message \$0C7  Message \$0F9  Message \$189  Message \$19D  Message \$1AF  Message \$1BE  Message \$1BF  Message \$1F5  Message \$4C9	≥ 10.0 seconds	General Enable Criteria:  U0073  Normal CAN transmission on Bus A  Device Control  High Voltage Virtual Network Management  Ignition Voltage Criteria:  Ignition voltage  Power Mode  Off Cycle Enable Criteria:  KeCAND_b_OffKeyCycle DiagEnbl  Ignition Accessory Line and Battery Voltage  General Enable Criteria and either Ignition Voltage Criteria or Off Cycle Enable Criteria met for > 3.0000 seconds  Power Mode is in accessory or run or crank and High Voltage Virtual Network Management is	Not Active on Current Key Cycle Enabled Not Active  Not Active  >= 11.00 or >= 6.41 = run  = 0 (1 indicates enabled) = Active > 11.00	Diagnostic runs in 12.5 ms loop	Type B, 2 Trips

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					not active for	> 0.4000 seconds		
					U0101	Not Active on Current Key Cycle		
					тсм	is present on the bus		

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
Lost Communicati on With Body Control Module	U0140	This DTC monitors for a loss of communication with the Body Control Module.	Message is not received from controller for  Message \$0F1  Message \$12A  Message \$1E1  Message \$1F1  Message \$1F3  Message \$3C9  Message \$3CB  Message \$3F1  Message \$451  Message \$4D7  Message \$4E1  Message \$4E9	≥ 10.0 seconds	General Enable Criteria:  U0073  Normal CAN transmission on Bus A  Device Control  High Voltage Virtual Network Management  Ignition Voltage Criteria:  Ignition voltage  Power Mode  Off Cycle Enable Criteria:  KeCAND_b_OffKeyCycle DiagEnbl  Ignition Accessory Line and Battery Voltage  General Enable Criteria and either Ignition Voltage Criteria or Off Cycle Enable Criteria met for > 3.0000 seconds  Power Mode is in accessory or run or crank and High Voltage Virtual Network Management is	Not Active on Current Key Cycle Enabled Not Active Not Active >= 11.00 or >= 6.41 = run = 0 (1 indicates enabled) = Active > 11.00 > 0.4000 seconds	Diagnostic runs in 12.5 ms loop	Type C, No MIL "Special Type C"

Component/ System	Fault Code	Monitor Description	Malfunction Criteria	Threshold Value	Secondary Parameters	Enable Conditions	Time Required	MIL Illum.
					not active for U0140	Not Active on Current Key Cycle		
					Body Control Module	is present on the bus		

X11

Y11

X11

Y11

X10

Y10

X10

Y10

X9

Y9

X9

Y9

						_	
Closed Loop Er	able Clarifi	cation: C	alibratio	n values a	are in the	Support	ing Tables
Engine run time greater than							
•	BRID ONLY	<b>′</b> )					
AutoStart CoolantX1	X2	, X3	X4	X5	X6	X7	X8
Close Loop Enable TimeY1	Y2	Y3	Y4	Y5	Y6	Y7	Y8
ınd '							
(tFSTA_t_ClosedLoopTime							
Start-Up CoolantX1	X2	X3	X4	X5	X6	X7	X8
Close Loop Enable TimeY1	Y2	Y3	Y4	Y5	Y6	Y7	Y8
ind pre converter 02 sensor voltage le	SS						
han							
(fFULC_U_O2_SensorReadyThrsh							
.0							
Voltage <del>&lt;</del> <i>X</i>	XXXmilliVolt	s					
or							
CFULC_O2_SensorReadyEvents							
Time (events * 12.5 milliseconds) > X	XXXevents						
ind `							
COSC (Converter Oxygen Storage Con	trol) not						
enabled	,						
ind							
Consumed AirFuel Ratio is stoichiome	trv i.e. not i	n compo	nent				
protection	,						
ınd							
OPD or Catalyst Diagnostic not intrus	sive						
ind							
urbo Scavenging Mode not							
enabled							
ınd							
All cylinders whose valves are active a	lso have the	eir inject	ors				
enabled		•					
ind							
D2S_Bank_ 1_TFTKO, O2S_Bank_ 2_T	FTKO, Fuel	InjectorC	ircuit FA	A and			
CylnderDeacDriverTFTKO = False	•	•	_				
-							

Long Term FT Enable Criteria

## 13 OBDG11 Engine Diagnostics Closed Loop Enable Clarification: Calibration values are in the Supporting Tables Closed Loop Enable and Coolant greater than KfFCLL T AdaptiveLoCoolant Coolant> XXXXCelcius or less than KfFCLL\_T\_AdaptiveHiCoolant Coolant< XXXXCelcius and KtFCLL\_p\_AdaptiveLowMAP\_Limit Barometric PressureX1 X2 X9 X4 X5 X8 Y5 Manifold Air PressureY1 Y2 Y3 Y4 Y6 Y7 Y8 Y9 land TPS\_ThrottleAuthorityDefaulted = False and Flex Fuel Estimate Algorithm is not active and Excessive fuel vapors boiling off from the engine oil algorithm (BOFR) is not enabled and Catalyst or EVAP large leak test not intrusive Secondary Fuel Trim Enable Criteria Closed Loop Enable and KfFCLP U O2ReadyThrshLo Voltage< XXXXmilliVolts for KcFCLP\_Cnt\_O2RdyCyclesThrsh Time (events \* 12.5 milliseconds) > XXXX events

Long Term Secondary Fuel Trim

KtFCLP\_t\_PostIntglDisableTime

Enable Criteria

	13	OBDG11 En	gine Diagn	ostics				Supporting	g Information
Closed Loop Enable C	larificatio	n: Calibrat	on values	are in the	Support	ting Table	es		
	X2 X		X5	X6	X7	X8	X9	X10	X11
<b>O</b>	Y2 Y	3 Y4	Y5	Y6	Y7	Y8	Y9	Y10	Y11
Plus									
KtFCLP_t_PostIntglRampInTime									
· · · · · · · · · · · · · · · · · · ·	<2 X		X5	X6	X7	X8	X9	X10	X11
Post Integral Ramp In TimeY1	Y2 Y	3 Y4	Y5	Y6	Y7	Y8	Y9	Y10	Y11
and									
KeFCLP_T_IntegrationCatalystMax									
Modeled Catalyst Temperature < XXXXCe	elcius								
and									
KeFCLP_T_IntegrationCatalystMin									
Wodeled Catalyst Temperature > XXXXCe	elcius								
and									
PO2S_Bank_1_Snsr_2_FA and									
PO2S_Bank_2_Snsr_2_FA = False									
and									
KeFCLP_Pct_CatAccuSlphrPostDsbl									
Modeled converter sulfur percent < XXXX Per	cent								
·									
and									
Post Integral < KaFCLP_U_SIphrIntglOfst_Th	rsh)								
X axis: Post O2 Sensor									
Y axis: Post O2 Selisol Y axis: Post O2 Mode									
Z: Post Integral threshold									

Supporting Table - P0101	P0106 P0121	P012B P0236	_P1101 TPS Residual Weight Factor based on RPM

**Description:** P0101\_P0106\_P0121\_P012B\_P0236\_P1101 TPS Residual Weight Factor based on RPM

y/x	0	500	850	1,200	1,550	1,900	2,250	2,600	2,950	3,300	3,650	4,000	4,350	4,700	5,050	5,400	5,750
1	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000

5,400

1.000

5,750

1.000

Supporting Table - P0101_P0106_P0121_P012B_P0236_P1101 MAF Residual Weight Factor based on RPM
Description: P0101_P0106_P0121_P012B_P0236_P1101 MAF Residual Weight Factor based on RPM
Notes:

2,950

1.000

3,300

1.000

3,650

0.892

4,000

0.554

4,350

0.515

4,700

0.564

5,050

0.657

2,600

1.000

0

1.000

y/x

500

1.000

850

1.000

1,200

1.000

1,550

1.000

1,900

1.000

2,250

1.000

Supporting Table - P0101 P0	106 P0121 P012B P023	6_P1101 MAF Residual Weight Factor based on MAF Est

**Description:** P0101\_P0106\_P0121\_P012B\_P0236\_P1101 MAF Residual Weight Factor based on MAF Est

y/x	0	50	70	73	76	79	82	85	89	95	100	110	150	170	200	280	350
1	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000

Supporting Table - P0101	P0106 P0121	P012B P0236	P1101 MAP1	Residual Weight Factor based on RPM

**Description:** P0101\_P0106\_P0121\_P012B\_P0236\_P1101 MAP1 Residual Weight Factor based on RPM

y/x	(	0	500	850	1,200	1,550	1,900	2,250	2,600	2,950	3,300	3,650	4,000	4,350	4,700	5,050	5,400	5,750
1		1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000

Supporting Table - P0101 P0	106 P0121 P0	012B P0236 P1101 MAP2 I	Residual Weight Factor based on RPM

**Description:** P0101\_P0106\_P0121\_P012B\_P0236\_P1101 MAP2 Residual Weight Factor based on RPM

y/x	0	500	850	1,200	1,550	1,900	2,250	2,600	2,950	3,300	3,650	4,000	4,350	4,700	5,050	5,400	5,750
1	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000

Supporting Table - P0101_P0106_P0121_P012B_P0236_P1101 MAP3 Residual Weight Factor based on RPM													TOTTILATIO				
Descrip	tion: P010	1 P0106 F	P0121 P0	12B P0236	P1101 M	AP3 Resid	lual Weigh	t Factor ba	ased on RP	M							
Notes:				<u>-</u> - <b>0-0</b>													
y/x	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
1	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000

							10 00	DOTTE	ngine bi	agnostic	,,				Oupp	orting ii	nonnation
	Supporting Table - P0101_P0106_P0121_P0236_P1101 TIAP Residual Weight Factor based on RPM																
Descri	Description: P0101_P0106_P0121_P0236_P1101 TIAP Residual Weight Factor based on RPM																
Notes:	Notes:																
y/x	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
1	1 000	1 000	1 000	1 000	1 000	1 000	1 000	1 000	1 000	1 000	1 000	1 000	1 000	1 000	1 000	1 000	1 000

Supporting Table - P0101	P0106 P0121 F	P0236_P1101 TIAP-MAP Correlation Offset

**Description:** P0101\_P0106\_P0121\_P0236\_P1101 TIAP-MAP Correlation Offset

У	ı/x	1,000	1,750	2,500	3,250	4,000	4,750	5,500	6,250	7,000
1		0.0	0.0	0.0	0.0	() ()	0.0	0.0	0.0	0.0

Supporting Table - P010	1_P0106_P012	_P0236_P1101 TIAP-Baro Correlati	on Offset

**Description:** P0101\_P0106\_P0121\_P0236\_P1101 TIAP-Baro Correlation Offset

y/x	1,000	1,750	2,500	3,250	4,000	4,750	5,500	6,250	7,000
1		0.0	() ()	0.0	0.0	0.0		0.0	0.0

Supportin	g Table - P0101	_P0106_P0121	_P0236_P1101	1 TIAP-MAP Correlation	Min Air Flow

**Description:** P0101\_P0106\_P0121\_P0236\_P1101 TIAP-MAP Correlation Min Air Flow

y/x	1,000	1,750	2,500	3,250	4,000	4,750	5,500	6,250	7,000
	0.0	0.0	0.0	0.0	0.0	0.0	0.0		0.0

Suppo	orting Table -	P0101_P0106	P0121_P0236	P1101 TIAP-Baro	Correlation Max Air Flow	

**Description:** P0101\_P0106\_P0121\_P0236\_P1101 TIAP-Baro Correlation Max Air Flow

y/x	1,000	1,750	2,500	3,250	4,000	4,750	5,500	6,250	7,000
1	0.0	0.0	0.0		I() ()	0.0	0.0	0.0	0.0

Supporting Table - P0101_P0106_P0121_P0236_P1101 TIAP-MAP Correlation Min MAP

**Description:** P0101\_P0106\_P0121\_P0236\_P1101 TIAP-MAP Correlation Min MAP

y/x	1,000	1,750	2,500	3,250	4,000	4,750	5,500	6,250	7,000
	0.0	0.0	0.0	0.0	0.0	0.0	0.0		0.0

0.0

	Sup	porting Table	e - P0101_P0	106_P0121_F	P0236_P1101	TIAP-Baro Co	orrelation Max	MAP			
Description:	Description: P0101_P0106_P0121_P0236_P1101 TIAP-Baro Correlation Max MAP										
Notes:	Notes:										
y/x	1,000	1,750	2,500	3,250	4,000	4,750	5,500	6,250	7,000		

0.0

0.0

0.0

0.0

0.0

0.0

0.0

0.0

### Supporting Table - Closed Loop Enable Clarification - KtFSTA\_t\_ClosedLoopAutostart

**Description:** Engine run time following an autostart, as a function of begin run coolant, which must be exceeded to enable CLOSED LOOP.

Notes: Time in seconds: Hybrid use Only

y/x	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
1	360.0	300.0	240.0	180.0	130.0	90.0	60.0	40.0	20.0	15.0	11.0	7.0	7.0	11.0	11.0	11.0	11.0

# 13 OBDG11 Engine Diagnostics Supporting Table - Closed Loop Enable Clarification - KtFSTA\_t\_ClosedLoopTime

**Description:** Engine run time, as a function of startup coolant temperature, which must be exceeded to enable CLOSED LOOP.

Notes: Time in seconds

y/x	-40	-2	28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
1	360.0	3	300.0	240.0	180.0	130.0	90.0	60.0	40.0	20.0	15.0	11.0	7.0	7.0	11.0	11.0	11.0	11.0

13 OBDG11 Engine Diagnostics
------------------------------

	Sı	pporting Tabl	e - Closed Lo		arification - K		aptiveLowMAI		
Descripti	on: KtFCLL_p_Ada <sub>l</sub>	otiveLowMAP_Limit							
Notes: M	AP in KPa								
y/x	65	70	75	80	85	90	95	100	105
1	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0

# 13 OBDG11 Engine Diagnostics Supporting Table - Closed Loop Enable Clarification - KtFCLP\_t\_PostIntglDisableTime

**Description:** Disable integral offset after engine start for this amount of time.

Notes: Time in seconds

y/x	-40	-29	-18	-6	5	16	28	39	50	61	73	84	95	106	118	129	140
1	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0

# 13 OBDG11 Engine Diagnostics Supporting Table - Closed Loop Enable Clarification - KtFCLP\_t\_PostIntglRampInTime

**Description:** Time required to ramp integral offset to desired value.

Notes: Time in seconds

y/x	-40	-29	-18	-6	5	16	28	39	50	61	73	84	95	106	118	129	140
1	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0

Supporting Table - Closed Loop Enable Clarification - KfFULC_U_O2_SensorReadyThrshLo					
Description: Lower limit checked against when determining if an oxygen sensor is in range					
Notes: Voltage in millivolts					
/x 1					
1	1,795				

Supporting Table - Closed Loop Enable Clarification - KcFULC_O2_SensorReadyEvents					
Description: Number of times an oxygen sensor value must be in range before declaring it ready					
Notes: Time (events * 12.5 milliseconds)	Notes: Time (events * 12.5 milliseconds)				
y/x	1				
1	10				

13	OBDG11	<b>Engine</b>	<b>Diagnostics</b>
----	--------	---------------	--------------------

Supporting	Information
------------	-------------

Supporting Table - Closed Loop Enable Clarification - KfFCLL_T_AdaptiveLoCoolant						
Description: LTM learning is inhibited if the engine coolant temperature is below this calibration.						
Notes: Degrees Celcius	Notes: Degrees Celcius					
/x 1						
1	39					

Supporting Table - Closed Loop Enable Clarification - KfFCLL_T_AdaptiveHiCoolant						
Description: LTM learning is inhibited if the engine coolant temperature is above this calibration.						
Notes: Degrees Celcius	Notes: Degrees Celcius					
/x						
1	140					

Supporting Table - Closed Loop Enable Clarification - KfFCLP_U_O2ReadyThrshLo						
Description: Lower threshold defining not ready window for post oxygen sensor voltage.						
Notes: Voltage in millivolts	Notes: Voltage in millivolts					
y/x	1					
1	1,100					

Supporting Table - Closed Loop Enable Clarification - KcFCLP_Cnt_O2RdyCyclesThrsh					
Description: Number of post catalyst oxygen sensor samples which must be outside not ready window before post oxygen sensor is READY.					
Notes: Time (events * 12.5 milliseconds)	Notes: Time (events * 12.5 milliseconds)				
/x 1					
1	10				

	BDOTT Eligine Diagnostics	Supporting information			
Supporting Table - Closed Loop Enable Clarification - KeFCLP_T_IntegrationCatalystMax					
Description: Maximum allowed estimated catalytic converter temperature for post O2 integral terms to be updated.					
Notes: Modeled catalyst Temperature in Celcius					
y/x	1				
1	950				

### Supporting Table - Closed Loop Enable Clarification - KeFCLP\_T\_IntegrationCatalystMin

**Description:** Minimum allowed estimated catalytic converter temperature to begin using post O2 integration correction terms. Converter temperature must remain above this threshold to ramp-in the post O2 integration adjustments. Once the ramp-in has started, a converter temperature below this threshold will freeze the ramp-in multiplier. Post O2 integration will not be allowed below this converter temperature

**Notes:** Modeled catalyst Temperature in Celcius

y/x	1
1	500

Supporting Table - Closed Loop Enable Clarification	oupporting information	
Description: Sulphur percent threshold above which post integral learning is disabled if the the	hreshold criteria KaFCLP_U_SlphrIntglOfst_Thrsh is also met.	
Notes: Percent		
y/x	1	
1	75	

### Supporting Table - Closed Loop Enable Clarification - KaFCLP\_U\_SlphrIntglOfst\_Thrsh

Description: Integral Offset voltage thresholds (bank and cell specific cals) used with KeFCLP\_Pct\_CatAccuSlphrPostDsbl to check for sulphur poisoning.

Notes: millivolts

y/x	CiOXYR_O2_PostCat1	CiOXYR_O2_PostCat2
CiFCLP_Decel	1,000	1,000
CiFCLP_Idle	1,000	1,000
CiFCLP_Cruise	1,000	1,000
CiFCLP_LightAccel	1,000	1,000
CiFCLP_HeavyAccel	1,000	1,000

#### Supporting Table - P00B6\_Fail if power up ECT exceeds RCT by these values

**Description:** KtTHMD\_T\_DCRD\_FastFailTempDiff

**Notes:** X axis is IAT Temperature at Power up (° C), Z axis is the Fast Failure temp difference (° C) The 17 X-axis breakpoints for the table below are (L to R) -40, -28, -16, -4, 8, 20, 32, 44, 56, 68, 80, 92, 104, 116, 128, 140 and 152. Note: Remove for applications with single coolant sensor

y/x	-40	-28	-16	-4	8		32	44	56	68	80	92	104	116	128	141	152
1	80	80	80	60	60	40	40	30	30	30	30	30	30	30	30	30	30

### 13 OBDG11 Engine Diagnostics Supporting Table - P0116\_Fail if power up ECT exceeds IAT by these values

**Description:** KtECTD\_T\_HSC\_FastFailTempDiff

Notes: X axis is IAT Temperature at Power up (° C), Z axis is the Fast Failure temp difference (° C)

y/x	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
1	80	80	80	60	60	40	40	30	30	30	30	30	30	30	30	30	30

#### Supporting Table - P0128\_Maximum Total Energy transferred to Cooling System for IAT and Start-up ECT conditions (Primary Test)

**Description:** KaECTD\_E\_EnergyLevelStartRun\_kJ[0]

Notes: Z axis is the cooling system energy failure threshold (grams), X axis is ECT Temperature at Power up (° C) Note: Remove for applications with dual coolant sensor (Old Energy based version)

y/:	(	-40	-28	-16	-4	8	20	32	44	56	68	80
1		14,200	14,200	14,200	14,200	14,200	12,640	11,080	9,520	7,960	6,400	4,840

#### Supporting Table - P0128\_Maximum Total Energy transferred to Cooling System for IAT and Start-up ECT conditions (Alternate Test)

**Description:** KaECTD\_E\_EnergyLevelStartRun\_kJ[1]

Notes: Z axis is the cooling system energy failure threshold (grams), X axis is ECT Temperature at Power up (° C) Note: Remove for applications with dual coolant sensor (Old Energy

based version)

y/x	-40	-28	-16	-4	8	20	32	44	56	68	80
1	17,431	15,859	14,287	12,715	11,143	9,571		6,427	4,850	4,850	4,850

### Supporting Table - P0128\_Maximum Accumulated Time for IAT and Start-up ECT conditions (Primary Test)

**Description:** KtTHMD\_t\_WrmUpTempTimeLimTest0

**Notes:** Z axis is the accumulated time failure threshold (seconds), X axis is ECT Temperature at Power up (° C) The 11 X-axis breakpoints for the table below are (L to R) -40, -28, -16, -4, 8, 20, 32, 44, 56, 68 and 80. Note: Remove for applications with single coolant sensor (Old time based version)

y/x	-40	-28	-16	-4	8	20	32	44	56	69	80
	950	865	780	695	610	525	440	355	270	185	100

#### Supporting Table - P0128\_Maximum Accumulated Time for IAT and Start-up ECT conditions (Alternate Test)

**Description:** KtTHMD\_t\_WrmUpTempTimeLimTest1

**Notes:** Z axis is the accumulated time failure threshold (seconds), X axis is ECT Temperature at Power up (° C) The 11 X-axis breakpoints for the table below are (L to R) -40, -28, -16, -4, 8, 20, 32, 44, 56, 68 and 80. Note: Remove for applications with single coolant sensor (Old time based version)

y/x	-40	-28	-16	-4	8	20	32	44	56	69	80
1	870	785		615	530	445	360	275	190	105	20

13	<b>OBD</b>	<b>G11</b>	Engine	Diagn	ostics
				- 3	

**Supporting Information** 

			13 0000	of Linging Diagno	731103		oupporting informat
	Supporting	Table - P0128_N	laximum Accum	ulated Energy fo	r Start-up ECT co	onditions - Prima	ry
Description	: Maximum Total Energy tr	ransferred to Cooling Sy	ystem for Ambient and \$	Start-up ECT conditions	(Primary Test)		
Notes: Z axi	is is the cooling system en	ergy failure threshold (k	J), X axis is ECT Temp	erature at Power up (° 0	C), (Deluxe version)		
y/x	-20	-5	10	30	45	60	75
1	2,100	1,800	1,500	1,200	900	600	300

13 OBDG11 Engine Diagnostics	13	<b>OBD</b>	<b>G11</b>	<b>Engine</b>	Diagn	ostics
------------------------------	----	------------	------------	---------------	-------	--------

**Supporting Information** 

Supporting Table - P0128_Maximum Accumulated Energy for Start-up ECT conditions - Alternate	
---	--

**Description:** Maximum Total Energy transferred to Cooling System for Ambient and Start-up ECT conditions (Alternate Test)

Notes: Z axis is the cooling system energy failure threshold (kJ), X axis is ECT Temperature at Power up (° C), (Deluxe version)

y/x	-20	-5	10	30	45	60	75
1	2,100	1,800	1,500	1,200	900	600	300

# 13 OBDG11 Engine Diagnostics Supporting Table - P0011\_CamPosErrorLimIc1

**Description:** P0011 - Cam Position Error Limit for performance diagnostic

Notes: KtPHSD\_phi\_CamPosErrorLimIc1

1101001	Tttl TIOD_	_p • a	OOLITOILII														
y/x	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
400	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
800	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
1,200	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
1,600	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
2,000	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
2,400	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
2,800	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
3,200	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
3,600	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
4,000	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
4,400	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
4,800	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
5,200	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
5,600	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
6,000	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
6,400	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
6,800	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0

# 13 OBDG11 Engine Diagnostics Supporting Table - P0011\_StablePositionTimeIc1

<b>Description:</b> P0011	- Delay after transient move
---------------------------	------------------------------

Notes: KtPHSD t StablePositionTimeIc1

y/x	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
400	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
800	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
1,200	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
1,600	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
2,000	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
2,400	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
2,800	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
3,200	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
3,600	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
4,000	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
4,400	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
4,800	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
5,200	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
5,600	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
6,000	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
6,400	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4
6,800	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4

### Supporting Table - P0011\_PerfMaxIc1

**Description:** P0011 - Range of phaser travel where diagnostic cannot make a decision if both desired & measured positions are greater than

		-		- i	-ē					T.				-4-	-		
y/x	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
1	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
2	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
3	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
4	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
5	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
6	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
7	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
8	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
9	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
10	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
11	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
12	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
13	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
14	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
15	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
16	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0
17	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0

140

3.0

152

3.0

Supporting Table - P0016 P0017 P0018 P0019 Cam Correlation Oil Temperature Threshold
Description: KtEPSI_t_RtnHomeDlyLmt
Notes:

56

3.0

68

3.0

80

3.0

92

3.0

104

3.0

116

3.0

128

3.0

y/x 1 -40

300.0

-28

300.0

-16

160.0

-4

18.0

8

18.0

20

18.0

32

18.0

44

10.0

# 13 OBDG11 Engine Diagnostics Supporting Information Table - P0442: Estimate o Ambient Temperature Valid Conditioning Time as a Function o Ignition O Time Table

Descr	<b>ption:</b> Dat	a is EAT Va	ilid Condition	oning Time	(in second	ls) and Axi	s is Ignitior	Off Time (	(in seconds	s)							
Notes	: KtEONV_	t_ldleCond	TimePrese	t													
P0442	P0442: Estimate o Ambient Temperature Valid Conditioning Time as a Function o Ignition O Time Table - Part 1																
y/x	0	600	1,200	1,800	2,400	3,000	3,600	4,200	4,800	5,400	6,000	6,600	7,200	7,800	8,400	9,000	9,600
1	200	300	300	300	300	300	300	300	300	300	300	300	300	295	290	285	280
P0442	P0442: Estimate o Ambient Temperature Valid Conditioning Time as a Function o Ignition O Time Table - Part 2																
v/x	10 200	10.800	11 700	12 600	13 500	14 400	15 300	16 200	17 100	18 000	19 200	20 400	21 600	22 800	24 000	25 200	

Supporting	a Table - P0442: Eng	ine Off Time Before	e Vehicle Off Maximum	as a Function of Estimated	Ambient Temperature Table
0 01 0 0 0 0 0 1 0 1 1 1	9				

**Description:** Data is Engine Off Time Before Vehicle Off Maximum Table (in seconds) and Axis is Estimated Ambient Coolant in Deg C

Notes: KtEONV\_t\_EngOffTimeBefVehOffMax

y/x	-10	-4	1	7	13	18	24	29	35	41	46	52	58	63	69	74	80
1	70	70	70	70	74	82	105	153	320	480	480	480	480	480	480	480	480

Supporting Table - P0496: Purge Valve Leak	<b>Test Engine Vacuum Test Time</b>	(Cold Start) as a Function of Fuel Level Table

Descri	otion: Data is	Purge Valve Le	ak Test Engine Vacuun	n Test Time (in seconds	) and Axis is Fuel Level in %

**Notes:** KtEVPD\_t\_PVLT\_EngineVacTimeCold

y/x	0	6	12	19	25	31	37	44	50	56	62	69	75	81	87	94	100
1	70	67	65	62	59	57	54	52	49	46	44	41	39	36	34	31	28

### Supporting Table - P0461, P2066, P2636: Transfer Pump Enable Time Table

**Description:** Data is TransferPumpOnTimeLimit (in seconds) and Axis is Fuel Level in %

 $\textbf{Notes:} \ \mathsf{KtFLVC\_t\_XferFuelPmpOnTmLim}$ 

y/x	0	3	6	9	13	16	19	22	25	28	31	34	38	41	44	47	50	53	56	59	63	66	69	72	75	78	81	84	88	91	94	97	100
1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

#### Supporting Table - P0442: EONV Pressure Threshold (Pascals) Table

**Description:** Data is EONV Pressure Threshold in Pascals, X axis (horizontal) is fuel level in % from 0 to 100 with step size 6.25, and Y axis (vertical) is temperature in deg C from -10 to 80 with step size 5.625

**Notes:** KtEONV\_p\_PressureThreshold

	<del>-</del> ,-																
y/x	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
1	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
2	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
3	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
4	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
6	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
7	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
8	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
9	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
10	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
11	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
12	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
13	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
14	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
15	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
16	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5
17	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5	-124.5

# Supporting Table - P219A Variance Threshold Bank1 Table

Description: Bank 1 lookup table of Variance metric used to calculate the Ratio for the current sample period

Notes: DTCs: P219A; Calibration Name: KtFABD\_U\_VarThresh1; Horizontal axis is RPM; Vertical Axis is Air Per Cylinder (APC) in mg/cylinder

y/x	800	980	1,160	1,340	1,520	1,700	1,880	2,060	2,240	2,420	2,600	2,780	2,960	3,140	3,320	3,500	3,680
120	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
150	450.00	450.00	450.00	10.00	10.00	11.25	18.00	31.50	14.75	6.75	6.75	450.00	450.00	450.00	450.00	450.00	450.00
180	450.00	450.00	450.00	10.00	10.00	11.25	18.00	31.50	14.75	6.75	6.75	450.00	450.00	450.00	450.00	450.00	450.00
210	450.00	450.00	450.00	17.00	17.00	17.25	36.50	12.25	12.00	7.50	7.50	450.00	450.00	450.00	450.00	450.00	450.00
240	450.00	450.00	450.00	24.00	24.00	13.75	25.25	14.75	10.75	11.25	11.25	450.00	450.00	450.00	450.00	450.00	450.00
270	450.00	450.00	450.00	29.00	29.00	26.00	25.50	15.25	9.75	13.50	13.50	450.00	450.00	450.00	450.00	450.00	450.00
300	450.00	450.00	450.00	23.25	23.25	23.00	28.25	16.75	10.00	13.75	13.75	450.00	450.00	450.00	450.00	450.00	450.00
330	450.00	450.00	450.00	20.50	20.50	25.50	32.00	23.00	9.00	15.00	15.00	450.00	450.00	450.00	450.00	450.00	450.00
360	450.00	450.00	52.00	36.50	21.25	30.25	39.50	20.50	13.00	26.00	26.00	450.00	450.00	450.00	450.00	450.00	450.00
390	450.00	450.00	52.00	52.00	23.75	41.50	44.50	24.75	16.00	35.00	35.00	450.00	450.00	450.00	450.00	450.00	450.00
420	450.00	450.00	50.75	50.75	29.25	43.00	51.00	25.50	17.50	47.00	47.00	450.00	450.00	450.00	450.00	450.00	450.00
450	450.00	450.00	52.00	52.00	44.75	43.00	75.00	24.50	27.50	37.25	47.00	450.00	450.00	450.00	450.00	450.00	450.00
480	450.00	450.00	65.00	65.00	34.50	42.75	63.00	34.50	44.00	44.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
510	450.00	450.00	71.75	71.75	38.25	48.75	60.50	45.75	86.75	86.75	450.00	450.00	450.00	450.00	450.00	450.00	450.00
540	450.00	450.00	77.25	77.25	45.75	43.75	89.75	63.25	74.75	74.75	450.00	450.00	450.00	450.00	450.00	450.00	450.00
570	450.00	450.00	80.50	80.50	48.25	56.25	105.75	92.25	79.25	79.25	450.00	450.00	450.00	450.00	450.00	450.00	450.00
600	450.00	450.00	80.50	80.50	48.25	56.25	105.75	92.25	79.25	79.25	450.00	450.00	450.00	450.00	450.00	450.00	450.00

# Supporting Table - P219B Variance Threshold Bank2 Table

Description: Bank 2 lookup table of Variance metric used to calculate the Ratio for the current sample period

Notes: DTCs: P219A; Calibration Name: KtFABD\_U\_VarThresh2; Horizontal axis is RPM; Vertical Axis is Air Per Cylinder (APC) in mg/cylinder

1																	
y/x	800	980	1,160	1,340	1,520	1,700	1,880	2,060	2,240	2,420	2,600	2,780	2,960	3,140	3,320	3,500	3,680
120	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
150	450.00	450.00	8.25	8.25	9.75	13.75	13.75	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
180	450.00	450.00	8.25	8.25	9.75	13.75	13.75	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
210	450.00	450.00	13.50	13.50	14.25	15.25	15.25	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
240	450.00	450.00	21.50	21.50	19.50	16.25	15.75	15.25	11.00	13.25	13.00	8.50	8.50	450.00	450.00	450.00	450.00
270	450.00	450.00	27.00	27.00	21.50	19.50	15.00	15.25	11.00	13.25	13.00	8.50	8.50	450.00	450.00	450.00	450.00
300	450.00	450.00	25.00	25.00	23.00	25.25	39.50	17.00	18.00	11.75	14.75	21.25	24.75	28.00	450.00	450.00	450.00
330	450.00	450.00	23.50	23.50	49.75	33.75	51.50	16.25	18.25	16.00	17.75	19.00	28.00	28.00	450.00	450.00	450.00
360	450.00	450.00	33.00	33.00	40.50	47.75	53.25	28.25	31.25	25.25	22.50	27.00	31.00	31.00	450.00	450.00	450.00
390	450.00	450.00	63.75	63.75	75.00	55.50	44.00	35.75	50.00	32.75	25.50	33.25	38.25	38.25	450.00	450.00	450.00
420	450.00	450.00	64.00	64.00	68.25	70.50	70.50	67.50	63.25	50.50	37.25	32.25	35.25	35.25	450.00	450.00	450.00
450	450.00	450.00	59.50	59.50	98.75	74.50	92.00	64.25	70.00	60.25	48.50	59.75	59.75	59.75	450.00	450.00	450.00
480	450.00	450.00	75.75	75.75	89.50	79.50	99.75	72.75	82.50	82.50	59.75	59.75	59.75	59.75	450.00	450.00	450.00
510	450.00	450.00	82.25	82.25	78.25	94.50	112.75	92.75	106.00	106.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
540	450.00	450.00	86.50	86.50	118.50	119.00	144.00	108.75	124.00	124.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
570	450.00	450.00	112.75	112.75	136.50	161.75	187.25	148.25	133.00	133.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
600	450.00	450.00	112.75	112.75	136.50	161.75	187.25	148.25	133.00	133.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00

#### Supporting Table - P219A Quality Factor Bank1 Table

Description: Bank 1 lookup table of Quality Factors used in the calculation of the Ratio for the current sample period

Notes: DTCs: P219A; Calibration Name: KtFABD\_K\_QualFactor1; Horizontal axis is RPM; Vertical Axis is Air Per Cylinder (APC) in mg/cylinder

<u> </u>																	
y/x	800	980	1,160	1,340	1,520	1,700	1,880	2,060	2,240	2,420	2,600	2,780	2,960	3,140	3,320	3,500	3,680
120	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
150	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
180	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
210	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
240	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
270	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
300	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
330	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
360	0.00	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
390	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
420	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
450	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
480	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
510	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
540	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
570	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
600	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00

#### Supporting Table - P219B Quality Factor Bank2 Table

Description: Bank 2 lookup table of Quality Factors used in the calculation of the Ratio for the current sample period

Notes: DTCs: P219B; Calibration Name: KtFABD\_K\_QualFactor2; Horizontal axis is RPM; Vertical Axis is Air Per Cylinder (APC) in mg/cylinder

y/x	800	980	1,160	1,340	1,520	1,700	1,880	2,060	2,240	2,420	2,600	2,780	2,960	3,140	3,320	3,500	3,680
120	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
150	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
180	0.00	0.00	0.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
210	0.00	0.00	0.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
240	0.00	0.00	0.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
270	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00
300	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00
330	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00
360	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00
390	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00
420	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00
450	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	1.00	1.00	0.00	0.00	0.00	0.00
480	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
510	0.00	0.00	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
540	0.00	0.00	0.00	1.00	1.00	0.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
570	0.00	0.00	0.00	1.00	1.00	0.00	1.00	1.00	1.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
600	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00

#### **Supporting Table - P219A Normalizer Bank1 Table**

**Description:** Bank 1 Normalizer table used in the calculation of the Ratio for the current sample period.

Notes: DTCs: P219A; Calibration Name: KtFABD\_U\_Normalizer1; Horizontal axis is RPM; Vertical Axis is Air Per Cylinder (APC) in mg/cylinder

y/x	800	980	1,160	1,340	1,520	1,700	1,880	2,060	2,240	2,420	2,600	2,780	2,960	3,140	3,320	3,500	3,680
120	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
150	450.00	450.00	450.00	40.25	40.25	42.75	38.00	24.00	22.50	26.50	26.50	450.00	450.00	450.00	450.00	450.00	450.00
180	450.00	450.00	450.00	40.25	40.25	42.75	38.00	24.00	22.50	26.50	26.50	450.00	450.00	450.00	450.00	450.00	450.00
210	450.00	450.00	450.00	62.75	62.75	52.75	28.50	49.75	33.00	27.25	27.25	450.00	450.00	450.00	450.00	450.00	450.00
240	450.00	450.00	450.00	76.50	76.50	53.75	39.75	49.25	36.50	29.50	29.50	450.00	450.00	450.00	450.00	450.00	450.00
270	450.00	450.00	450.00	75.75	75.75	60.50	42.50	50.75	37.25	30.00	30.00	450.00	450.00	450.00	450.00	450.00	450.00
300	450.00	450.00	450.00	84.75	84.75	57.50	46.75	55.75	45.00	35.00	35.00	450.00	450.00	450.00	450.00	450.00	450.00
330	450.00	450.00	450.00	93.00	93.00	73.50	66.00	73.00	85.00	77.50	77.50	450.00	450.00	450.00	450.00	450.00	450.00
360	450.00	450.00	50.50	77.75	105.25	78.00	60.50	77.50	83.00	68.00	68.00	450.00	450.00	450.00	450.00	450.00	450.00
390	450.00	450.00	50.50	50.50	115.25	64.00	60.50	75.25	82.00	63.00	63.00	450.00	450.00	450.00	450.00	450.00	450.00
420	450.00	450.00	74.25	74.25	118.00	65.25	59.00	84.50	90.25	55.25	55.25	450.00	450.00	450.00	450.00	450.00	450.00
450	450.00	450.00	78.75	78.75	112.50	97.00	50.00	88.00	85.75	70.50	55.25	450.00	450.00	450.00	450.00	450.00	450.00
480	450.00	450.00	67.75	67.75	133.50	98.75	75.00	100.50	96.00	96.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
510	450.00	450.00	107.00	107.00	133.75	107.25	94.50	109.25	73.00	73.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
540	450.00	450.00	102.75	102.75	130.75	114.25	65.25	83.50	81.00	81.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
570	450.00	450.00	105.50	105.50	132.00	108.75	54.25	65.75	77.25	77.25	450.00	450.00	450.00	450.00	450.00	450.00	450.00
600	450.00	450.00	105.50	105.50	132.00	108.75	54.25	65.75	77.25	77.25	450.00	450.00	450.00	450.00	450.00	450.00	450.00

# Supporting Table - P219B Normalizer Bank2 Table

**Description:** Bank 2 Normalizer table used in the calculation of the Ratio for the current sample period.

Notes: DTCs: P219B; Calibration Name: KtFABD\_U\_Normalizer2; Horizontal axis is RPM; Vertical Axis is Air Per Cylinder (APC) in mg/cylinder

y/x	800	980	1,160	1,340	1,520	1,700	1,880	2,060	2,240	2,420	2,600	2,780	2,960	3,140	3,320	3,500	3,680
120	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
150	450.00	450.00	17.50	17.50	13.50	16.25	16.25	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
180	450.00	450.00	17.50	17.50	13.50	16.25	16.25	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
210	450.00	450.00	29.25	29.25	26.00	27.00	27.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
240	450.00	450.00	20.00	20.00	25.50	30.50	26.25	11.00	30.50	16.50	12.75	13.25	13.25	450.00	450.00	450.00	450.00
270	450.00	450.00	34.50	34.50	35.25	41.00	22.00	11.00	30.50	16.50	12.75	13.25	13.25	450.00	450.00	450.00	450.00
300	450.00	450.00	58.00	58.00	56.75	60.25	23.50	35.00	20.00	27.50	13.00	13.00	16.00	19.00	450.00	450.00	450.00
330	450.00	450.00	81.25	81.25	54.25	58.50	34.25	67.25	25.75	38.50	18.25	21.75	19.00	19.00	450.00	450.00	450.00
360	450.00	450.00	94.25	94.25	109.75	51.75	44.00	68.25	56.50	47.00	27.00	33.50	37.50	37.50	450.00	450.00	450.00
390	450.00	450.00	93.75	93.75	98.50	66.00	60.75	108.00	69.75	65.50	44.50	36.25	42.25	42.25	450.00	450.00	450.00
420	450.00	450.00	115.50	115.50	90.75	67.50	60.50	87.50	120.50	97.00	59.75	69.50	65.50	65.50	450.00	450.00	450.00
450	450.00	450.00	155.25	155.25	97.25	94.75	77.75	94.25	143.00	120.00	63.25	66.50	75.75	75.75	450.00	450.00	450.00
480	450.00	450.00	151.50	151.50	99.25	95.25	63.75	85.75	91.00	91.00	66.50	66.50	75.75	75.75	450.00	450.00	450.00
510	450.00	450.00	115.25	115.25	106.50	91.00	73.25	83.50	89.00	89.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
540	450.00	450.00	105.25	105.25	91.25	97.75	110.50	95.00	102.50	102.50	450.00	450.00	450.00	450.00	450.00	450.00	450.00
570	450.00	450.00	108.00	108.00	44.75	56.25	67.50	59.00	83.00	83.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00
600	450.00	450.00	108.00	108.00	44.75	56.25	67.50	59.00	83.00	83.00	450.00	450.00	450.00	450.00	450.00	450.00	450.00

# 13 OBDG11 Engine Diagnostics Supporting Table - P0171\_P0172\_P0174\_P0175 Long-Term Fuel Trim Cell Usage

Description: Identifies which Long	Term Fuel Trim Cell I.D.s are used for o	liagnosis. Only cells identified as "CeF	ADD_e_NonSelectedCell" are not use	d for diagnosis.
Notes: DTCs: P0171, P0172, P017	74, P0175; Calibration Name: KaFADD	_e_SelectCellSet; Axis is Long Term F	uel Trim Cell I.D.	
P0171_P0172_P0174_P0175 Lon	g-Term Fuel Trim Cell Usage - Part 1			
y/x	CeFADR_e_Cell00_PurgOnAirMode 5	CeFADR_e_Cell01_PurgOnAirMode	CeFADR_e_Cell02_PurgOnAirMode 3	CeFADR_e_Cell03_PurgOnAirMode 2
1	CeFADD_e_SelectedPurgeCell	CeFADD_e_SelectedPurgeCell	CeFADD_e_SelectedPurgeCell	CeFADD_e_SelectedPurgeCell
P0171_P0172_P0174_P0175 Lon	g-Term Fuel Trim Cell Usage - Part 2			
y/x	CeFADR_e_Cell04_PurgOnAirMode	CeFADR_e_Cell05_PurgOnAirMode 0	CeFADR_e_Cell06_PurgOnIdle	CeFADR_e_Cell07_PurgOnDecel
1	CeFADD_e_SelectedPurgeCell	CeFADD_e_SelectedPurgeCell	CeFADD_e_SelectedPurgeCell	CeFADD_e_SelectedPurgeCell
P0171_P0172_P0174_P0175 Lon	g-Term Fuel Trim Cell Usage - Part 3			
y/x	CeFADR_e_Cell08_PurgOffAirMode 5	CeFADR_e_Cell09_PurgOffAirMode 4	CeFADR_e_Cell10_PurgOffAirMode 3	CeFADR_e_Cell11_PurgOffAirMode 2
1	CeFADD_e_SelectedNonPurgeCell	CeFADD_e_SelectedNonPurgeCell	CeFADD_e_SelectedNonPurgeCell	CeFADD_e_SelectedNonPurgeCell
P0171_P0172_P0174_P0175 Lon	g-Term Fuel Trim Cell Usage - Part 4			
y/x	CeFADR_e_Cell12_PurgOffAirMode	CeFADR_e_Cell13_PurgOffAirMode 0	CeFADR_e_Cell14_PurgOffIdle	CeFADR_e_Cell15_PurgOffDecel
1	CeFADD_e_SelectedNonPurgeCell	CeFADD_e_SelectedNonPurgeCell	CeFADD_e_SelectedNonPurgeCell	CeFADD_e_SelectedNonPurgeCell

#### Supporting Table - P0420\_P0430\_CatmonMinEngineRunTimeToEnable

**Description:** This cal value is a 1x5 array of minimum engine run time values based on powerup coolant temperatures. When the appropriate required minimum engine run time value is chosen based on the coolant temperature at powerup, this value is the minimum time from engine start before stabilized conditions are met. Used in determining if a ValidIdleIsMet condition exists.

Notes: KtCATD\_t\_EngRunTimeMin - Used for P0420 and P0430. Axis is the coolant and the output is the min engine run time

Ì	y/x	40	50	60	70	80
	1	100	100	100	100	100

### Supporting Table - P0420\_P0430\_CatmonMinAirflowForWarmCatalystDetermination

**Description:** This is a 1x3 table with the axis being engine coolant temperature. The implementation of this cal value as a table also included some changes to the way that the WarmedUpEvents counter increments and resets. To summarize, whenever WarmedUpEvents resets to 0 (this could be either at startup, if the closed throttle time exceeds a cal value, or if the predicted exhaust temperature falls below the ExhWarmMin cal value), the appropriate MinAirflowToWrmupCat value is chosen from the table based on engine coolant at the time the WarmedUpEvents counter reset to 0. This cal value is used along with the min exhaust temp to increment the WarmedUpEvents counter.

Notes: KtCATD\_dm\_MinAirFlowToWrmCat - Used for P0420 and P0430. Axis is the engine coolant and the output is the minimum airflow required to warmup the catalyst.

ı	y/x	0	45	90
١	1	20	18	18

#### Supporting Table - P0133\_O2S Slow Response Bank 1 Sensor 1 "Pass/Fail Threshold table"

**Description:** KaEOSD\_x\_ST\_ResponseLimRS1[x][y]

Notes: X axis is Lean to Rich response time (in sec), Please see the table below named "KnEOSD\_t\_ST\_LRC\_LimRS1" for the 17 X axis table breakpoints. Y axis is Rich to Lean response time (sec), Please see the cal table below named "KnEOSD\_t\_ST\_RLC\_LimRS1" for the 17 Y axis table breakpoints. Z axis is the pass/fail result, Note: If the cell contains a "0" then the fault is indicated, if it contains a "1" a fault is not indicated.

y/x	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
0	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0
1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0
2	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0
3	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0
4	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0
5	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0
6	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0
7	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0
8	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0
9	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0
10	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0
11	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0
12	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	0	0
13	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	0	0
14	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	0	0
15	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	0	0
16	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

### Supporting Table - P0153\_O2S Slow Response Bank 2 Sensor 1 "Pass/Fail Threshold table"

**Description:** KaEOSD\_x\_ST\_ResponseLimRS2[x][y]

**Notes:** X axis is Lean to Rich response time (in sec), Please see the table below named "KnEOSD\_t\_ST\_LRC\_LimRS2" for the 17 X axis table breakpoints. Y axis is Rich to Lean response time (sec), Please see the cal table below named "KnEOSD\_t\_ST\_RLC\_LimRS2" for the 17 Y axis table breakpoints. Z axis is the pass/fail result, Note: If the cell contains a "0" then the fault is indicated, if it contains a "1" a fault is not indicated.

y/x	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
0	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0
1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0
2	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0
3	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0
4	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0
5	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0
6	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0
7	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0
8	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0
9	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0
10	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0
11	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0
12	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	0	0
13	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	0	0
14	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	0	0
15	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	0	0
16	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

#### Supporting Table - Multiple DTC Use\_Green Sensor Delay Criteria - Airflow

**Description:** This Calibration is the airflow (in gps) above which the green airflow is acculmulated to expire the condition.

Notes: Used for: P0133, P013A, P013B, P013C, P013D, P013E, P013F, P014A, P014B, P0153, P015A, P015B, P015C, P015D, P1133, P1153, P2270, P2271, P2272 and P2273. The specific diagnostic (from summary table) will not be enabled until the next ignition cycle after the airflow criteria below (by sensor location) has been met:

y/x	1
1	22

#### Supporting Table - Multiple DTC Use\_Green Sensor Delay Criteria - Limit

**Description:** This Calibration is the acculmulated airflow (in grams) limit above which the green condition is expired

**Notes:** Used for: P0133, P013A, P013B, P013C, P013D, P013E, P013F, P014A, P014B, P0153, P015A, P015B, P015C, P015D, P1133, P1153, P2270, P2271, P2272 and P2273. Note: This feature is only enabled when the vehicle is new and cannot be enabled in service

У	ı/x	CiOXYR_O2_Bank1_Sensor1	CiOXYR_O2_Bank1_Sensor2	CiOXYR_O2_Bank2_Sensor1	CiOXYR_O2_Bank2_Sensor2		
1	1	120,000	120,000	120,000	120,000		

Supporting Table -	P0133 Kn	OSD t ST	LRC LimRS1

**Description:** KnEOSD\_t\_ST\_LRC\_LimRS1. X Table Axis (in sec) for P0133, L2R Reponse time breakpoints for table

y/x	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
1	0.000	0.010	0.020	0.030	0.040	0.050	0.060	0.080	0.090	0.100	0.120	0.140	0.160	0.180	0.200	0.210	2.000

Supporting Table - P01	33_KnEOSD_t	ST_RLC_LimRS1
------------------------	-------------	---------------

**Description:** KnEOSD\_t\_ST\_RLC\_LimRS1. Y Table Axis (in sec) for P0133, R2L Reponse time breakpoints for table

y/x	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
1	0.000	0.010	0.020	0.030	0.040	0.050	0.060	0.080	0.100	0.120	0.130	0.140	0.150	0.160	0.170	0.180	2.000

**Description:** KnEOSD\_t\_ST\_LRC\_LimRS2. X Table Axis (in sec) for P0153, L2R Reponse time breakpoints for table

y/x	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
1	0.000	0.010	0.020	0.030	0.040	0.050	0.060	0.080	0.090	0.100	0.120	0.140	0.160	0.180	0.200	0.210	2.000

**Description:** KnEOSD\_t\_ST\_RLC\_LimRS2. Y Table Axis (in sec) for P0153, R2L Reponse time breakpoints for table

y/x	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
1	0.000	0.010	0.020	0.030	0.040	0.050	0.060	0.080	0.100	0.120	0.130	0.140	0.150	0.160	0.170	0.180	2.000

# Supporting Table - P0068\_Delta MAP Threshold f(TPS)

**Description:** Table of delta MAP values as a function of desired throttle position. The output of this table provides a delta MAP that if the measured minus the estimated MAP exceeds, is considered a fail.

**Notes:** P0068, KtTPSD\_p\_MAP\_DesThrDelt

ĺ	y/x	5.00	10.00	15.00	20.00	25.00	30.00	35.00	40.00	100.00
	1.00	21.45	22.81	22.56	18.69	19.59	19.23	100.00	100.00	100.00

# Supporting Table - P0068\_Delta MAF Threshold f(TPS)

**Description:** Table of delta MAF values as a function of desired throttle position. The output of this table provides a delta MAF that if the measured minus the estimated MAF exceeds, is considered a fail.

**Notes:** P0068, KtTPSD\_dm\_MAF\_DesThrDelt

y/x	5.00	10.00	15.00	20.00	25.00	30.00	35.00	40.00	100.00
1.00	15.43		25.32	26.87	36.79	45.05	255.00	255.00	255.00

Supporting	Information
------------	-------------

# Supporting Table - P0068\_Maximum MAF f(RPM)

**Description:** Table of maximum MAF values vs. engine speed. This is the maximum MAF the engine can see under all ambient conditions.

**Notes:** P0068, KtTPSD\_dm\_MaxMAF\_VsRPM

y/x	600.00	1,400.00	2,200.00	3,000.00	3,800.00	4,600.00	5,400.00	6,200.00	7,000.00
1.00	25.00	60.00	100.00	140.00		220.00	250.00	280.00	300.00

13	<b>OBDG11</b>	<b>Engine</b>	<b>Diagnostics</b>

Supporting	Information
------------	-------------

Capporting rabio i coco maximam in a livolto,	Supporting	Table - P0068_	Maximum	MAF f(	Volts)
---	------------	----------------	---------	--------	--------

**Description:** Table of maximum MAF values vs. system voltage. The output of the air meter is clamped to lower values as system voltage drops off.

**Notes:** P0068, KtTPSD\_dm\_MaxMAF\_VsVoltage

y/x	6.00	7.00	8.00	9.00	10.00	11.00	12.00	13.00	14.00
1.00	0.00	18.00	40.00	75.00	135.00	250.00	500.00	500.00	500.00

	13	OBDG1	1 Engine	<b>Diagnostics</b>
--	----	-------	----------	--------------------

**Supporting Information** 

Supporting Table - P060	6 Last Seed	Timeout f(Loop Time)
3		

**Description:** The max time for the Last Seed Timeout as a function of operating loop time sequence.

**Notes:** P0606, KaPISD\_t\_LastSeedTimeout[x]

y/x	CePISR_e_6p25msSeq	CePISR_e_12p5msSeq	CePISR_e_25msSeq	CePISR_e_LORES_C
1	0.175	0.175	0.175	409.594

13 OBDG11 Engine Diagnostics
------------------------------

**Supporting Information** 

Supporting Table - P0	606_Program Sequence Watch Enable f(Loop Time)	)
		,

**Description:** The enabling flags for the program sequence watch as a function of operating loop time sequence.

**Notes:** P0606, KaPISD\_b\_ProgSeqWatchEnbl

y/x	CePISR_e_6p25msSeq	CePISR_e_12p5msSeq	CePISR_e_25msSeq	CePISR_e_LORES_C
1	1	1	1	1

13 OBDG11 Engine Diagnostics	13	OBDO	311 E	ngine	Diagn	ostics
------------------------------	----	------	-------	-------	-------	--------

Supporting	Information
------------	-------------

Supporting Table	- P0606	<b>PSW Sea</b>	uence Fail f	(Loop Time)	
		_		\/	

**Description:** Fail threshold for PSW per operating loop.

**Notes:** P0606, KaPISD\_Cnt\_SequenceFail[x]

y/x	CePISR_e_6p25msSeq	CePISR_e_12p5msSeq	CePISR_e_25msSeq	CePISR_e_LORES_C
1	3	3	3	5

13 OBDG11 Engine Diagnostic	13	OBD	<b>G11</b>	<b>Engine</b>	Diagno	ostic	s
-----------------------------	----	-----	------------	---------------	--------	-------	---

Supporting	Information
------------	-------------

<b>Supporting Table - P0</b>	606 PSW Sequence	Sample f(Loo	o Time)

**Description:** Sample threshold for PSW per operating loop.

Notes: P0606, KaPISD\_Cnt\_SequenceSmpl[x]

y/x	CePISR_e_6p25msSeq	CePISR_e_12p5msSeq	CePISR_e_25msSeq	CePISR_e_LORES_C
1	4	4	4	4

	13	OBDG1	1 Engine	<b>Diagnostics</b>
--	----	-------	----------	--------------------

# Supporting Table - P1682\_PT Relay Pull-in Run/Crank Voltage f(IAT)

**Description:** The Run/Crank voltages required to pull in the PT relay as a function of induction air temperature.

Notes: P1682, KtPMDD\_U\_PT\_RelayPullInEnbl

y/x	23.00	85.00	95.00	105.00	125.00
1.00	7.00	8.70	9.00	9.20	10.00

# 13 OBDG11 Engine Diagnostics Supporting Table - P16F3\_Delta Spark Threshold f(RPM,APC)

Description: Threshold for determining when the difference between commanded spark and applied spark exceeds the torque security requirement. It is a function of engine rpm and APC.

Notes: P16F3, KtSPRK\_phi\_DeltTorqueScrtyAdv

y/x	500.00	980.74	1,461.48	1,942.23	2,422.97	2,903.71	3,384.45	3,865.20	4,345.94	4,826.68	5,307.42	5,788.16	6,268.91	6,749.65	7,230.39	7,711.13	8,191.88
80.00	125.00	37.22	42.06	44.30	47.05	38.06	33.09	34.55	36.41	38.25	36.81	33.89	31.56	31.56	31.56	31.56	31.56
160.00	125.00	29.72	32.08	35.61	37.69	32.50	29.64	30.55	30.75	30.64	30.38	29.36	28.42	28.42	28.42	28.42	28.42
240.00	125.00	24.28	25.63	28.77	30.16	27.98	26.84	27.39	26.69	25.56	25.86	25.95	25.86	25.86	25.86	25.86	25.86
320.00	125.00	19.69	20.77	24.03	24.95	24.64	24.55	24.83	23.61	21.94	22.53	23.27	23.70	23.70	23.70	23.70	23.70
400.00	125.00	16.58	17.47	20.58	21.27	21.30	21.64	22.48	21.19	19.19	19.69	20.88	21.89	21.89	21.89	21.89	21.89
480.00	125.00	14.30	15.06	17.95	18.52	18.59	18.95	19.80	18.70	16.98	17.31	18.84	20.33	20.33	20.33	20.33	20.33
560.00	125.00	12.58	13.25	15.92	16.41	16.50	16.83	17.53	16.50	14.92	15.34	16.81	18.17	18.17	18.17	18.17	18.17
640.00	125.00	11.23	11.83	14.30	14.72	14.84	15.14	15.72	14.77	13.30	13.66	15.03	16.36	16.36	16.36	16.36	16.36
720.00	125.00	10.14	10.67	12.98	13.34	13.47	13.73	14.25	13.36	11.98	12.22	13.44	14.64	14.64	14.64	14.64	14.64
800.00	125.00	9.25	9.73	11.88	12.20	12.27	12.50	13.03	12.19	10.91	11.05	12.14	13.25	13.25	13.25	13.25	13.25
880.00	125.00	8.50	8.94	10.95	11.25	11.27	11.47	11.98	11.22	10.02	10.09	11.06	12.11	12.11	12.11	12.11	12.11
960.00	125.00	8.42	8.86	10.86	11.16	11.16	11.36	11.89	11.13	9.92	10.00	10.95	12.00	12.00	12.00	12.00	12.00
1,040.00	125.00	8.42	8.86	10.86	11.16	11.16	11.36	11.89	11.13	9.92	10.00	10.95	12.00	12.00	12.00	12.00	12.00
1,120.00	125.00	8.42	8.86	10.86	11.16	11.16	11.36	11.89	11.13	9.92	10.00	10.95	12.00	12.00	12.00	12.00	12.00
1,200.00	125.00	8.42	8.86	10.86	11.16	11.16	11.36	11.89	11.13	9.92	10.00	10.95	12.00	12.00	12.00	12.00	12.00
1,280.00	125.00	8.42	8.86	10.86	11.16	11.16	11.36	11.89	11.13	9.92	10.00	10.95	12.00	12.00	12.00	12.00	12.00
1,360.00	125.00	8.42	8.86	10.86	11.16	11.16	11.36	11.89	11.13	9.92	10.00	10.95	12.00	12.00	12.00	12.00	12.00

13 OBDG11 Engine Diagnostics
------------------------------

Supporting	Information
------------	-------------

Supporting Table - P16F3	Delta MAP Threshold f	(Desired Engine Torque)

**Description:** Engine Sync based and Time based delta pressure threshold above which Torque Security error is reported.

Notes: P16F3, KtMAPI\_p\_ES\_TB\_MAP\_DeltaThresh

y/x	0.00	50.00	100.00	150.00	200.00	300.00
1.00	18.69	18.69	18.69	18.69	18.69	18.69

# 13 OBDG11 Engine Diagnostics Supporting Table - P16F3\_Speed Control External Load f(Oil Temp, RPM)

Description: Spe	ecifies the external load tal	ble for SPDR torque securit	y as a function of engine oil	temperature and engine R	PM.	
Notes: P16F3, K	(tSPDC_M_ExternalLoad					
y/x	-40.00	-15.00	5.00	32.00	55.00	90.00
200.00	650.00	650.00	650.00	650.00	650.00	650.00
305.00	650.00	650.00	650.00	650.00	650.00	650.00
410.00	650.00	650.00	650.00	650.00	650.00	650.00
515.00	650.00	650.00	650.00	650.00	290.00	200.00
560.00	650.00	650.00	650.00	650.00	245.00	169.32
705.00	348.47	305.43	285.05	280.99	199.88	100.99
875.00	343.45	309.26	288.32	259.00	132.30	80.73
1,050.00	258.44	233.76	218.54	197.74	70.27	49.43
1,300.00	115.81	97.59	86.21	71.41	34.89	27.82
1,600.00	65.57	48.09	37.02	23.41	21.72	21.27
2,000.00	59.37	41.21	29.58	15.93	21.17	22.20
2,500.00	65.40	45.82	33.19	18.80	25.78	26.95
3,200.00	72.68	51.86	38.36	23.32	32.77	34.35
4,000.00	98.94	77.23	63.10	47.61	55.31	56.65
5,000.00	125.20	102.77	88.15	72.28	77.07	76.52
6,100.00	150.57	127.63	112.65	96.51	99.66	98.30
8,000.00	162.74	139.25	123.88	107.45	107.43	104.65

#### Supporting Table - P0300\_IdleSCD\_Decel

Description: Crankshaft decel threshold while in SCD mode. SCD mode uses smaller windows near TDC. Thresholds are a function of rpm and % engine Load.

Notes: Used for P0300-P0308. Cal Name: KtMISF\_dt\_SCD\_IdleMode

Note: Misfire's Load term is %, but not PID\$04. PID\$04 is not robust to temperature and alititude shifts. (especially decel and jerk thresholds since they track actual air trapped in cylinder)

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,300	1,400	1,500	1,600
3	550	500	400	200	150	110	100	90	50	32,767	32,767	32,767	32,767
)	550	500	400	200	150	110	100	90	50	32,767	32,767	32,767	32,767
1	550	500	400	200	150	110	100	90	50	32,767	32,767	32,767	32,767
2	550	450	400	200	150	110	100	90	50	32,767	32,767	32,767	32,767
13	550	475	360	230	150	110	110	90	50	32,767	32,767	32,767	32,767
14	550	475	330	260	190	130	110	80	50	32,767	32,767	32,767	32,767
15	550	475	360	260	190	140	110	75	50	32,767	32,767	32,767	32,767
6	600	525	400	270	190	130	95	70	50	32,767	32,767	32,767	32,767
7	600	550	400	250	190	120	100	75	40	32,767	32,767	32,767	32,767
18	600	550	425	270	190	130	110	80	50	32,767	32,767	32,767	32,767
9	700	600	425	270	200	140	120	80	55	32,767	32,767	32,767	32,767
21	800	700	450	270	200	140	120	80	60	32,767	32,767	32,767	32,767
22	900	750	475	300	200	150	100	80	60	32,767	32,767	32,767	32,767
24	1,000	800	500	325	220	160	100	80	60	32,767	32,767	32,767	32,767
25	1,100	900	600	350	240	170	120	80	60	32,767	32,767	32,767	32,767
27	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
29	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767

### Supporting Table - P0300\_ldleSCD\_Jerk

**Description:** Crankshaft jerk threshold while in SCD mode. SCD mode uses smaller windows near TDC. Thresholds are a function of rpm and % engine Load.

Notes: Used for P0300-P0308. Cal Name: KtMISF\_ddt\_SCD\_ldleMode

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,300	1,400	1,500	1,600
3	550	500	400	200	150	110	100	90	50	32,767	32,767	32,767	32,767
9	550	500	400	200	150	110	100	90	50	32,767	32,767	32,767	32,767
11	550	500	400	200	150	110	100	90	50	32,767	32,767	32,767	32,767
12	550	450	400	200	150	110	100	90	50	32,767	32,767	32,767	32,767
13	550	500	375	230	150	110	100	90	50	32,767	32,767	32,767	32,767
14	550	500	375	240	170	110	100	80	50	32,767	32,767	32,767	32,767
15	550	500	375	240	170	110	90	75	50	32,767	32,767	32,767	32,767
16	600	550	375	250	170	110	75	70	50	32,767	32,767	32,767	32,767
17	600	550	375	250	180	120	80	75	40	32,767	32,767	32,767	32,767
18	600	550	375	270	180	130	100	80	50	32,767	32,767	32,767	32,767
19	700	600	375	270	180	140	110	80	50	32,767	32,767	32,767	32,767
21	800	700	400	270	180	115	105	80	55	32,767	32,767	32,767	32,767
22	900	750	400	300	180	120	90	80	55	32,767	32,767	32,767	32,767
24	1,000	800	500	325	200	130	100	70	50	32,767	32,767	32,767	32,767
25	1,100	900	600	350	220	140	120	80	50	32,767	32,767	32,767	32,767
27	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
29	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767

### Supporting Table - P0300\_SCD\_Decel

**Description:** Crankshaft decel threshold. SCD mode uses smaller windows near TDC. Thresholds are a function of rpm and % engine Load.

**Notes:** Used for P0300-P0308. Cal Name: KtMISF\_dt\_SCD\_OffIdleMode

	1								_		1		
y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000
8	600	450	300	220	150	130	90	70	55	32,767	32,767	32,767	32,767
9	570	420	275	180	135	110	85	65	50	32,767	32,767	32,767	32,767
11	550	400	250	180	135	110	85	60	45	32,767	32,767	32,767	32,767
12	550	400	275	190	140	115	75	60	50	32,767	32,767	32,767	32,767
13	650	500	320	220	160	115	80	60	50	32,767	32,767	32,767	32,767
15	700	550	350	240	170	115	90	70	55	32,767	32,767	32,767	32,767
17	700	550	380	260	180	120	90	70	60	32,767	32,767	32,767	32,767
19	750	600	425	300	200	140	100	80	65	32,767	32,767	32,767	32,767
22	750	600	500	350	220	160	120	90	75	32,767	32,767	32,767	32,767
25	1,050	900	750	400	275	180	140	120	90	32,767	32,767	32,767	32,767
29	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
33	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
38	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
42	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
18	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
54	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
61	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767

# Supporting Table - P0300\_SCD\_Jerk

**Description:** Crankshaft jerk threshold. SCD mode uses smaller windows near TDC. Thresholds are a function of rpm and % engine Load.

**Notes:** Used for P0300-P0308. Cal Name: KtMISF\_ddt\_SCD\_OffIdleMode

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000
3	600	450	300	220	150	130	90	70	55	32,767	32,767	32,767	32,767
9	570	420	275	180	135	110	85	65	50	32,767	32,767	32,767	32,767
11	550	400	250	180	135	110	85	60	45	32,767	32,767	32,767	32,767
12	550	400	275	190	140	115	75	60	50	32,767	32,767	32,767	32,767
13	650	500	320	220	160	115	80	60	50	32,767	32,767	32,767	32,767
15	700	550	350	240	170	115	90	70	55	32,767	32,767	32,767	32,767
17	700	550	380	260	180	120	90	70	60	32,767	32,767	32,767	32,767
19	750	600	425	300	200	140	100	80	65	32,767	32,767	32,767	32,767
22	750	600	500	350	220	160	120	90	75	32,767	32,767	32,767	32,767
25	1,050	900	750	400	275	180	140	120	90	32,767	32,767	32,767	32,767
29	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
33	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
38	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
12	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
18	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
54	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
31	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767

# 13 OBDG11 Engine Diagnostics Supporting Table - P0300\_IdleCylModeDecel

**Description:** Crankshaft decel threshold. Thresholds are a function of rpm and % engine Load.

Notes: Used for P0300-P0308. Cal Name: KtMSFD\_dt\_ldleCvlinderMode

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,300	1,400	1,500	1,600
3	1,100	1,000	650	450	350	250	225	150	120	100	75	70	60
9	1,200	1,100	650	450	350	300	225	150	130	100	75	70	60
11	1,200	1,100	700	450	350	300	225	150	130	100	75	70	60
12	1,300	1,200	800	450	350	300	225	150	130	100	75	70	60
13	1,300	1,200	800	550	350	300	225	150	130	100	75	70	60
14	1,200	1,100	800	550	350	300	225	150	130	100	75	70	60
15	1,100	1,000	800	650	450	325	225	150	120	90	75	70	60
16	1,100	1,000	900	650	425	325	250	160	120	90	75	70	60
17	1,300	1,200	900	650	425	300	250	175	120	110	75	70	60
18	1,400	1,300	900	650	425	300	250	175	130	110	80	70	60
19	1,500	1,400	900	650	425	325	250	175	130	120	80	80	60
21	1,600	1,500	900	650	450	325	250	175	130	120	85	80	70
22	1,700	1,600	1,000	650	450	325	250	190	130	120	100	80	70
24	1,800	1,700	1,000	750	450	325	230	190	150	120	100	80	70
25	1,900	1,800	1,050	750	450	325	230	190	160	130	100	80	80
27	2,000	1,900	1,100	800	500	325	250	190	150	140	110	80	80
29	2,100	2,000	1,150	900	550	350	275	200	160	140	110	110	100

# Supporting Table - P0300\_IdleCylModeJerk

**Description:** Crankshaft jerk threshold. Thresholds are a function of rpm and % engine Load.

Notes: Used for P0300-P0308. Cal Name: KtMSFD\_ddt\_IdleCylinderMode

v/x	400	500	600	700	800	900	1,000	1,100	1,200	1,300	1,400	1,500	1,600
9/1													
8	1,100	1,100	600	450	350	300	200	150	130	100	75	70	60
9	1,200	1,100	600	450	350	300	200	150	130	100	75	70	60
11	1,200	1,100	650	450	350	300	200	150	130	100	75	70	60
12	1,300	1,100	700	450	350	300	200	150	130	100	75	70	60
13	1,300	1,100	700	550	350	300	200	150	130	100	75	70	60
14	1,200	1,000	700	550	350	300	200	150	130	100	75	70	60
15	1,100	900	700	600	450	280	200	150	120	100	75	70	60
16	1,100	1,000	800	600	425	280	200	150	120	90	75	70	60
17	1,300	1,200	800	600	425	280	200	175	110	100	75	70	60
18	1,400	1,300	800	600	425	250	200	170	110	100	80	70	60
19	1,500	1,400	800	600	375	250	200	150	110	100	80	80	60
21	1,600	1,500	800	600	375	250	200	140	110	100	80	80	70
22	1,700	1,600	900	600	375	250	200	150	110	100	80	80	70
24	1,800	1,700	1,000	700	400	275	200	150	120	100	90	80	70
25	1,900	1,800	1,050	700	400	275	210	150	120	100	95	80	80
27	2,000	1,900	1,100	800	500	300	250	160	120	100	100	80	80
29	2,100	2,000	1,150	900	550	350	275	180	120	100	100	90	100

# Supporting Table - P0300\_CylMode\_Decel

**Description:** Crankshaft decel threshold. Thresholds are a function of rpm and % engine Load.

Notes: Used for P0300-P0308. Cal Name: KtMISF\_CylinderMode

110103	. O36u	101 1 0	J00-i 0	500. C	aiivaii	ie. Kuvi	101 _C	/III IGEI IV	1000																	
y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000
8	1,300	1,100	800	650	400	280	200	170	160	110	60	50	36	27	20	15	13	12	6	5	5	4	3	3	3	3
9	1,200	1,000	750	600	380	280	200	170	160	100	60	45	36	27	19	15	12	11	6	5	4	4	3	3	3	3
11	1,200	1,000	650	500	360	275	200	160	125	80	55	40	30	25	17	14	12	10	6	4	4	4	3	3	3	3
12	1,300	1,100	700	550	375	275	200	150	120	75	50	35	26	22	16	13	10	10	5	4	4	4	3	3	3	3
13	1,200	1,000	700	550	350	250	175	150	125	65	50	35	28	22	15	12	10	10	6	4	4	4	3	3	3	3
15	1,400	1,200	800	600	400	275	200	150	140	80	60	40	30	25	17	14	12	10	6	4	4	4	3	3	3	3
17	1,500	1,300	900	600	400	300	225	160	140	90	65	45	42	26	18	16	14	11	6	5	4	4	3	3	3	3
19	1,600	1,400	1,000	700	500	325	275	175	160	100	75	55	40	30	22	16	15	12	6	5	4	4	3	3	3	3
22	1,700	1,500	1,100	800	500	350	300	200	180	120	90	65	50	35	26	20	16	14	7	5	4	4	3	3	3	3
25	1,800	1,600	1,200	900	700	450	350	250	200	140	100	70	55	40	30	24	20	16	8	6	5	4	3	3	3	3
29	1,900	1,700	1,300	1,000	800	550	400	300	220	150	110	80	60	42	35	25	22	18	8	6	5	4	3	3	3	3
33	2,000	1,800	1,400	1,200	900	650	500	350	235	160	130	90	60	45	40	30	24	20	9	7	5	4	3	3	3	3
38	2,000	1,800	1,600	1,400	1,000	750	600	400	250	180	140	100	70	55	45	35	30	22	10	7	6	5	3	3	3	3
42	2,200	2,000	1,800	1,600	1,100	950	700	500	300	220	150	110	80	60	50	40	32	25	11	8	6	5	4	4	4	4
48	2,200	2,000	1,800	1,600	1,200	1,000	800	550	375	230	150	125	95	75	55	45	35	30	12	9	6	5	4	4	4	4
54	2,200	2,000	1,800	1,600	1,200	1,000	800	600	400	240	180	125	100	80	60	50	40	30	14	10	7	6	5	5	5	5
61	2,200	2,000	1,800	1,600	1,200	1,000	800	700	500	300	250	170	110	85	65	55	45	40	16	11	8	6	6	6	6	6

# Supporting Table - P0300\_CylMode\_Jerk

**Description:** Crankshaft jerk threshold. Thresholds are a function of rpm and % engine Load.

**Notes:** Used for P0300-P0308. Cal Name: KtMlSF\_ddt\_CylinderMode

								,																		
y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000
8	1,300	1,100	800	650	400	280	200	170	160	110	50	50	35	27	20	15	13	12	0	0	0	0	0	0	0	0
9	1,200	1,000	750	600	380	280	200	170	160	100	60	45	35	27	19	15	12	11	0	0	0	0	0	0	0	0
11	1,200	1,000	650	500	360	275	200	150	110	80	50	40	28	25	17	14	12	10	0	0	0	0	0	0	0	0
12	1,300	1,100	700	550	350	275	200	140	110	80	50	35	24	22	16	13	10	10	0	0	0	0	0	0	0	0
13	1,200	1,000	700	550	350	250	175	150	115	80	50	35	28	22	15	12	10	10	0	0	0	0	0	0	0	0
15	1,400	1,200	800	600	400	275	200	150	140	85	50	40	30	25	17	14	12	10	0	0	0	0	0	0	0	0
17	1,500	1,300	900	600	400	300	225	160	140	90	50	45	35	26	18	16	14	11	0	0	0	0	0	0	0	0
19	1,600	1,400	1,000	700	500	325	275	175	160	100	70	55	38	30	22	16	15	12	0	0	0	0	0	0	0	0
22	1,700	1,500	1,100	800	500	350	300	200	180	120	75	65	40	35	26	20	16	14	0	0	0	0	0	0	0	0
25	1,800	1,600	1,200	900	700	450	350	250	200	140	90	70	50	40	30	24	20	16	0	0	0	0	0	0	0	0
29	1,900	1,700	1,300	1,000	900	550	400	300	220	150	90	80	50	42	35	25	22	18	0	0	0	0	0	0	0	0
33	2,000	1,800	1,500	1,200	1,000	650	500	350	235	160	110	90	60	45	40	30	24	20	0	0	0	0	0	0	0	0
38	2,000	1,800	1,600	1,400	1,100	750	600	400	250	180	140	100	70	55	45	35	30	22	0	0	0	0	0	0	0	0
42	2,200	2,000	1,800	1,600	1,200	950	700	500	300	220	150	110	80	60	50	40	32	25	0	0	0	0	0	0	0	0
48	2,200	2,000	1,800	1,600	1,200	1,000	800	550	375	230	175	125	95	75	55	45	35	30	0	0	0	0	0	0	0	0
54	2,200	2,000	1,800	1,600	1,200	1,000	800	600	400	240	180	125	100	80	60	50	40	30	0	0	0	0	0	0	0	0
61	2,200	2,000	1,800	1,600	1,200	1,000	800	700	500	300	250	170	110	85	65	55	45	40	0	0	0	0	0	0	0	0

# 13 OBDG11 Engine Diagnostics Supporting Table - P0300\_RevMode\_Decel

**Description:** Crankshaft decel threshold. Thresholds are a function of rpm and % engine Load.

Notes: Used for P0300-P0308. Cal Name: KtMISF\_RevolutionMode

y/x	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000
8	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	110	75	45	35	26	25	25	25	25
9	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	100	60	40	30	25	24	24	24	24
11	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	95	60	40	35	26	24	24	24	24
12	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	100	60	40	35	28	24	24	24	24
13	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	110	70	50	40	28	24	24	24	24
15	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	115	80	55	45	32	26	26	26	26
17	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	120	90	65	50	35	32	32	32	32
19	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	140	100	75	55	45	35	35	35	35
22	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	160	120	80	65	50	40	40	40	40
25	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	180	140	100	75	60	45	45	45	45
29	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	200	150	110	85	70	55	55	55	55
33	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	220	180	120	100	80	60	60	60	60
38	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	280	220	140	120	80	70	70	70	70
42	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	320	240	160	130	100	80	80	80	80
48	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	350	290	180	145	110	90	90	90	90
54	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	370	320	200	150	120	100	100	100	100
61	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	400	350	230	155	140	140	140	140	140

# Supporting Table - P0300\_AFM\_Decel

**Description:** Crankshaft decel threshold. Thresholds are a function of rpm and % engine Load.

Notes: Used for P0300-P0308. Cal Name: KtMISF\_DoDCylinderMode

Notes.	Used for i	-0300 <del>-</del> F0	300. Cai	ivallie. K	LIVIISI _DO	DCyllilde	TWOUE												
y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	2,800	3,000	3,500
8	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
9	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
11	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
12	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
13	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
15	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
17	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
19	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
22	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
25	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
29	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
33	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
38	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
42	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
48	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
54	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767
61	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767	32,767

## Supporting Table - P0300\_ZeroTorqueEngLoad

**Description:** %air load that represents Zero Brake torque along the Neutral rev line. The Zero torque threshold is adjusted for Baro via P0300\_ZeroTorqueBaro

**Notes:** Used for P0300-P0308. Cal Name: KtMISF\_ZeroTorqSpd

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000
1	11.00	9.50	8.75	8.50	8.50	8.50	8.50	8.50	8.50	8.50	8.50	8.50	8.50	8.75	9.00	9.00	9.00	9.00	11.23	13.46	15.69	17.92	20.14	22.38	24.60	26.83

13	<b>OBD</b>	<b>G11</b>	Engine	Diagn	ostics
				- 3	

Supporting	Information
------------	-------------

Supporting Table - P0300_ZeroTorqBaro	
---------------------------------------	--

**Description:** adjusts zero torque for altitude

**Notes:** Used for P0300-P0308. Cal Name: KtMSFD\_K\_ZeroTorqBaro

y/x	65	70	75	80	85	90	95	100	105
	0.82	0.85	0.88		0.93	0.95	0.97	1.00	1.03

# 13 OBDG11 Engine Diagnostics Supporting Table - P0300\_ZeroTorqDoD

**Description:** Zero torque engine load while in Active Fuel Management

Notes: Used for P0300-P0308. Cal Name: KtMSFD\_ZeroTorqDoD

y/x	400	500	600	700	800	900	1,000	1,100	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000
1	11.00	9.50	8.75	8.50	8.50	8.50	8.50	8.50	8.50	8.50	8.50	8.50	8.50	8.75	9.00	9.00	9.00	9.00	11.23	13.46	15.69	17.92	20.14	22.38	24.60	26.83

# 13 OBDG11 Engine Diagnostics Supporting Table - P0300\_Catalyst\_Damage\_Misfire\_Percentage

**Description:** Catalyst Damaging Misfire Percentage" Table whenever secondary conditions are met.

Notes: Used for P0300-P0308 Cal Name: KtMSED Pot CatalyetMisfire

<b>Notes:</b> Use	d for P0300-P0308. 1	Cal Name: KtMSFD_F	ct_Catalystiviisiire					
y/x	0	1,000	2,000	3,000	4,000	5,000	6,000	7,000
0	10.6	10.6	10.6	10.0	4.8	4.8	4.8	4.8
10	10.6	10.6	10.6	10.0	4.8	4.8	4.8	4.8
20	10.6	10.6	10.6	10.0	4.8	4.8	4.8	4.8
30	10.6	10.6	9.8	8.1	4.8	4.8	4.8	4.8
40	10.6	10.6	8.1	8.1	4.8	4.8	4.8	4.8
50	8.1	8.1	6.8	4.8	4.8	4.8	4.8	4.8
60	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8
70	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8
80	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8
90	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8
100	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8

# Supporting Table - P0300\_TOSSRoughRoadThres

**Description:** Only used if Rough Road source = TOSS: dispersion value on Transmission Output Speed Sensor above which rough road is indicated present

Notes: Used for P0300-P0308. Cal Name: KtRRDI\_a\_RoughRoadThresh

y/x	600	800	1,000	1,200	1,400	1,600	1,800	2,000	2,200	2,400	2,600	2,800	3,000	3,500	4,000	4,500	5,000	5,500	6,000
100	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
300	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
600	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
900	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
1,200	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
1,500	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
1,800	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
2,100	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
2,400	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
2,700	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
3,000	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
3,300	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
3,600	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
4,200	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0

# Supporting Table - P0300\_WSSRoughRoadThres

**Description:** Only used if Wheel speed from ABS is used. If difference between wheel speed readings is larger than this limit, rough road is present

Notes: Used for P0300-P0308. Cal Name: KtRRDI\_a\_WhlSpdRoughRoadLim

y/x	0	12	24	36	48	60	72	85	97	109	121	133	145	157	169	181	193
1	0.40	0.44	0.48	0.52	0.56	0.60	0.64	0.68	0.72	0.76	0.80	0.84	0.88	0.92	0.96	1.00	1.04

**Description:** Number of consecutive number of decelerating cylinders after the misfire that would be considered abnormal. (Cylinder Mode Equation)

Notes: Used for P0300-P0308. Cal Name: KaMSFD\_Cnt\_CylAbnormal

y/x	0	1	2	3	4	5	6	7	8
1	4.00	4.00	4.00	4.00	4.00	4.00	4.00	4.00	4.00

13 OBDG11	<b>Engine</b>	<b>Diagnostics</b>
-----------	---------------	--------------------

Supporting	Information
------------	-------------

Supporting Table - P0300_Abnormal SCD Mode
--

**Description:** Number of consecutive number of decelerating cylinders after the misfire that would be considered abnormal. (SCD Mode Equation)

Notes: Used for P0300-P0308. Cal Name: KaMSFD\_Cnt\_SCD\_CylAbnormal

y/x	0	1	2	3	4	5	6	7	8
1	4.00	4.00	4.00	4.00	4.00	4.00	4.00	4.00	4.00

13 OBDG11 Engine Diagnostics	13	OBDG11	<b>Engine</b>	<b>Diagnostics</b>
------------------------------	----	--------	---------------	--------------------

**Description:** Abnormal Rev Mode Number of consecutive number of decelerating cylinders after the misfire that would be considered abnormal. (Rev Mode Equation)

**Notes:** Used for P0300-P0308. Cal Name: KaMSFD\_Cnt\_RevAbnormal

y/x	0	1	2	3	4	5	6	7	8
1	4.00	4.00	4.00	4.00	4.00	4.00	4.00	4.00	4.00

## Supporting Table - P0300\_Min\_PatternMultiplier

**Description:** Crankshaft should return to normal after the misfire. If crankshaft snap value after single isolated misfire being evaulated is larger than the misfire's Jerk threshold times this multiplier, its not a real misfire.

Notes: Used for P0300-P0308. Cal Name: KtMSFD\_K\_SCD\_MinPttrnRecogMult

y/x	0	1,000	2,000	3,000	4,000	5,000	6,000	7,000	8,000
1	0.90	0.90	0.90	0.90	0.90	0.90	0.90	0.90	0.90

## Supporting Table - P0300\_Max\_PatternMultiplier

**Description:** Crankshaft should return to normal after the misfire. If crankshaft snap value after the misfire being evaulated is larger than the misfire's Jerk threshold times this multiplier, its not a real misfire. However, if random misfire occurs every engine cycle, more noise is allowed to be considered "normal" since the crankshaft does not have time to fully return to normal before the next misfire occurs.

Notes: Used for P0300-P0308. Cal Name: KtMSFD\_K\_SCD\_MaxPttrnRecogMult

ľ	y/x	0	1,000	2,000	3,000	4,000	5,000	6,000	7,000	8,000
	1	2.00	2.00	2.00	2.00	2.00	2.00	2.00	2.00	2.00

13 OBDG11 Engine Diagnostics
------------------------------

# Supporting Table - P0300 Ring Filter

**Description:** Driveline Ring Filter
After a low level misfire, another misfire may not be detectable until driveline ringing ceases. If no ringing seen, stop filter early.

Notes: Used for P0300-P0308. Cal Name: KaMSFD\_Cnt\_RingFilter

y/x	0	1	2	3	4	5	6	7	8
1	4.00	4.00	4.00	4.00	4.00	4.00	4.00	4.00	4.00

13 OBDG11	<b>Engine</b>	<b>Diagnostics</b>

_	4.		4.
SIIN	nartina	Intorm	STIAN
Jub	porting		аноп

**Description:** Number of Normals for the Driveline Ring Filter
After a low level misfire, another misfire may not be detectable until driveline ringing ceases. If no ringing seen, stop filter early.

Notes: Used for P0300-P0308. Cal Name: KaMSFD\_Cnt\_NumOfNormalsFil

y/x	0	1	2	3	4	5	6	7	8
1	3.00	3.00	3.00	3.00	3.00	3.00	3.00	3.00	3.00

# 13 OBDG11 Engine Diagnostics Supporting Table - P0300 EngineOverSpeedLimit

<b>Description:</b>	Engine	OverSpeed	Limit \	versus gear

Notes: Used for P0300-P0308. Cal Name: KaEOSC\_n\_EngOvrspdLimitGear

#### P0300 EngineOverSpeedLimit - Part 1

y/x	CeTGRR_e_TransGr1	CeTGRR_e_TransGr2	CeTGRR_e_TransGr3	CeTGRR_e_TransGr4	CeTGRR_e_TransGr5	CeTGRR_e_TransGr6
1	5,000	5,000	5,000	5,000	5,000	5,000

#### P0300 EngineOverSpeedLimit - Part 2

y/x CeTGRR_e_TransGrEVT CeTGRR_e_TransGrEVT CeTGRR_e_TransGrNeut CeTGRR_e_TransGrRvrs CeTGRR_e_TransGrPark	Ш	3						
1 2 5 000 5 000 4 000 4 000		y/x	CeTGRR_e_TransGrEVT	CeTGRR_e_TransGrEVT	CeTGRR_e_TransGrNeut	CeTGRR_e_TransGrRvrs	CeTGRR_e_TransGrPark	
1 5 000 5 000 4 000 5 000 4 000			1	2				
7,000 3,000 7,000 7,000		1	5,000	5,000	4,000	5,000	4,000	

# Supporting Table - P0324\_P0326\_P0331\_AbnormalNoise\_Threshold

**Description:** Fail threshold for the Knock Performance Abnormal Noise Diagnostic

Notes: Used for P0324, P0326 and P0331. Cal Name: KtKNKD\_k\_PerfAbnLimitLo. X-axis = Engine Speed (RPM). Diagnostic fails when VaKNKD\_k\_PerfCylAbnFiltIntnsity <

KtKNKD\_k\_PerfAbnLimitLo

ŀ		_			T.	v			,	r	r	· ·		1	0			
	y/x	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000	7,500	8,000	8,500
	1	0.290	0.290	0.290	0.290	0.290	0.380	0.440	0.520	0.590	0.540	0.630	0.660	0.660	0.660	0.660	0.660	0.660

## Supporting Table - P0325\_P0330\_OpenCktThrshMin (20 kHz)

**Description:** Knock Open Circuit Diagnostic Minimum Threshold when using the 20 kHz method (see "OpenMethod" description)

Notes: Used for P0325 and P0330. Cal name: KtKNKD\_k\_OpenMin20K. x-axis = Engine Speed (RPM)

Diagnostic fails when the filtered diagnostic output is between the OpenCktThrshMin and OpenCktThrshMax:

i.e.: KtKNKD\_k\_OpenMin20K < VaKNKD\_k\_OpenFiltIntensity < KtKNKD\_k\_OpenMax20K.

Ĭ	y/x	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000	7,500	8,000	8,500
	1	12.7773	12.8477	12.5645	12.1777	12.1191	10.0938	8.9297	9.0586	9.4688	7.9785	6.4531	6.4492	6.4492	6.4492	6.4492	6.4492	6.4492

**Supporting Information** 

## Supporting Table - P0325\_P0330\_OpenCktThrshMax (20 kHz)

**Description:** Knock Open Circuit Diagnostic Maximum Threshold when using the 20 kHz method (see "OpenMethod" description)

Notes: Used for P0325 and P0330. Cal name: KtKNKD\_k\_OpenMax20K. x-axis = Engine Speed (RPM).

Diagnostic fails when the filtered diagnostic output is between the OpenCktThrshMin and OpenCktThrshMax:

i.e.: KtKNKD\_k\_OpenMin20K < VaKNKD\_k\_OpenFiltIntensity < KtKNKD\_k\_OpenMax20K.

	y/x	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000	7,500	8,000	8,500
١	1	43.1348	42.6289	42.0293	41.0059	40.6895	35.9766	33.5293	30.9180	31.5039	26.7090	22.8516	20.3320	18.0234	15.9980	14.3320	13.0996	12.3770

**Supporting Information** 

## Supporting Table - P0325\_P0330\_OpenCktThrshMin (Normal Noise)

**Description:** Knock Open Circuit Diagnostic Minimum Threshold when using the Normal Noise method (see "OpenMethod" description): When using the Normal Noise method (see "OpenMethod" description).

**Notes:** Used for P0325 and P0330. Cal name: KtKNKD\_k\_OpenMinNN. x-axis = Engine Speed (RPM)

Diagnostic fails when the filtered diagnostic output is between the OpenCktThrshMin and OpenCktThrshMax:

i.e.: KtKNKD\_k\_OpenMinNN < VaKNKD\_k\_OpenFiltIntensity < KtKNKD\_k\_OpenMaxNN.

y/x	2,700	2,900	3,000	3,250	3,500	3,750	4,000	4,250	4,500	4,750	5,000	5,500	6,000	6,500	7,000	7,500	8,500
1	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000

## Supporting Table - P0325\_P0330\_OpenCktThrshMax (Normal Noise)

**Description:** Knock Open Circuit Diagnostic Minimum Threshold when using the Normal Noise method (see "OpenMethod" description): When using the Normal Noise method (see "OpenMethod" description).

**Notes:** Used for P0325 and P0330. Cal name: KtKNKD\_k\_OpenMaxNN. x-axis = Engine Speed (RPM)

Diagnostic fails when the filtered diagnostic output is between the OpenCktThrshMin and OpenCktThrshMax:

i.e.: KtKNKD\_k\_OpenMinNN < VaKNKD\_k\_OpenFiltIntensity < KtKNKD\_k\_OpenMaxNN.

y/x	2,700	2,900	3,000	3,250	3,500	3,750	4,000	4,250	4,500	4,750	5,000	5,500	6,000	6,500	7,000	7,500	8,500
1	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000

## Supporting Table - P06B6\_P06B7\_OpenTestCktThrshMin

**Description:** Knock Open Circuit Minimum Threshold for Internal Circuit Diagnostic. Used only when the 20 kHz method is being used (see "OpenMethod" description). The Open Test Circuit ensures that the internal circuit used to generate the 20 kHz signal for the Open Circuit diags (P0325, P0330) is within range.

Notes: Used for P0325 and P0330. Cal name: KtKNKD\_k\_OpenTestCktMin. x-axis = Engine Speed (RPM).

Diagnostic fails when the filtered diagnostic output is between the OpenTestCktThrshMin and OpenTestCktThrshMax:

i.e. KtKNKD\_k\_OpenTestCktMin < VaKNKD\_k\_OpenTestCktIntFilter < KtKNKD\_k\_OpenTestCktMax

ľ	y/x	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000	7,500	8,000	8,500
	1	0.199	0.186	0.176	0.188	0.223	0.279	0.385	0.521	0.701	0.928	1.207	1.545	1.943	2.408	2.945	3.559	4.252

## Supporting Table - P06B6\_P06B7\_OpenTestCktThrshMax

**Description:** Knock Open Circuit Minimum Threshold for Internal Circuit Diagnostic. Used only when the 20 kHz method is being used (see "OpenMethod" description). The Open Test Circuit ensures that the internal circuit used to generate the 20 kHz signal for the Open Circuit diags (P0325, P0330) is within range.

Notes: Used for P0325 and P0330. Cal name: KtKNKD\_k\_OpenTestCktMax. x-axis = Engine Speed (RPM).

Diagnostic fails when the filtered diagnostic output is between the OpenTestCktThrshMin and OpenTestCktThrshMax:

i.e. KtKNKD\_k\_OpenTestCktMin < VaKNKD\_k\_OpenTestCktIntFilter < KtKNKD\_k\_OpenTestCktMax

١	//x	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	5,500	6,000	6,500	7,000	7,500	8,000	8,500
1		0.689	0.689	0.689	0.689	0.725	0.980	1.363	1.887	2.563	3.406	4.432	5.650	7.076	8.727	10.611	12.744	15.141

# Supporting Table - P0325\_P0330\_OpenMethod

Description: Defines which Knock Open Circuit Diagnostic method to use.

Notes: Used for P0325 and P0330. Cal name: KtKNKD\_e\_OpenMethod. x-axis = Engine Speed Index, 500 to 8500 (RPM) by 500 rpm increments.

Selects 1 of 3 available methods: "20kHz Method", "Normal Noise Method," or "Disabled." The mode chosen dictates which set of threshold tables are used. Typically, either: A) the 20 kHz Method is used for all RPM or B) the 20 kHz Method is used for low/medium RPM and the Normal Noise Method is used for high RPM.

	·			-	
P0325_P0330_OpenI	Method - Part 1				
y/x	0	1	2	3	4
1	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz
P0325_P0330_OpenI	Method - Part 2				
y/x	5	6	7	8	9
1	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz
P0325_P0330_OpenI	Method - Part 3				
y/x	10	11	12	13	14
1	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz
P0325_P0330_OpenI	Method - Part 4				
y/x	15	16			
1	CeKNKD_e_Open_20KHz	CeKNKD_e_Open_20KHz			

## Supporting Table - P0324\_P0326\_P0331\_AbnormalNoise\_CylsEnabled

**Description:** Specifies which cylinders will be used for the Abnormal Noise portion of the performance diagnostics (1 = cylinder used, 0 = cylinder not used)

Notes: Used for P0324, P0326 and P0331. Cal name: KaKNKD\_b\_PerfAbnIncludeCyl. x-axis = Cylinder number in firing order (i.e. Cyl 0 = first cylinder in firing order, Cyl 1 = second cylinder in firing order....)

A cal value = 1 specifies the cylinder is used for the Abnormal Noise diagnostic. A cal value = 0 specifies the cylinder is not used. Only the first four values in the table are relavent for a four-cylinder engine and only the first six values in the table are relavent for a six-cylinder engine.

Typically, all cylinders are used. Cylinders are only excluded if the signal from that cylinder is weak and there is no separation between normal and faulted conditions (can occur if the sensor location results in poor signal-to-noise ratio for a given cylinder).

ĺ	y/x	0	1	2	3	4	5	6	7
	1	1	1	1	1	1	1	1	1

13	OBDG1	1 En	gine	Diagn	ostics

	Suppo	rting	Inform	ation
--	-------	-------	--------	-------

**Description:** EOT Sensor Cold Start Fast Fail Threshold

**Notes:** For P0196: KtEOTD\_T\_FastFailTempDiff with X Axis is defined as PowerUp Coolant Temperature

y/x	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
1	80.0	80.0	80.0	60.0	60.0	40.0	40.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0

	Suppo	rting	Inform	ation
--	-------	-------	--------	-------

# Supporting Table - P0196\_TotalAccumulatedFlow

**Description:** Total accumulated air consumed by engine since engine start as a function of powerup undefaulted Oil Temperature

**Notes:** For P0196: KtEOTD\_m\_TotalAirGramsMin

y/x	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
1	15,000	14,000	13,000	12,000	11,000	10,000	9,000	8,000	7,000	6,000	5,000	4,000	5,000	4,000	3,000	3,000	3,000

13 OBDG11	<b>Engine</b>	<b>Diagnostics</b>
-----------	---------------	--------------------

		Sı	upporting Ta	ble - P0521_R	PM_Weightin		_Axis	33,	porting information	
Description: E	Pescription: Engine RPM Weighting Factor Axis									
Notes: KnEOF	Notes: KnEOPD_n_EngSpdFilteredBpt Engine RPM Axis for use by KtEOPD_r_EngSpdWeight									
y/x	1	2	3	4	5	6	7	8	9	
1	0	500	900	1,000	2,000	3,000	3,500	4,000	5,000	

13	<b>OBDG11</b>	<b>Engine</b>	<b>Diagnostics</b>

Supporting	Information
------------	-------------

Supporting Table	- P0521	RPM	Weighting	Factor

**Description:** Engine RPM Weighting Factor

**Notes:** KtEOPD\_r\_EngSpdWeight with axis as Engine RPM defined by KnEOPD\_n\_EngSpdFilteredBpt

y/x	0	500	900	1,000	2,000	3,000	3,500	4,000	5,000
1	0.00	0.00	0.00	0.45	0.45	0.45	0.45	0.20	0.00

13 OBDG11 Engine Diagnostic	13	OBD	<b>G11</b>	<b>Engine</b>	Diagno	stics
-----------------------------	----	-----	------------	---------------	--------	-------

Supporting	Information
------------	-------------

	Supporting Table - P0521_Oil_Temp_Weighting_Factor_Axis									
Description: Oil Temperature Weighting Factor Axis										
Notes: KnEOPD	_T_EngFilteredBpt	oil temperature axis	s for use by KtEOPI	D_r_EOT_Weight						
y/x	/x 1 2 3 4 5 6 7 8 9									
1	-10	-5	60	80	90	100	120	130	140	

13 OBDG11 Engine Diagnostics	ngine Diagnostics	Е	G11	<b>OBD</b>	13
------------------------------	-------------------	---	-----	------------	----

Supporting Table - P0521_Oil_Temp_Weighting_Factor

**Description:** Oil Temperature Weighting Factor

**Notes:** KtEOPD\_r\_EOT\_Weight with axis as Oil Temperature defined by KnEOPD\_T\_EngFilteredBpt

1	y/x	-10	-5	60	80	90		120	130	140
	1	0.00	0.70	0.70	0.70	0.70	1() /()	I() /()	0.35	0.00

13 OBDG11 Engine Diagnostics	13	<b>OBD</b>	<b>G11</b>	<b>Engine</b>	Diagn	ostics
------------------------------	----	------------	------------	---------------	-------	--------

	Supporting Table - P0521_Eng_Load_Stability_Weighting_Factor_Axis									
Description	Description: Engine Load Stability Weighting Factor Axis									
Notes: Kr	nEOPD_m_EngLoa	dStabilityBpt engine	e load axis used by	/ KtEOPD_r_EngLo	oadStblWeight					
y/x	y/x 1 2 3 4 5 6 7 8 9									
1	0	5	10	20	30	50	100	200	399	

13 OBDG11 Engine Diagnos	stics
--------------------------	-------

Supporting	Information
------------	-------------

	Supporting Table - P0521_Eng_Load_Stability_Weighting_Factor									
Description: Engine Load Stability Weighting Factor										
Notes: KtEOPD_r_EngLoadStblWeight with axis as Engine Load Stability defined by KnEOPD_m_EngLoadStabilityBpt										
y/x 0 5 10 20 30 50 100 200 399										
1	1.00	1.00	1.00	0.30	0.00	0.00	0.00	0.00	0.00	

13 OBDG11 Engine Diagnostics	13	<b>OBD</b>	<b>G11</b>	<b>Engine</b>	<b>Diagnostics</b>
------------------------------	----	------------	------------	---------------	--------------------

	4.		
CIIN	norting	Intormation	٠
oub	DOLLING	Information	ı
	P		-

	Supporting Table - P0521_Eng_Oil_Pred_Weighting_Factor_Axis								
Description	Description: Oil Pressure Predicted Weighting Factor Axis								
Notes: KnE	Notes: KnEOPD_p_EngOilPredictedBpt predicted oil pressure axis used by KtEOPD_r_EOP_PredictWeight								
y/x	//x 1 2 3 4 5 6 7 8 9								
1	160	170	250	275	360	375	400	450	600

13 OBDG11 Engine Diagnostics	13	OBDG11	Engine	<b>Diagnostics</b>
------------------------------	----	--------	--------	--------------------

**Description:** Oil Pressure Predicted Weighting Factor

**Notes:** KtEOPD\_r\_EOP\_PredictWeight with axis as Predicted Oil Pressure defined by KnEOPD\_p\_EngOilPredictedBpt

y/x	160	170	250	275	360	375	400	450	600
1	0.00	1.00	1.00	1.00	1.00	1.00	1.00	0.00	0.00

#### **Fault Bundle Definitions**

Bundle Name: 5VoltReferenceA FA

P0641

Bundle Name: 5VoltReferenceB FA

P0651

Bundle Name: 5VoltReferenceMAP OOR FIT

P0697

Bundle Name: A/F Imbalance Bank1

P219A

Bundle Name: A/F Imbalance Bank2

P219B

Bundle Name: AAP\_SnsrCktFP

Naturally aspirated: P2228, P2229. Turbocharged: P0237, P0238

Bundle Name: AAP\_SnsrFA

Naturally Aspirated: P2227, P2228, P2229, P2230. Turbocharged: P0237, P0238.

Bundle Name: AAP\_SnsrTFTKO

Naturally Aspirated: P2227, P2228, P2229, P2230. Turbocharged: P0237, P0238.

Bundle Name: AAP2\_SnsrCktFP

P2228, P2229

**Bundle Name:** AAP2\_SnsrFA P2227, P2228, P2229, P2230

Bundle Name: AAP2 SnsrTFTKO

P2227, P2228, P2229, P2230

Bundle Name: AccCktLo\_FA

P2537

Bundle Name: AcceleratorPedalFailure

P2122, P2123, P2127, P2128, P2138, P0697, P06A3

Bundle Name: ACCMLostComm

U016B

Bundle Name: ACFailedOnSD

See ACCM Document

Bundle Name: ACHighSidePressSnsrCktFA

P0532, P0533

Bundle Name: ACThrmlRefrigSpdVld

See ACCM Document

Bundle Name: AfterThrottlePressTFTKO

Naturally Aspirated or Turbocharged: P0106, P0107, P0108. Supercharged: P012B, P012C, P012D.

Bundle Name: AfterThrottlePressureFA

Naturally Aspirated or Turbocharged: P0106, P0107, P0108. Supercharged: P012B, P012C, P012D.

#### **Fault Bundle Definitions**

Bundle Name: AfterThrottleVacuumTFTKO

Naturally Aspirated or Turbocharged: P0106, P0107, P0108. Supercharged: P012B, P012C, P012D.

Bundle Name: AIR System FA

P0411, P2440, P2444

Bundle Name: AIRPumpControlCircuit FA

P0418

Bundle Name: AIRSystemPressureSensor FA

P2430, P2431, P2432, P2433, P2435, P2436, P2437, P2438

Bundle Name: AIRValveControlCircuit FA

P0412

Bundle Name: AmbientAirDefault

Baro Sensor Present: P2227, P2228, P2229, P2230. No Baro Sensor Present: P0101, P0102, P0103, P0106, P0107, P0108, P0111, P0112, P0113, P0114, P0121, P0122, P012B, P012B, P012C, P012D, P0222,

P0223, P1221

Bundle Name: AmbPresDfltdStatus

Baro Sensor Present: P2227, P2228, P2229, P2230. No Baro Sensor Present: P0101, P0102, P0103, P0106, P0107, P0108, P0111, P0112, P0113, P0114, P0121, P0122, P0123, 
P012B, P012C, P012D, P0222,

P0223, P1221

Bundle Name: AmbPresSnsrCktFA

P2228, P2229

Bundle Name: AmbPresSnsrCktFP

P2228, P2229

Bundle Name: AnyCamPhaser FA

P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024

Bundle Name: AnyCamPhaser\_TFTKO

P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024

Bundle Name: BrakeBoosterSensorFA

P0556, P0557, P0558

Bundle Name: BrakeBoosterVacuumValid

P0556, P0557, P0558

Bundle Name: BSTR\_b\_ExcsvBstFA

P226B

Bundle Name: BSTR\_b\_ExcsvBstTFTKO

P226B

Bundle Name: BSTR\_b\_IC\_PmpCktFA

P023A, P023C

Bundle Name: BSTR\_b\_PCA\_CktFA

P0033, P0034, P0035, P0045, P0047, P0048, P0243, P0245, P0246, P0247, P0249, P0250

Bundle Name: BSTR b PCA CktLoFA

#### **Fault Bundle Definitions**

P0034, P0047, P0245, P0249

Bundle Name: BSTR\_b\_PCA\_CktLoTFTKO

P0034, P0047, P0245, P0249

Bundle Name: BSTR b PCA CktTFTKO

P0033, P0034, P0035, P0045, P0047, P0048, P0243, P0245, P0246, P0247, P0249, P0250

Bundle Name: BSTR b PCA FA

P0234, P0299, P0033, P0034, P0035, P0045, P0047, P0048, P0243, P0245, P0246, P2261, P0247, P0249, P0250

Bundle Name: BSTR b PCA PstnSnsrFA

P003A, P2564, P2565

Bundle Name: BSTR b PCA PstnSnsrTFTKO

P003A, P2564, P2565

Bundle Name: BSTR\_b\_PCA\_TFTKO

P0234, P0299, P0033, P0034, P0035, P0045, P0047, P0048, P0243, P0245, P0246, P2261, P0247, P0249, P0250

Bundle Name: BSTR\_b\_PresCntrlTooHiFA

P0234

Bundle Name: BSTR b PresCntrlTooHiTFTKO

P0234

Bundle Name: BSTR\_b\_PresCntrlTooLoFA

P0299

P0299

Bundle Name: BSTR\_b\_PresCntrlTooLoTFTKO

Bundle Name: BSTR\_b\_PstnCntrlFA

P166D, P166E

Bundle Name: BSTR\_b\_PstnCntrlTooHiFA

P166E

Bundle Name: BSTR b PstnCntrlTooHiTFTKO

P166E

Bundle Name: BSTR\_b\_PstnCntrlTooLoFA

P166D

Bundle Name: BSTR b PstnCntrlTooLoTFTKO

P166D

Bundle Name: BSTR\_b\_TurboBypassCktFA

P0033, P0034, P0035, P00C0, P00C1, P00C2

Bundle Name: BSTR\_b\_TurboBypassCktTFTKO

P0033, P0034, P0035, P00C0, P00C1, P00C2

Bundle Name: BSTR\_b\_TurboBypB\_CktFA

P00C0, P00C1, P00C2

Bundle Name: BSTR\_b\_TurboBypB\_CktTFTKO

#### **Fault Bundle Definitions**

P00C0, P00C1, P00C2

Bundle Name: CamLctnExhFA

P0017, P0019, P0365, P0366, P0390, P0391

Bundle Name: CamLctnIntFA

P0016, P0018, P0340, P0341, P0345, P0346

Bundle Name: CamSensor FA

P0016, P0017, P0018, P0019, P0340, P0341, P0345, P0346, P0365, P0366, P0390, P0391

Bundle Name: CamSensor TFTKO

P0016, P0017, P0018, P0019, P0340, P0341, P0345, P0346, P0365, P0366, P0390, P0391

Bundle Name: CamSensorAnyLctnTFTKO

P0016, P0017, P0018, P0019, P0340, P0341, P0345, P0346, P0365, P0366, P0390, P0391

Bundle Name: CamSensorAnyLocationFA

P0016, P0017, P0018, P0019, P0340, P0341, P0345, P0346, P0365, P0366, P0390, P0391

Bundle Name: CamSensorFA

P0016, P0017, P0018, P0019, P0340, P0341, P0345, P0346, P0365, P0366, P0390, P0391

Bundle Name: CamSensorTFTKO

P0016, P0017, P0018, P0019, P0340, P0341, P0345, P0346, P0365, P0366, P0390, P0391

Bundle Name: CatalystSysEfficiencyLoB1\_FA

P0420

Bundle Name: CatalystSysEfficiencyLoB2\_FA

P0430

Bundle Name: ClutchPstnSnsr FA

P0806, P0807, P0808

Bundle Name: ClutchPstnSnsrCktHi FA

P0808

Bundle Name: ClutchPstnSnsrCktLo FA

P0807

Bundle Name: ClutchPstnSnsrNotLearned

P080A

Bundle Name: CoolingFanSpeedTooHigh\_FA

P0495

Bundle Name: CrankCamCorrelationTFTKO

P0016, P0017, P0018, P0019

Bundle Name: CrankExhaustCamCorrelationFA

P0017, P0019

Bundle Name: CrankExhaustCamCorrFA

P0017, P0019

Bundle Name: CrankIntakeCamCorrelationFA

P0016, P0018

Bundle Name: CrankIntakeCamCorrFA

P0016, P0018

Bundle Name: CrankSensor\_FA

P0335, P0336

Bundle Name: CrankSensor\_TFTKO

P0335, P0336

Bundle Name: CrankSensorFA

P0335, P0336

Bundle Name: CrankSensorFaultActive

P0335, P0336

Bundle Name: CrankSensorTestFailedTKO

P0335, P0336

Bundle Name: CrankSensorTFTKO

P0335, P0336

Bundle Name: CylDeacSystemTFTKO

P3400

Bundle Name: CylnderDeacDriverTFTKO

P3401, P3409, P3417, P3425, P3433, P3441, P3449

Bundle Name: ECT\_Sensor\_Ckt\_FA

P0117, P0118, P0119

Bundle Name: ECT\_Sensor\_Ckt\_FP

P0117, P0118

Bundle Name: ECT\_Sensor\_Ckt\_High\_FP

P0118

Bundle Name: ECT Sensor Ckt Low FP

P0117

Bundle Name: ECT\_Sensor\_Ckt\_TFTKO

P0117, P0118, P0119

Bundle Name: ECT\_Sensor\_Ckt\_TPTKO

P0117, P0118, P0019

Bundle Name: ECT Sensor DefaultDetected

P0117, P0118, P0116, P0125

Bundle Name: ECT\_Sensor\_FA

P0117, P0118, P0116, P0125, P0128

Bundle Name: ECT\_Sensor\_Perf\_FA

P0116

Bundle Name: ECT\_Sensor\_TFTKO

P0117, P0118, P0116, P0125, P0119

Bundle Name: EGRValve\_FP

P0405, P0406, P042E

Bundle Name: EGRValveCircuit FA

P0403, P0404, P0405, P0406

Bundle Name: EGRValveCircuit TFTKO

P0403, P0404, P0405, P0406

Bundle Name: EGRValvePerformance FA

P0401, P042E

Bundle Name: EGRValvePerformance TFTKO

P0401, P042E

**Bundle Name:** EngineMetalOvertempActive

P1258

Bundle Name: EngineMisfireDetected\_FA

P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308

Bundle Name: EngineMisfireDetected\_TFTKO

P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308

Bundle Name: EngineModeNotRunTimer\_FA

P2610

Bundle Name: EngineModeNotRunTimerError

P2610

Bundle Name: EnginePowerLimited

P0068, P0122, P0123, P0222, P0223, P0601, P0604, P0606, P1682, P16F3, P1104, P2100, P2101, P2102, P2103, P2176, P160E, P160D, P0191, P0192,

P0193, P00C8, P00C9, P16A0, P16A1, P16A2

Bundle Name: EngineTorqueEstInaccurate

EngineMisfireDetected\_FA, FuelInjedtorCircuit\_FA, FuelInjedtorCircuit\_TFTKO, FuelTrimSystemB1\_FA, FuelTrimSystemB2\_FA, MAF\_SensorTFTKO, MAP\_SensorTFTKO,

EGRValuePerforamnce FA

Bundle Name: EngModeNotRunTmErr

P2610

Bundle Name: EngOilModeledTempValid

ECT Sensor FA. IAT SensorCircuitFA

Bundle Name: EngOilPressureSensorCktFA

P0522, P0523

Bundle Name: EngOilPressureSensorFA

P0521, P0522, P0523

Bundle Name: EngOilTempFA

EngOilTempSensorCircuitFA, EngOilModeledTempValid, P16F3

EngOilTempFA - Other Definitions:

P16F3 with GetXOYR\_b\_SecurityFlt(CeXOYR\_e\_EOTR\_SecurityFlt)

#### **Fault Bundle Definitions**

Bundle Name: EngOilTempSensorCircuitFA

P0197, P0198

Bundle Name: Ethanol Composition Sensor FA

P0178, P0179, P2269

Bundle Name: EvapExcessPurgePsbl\_FA

Conventional fuel system, P0442, P0455, P0458, P0496

Bundle Name: EvapPurgeSolenoidCircuit\_FA

P0443, P0458, P0459

Bundle Name: EvapReducedPurgePsbl\_FA

Only EREV sealed fuel system, P0443, P0446, P0449, P0459, P0497, P0499, P2419, P2422

Bundle Name: EvapVentSolenoidCircuit\_FA

P0449, P0498, P0499

Bundle Name: ExhaustCamSensor\_FA

P0017, P0019, P0365, P0366, P0390, P0391

Bundle Name: ExhaustCamSensor\_TFTKO

P0017, P0019, P0365, P0366, P0390, P0391

Bundle Name: ExhaustCamSensorFA

P0017, P0019, P0365, P0366, P0390, P0391

Bundle Name: ExhaustCamSensorTFTKO

P0017, P0019, P0365, P0366, P0390, P0391

**Bundle Name:** FanOutputDriver\_FA

P0480, P0481, P0482, P0691, P0692, P0693, P0694, P0695, P0696, P1485 (EREV), P1486 (EREV), P1487 (EREV)

Bundle Name: FHPD\_b\_HPC\_PresErrNeg\_FA

P228D

Bundle Name: FHPD\_b\_HPC\_PresErrNeg\_TFTKO

P228D

Bundle Name: FHPD\_b\_HPC\_PresErrPos\_FA

P228C

Bundle Name: FHPD\_b\_HPC\_PresErrPos\_TFTKO

P228C

Bundle Name: FHPD\_b\_HPC\_Windup\_TFTKO

P0089

Bundle Name: FHPD\_b\_HPC\_Windup\_FA

P0089

Bundle Name: FHPD\_b\_PumpCurr\_FA

P163A

Bundle Name: FHPD\_b\_PumpCurr\_TFTKO

P163A

Bundle Name: FHPR\_b\_FRP\_SnsrCkt\_FA

P0192, P0193

Bundle Name: FHPR\_b\_FRP\_SnsrCkt\_TFTKO

P0192, P0193

**Bundle Name:** FHPR\_b\_FRP\_SnsrPerfDiag\_FA

P0191

**Bundle Name:** FHPR\_b\_FRP\_SnsrPerfDiag\_TFTKO

P0191

Bundle Name: FHPR\_b\_PumpCkt\_FA

P0090, P0091, P0092, P00C8, P00C9, P00CA

Bundle Name: FHPR\_b\_PumpCkt\_TFTKO

P0090, P0091, P0092, P00C8, P00C9, P00CA

Bundle Name: FuelInjectorCircuit\_FA

P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0261, P0264, P0267, P0270, P0273, P0276, P0279, P0282, P0262, P0265, P0268, P0271,

PP0274, P0277, P0280, P0283, P2147, P2150, P2153, P2156, P216B, P216E, P217B, P217E, P2148, P2151, P2154, P2157, P216C, P216F, P217C, P217F,

P1248, P1249, P124A, P124B, P124C, P124D, P124E, P124F

Bundle Name: FuelInjectorCircuit\_TFTKO

P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0261, P0264, P0267, P0270, P0273, P0276, P0279, P0282, P0262, P0265, P0268, P0271,

PP0274, P0277, P0280, P0283, P2147, P2150, P2153, P2156, P216B, P216E, P217B, P217E, P2148, P2151, P2154, P2157, P216C, P216F, P217C, P217F,

P1248, P1249, P124A, P124B, P124C, P124D, P124E, P124F

Bundle Name: FuelLevelDataFault

P0461, P0462, P0463, P2066, P2067, P2068

Bundle Name: FuelTrimSystemB1 FA

P0171, P0172

Bundle Name: FuelTrimSystemB1\_TFTKO

P0171, P0172

Bundle Name: FuelTrimSystemB2\_FA

P0174, P0175

Bundle Name: FuelTrimSystemB2\_TFTKO

P0174, P0175

Bundle Name: HumidityFA

P0097, P0098, P11C2, P11C3, P2227, P2228, P2229, P2230

Bundle Name: HumTempSnsrCktFA

P0097, P0098

Bundle Name: HumTempSnsrCktFP

P0097, P0098

Bundle Name: HumTempSnsrFA

P0096, P0097, P0098, P0099

Bundle Name: IAC SystemRPM FA

#### **Fault Bundle Definitions**

P0506, P0507

Bundle Name: IAT\_ContCorrFA

P2199

Bundle Name: IAT\_SensorCircuitFA

P0112, P0113

Bundle Name: IAT SensorCircuitFP

P0112, P0113

Bundle Name: IAT\_SensorCircuitTFTKO

P0112, P0113

**Bundle Name:** IAT\_SensorFA P0111, P0112, P0113, P0114

**Bundle Name:** IAT\_SensorTFTKO P0111, P0112, P0113, P0114

Bundle Name: IgnitionOffTimer\_FA

P2610

Bundle Name: IgnitionOffTimeValid

P2610

Bundle Name: IgnitionOutputDriver\_FA

P0351, P0352, P0353, P0354, P0355, P0356, P0357, P0358

Bundle Name: IntakeCamSensor FA

P0016, P0018, P0340, P0341, P0345, P0346

Bundle Name: IntakeCamSensor TFTKO

P0016, P0018, P0340, P0341, P0345, P0346

Bundle Name: IntakeCamSensorFA

P0016, P0018, P0340, P0341, P0345, P0346

Bundle Name: IntakeCamSensorTFTKO

P0016, P0018, P0340, P0341, P0345, P0346

Bundle Name: IntkCamPhaser FA

P0010, P0011, P0020, P0021

Bundle Name: KS Ckt Perf B1B2 FA

P0324, P0325, P0326, P0327, P0328, P0330, P0332, P0333, P06B6, P06B7

Bundle Name: Long Name

Short Name

Bundle Name: LowFuelConditionDiagnostic

LowFuelConditionDiagnostic - Other Definitions:

Flag set to TRUE if the fuel level < 10.0 % AND

No Active DTCs: FuelLevelDataFault, P0462, P0463 for at least 30.0 seconds

#### **Fault Bundle Definitions**

Bundle Name: MAF\_SensorCircuitFA

P0102, P0103, P010C, P010D

Bundle Name: MAF\_SensorCircuitTFTKO

P0102, P0103, P010C, P010D **Bundle Name:** MAF\_SensorFA

P0101, P0102, P0103, P010C, P010D

**Bundle Name:** MAF\_SensorFP P0102, P0103, P010C, P010D

Bundle Name: MAF\_SensorPerfFA

P0101

Bundle Name: MAF\_SensorPerfTFTKO

P0101

**Bundle Name:** MAF\_SensorTFTKO P0101, P0102, P0103, P010C, P010D

Bundle Name: MAF\_SnsrCktFA

P121B, P121C

Bundle Name: MAF\_SnsrCktTFTKO

P121B, P121C

**Bundle Name:** MAP\_EngineVacuumStatus

P0106, P0107, P0108 Fault Active OR P0107, P0108 Fault Pending

Bundle Name: MAP SensorCircuitFA

P0107, P0108

Bundle Name: MAP\_SensorCircuitFP

P0107, P0108

Bundle Name: MAP\_SensorFA

P0106, P0107, P0108

Bundle Name: MAP\_SensorPerfFA

P0106

Bundle Name: MAP\_SensorPerfTFTKO

P0106

Bundle Name: MAP\_SensorTFTKO

P0106, P0107, P0108

Bundle Name: MnfdTempSensorCktFA

Turbocharged or Supercharged, with Humidity sensor: P112C, P112D. Turbocharged or Supercharged, without Humidity sensor: P0097, P0098. Naturally Aspirated: P0112, P0113.

Bundle Name: MnfdTempSensorCktFP

Turbocharged or Supercharged, with Humidity sensor: P112C, P112D. Turbocharged or Supercharged, without Humidity sensor: P0097, P0098. Naturally Aspirated: P0112, P0113.

Bundle Name: MnfdTempSensorCktTFTKO

Turbocharged or Supercharged, with Humidity sensor: P112C, P112D. Turbocharged or Supercharged, without Humidity sensor: P0097, P0098. Naturally Aspirated: P0112, P0113.

#### **Fault Bundle Definitions**

Bundle Name: MnfdTempSensorFA

Turbocharged or Supercharged, with Humidity sensor: P112B, P112C, P112D, P112E. Turbocharged or Supercharged, without Humidity sensor: P0096, P0097, P0098, P0099.

Naturally Aspirated: P0111, P0112, P0113, P0114.

Bundle Name: MnfdTempSensorTFTKO

Turbocharged or Supercharged, with Humidity sensor: P112B, P112C, P112D, P112E. Turbocharged or Supercharged, without Humidity sensor: P0096, P0097, P0098, P0099.

Naturally Aspirated: P0111, P0112, P0113, P0114.

Bundle Name: ModuleOffTime\_FA

P2610

Bundle Name: ModuleOffTimeErr

P2610

Bundle Name: no validity name is assigned to this fault bundle

Bundle Name: OAT AmbientFilteredFA

ECM OAT: P0071, P0072, P0073, P0074, EngModeNotRunTmErr, VehicleSpeedSensor\_FA, IAT\_SensorFA, ECT\_Sensor\_DefaultDetected, MAF\_SensorFA. VIMC OAT: P0072, P0073, EngModeNotRunTmErr, VehicleSpeedSensor FA, ECT Sensor DefaultDetected. IAT-Based OAT: not applicable. All other cases: not applicable.

Bundle Name: OAT\_AmbientSensorFA

ECM OAT: P0071, P0072, P0073, P0074. VIMC OAT: P0071, P0072, P0073, EngModeNotRunTmErr, VehicleSpeedSensor\_FA, ECT\_Sensor\_DefaultDetected. IAT-Based OAT: not applicable.

Bundle Name: OAT PtEstFiltFA

ECM OAT: P0071, P0072, P0073, P0074, EngModeNotRunTmErr, VehicleSpeedSensor\_FA, IAT\_SensorFA, ECT\_Sensor\_DefaultDetected, MAF\_SensorFA. VIMC OAT: P0072, P0073, EngModeNotRunTmErr, VehicleSpeedSensor\_FA, ECT\_Sensor\_DefaultDetected. IAT-Based OAT: VehicleSpeedSensor\_FA, IAT\_SensorFA, MAF\_SensorFA. All other cases: EngModeNotRunTmErr, VehicleSpeedSensor\_FA, IAT\_SensorFA, ECT\_Sensor\_DefaultDetected.

Bundle Name: OAT PtEstRawFA

ECM OAT: P0071, P0072, P0073, P0074. VIMC OAT: P0071, P0072, P0073, EngModeNotRunTmErr, VehicleSpeedSensor\_FA, ECT\_Sensor\_DefaultDetected. IAT-Based OAT: IAT SensorFA. All other cases: IAT SensorFA. ECT Sensor DefaultDetected.

Bundle Name: OilPmpCktFA

P06DA, P06DB, P06DC

OilPmpCktFA - Other Definitions:

**Output Driver Codes** 

Bundle Name: OilPmpFA

P06DA, P06DB, P06DC, P06DD, P06DE

OilPmpFA - Other Definitions:

FA only for Output Driver and rationality

Bundle Name: OilPmpStuckHigh

P06DA, P06DB, P06DD

OilPmpStuckHigh - Other Definitions:

TFTKO and FA

Bundle Name: OilPmpStuckLow

P06DC, P06DE

OilPmpStuckLow - Other Definitions:

TFTKO and FA

Bundle Name: OilPmpTFTKO

P06DA, P06DB, P06DC, P06DD, P06DE

OilPmpTFTKO - Other Definitions:

TFTKO only for Output Driver and rationality

Bundle Name: PowertrainRelayFault

P1682

Bundle Name: PowertrainRelayStateOn\_Error

P0685

Bundle Name: PowertrainRelayStateOn\_FA

P0685

Bundle Name: PPS1\_OutOfRange

P2122, P2123

Bundle Name: PPS1\_OutOfRange\_Composite

P2122, P2123, P06A3

Bundle Name: PPS2\_OutOfRange

P2127, P2128

Bundle Name: PPS2\_OutOfRange\_Composite

P2127, P2128, P0697

Bundle Name: SCIAP\_SensorCircuitFA

P012C, P012D

Bundle Name: SCIAP\_SensorCircuitFP

P012C. P012D

Bundle Name: SCIAP\_SensorFA

P012B, P012C, P012D

Bundle Name: SCIAP\_SensorPerfFA

P012B

Bundle Name: SCIAP\_SensorPerfTFTKO

P012B

Bundle Name: SCIAP\_SensorTFTKO

P012B, P012C, P012D

Bundle Name: SuperchargerBypassValveFA

P2261

Bundle Name: SystemVoltageHigh\_FA

P0563

Bundle Name: SystemVoltageLow\_FA

P0562

Bundle Name: TC\_BoostPresSnsrCktFA

P0237, P0238

Bundle Name: TC\_BoostPresSnsrFA

P0236, P0237, P0238

Bundle Name: TCM\_EngSpdReqCkt

P150C

Bundle Name: THMR AHV FA

P2681, P26A3, P26A6, P26A7, P26A9 **Bundle Name:** THMR\_AWP\_AuxPumpFA

B2920, B2923, B2922

Bundle Name: THMR\_ECT\_Sensor\_Ckt\_FA

P0116, P0117, P0118, P00B6

Bundle Name: THMR\_Insuff\_Flow\_FA

P00B7

Bundle Name: THMR\_RCT\_Sensor\_Ckt\_FA

P00B3, P00B4

Bundle Name: THMR SWP\_Control\_FA

P261D, P261A, P261C

Bundle Name: THMR\_Therm\_Control\_FA

P0597, P0598, P0599

Bundle Name: ThrotTempSensorFA

Turbocharged or Supercharged, with Humidity sensor: P112B, P112C, P112D, P112E. Turbocharged or Supercharged, without Humidity sensor: P0096, P0097, P0098, P0099.

Naturally Aspirated: P0111, P0112, P0113, P0114.

Bundle Name: ThrotTempSensorTFTKO

Turbocharged or Supercharged, with Humidity sensor: P112B, P112C, P112D, P112E. Turbocharged or Supercharged, without Humidity sensor: P0096, P0097, P0098, P0099.

Naturally Aspirated: P0111, P0112, P0113, P0114.

Bundle Name: ThrottlePositionSnsrPerfFA

P0121

Bundle Name: ThrottlePositionSnsrPerfTFTKO

P0121

Bundle Name: TIAP\_SensorPerfFA

P0236

Bundle Name: TPS FA

P0122, P0123, P0222, P0223, P2135

Bundle Name: TPS\_FaultPending

P0122, P0123, P0222, P0223, P2135

Bundle Name: TPS\_Performance\_FA

P0068, P0121, P1104, P2100, P2101, P2102, P2103

Bundle Name: TPS\_Performance\_TFTKO

P0068, P0121, P1104, P2100, P2101, P2102, P2103

Bundle Name: TPS\_TFTKO

P0122, P0123, P0222, P0223, P2135

Bundle Name: TPS ThrottleAuthorityDefaulted

P0068, P0122, P0123, P0222, P0223, P16F3, P1104, P2100, P2101, P2102, P2103, P2135

Bundle Name: TPS1\_OutOfRange\_Composite

P0122, P0123, P06A3

Bundle Name: TPS2 OutOfRange Composite

P0222, P0223, P06A3

**Bundle Name:** Trans Output Rotations Rolling Count Validity

Bundle Name: Transfer Pump is Commanded On

#### Transfer Pump is Commanded On - Other Definitions:

Fuel Volume in Primary Fuel Tank < 0.0 liters AND

Fuel Volume in Secondary Fuel Tank ≥ 0.0 liters AND

Transfer Pump on Time < P0461, P2066, P2636: Transfer Pump Enable (see supporting table for numeric value) AND

Transfer Pump had been Off for at least 0.0 seconds AND

Evap Diagnostic (Purge Valve Leak Test, Large Leak Test, and Waiting for Purge) is not running AND

Engine Running

Bundle Name: Transmission Actual Gear Validity

Bundle Name: Transmission Engaged State Validity

**Bundle Name:** Transmission Estimated Gear Validity

Bundle Name: Transmission Gear Ratio Validity

Bundle Name: Transmission Gear Selector Position Validity

**Bundle Name:** Transmission Oil Temperature Validity

Bundle Name: Transmission Output Shaft Angular Velocity Validity

Bundle Name: Transmission Overall Actual Torque Ratio Validity

Bundle Name: Transmission Overall Estimated Torque Ratio Validity

Bundle Name: Transmission Shift Lever Position Validity

	13 OBDG11 Engine Diagnostics	Supporting Information
	Fault Bundle Definitions	
Bundle Name: Transmission Turbine Angular Velocity Validity		
Bundle Name: TransmissionEngagedState_FA		
MYD/MYC/MYB:, P182E, P1915		
Bundle Name: TransmissionGearDefaulted		
MYD/MYC/MYB:, P182E, P1915		
Bundle Name: VehicleSpeedSensor_FA		
P0502, P0503, P0722, P0723		_
Bundle Name: VehicleSpeedSensorError		

P0502, P0503, P0722, P0723

# 13 OBDG11 Engine Diagnostics HD OBD Component System Table

STATE OF CALIFORNIA California Environmental Protection Agency AIR RESOURCES BOARD MSCD/ESB-118 (NEW 1/11)

			HD OBD G	asoline Monitor	ring Requireme	nts Checklist				
Component/System	MONITORING RE	QUIREMENTS: Lis	t the DTC of the mo			mode:				
	(f)(1.2.1)(A)	(f)(1.2.1)(C)	(f)(1.2.2)	(f)(1.2.3)	(f)(1.2.4)	(f)(1.2.5)				
Fuel System	Emission Threshold		Adaptive Limits Reached	Secondary Fuel Trim Emission Threshold	Fails to Enter Closed Loop	Fails to Enter Closed Loop After Auto Engine Restart				
	P0171, P0172, P0174, P0175	P0300	P0171, P0172, P0174, P0175	P2096, P2097, P2098, P2099	NA	NA	NA	NA	NA	NA
	(f)(2.2.1)	(f)(2.2.2)	(f)(2.2.2)							
Misfire	Catalyst Damage Misfire		FTP Level Misfire: 4 x 1000-revs							
	P0300	P0300	P0300	NA	NA	NA	NA	NA	NA	NA
	(f)(3.2.1)		(f)(3.2.1)							
EGR	Low Flow Emission Threshold	High Flow Emission	Functional Monitor in Lieu of Emission Threshold							
	NA		NA	NA	NA	NA	NA	NA	NA	NA
	(f)(4.2.1)(A)		(f)(4.2.2)(A)	(f)(4.2.2)(B)						
Cold Start Strategy	Emission Threshold	in Lieu of	Phase-in Single Element Functional Monitor	Phase-in Emission Threshold						
	NA		NA	NA	NA	NA	NA	NA	NA	NA
Secondary Air	(f)(5.2.1)	(f)(5.2.2)	(f)(5.2.3)							
	Insufficient Flow Emission Threshold		Functional Monitor in Lieu of Emission Threshold							
	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
	(f)(6.2.1)									
Catalyst	Conversion Efficiency									
	P0420, P0430	NA	NA	NA	NA	NA	NA	NA	NA	NA
	(f)(7.2.2)(A)	(f)(7.2.2) (B)								
Evaporative System	Purge Flow	0.150" Leak Check								
	P0455	P0442	NA	NA	NA	NA	NA	NA	NA	NA
	(f)(8.2.1)(A)	(f)(8.2.1)(B)	(f)(8.2.1)(B)	(f)(8.2.1)(B)	(f)(8.2.1)(C)	(f)(8.2.1)(D)	(f)(8.2.3)(A)	(f)(8.2.3)(B)		
Upstream Exhaust Gas Sensor	Emission Threshold		Out-of-Range High		Feedback: Slow/ fails to Enter, Default OL	Sufficient for Other Diagnostics	Heater	Heater Circuit Continuity		
	P0133, P0153, P0133, P0153, P015A, P015B, P015C, P015D	P0134, P0154	P0132, P0152	P0131, P0151	NA NA	P0131, P0151, P0132, P0152, P0134, P0154, P0133, P0153, P015A, P015B, P015C, P015D	P0053, P0059, P0135, P0155	P0030, P0050	NA	NA
	(f)(8.2.2)(A)	(f)(8.2.2)(B)	(f)(8.2.2)(D)	(f)(8.2.2)(D)	(f)(8.2.2)(E)	(f)(8.2.2)(C)	(f)(8.2.3)(A)	(f)(8.2.3)(B)		

Supporting Information
------------------------

# 13 OBDG11 Engine Diagnostics HD OBD Component System Table

	Y			Y		r		1	Y	1
Downstream Exhaust Gas Sensor	Emission			Out-of-Range Low				Heater Circuit		
Downstream Exhaust Gas Sensor	I hreshold		High		fails to Enter,	Other Diagnostics	Performance	Continuity		
				<del></del>	Default OL					
	P013A, P013B,		, , , , ,	, ,	P0054, P0060,			P0036, P0056	NA	NA
	P013C, P013D,		P2273				P0141, P0161			
	P013E, P013F, P014A, P014B				P0138, P0158, P0140, P0160,	P013E, P013F, P014A, P014B,				
	F014A, F014B				P0141, P0161,	P2270, P2271,				
					P013A, P013B,	P2272, P2273				
					P013C, P013D,	,				
					P013E, P013F,					
					P014A, P014B,					
					P2270, P2271,					
				<del></del>	P2272, P2273					
\	(f)(9.2.1)	(f)(9.2.3)	(f)(9.2.3)	(f)(9.2.3)						
VVT System	Target Error			Slow Response						
	Emission	Functional Monitor		Functional Monitor						
	Threshold			in Lieu of						
		Emission Threshold		Emission Threshold						
	P0011		P0011		NΙΔ	NA	NA	NA	NA	NIA
					NA (A C C) (A)	ļ			INA	NA
Engine Cooling System	(g)(1.2.1)(A)				(g)(1.2.2)(A)		(g)(1.2.2)(C)	(g)(1.2.2)(D)		
Engine Cooling Cystem	Time to Reach				ECT Out-of-			ECT Stuck Above		
	Threshold Temp	Threshold Temp		Range High	Range Low		Highest Minimum	Lowest Maximum		
	D0400 D0404	NIA	D0440 D0440	D0440 D00D4	D0447 D00D0		<u> </u>	Enable Temp	N.A.	NIA.
	P0128, P2181		P0118, P0119, P00B4	P0118, P00B4	P0117, P00B3	NA	P0128, P00B6	P0116, P00B6	NA	NA
	(a)(2,2,2)		F 0 0 D 4							
Crankcase Ventilation	(g)(2.2.2)									
	Disconnection	NIA	NI A	NIA.	NIA.	la La	NI A	NIA.	NIA.	NIA.
	P0106, P0171, P0174, P0300	NA	NA	NA	NA	NA	NA	NA	NA	NA

# 13 OBDG11 Engine Diagnostics HD OBD Monitor System Table

STATE OF CALIFORNIA California Environmental Protection Agency AIR RESOURCES BOARD MSCD/ESB-118 (NEW 1/11)

#### **HD OBD Gasoline Monitoring Requirements Checklist**

			HD OBD G	asoline Monito	ring Requireme	ents Checklist				
		List the	e DTC of the compre	ehensive componer	nt monitor that dete	cts the following fail	ure mode:			
Monitor/System	Input Out-of- Range High	Input Out-of- Range Low	Input Open Circuit	Input Rationality Low	Input Rationality High	Input Other Rationality	Output Functional	Output Shorted High	Output Shorted Low	Output Open Circuit
	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
A/C Clutch Relay Control	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
A/C High Side	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
AIR Pressure Sensor Bank 1	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
AIR Pressure Sensor Bank 2	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
AIR Pump Command Bank 1	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
AIR Pump Solenoid Relay	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Barometric Pressure	P2229	P2228	P2228	P2227	P2227	P2230	NA	NA	NA	NA
Brake Booster Pressure	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Brake Pedal Postion	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
CAM Phase Control Bank 1 Exhaust	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
CAM Phase Control Bank 1 Intake	NA	NA	NA	NA	NA	NA	P0011	P2089	P2088	P0010
CAM Phase Control Bank 2 Exhaust	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
CAM Phase Control Bank 2 Intake	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Cam Position Bank1 Exhaust	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Cam Position Bank1 Intake	P0340	P0340	P0340	P0341	P0341	P0016	NA	NA	NA	NA
Cam Position Bank2 Exhaust	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Cam Position Bank2 Intake	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Camshaft Position Output Signal	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Canister Vent Solenoid	NA	NA	NA	NA	NA	NA	P0446	NA	P0449	P0449
Charge Intercooler	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Clutch Pedal Position	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Control Canister Purge	NA	NA	NA	NA	NA	NA	P0496	NA	P0443	P0443
Crank Position	P0335	P0335	P0335	P0336	P0336	NA	NA	NA	NA	NA
Crankshaft Position Output Signal	NA	NA	NA	NA	NA	NA		NA	NA	NA
Cylinder Deactivate A	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Cylinder Deactivate B	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Cylinder Deactivate C	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Cylinder Deactivate D	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
EGR Valve Position	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
ESTA	NA	NA	NA	NA	NA	NA	NA	P0351	P0351	P0351
EST B	NA	NA	NA	NA	NA	NA	NA	P0352	P0352	P0352
EST C	NA	NA	NA	NA	NA	NA	NA	P0353	P0353	P0353
EST D	NA	NA	NA	NA	NA	NA	NA	P0354	P0354	P0354
EST E	NA	NA	NA	NA	NA	NA	NA	P0355	P0355	P0355
EST F	NA	NA	NA	NA	NA	NA	NA	P0356	P0356	P0356
EST G	NA	NA	NA	NA	NA	NA	NA	P0357	P0357	P0357
EST H	NA	NA	NA	NA	NA	NA	NA	P0358	P0358	P0358
ETC Motor Close	NA	NA	NA	NA	NA	NA	P2101, P1516, P2176	NA	NA	NA
ETC Motor Open	NA	NA	NA	NA	NA	NA	P2101, P1516,	NA	NA	NA

					r System Ta				Capportii	ig illiorillati
			IID C		i Oysteili la	IDIC				
							P2176			
Fan Control #1	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Fan Control #2	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Fan Control #3	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Fuel Composition	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
el Economy Mode Switch Circuit	NA NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Fuel Injector A	NA	NA	NA	NA	NA	NA	NA	P0262	P0201, P0261	P0201, P0261
Fuel Injector B	NA	NA	NA	NA	NA	NA	NA	P0265	P0202, P0264	P0202, P0264
Fuel Injector C	NA	NA	NA	NA	NA	NA	NA	P0268	P0203, P0267	P0203, P0267
Fuel Injector D	NA	NA	NA	NA	NA	NA	NA	P0271	P0204, P0270	P0204, P0270
Fuel Injector E	NA	NA	NA	NA	NA	NA	NA	P0274	P0205, P0273	P0205, P0273
Fuel Injector F	NA	NA	NA	NA	NA	NA	NA	P0277	P0206, P0276	P0206, P0276
Fuel Injector G	NA	NA	NA	NA	NA	NA	NA	P0280	P0207, P0279	P0207, P0279
Fuel Injector H	NA	NA	NA	NA	NA	NA	NA	P0283	P0208, P0282	P0208, P0282
Fuel Level	P0463	P0462	P0463	NA	NA	P0461, P0464	NA	NA	NA	NA
Fuel Level 2	NA	NA	NA	NA	NA	P0464	NA	NA	NA	NA
Fuel Pump 2	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Fuel Pump Control	NA	NA	NA	NA	NA	NA	NA	NA	P0628	NA
Fuel Tank Vapor Pressure	P0453	P0452	P0452	NA	NA	P0451, P0454	NA	NA	NA	NA
Humidity	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Hybrid Control Torque Request Circuit	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Ignition Off Timer	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
IMTV Position	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Intake Air Temperature	P0113	P0112	P0113	P0111	P0111	P0114	NA	NA	NA	NA
Intake Air Temperature 2	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Intake Air Temperature 3	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
ntake Manifold Runner Control	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Intake Manifold Tuning Valve Control	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Knock Internal Circuit	NA	NA	NA	NA	NA	P06B6	NA	NA	NA	NA
Knock Internal Circuit #2	NA	NA	NA	NA	NA	P06B7	NA	NA	NA	NA
Knock Sensor-Flat	P0328	P0327	P0325	P0326	P0324, P0326	NA	NA	NA	NA	NA
Knock Sensor-Flat #2	P0333	P0332	P0330	P0331	P0324, P0331	NA	NA	NA	NA	NA
Malfunction Indicator Lamp	NA	NA	NA	NA	NA	NA	NA	NA	P0650, P263A	P0650, P263A
Manifold Absolute Pressure	P0108	P0107	P0107	P0106	P0106	P1101	NA	NA	NA	NA
Mass Air Flow	P0103	P0102	P0102	P0101	P0101	P1101	NA	NA	NA	NA
Mass Air Flow 2	NA	NA	NA NA	NA	NA	P1101	NA	NA	NA	NA
Mass Air Flow Supply Voltage	NA	NA NA	NA	NA	NA	NA	NA	NA NA	NA NA	NA
Outside Air Temperature	NA	NA	NA NA	NA	NA	NA	NA	NA NA	NA	NA
Pedal Position 1	P2123	P2122	P2122	P2138	P2138	NA	NA	NA NA	NA	NA
Pedal Position 2	P2128	P2127	P2127	P2138	P2138	NA			NA NA	NA
Performance Traction Torque Request Circuit	NA NA	NA	NA NA	NA NA	NA NA	NA NA				
Powertrain Relay Control	NA	NA	NA	NA	NA	NA	NA	P0687	P0685, P0686	P0685, P0686
Powertrain Relay Feedback	NA	NA NA	NA	NA	P0690	NA	NA	NA	NA	NA
Reverse Inhibit	NA	NA NA	NA	NA	NA	NA	NA	NA NA	NA NA	NA
SENT Communication A Circuit	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
(Throttle)										
SIDI High Pressure Pump	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
SIDI High Pressure Sensor	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA

13	OBD	G11	<b>Engine</b>	Diagn	ostics
			3		

13 OBDG11 Engine Diagnostics								Supporting Informatio		
HD OBD Monitor System Table										
SIDI High Pressure Start	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
SIDI Ignition Module Supply Voltage - Group 1	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
SIDI Ignition Module Supply Voltage - Group 2	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
SIDI Injector Driver Circuit	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Skip Shift Solenoid	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Starter Relay Control	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Supercharger Bypass Control	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Supercharger Inlet Pressure	NA	NA	NA	NA	NA	P1101	NA	NA	NA	NA
System Voltage	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Throttle Position 1	P0123	P0122	P0122	P2135	P2135	P0068, P0121, P2119	NA	NA	NA	NA
Throttle Position 2	P0223	P0222	P0223	P2135	P2135	P0068, P0121, P2119	NA	NA	NA	NA
Traction Control Torque Request Circuit	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Transmission Control Torque Request Circuit	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Transmission Mode Switch	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Fransmission Output Speed Hi : Replicated TOS Input	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Turbocharger Boost Pressure	NA	NA	NA	NA	NA	P1101	NA	NA	NA	NA
Turbocharger Bypass	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Turbocharger Bypass B	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
rbocharger Wastegate B Control	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
urbocharger Wastegate Control	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Two Stage Oil Pump	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Vehicle Speed	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Vehicle Speed Sensor B	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA