

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Intake Camshaft Actuator Solenoid Circuit – Bank 1	P0010	Detects a VVT system error by monitoring the circuit for electrical integrity	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		System supply voltage is within limits Output driver is commanded on, Ignition switch is in crank or run position	> 11 Volts, and < 18 Volts	20 failures out of 25 samples 250 ms /sample, continuous	Type B 2 trips
Intake Camshaft System Performance – Bank 1	P0011	Detects a VVT system error by comparing the desired and actual cam positions when VVT is activated	Camshaft position error [absolute value of (desired position - actual position)] is compared to thresholds to determine if excessive	(Intake cam Bank 1)Cam Position Error > KtPHSD_phi_CamPosErrorLimc1 1 Deg (see Supporting Table)	The following DTC's are NOT active: P0010 IntkCMP B1 Circuit P0340, P0341, Intake B1 Cam sensors P0335, P0336, Crank sensors P0016, P0017, P0018, P0019 Cam to crank rationality Engine is running VVT is enabled Desired camshaft position > 0 Power Take Off (PTO) not active	System Voltage > 11 Volts, and System Voltage < 18 Volts Desired cam position cannot vary more than 7.5 Cam Deg for at least KtPHSD_t_StablePositionTimec1 seconds (see Supporting Table)	200 failures out of 1000 samples 100 ms /sample	Type B 2 trips
Crankshaft Position (CKP)-Camshaft Position (CMP) Correlation Bank 1 Sensor A	P0016	Detects cam to crank misalignment by monitoring if cam sensor pulse for bank 1 sensor A occurs during the incorrect crank position	2 cam sensor pulses more than - 11 crank degrees before or 11 crank degrees after nominal position in one cam revolution.		Crankshaft and camshaft position signals are synchronized Engine is Spinning Cam phaser is in "parked" position No Active DTCs: Time since last execution of diagnostic	P0335, P0336 P0340, P0341 5VoltReferenceA_FA 5VoltReferenceB_FA	2 failures out of 3 tests. A failed test is 4 failures out of 5 samples. There is a delay after the first failed test to allow the camshaft position to return to the park position. This time is defined by the table "Cam Correlation Oil Temperature Threshold". One sample per cam rotation	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Output driver is commanded on, Ignition switch is in crank or run position		250 ms /sample, continuous	
O2S Heater Control Circuit Bank 1 Sensor 1	P0030	This DTC checks the Heater Output Driver circuit for electrical integrity.	Voltage low during driver open state (indicates short-to-ground or open circuit) or voltage high during driver closed state (indicates short to voltage).		Ign Switch position Ignition Voltage Engine Speed	= Crank or Run position 11.0 volts < Ign Voltage < 18.0 volts > 400 RPM	20 failures out of 25 samples 250 ms /sample Continuous	Type B 2 trips
O2S Heater Control Circuit Bank 1 Sensor 2	P0036	This DTC checks the Heater Output Driver circuit for electrical integrity.	Voltage low during driver open state (indicates short-to-ground or open circuit) or voltage high during driver closed state (indicates short to voltage).		Ign Switch position Ignition Voltage Engine Speed	= Crank or Run position 11.0 volts < Ign Voltage < 18.0 volts > 400 RPM	20 failures out of 25 samples 250 ms /sample Continuous	Type B 2 trips
O2S Heater Control Circuit Bank 2 Sensor 1	P0050	This DTC checks the Heater Output Driver circuit for electrical integrity.	Voltage low during driver open state (indicates short-to-ground or open circuit) or voltage high during driver closed state (indicates short to voltage).		Ign Switch position Ignition Voltage Engine Speed	= Crank or Run position 11.0 volts < Ign Voltage < 18.0 volts > 400 RPM	20 failures out of 25 samples 250 ms /sample Continuous	Type B 2 trips
O2S Heater Control Circuit Bank 2 Sensor 2	P0056	This DTC checks the Heater Output Driver circuit for electrical integrity.	Voltage low during driver open state (indicates short-to-ground or open circuit) or voltage high during driver closed state (indicates short to voltage).		Ign Switch position Ignition Voltage Engine Speed	= Crank or Run position 11.0 volts < Ign Voltage < 18.0 volts > 400 RPM	20 failures out of 25 samples 250 ms /sample Continuous	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
HO2S Heater Resistance Bank 1 Sensor 1	P0053	Detects an oxygen sensor heater having an incorrect or out of range resistance value.	Learned Heater Resistance.	Calculated Heater Resistance < 2.8 ohms -OR- Calculated Heater Resistance > 9.5 ohms	No Active DTC's Coolant – IAT Engine Soak Time	ECT_Sensor_FA P2610 IAT_SensorFA < 8.0 °C > 28800 seconds -30.0 °C ≤ Coolant ≤ 45.0 °C Ignition Voltage < 18.0 volts Engine Run time ≥ 3.00 seconds	Once per valid cold start	Type B 2 trips
HO2S Heater Resistance Bank 1 Sensor 2	P0054	Detects an oxygen sensor heater having an incorrect or out of range resistance value.	Learned Heater Resistance.	Calculated Heater Resistance < 4.1 ohms -OR- Calculated Heater Resistance > 10.8 ohms	No Active DTC's Coolant – IAT Engine Soak Time	ECT_Sensor_FA P2610 IAT_SensorFA < 8.0 °C > 28800 seconds -30.0 °C ≤ Coolant ≤ 45.0 °C Ignition Voltage < 18.0 volts Engine Run time ≥ 3.00 seconds	Once per valid cold start	Type B 2 trips
HO2S Heater Resistance Bank 2 Sensor 1	P0059	Detects an oxygen sensor heater having an incorrect or out of range resistance value.	Learned Heater Resistance.	Calculated Heater Resistance < 4.1 ohms -OR- Calculated Heater Resistance > 10.8 ohms	No Active DTC's Coolant – IAT Engine Soak Time	ECT_Sensor_FA P2610 IAT_SensorFA < 8.0 °C > 28800 seconds -30.0 °C ≤ Coolant ≤ 45.0 °C Ignition Voltage < 18.0 volts Engine Run time ≥ 3.00 seconds	Once per valid cold start	Type B 2 trips
HO2S Heater Resistance Bank 2 Sensor 2	P0060	Detects an oxygen sensor heater having an incorrect or out of range resistance value.	Learned Heater Resistance.	Calculated Heater Resistance < 0.0 ohms -OR- Calculated Heater Resistance > 0.0 ohms	No Active DTC's Coolant – IAT Engine Soak Time	ECT_Sensor_FA P2610 IAT_SensorFA < 8.0 °C > 28800 seconds -30.0 °C ≤ Coolant ≤ 45.0 °C Ignition Voltage < 18.0 volts Engine Run time ≥ 3.00 seconds	Once per valid cold start	Type B 2 trips
MAP / MAF / Throttle Position Correlation	P0068	Detect when MAP and MAF do not match estimated engine airflow as established by the TPS	1) Difference between measured MAP and estimated MAP exceeds threshold (kPa), or P0651 (5 Volt Ref), or P0107 (MAP circuit low), or P0108 (MAP circuit high) have	Table, f(TPS). See supporting tables	Engine Speed	> 800 RPM	Continuously fail MAP and MAF portions of diagnostic for 0.1875 ms	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			<p>failed this key cycle, then MAP portion of diagnostic fails</p> <p>2) Difference between measured MAF and estimated MAF exceed threshold (grams/sec), or P0102 (MAF circuit low), or P0103 (MAF circuit hi) have failed this key cycle, or battery voltage < 10.0 volts, then MAF portion of diagnostic fails</p>	<p>Table, f(TPS). See supporting tables</p>		<p>Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions</p>	<p>Continuous in Primary processor</p>	
Manifold Absolute Pressure Barometric Pressure Correlation (naturally aspirated applications)	P0069	Compares baro sensor to the calculated baro estimate (part throttle calculation or unthrottled MAP)	<p>Difference between baro sensor reading and estimated baro</p> <p>when distance since last estimated baro update</p> <p>OR</p> <p>Difference between baro sensor reading and estimated baro</p> <p>when distance since last estimated baro update</p>	<p>> 4015.0 kPa</p> <p><= 2.00 kilometers</p> <p>> 2025.0 kPa</p> <p>> 2.00 kilometers</p>	<p>No Active DTCs:</p> <p>Engine Run Time</p>	<p>AmbientAirPressCktFA ECT_Sensor_Ckt_FA</p> <p>IAT_SensorFA MAF_SensorFA AfterThrottlePressureFA NA TPS_FA TPS_Performance_FA</p> <p>VehicleSpeedSensor_FA</p> <p>> 30.00 seconds</p>	<p>20 failures out of 25 samples</p> <p>1 sample every 250 msec</p>	Type B 2 trips
Mass Air Flow System Performance	P0101	Determines if the MAF sensor is stuck within the normal operating range	<p>Filtered Throttle Model AND ABS(Measured Flow – Modeled Air Flow) Filtered AND</p>	<p><= 150 kPa/(g/s)</p> <p>> 10 grams/sec</p>	<p>Engine Speed Engine Speed Coolant Temp Coolant Temp Intake Air Temp Intake Air Temp</p>	<p>>= 450 RPM <= 8000 RPM > -7 Deg C < 125 Deg C > -7 Deg C < 125 Deg C</p>	<p>Continuous</p> <p>Calculation are performed every 12.5 msec</p>	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			ABS(Measured MAP – MAP Model 2) Filtered	> 15.0 kPa	Minimum total weight factor (all factors multiplied together) No Active DTCs:	<p>< 0.00</p> <p>Filtered Throttle Model multiplied by TPS Residual Weight Factor based on RPM</p> <p>Modeled Air Flow multiplied by MAF Residual Weight Factor based on RPM and MAF Residual Weight Factor Based on MAF Estimate</p> <p>MAP Model 2 multiplied by MAP2 Residual Weight Factor based on RPM</p> <p>See table "IFRD Residual Weighting Factors".</p> <p>MAP_SensorCircuitFA EGRValve_FP EGRValvePerformance_FA</p> <p>MAF_SensorCircuitFA CrankSensor_FA ECT_Sensor_FA ECT_Sensor_Ckt_FA</p> <p>IAT_SensorFA IAT_SensorFP CylDeacSystemTFTKO</p>		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Mass Air Flow Sensor Circuit Low Frequency	P0102	Detects a continuous short to low or a open in either the signal circuit or the MAF sensor	MAF Output	<= 1126 Hertz (~-0.90 g/s)	Engine Run Time Engine Speed Ignition Voltage Above criteria present for a period of time	> 1.0 seconds >= 300 RPM >= 9.0 Volts >= 1.0 seconds	400 failures out of 500 samples 1 sample every cylinder firing event	Type B 2 trips
Mass Air Flow Sensor Circuit High Frequency	P0103	Detects a high frequency output from the MAF sensor	MAF Output	>= 12450 Hertz (~ 583 g/s)	Engine Run Time Engine Speed Ignition Voltage Above criteria present for a period of time	> 1.0 seconds >= 300 RPM >= 9.0 Volts >= 1.0 seconds	400 failures out of 500 samples 1 sample every cylinder firing event	Type B 2 trips
Manifold Absolute Pressure Sensor Performance	P0106	Determines if the MAP sensor is stuck within the normal operating range	Filtered Throttle Model AND ABS(Measured MAP – MAP Model 1) Filtered AND ABS(Measured MAP – MAP Model 2) Filtered	<= 150 kPa/(g/s) > 15.0 kPa > 15.0 kPa	Engine Speed Engine Speed Coolant Temp Coolant Temp Intake Air Temp Intake Air Temp Minimum total weight factor (all factors multiplied together) No Active DTCs:	>= 450 RPM <= 8000 RPM > -7 Deg C < 125 Deg C > -7 Deg C < 125 Deg C < 0.00 Filtered Throttle Model multiplied by TPS Residual Weight Factor based on RPM MAP Model 1 multiplied by MAP1 Residual Weight Factor based on RPM MAP Model 2 multiplied by MAP2 Residual Weight Factor based on RPM See table "IFRD Residual Weighting Factors". MAP_SensorCircuitFA EGRValve_FP EGRValvePerformance_FA	Continuous Calculations are performed every 12.5 msec	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						MAF_SensorCircuitFA CrankSensorFA ECT_sensor_FA ECT_Sensor_FP IAT_SensorFA IAT_SensorCircuitFP CylDeacSystemTFTKO		
Manifold Absolute Pressure Sensor Circuit Low	P0107	Detects a continuous short to low or open in either the signal circuit or the MAP sensor.	MAP Voltage	< 3.0 % of 5 Volt Range (0.2 Volts = 3.5 kPa)	Continuous		320 failures out of 400 samples 1 sample every 12.5 msec	Type B 2 trips
Manifold Absolute Pressure Sensor Circuit High	P0108	Detects an open sensor ground or continuous short to high in either the signal circuit or the MAP sensor.	MAP Voltage	> 90.0 % of 5 Volt Range (4.5 Volts = 115.3 kPa)	Continuous		320 failures out of 400 samples 1 sample every 12.5 msec	Type B 2 trips
Intake Air Temperature Sensor Circuit Low (High Temperature)	P0112	Detects a continuous short to ground in the IAT signal circuit or the IAT sensor	Raw IAT Input	< 45 Ohms (~150 deg C)	Engine Run Time Coolant Temp Vehicle Speed No Active DTCs:	> 10.0 seconds < 150 deg C >= 0 KPH ECT_Sensor_Ckt_FA ECT_Sensor_Ckt_FP VehicleSpeedSensorError	50 failures out of 63 samples 1 sample every 100 msec	Type B 2 trips
Intake Air Temperature Sensor Circuit High (Low Temperature)	P0113	Detects an open circuit in the IAT signal circuit or the IAT sensor	Raw IAT Input	> 420000 Ohms (~-60 deg C)	Engine Run Time Coolant Temp Vehicle Speed Engine Air Flow No Active DTCs:	> 10.0 seconds > -40 deg C <= 512 KPH <= 512 gm/sec ECT_Sensor_Ckt_FA ECT_Sensor_Ckt_FP VehicleSpeedSensorError MAF_SensorFA MAF_SensorFP MAF_SensorTFTKO	50 failures out of 63 samples 1 sample every 100 msec	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
Engine Coolant Temperature (ECT) Sensor Performance	P0116	This DTC detects ECT temp sensor stuck in mid range.	<p>A failure will be reported if any of the following occur:</p> <p>1) ECT at power up > IAT at power up by an IAT based table lookup value after a minimum 28800 second soak (fast fail).</p> <p>2) ECT at power up > IAT at power up by 15.0 C after a minimum 28800 second soak and a block heater has not been detected.</p> <p>3) ECT at power up > IAT at power up by 15.0 C after a minimum 28800 seconds soak and the time spent cranking the engine without starting is greater than 10.0 seconds with the LowFuelConditionDiag</p>	<p>See "P0116: Fail if power up ECT exceeds IAT by these values" in the Supporting tables section</p> <p>= False</p>	<p>No Active DTC's</p> <p>Non-volatile memory initialization</p> <p>Test complete this trip</p> <p>Test aborted this trip</p> <p>IAT</p> <p>LowFuelConditionDiag</p>	<p>VehicleSpeedSensor_F A IAT_SensorFA</p> <p>ECT_Sensor_Ckt_FA IgnitionOffTimeValid TimeSinceEngineRunningValid</p> <p>= Not occurred</p> <p>= False</p> <p>= False</p> <p>IAT ≥ -7 °C</p> <p>= False</p>	<p>1 failure</p> <p>500 msec/sample</p> <p>Once per valid cold start</p>	Type B 2 trips	
					<p>Diagnostic is aborted when Block Heater is detected. Block Heater is detected when the following occurs:</p> <p>1) ECT at power up > IAT at power up by > 15.0 °C</p> <p>2) Cranking time < 10.0 Seconds</p> <p>3) Power up IAT > -7 °C</p> <p>4a) Vehicle drive time > 400 Seconds</p> <p>4b) Vehicle speed > 14.9 MPH</p> <p>4c) IAT drops from power up IAT ≥ 8.0 °C</p>				
Engine Coolant Temp Sensor Circuit Low	P0117	This DTC detects a short to ground in the ECT signal circuit or the ECT sensor.	ECT Resistance (@ 150°C)	< 45 Ohms			<p>5 failures out of 6 samples</p> <p>1 sec/sample</p> <p>Continuous</p>	Type B 2 trips	
Engine Coolant Temp Sensor Circuit High	P0118	Circuit Continuity This DTC detects a short to high or open in the ECT signal circuit or the ECT sensor.	ECT Resistance (@ -60°C)	> 450000 Ohms	<p>Engine run time</p> <p>Or</p> <p>IAT min</p>	<p>> 10 seconds</p> <p>≥ 0.0 °C</p>	<p>5 failures out of 6 samples</p> <p>1 sec/sample</p> <p>Continuous</p>	Type B 2 trips	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
TPS1 Circuit	P0120	Detects a continuous or intermittent short or open in TPS1 circuit on the secondary processor but sensor is in range on the primary processor	Secondary TPS1 Voltage < or Secondary TPS1 Voltage >	0.325 4.75		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No 5 V reference error No 5 V reference DTCs	19/39 counts or 14 counts continuous; 12.5 msec/count in the secondary processor	Type A 1 trip
Throttle Position Sensor Performance	P0121	Determines if the Throttle Position Sensor input is stuck within the normal operating range	Filtered Throttle Model AND ABS(Measured Flow – Modeled Air Flow) Filtered	> 150 kPa/(g/s) > 10 grams/sec	Engine Speed Engine Speed Coolant Temp Coolant Temp Intake Air Temp Intake Air Temp Minimum total weight factor (all factors multiplied together)	>= 450 RPM <= 8000 RPM > -7 Deg C < 125 Deg C > -7 Deg C < 125 Deg C < 0.00 Filtered Throttle Model multiplied by TPS Residual Weight Factor based on RPM Modeled Air Flow multiplied by MAF Residual Weight Factor based on RPM and MAF Residual Weight Factor Based on MAF Estimate See table "IFRD Residual Weighting Factors". No Active DTCs: MAP_SensorCircuitFA EGRValve_FP EGRValvePerformance_FA	Continuous Calculation are performed every 12.5 msec	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						MAF_SensorCircuitFA CrankSensorFA ECT_sensor_FA ECT_Sensor_FP IAT_SensorFA IAT_SensorCircuitFP CylDeacSystemTFTKO		
TPS1 Circuit Low	P0122	Detects a continuous or intermittent short or open in TPS1 circuit on both processors or just the primary processor	Primary TPS1 Voltage <	0.325		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No 5 V reference error	79/159 counts; 57 counts continuous; 3.125 msec /count in the Primary processor	Type A 1 trip
			Secondary TPS1 Voltage <	0.325		No 5 V reference DTCs	19/39 counts or 14 counts continuous; 12.5 msec/count in the Secondary processor	
TPS1 Circuit High	P0123	Detects a continuous or intermittent short in TPS1 circuit on both processors or just the primary processor	Primary TPS1 Voltage >	4.75		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No 5 V reference error	79/159 counts; 57 counts continuous; 3.125 msec /count in the Primary processor	Type A 1 trip
			Secondary TPS1 Voltage >	4.75		No 5 V reference DTCs	19/39 counts or 14 counts continuous; 12.5 msec/count in the Secondary processor	
Engine Coolant Temperature Below Stat Regulating Temperature	P0128	This DTC detects if the engine coolant temperature rises too slowly due to an ECT or Cooling system fault	Actual accumulated airflow is > predicted accumulated airflow before: Range #1 (Primary)	See "P0128: Maximum Accumulated Airflow for IAT and Start-up ECT conditions" in the Supporting tables section	No Active DTC's	MAP_SensorFA MAF_SensorFA TPS_Performance_FA TPS_FA TPS_ThrottleAuthority Defaulted IAT_SensorFA	30 failures to set DTC 1 sec/sample Once per ignition	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			ECT reaches 75.0 °C when IAT min is < 52.0 °C and ≥ 10.0 °C.			ECT_Sensor_Ckt_FA ECT_Sensor_Perf_FA VehicleSpeedSensor_FA Engine run time ≥ 120 seconds Fuel Condition Ethanol ≤ 87%	key cycle	
			Range #2 (Alternate) ECT reaches 55.0 °C when IAT min is < 10.0 °C and ≥ -7.0 °C.		Range #1 (Primary) Test ECT at start run ≤ 70.0 °C Engine run time 1370 ≤ seconds Average Airflow ≥ 10.0 gps Vehicle speed > 5 mph for at least 2.4 miles			
					Range #2 (Alternate) Test ECT at start run ≤ 50.0 °C Engine run time 1370 ≤ seconds Average Airflow ≥ 10.0 gps Vehicle speed > 5 mph for at least 2.4 miles			
					Accumulated Airflow Adjustments 1) Max. airflow amount added when accumulating airflow is 70.0 gps 2) Zero Airflow accumulated when airflow is < 17.0 gps 3) With AFM active Airflow added to accumulated is multiplied by 100.00% 4) With Decel Fuel Cut Off active, accumulated airflow is reduced by multiplying actual airflow by 1.00 times 5) With Hybrid Engine Off Active accumulated Airflow is reduced by 7.0 grams each second			
					Diagnostic will restart (using the lower value) if ECT drops	≥ 3.0°C below previous min ECT		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
O2S Circuit Low Voltage Bank 1 Sensor 1	P0131	This DTC determines if the O2 sensor circuit is shorted to low.	Measure Oxygen Sensor Signal.	Oxygen Sensor signal is < 50 mvolts	No Active DTC's AIR intrusive test = Not active Fuel intrusive test = Not active Idle intrusive test = Not active EGR intrusive test = Not active System Voltage EGR Device Control = Not active Idle Device Control = Not active Fuel Device Control = Not active AIR Device Control = Not active Low Fuel Condition Diag = False Equivalence Ratio <= 1.0137 100 ≤ APC ≤ 800 Air Per Cylinder mgrams Fuel Control State = Closed Loop Closed Loop Active = TRUE All Fuel Injectors for active Cylinders Enabled (On) Fuel Condition Ethanol <= 87% Fuel State DFCO not active <u>All of the above met for</u> Time > 2.0 seconds	TPS_ThrottleAuthority Defaulted MAP_SensorFA AIR System FA Ethanol Composition Sensor FA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA	380 failures out of 475 samples Frequency: Continuous in 100 milli - second loop	Type B 2 trips
O2S Circuit High Voltage Bank 1 Sensor 1	P0132	This DTC determines if the O2 sensor circuit is shorted to high.	Measure Oxygen Sensor Signal.	Oxygen Sensor signal is > 1050 mvolts	No Active DTC's	TPS_ThrottleAuthority Defaulted MAP_SensorFA MAF_SensorFA	100 failures out of 125 samples	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
						EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR intrusive test = Not active Fuel intrusive test = Not active Idle intrusive test = Not active EGR intrusive test = Not active System Voltage 10.0 volts < system voltage < 18.0 volts EGR Device Control = Not active Idle Device Control = Not active Fuel Device Control = Not active AIR Device Control = Not active Low Fuel Condition Diag = False Equivalence Ratio .9922 <= equiv. ratio <= 1.0137 100 ≤ APC ≤ 800 Air Per Cylinder mgrams Fuel Control State = Closed Loop not = Power Fuel Control State Enrichment Closed Loop Active = TRUE All Fuel Injectors for active Cylinders Enabled (On) Fuel State DFCO not active Fuel Condition Ethanol <= 87% <u>All of the above met for</u> Time > 2 seconds		Frequency: Continuous in 100 milli - second loop	
O2S Slow Response Bank 1 Sensor 1	P0133	This DTC determines if the O2 sensor response time is degraded.	The average response time is calculated over the test time, and compared to the threshold. Refer to "P0133 - O2S Slow Response Bank 1 Sensor 1" Pass/Fail Threshold table in the Supporting Tables tab.		No Active DTC's	TPS_ThrottleAuthority Defaulted MAP_SensorFA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault MAF_SensorFA EvapPurgeSolenoidCircuit_FA	Sample time is 40 seconds Frequency: Once per trip <u>Green Sensor Delay Criteria</u>	Type B 2 trips	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
						EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR System FA EthanolCompositionSensor_FA EngineMisfireDetected_FA = P0131, P0132 or P0134 Bank 1 Sensor 1 DTC's not active System Voltage EGR Device Control Idle Device Control Fuel Device Control AIR Device Control Low Fuel Condition Diag Green O2S Condition O2 Heater on for Learned Htr resistance Engine Coolant IAT Engine run Accum Purge duty cycle Engine airflow Engine speed Fuel Baro Air Per Cylinder Low Fuel Condition Diag Fuel Control State Closed Loop Active LTM fuel cell Transient Fuel Mass Baro	10.0 volts < system voltage < 18.0 volts = Not active = Not active = Not active = Not active = False = Not Valid >= 0 seconds = Valid > 55 °C > -40 °C > 160 seconds >= 0 % duty cycle 20 gps <= engine airflow <= 55 gps 1000 <= RPM <= 3000 < 87 % Ethanol > 70 kpa >= 150 mGrams = False = Closed Loop = TRUE = Enabled <= 100.0 mgrams = Not Defaulted	The diagnostic will not be enabled until the next ignition cycle after the following has been met: Airflow greater than 22 gps for 120000 grams of accumulated flow non-continuously. (Note that all other enable criteria must be met on the next ignition cycle for the test to run on that ignition cycle). Note: This feature is only enabled when the vehicle is new and cannot be enabled in service	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Fuel Control State Fuel State Commanded Proportional Gain <u>All of the above met for</u> Time	not = Power Enrichment DFCO not active >= 0.0 % > 4.5 seconds		
O2S Circuit Insufficient Activity Bank 1 Sensor 1	P0134	This DTC determines if the O2 sensor circuit is open.	Measure Oxygen Sensor Signal.	350 mvolts < Oxygen Sensor signal < 550 mvolts	No Active DTC's System Voltage AFM Status Heater Warm-up delay Predicted Exhaust Temp (by location) Engine Run Time Engine Run Accum Fuel	TPS_ThrottleAuthority Defaulted MAF_SensorFA EthanolCompositionSensor_FA 10.0 volts < system voltage < 18.0 volts = All Cylinders active = Complete = Wamed Up > 10 seconds > 300 seconds <= 87 % Ethanol	400 failures out of 500 samples. Minimum of 0 delta APC changes required to report fail. Delta APC is incremented when the APC mass >= 0.0 mgrams Frequency: Continuous 100msec loop	Type B 2 trips
O2S Heater Performance Bank 1 Sensor 1	P0135	This DTC determines if the O2 sensor heater is functioning properly by monitoring the current through the heater circuit.	Measured Heater Current.	Measured Heater current < 0.3 amps -OR- Measured Heater current > 3.1 amps	No Active DTC's System Voltage Heater Warm-up delay O2S Heater device control B1S1 O2S Heater Duty Cycle <u>All of the above met for</u> Time	ECT_Sensor_FA 10.0 volts < system voltage < 18.0 volts = Complete = Not active > zero > 120 seconds	8 failures out of 10 samples Frequency: 1 tests per trip 5 seconds delay between tests and 1 second execution rate	Type B 2 trips
O2S Circuit Low Voltage Bank 1 Sensor 2	P0137	This DTC determines if the O2 sensor circuit is shorted to low.	Measure Oxygen Sensor Signal.	Oxygen Sensor signal is < 50 mvolts	No Active DTC's	TPS_ThrottleAuthority Defaulted MAP_SensorFA AIR System FA Ethanol Composition Sensor FA EvapPurgeSolenoidCircuit_FA	430 failures out of 540 samples Frequency: Continuous in 100 milli - second loop	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR intrusive test = Not active Fuel intrusive test = Not active Idle intrusive test = Not active EGR intrusive test = Not active System Voltage 10.0 volts < system voltage < 18.0 volts EGR Device Control = Not active Idle Device Control = Not active Fuel Device Control = Not active AIR Device Control = Not active Low Fuel Condition Diag = False Equivalence Ratio <= 1.0137 Air Per Cylinder mgrams Fuel Control State = Closed Loop Closed Loop Active = TRUE All Fuel Injectors for active Cylinders Enabled (On) Fuel Condition Ethanol <= 87% Fuel State DFCO not active <u>All of the above met for</u> Time > 2.0 seconds			
O2S Circuit High Voltage Bank 1 Sensor 2	P0138	This DTC determines if the O2 sensor circuit is shorted to high.	Measure Oxygen Sensor Signal.	Oxygen Sensor signal is > 1050 mvolts	No Active DTC's	TPS_ThrottleAuthority Defaulted MAP_SensorFA MAF_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA	100 failures out of 125 samples Frequency: Continuous in 100 milli - second loop	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						FuelTankPressureSnr Ckt_FA FuelInjectorCircuit_FA AIR intrusive test = Not active Fuel intrusive test = Not active Idle intrusive test = Not active EGR intrusive test = Not active System Voltage 10.0 volts < system voltage < 18.0 volts EGR Device Control = Not active Idle Device Control = Not active Fuel Device Control = Not active AIR Device Control = Not active Low Fuel Condition Diag = False Equivalence Ratio .9922 <= equiv. ratio <= 1.0137 Air Per Cylinder 100 ≤ APC ≤ 800 mgrams Fuel Control State = Closed Loop Fuel Control State not = Power Fuel Control State Enrichment = TRUE Closed Loop Active = TRUE All Fuel Injectors for active Cylinders Enabled (On) Fuel State DFCO not active Fuel Condition Ethanol <= 87% <u>All of the above met for</u> Time > 2 seconds		
O2S Circuit Insufficient Activity Bank 1 Sensor 2	P0140	This DTC determines if the O2 sensor circuit is open.	Measure Oxygen Sensor Signal.	410 mvolts < Oxygen Sensor signal < 490 mvolts	No Active DTC's System Voltage 10.0 volts < system voltage < 18.0 volts AFM Status = All Cylinders active Heater Warm-up delay = Complete Predicted Exhaust Temp (by location) = Wamed Up Engine Run Time > 10 seconds Engine Run Accum > 300 seconds Fuel <= 87 % Ethanol	TPS_ThrottleAuthority Defaulted MAF_SensorFA EthanolCompositionSensor_FA Minimum of 0 delta APC changes required to report fail. Delta APC is incremented when the APC mass >= 0.0 mgrams Frequency: Once per trip for post sensors	590 failures out of 740 samples.	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							100msec loop	
O2S Heater Performance Bank 1 Sensor 2	P0141	This DTC determines if the O2 sensor heater is functioning properly by monitoring the current through the heater circuit.	Measured Heater Current.	Measured Heater current < 0.3 amps -OR- Measured Heater current > 2.9 amps	No Active DTC's System Voltage Heater Warm-up delay O2S Heater device control B1S1 O2S Heater Duty Cycle <u>All of the above met for</u> Time	ECT_Sensor_FA 10.0 volts < system voltage < 18.0 volts = Complete = Not active > zero Time > 120 seconds	8 failures out of 10 samples Frequency: 1 tests per trip 5 seconds delay between tests and 1 second execution rate	Type B 2 trips
O2S Circuit Low Voltage Bank 2 Sensor 1	P0151	This DTC determines if the O2 sensor circuit is shorted to low.	Measure Oxygen Sensor Signal.	Oxygen Sensor signal is < 50 mvolts	No Active DTC's AIR intrusive test Fuel intrusive test Idle intrusive test EGR intrusive test System Voltage EGR Device Control Idle Device Control Fuel Device Control AIR Device Control Low Fuel Condition Diag	TPS_ThrottleAuthority Defaulted MAP_SensorFA AIR System FA Ethanol Composition Sensor FA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA 10.0 volts < system voltage < 18.0 volts = Not active = Not active = Not active = Not active	380 failures out of 475 samples Frequency: Continuous in 100 milli - second loop	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Equivalence Ratio Air Per Cylinder Fuel Control State Closed Loop Active All Fuel Injectors for active Cylinders Fuel Condition Fuel State <u>All of the above met for</u> Time	.9922 <= equiv. ratio <= 1.0137 100 ≤ APC ≤ 800 mgrams = Closed Loop = TRUE Enabled (On) Ethanol <= 87% DFCO not active		
O2S Circuit High Voltage Bank 2 Sensor 1	P0152	This DTC determines if the O2 sensor circuit is shorted to high.	Measure Oxygen Sensor Signal.	Oxygen Sensor signal is > 1050 mvolts	No Active DTC's AIR intrusive test Fuel intrusive test Idle intrusive test EGR intrusive test System Voltage EGR Device Control Idle Device Control Fuel Device Control AIR Device Control Low Fuel Condition Diag Equivalence Ratio Air Per Cylinder Fuel Control State Fuel Control State	TPS_ThrottleAuthority Defaulted MAP_SensorFA MAF_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA = Not active = Not active = Not active = Not active 10.0 volts < system voltage < 18.0 volts = Not active = Not active = Not active = Not active = False .9922 <= equiv. ratio <= 1.0137 100 ≤ APC ≤ 800 mgrams = Closed Loop not = Power Enrichment	100 failures out of 125 samples Frequency: Continuous in 100 milli - second loop	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					IAT > -40 °C Engine run Accum > 160 seconds Purge duty cycle >= 0 % duty cycle Engine airflow 20 gps <= engine airflow <= 55 gps Engine speed 1000 <= RPM <= 3000 Fuel < 87 % Ethanol Baro > 70 kpa Air Per Cylinder >= 150 mGrams Low Fuel Condition Diag = False Fuel Control State = Closed Loop Closed Loop Active = TRUE LTM fuel cell = Enabled Transient Fuel Mass <= 100.0 mgrams Baro = Not Defaulted not = Power Fuel Control State Enrichment Fuel State DFCO not active Commanded Proportional Gain >= 0.0 % <u>All of the above met for</u> Time > 4.5 seconds			
O2S Circuit Insufficient Activity Bank 2 Sensor 1	P0154	This DTC determines if the O2 sensor circuit is open.	Measure Oxygen Sensor Signal.	350 mvolts < Oxygen Sensor signal < 550 mvolts	No Active DTC's System Voltage < 18.0 volts AFM Status = All Cylinders active Heater Warm-up delay = Complete Predicted Exhaust Temp (by location) = Wamed Up Engine Run Time > 10 seconds Engine Run Accum > 300 seconds Fuel <= 87 % Ethanol	TPS_ThrottleAuthority Defaulted MAF_SensorFA EthanolCompositionSensor_FA 10.0 volts < system voltage < 18.0 volts Frequency: Continuous 100msec loop	400 failures out of 500 samples. Minimum of 0 delta APC changes required to report fail. Delta APC is incremented when the APC mass >= 0.0 mgrams Frequency: Continuous 100msec loop	Type B 2 trips
O2S Heater Performance Bank 2 Sensor 1	P0155	This DTC determines if the O2 sensor heater is functioning properly by monitoring the current through the heater circuit.	Measured Heater Current.	Measured Heater current < 0.3 amps -OR- Measured Heater current > 3.1	No Active DTC's System Voltage < 18.0 volts	ECT_Sensor_FA 10.0 volts < system voltage < 18.0 volts Frequency: 1 tests	8 failures out of 10 samples Frequency: 1 tests	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Fuel State <u>All of the above met for</u> Time	DFCO not active > 2.0 seconds		
O2S Circuit High Voltage Bank 2 Sensor 2	P0158	This DTC determines if the O2 sensor circuit is shorted to high.	Measure Oxygen Sensor Signal.	Oxygen Sensor signal is > 1050 mvolts	No Active DTC's AIR intrusive test = Not active Fuel intrusive test = Not active Idle intrusive test = Not active EGR intrusive test = Not active System Voltage EGR Device Control Idle Device Control Fuel Device Control AIR Device Control Low Fuel Condition Diag Equivalence Ratio Air Per Cylinder Fuel Control State Fuel Control State Closed Loop Active All Fuel Injectors for active Cylinders Fuel State Fuel Condition <u>All of the above met for</u> Time	TPS_ThrottleAuthority Defaulted MAP_SensorFA MAF_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA = Not active = Not active = Not active = Not active 10.0 volts < system voltage < 18.0 volts = Not active = Not active = Not active = Not active = False .9922 <= equiv. ratio <= 1.0137 100 ≤ APC ≤ 800 mgrams = Closed Loop not = Power Enrichment = TRUE Enabled (On) DFCO not active Ethanol <= 87%	100 failures out of 125 samples Frequency: Continuous in 100 milli - second loop	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
O2S Circuit Insufficient Activity Bank 2 Sensor 2	P0160	This DTC determines if the O2 sensor circuit is open.	Measure Oxygen Sensor Signal.	410 mvolts < Oxygen Sensor signal < 490 mvolts	No Active DTC's System Voltage AFM Status Heater Warm-up delay Predicted Exhaust Temp (by location) Engine Run Time Engine Run Accum Fuel	TPS_ThrottleAuthority Defaulted MAF_SensorFA EthanolCompositionSensor_FA 10.0 volts < system voltage < 18.0 volts = All Cylinders active = Complete = Wamed Up > 10 seconds > 300 seconds <= 87 % Ethanol	590 failures out of 740 samples. Minimum of 0 delta APC changes required to report fail. Delta APC is incremented when the APC mass >= 0.0 mgrams Frequency: Once per trip for post sensors 100msec loop	Type B 2 trips
O2S Heater Performance Bank 2 Sensor 2	P0161	This DTC determines if the O2 sensor heater is functioning properly by monitoring the current through the heater circuit.	Measured Heater Current.	Measured Heater current < 0.3 amps -OR- Measured Heater current > 2.9 amps	No Active DTC's System Voltage Heater Warm-up delay O2S Heater device control B1S1 O2S Heater Duty Cycle <u>All of the above met for</u> Time	ECT_Sensor_FA 10.0 volts < system voltage < 18.0 volts = Complete = Not active > zero > 120 seconds	8 failures out of 10 samples Frequency: 1 tests per trip 5 seconds delay between tests and 1 second execution rate	Type B 2 trips
Fuel System Too Lean Bank 1	P0171	Determines if the fuel control system is in a lean condition, based on the filtered long-term fuel trim.	The filtered long-term fuel trim metric	≥ Long Term Trim Lean Table	Engine speed BARO Coolant Temp MAP Inlet Air Temp MAF VSS Fuel Level	375 <rpm < 7000 > 70 kPa -40 <°C < 150 10 <kPa < 255 -20 <°C < 150 1.0 <g/s < 510.0 < 83 mph > 10 % or if fuel sender is faulty	> 100 ms Frequency: Continuous Development data indicates that the Fuel Adjustment System Diagnostic (FASD) is typically	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					<p>Long Fuel Trim data accumulation:</p> <p>> 30 seconds of data must accumulate on each trip, with at least 10 seconds of data in the current fuel trim cell before a pass or fail decision can be made.</p>	<p>enabled during 95% of the EPAIII drive cycle while the engine is being fueled. This is also typical of real-world driving, however values will vary (higher or lower) based on the actual conditions present during the drive cycle.</p>		
					<p>Closed loop fueling Enabled</p> <p>Long Fuel Trim enabled</p>	<p>Closed Loop Enabled and coolant temp > 39 and < 140</p>		
			<p>disable conditions:</p>	<p>Engine speed</p> <p>Fuel Level</p> <p>EGR Flow Diag. Intrusive Test Active</p> <p>Catalyst Monitor Diag. Intrusive Test Active</p> <p>Post O2 Diag. Intrusive Test Active</p> <p>Device Control Active</p> <p>EVAP Diag. "tank pull down" portion of the test Active</p> <p>fuel trim metric updated during decels? (NO)</p> <p>No active DTCs:</p>	<p>rpm < 375 or rpm > 7000</p> <p>< 10 % for at least 30 seconds</p> <p>IAC_SystemRPM_FA</p> <p>MAP_SensorFA</p> <p>MAF_SensorFA</p> <p>MAF_SensorTFTKO</p> <p>AIR System FA</p> <p>EvapPurgeSolenoidCircuit FA</p> <p>EvapFlowDuringNonPurge FA</p> <p>EvapVentSolenoidCircuit FA</p> <p>EvapSmallLeak_FA</p> <p>EvapEmissionSystem_FA</p> <p>FuelTankPressureSensorCircuit FA</p> <p>Ethanol Composition Sensor FA</p> <p>FuelInjectorCircuit_FA</p> <p>EngineMisfireDetected FA</p> <p>EGRValvePerformance FA</p> <p>EGRValveCircuit_FA</p>			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						MAP_EngineVacuumStatus AmbientAirDefault_NA		
Fuel System Too Rich Bank 1	P0172	Determines if the fuel control system is in a rich condition, based on the filtered long-term fuel trim metric. There are two different, yet related tests that are used to determine a Rich fault, they are Passive and Intrusive and are described below:				BARO > 70 kPa Coolant Temp -40 <°C< 150 MAP 10 <kPa< 255 IAT -20 <°C< 150 MAF 1.0 <g/s< 510.0 VSS < 83 mph Fuel Level < 10 % for at least 30 seconds Long Fuel Trim data accumulation: > 30 seconds of data must accumulate on each trip, with at least 10 seconds of data in the current fuel trim cell before a pass or fail decision can be made.		Type B 2 Trips
						Closed loop fueling Enabled		
						Long Fuel Trim enabled	Closed Loop Enabled and coolant temp > 39 and < 140	
		Passive Test: Non-purge cells are monitored to determine if a rich condition exists.	The filtered Non-Purge Long Term Fuel Trim metric	≤ Non Purge Rich Limit Table			> 100 ms Frequency: Continuous	
		Intrusive Test- When the Purge Long Term fuel trim metric is ≤ the Purge Rich Limit Table , Purge is ramped off to determine if excess purge vapor is the cause of the Rich condition. If the filtered Purge-on Long Term fuel trim > Purge Rich Limit Table the test passes without checking the Non-Purge Long Term fuel trim metric.	If the Purge Long Term Fuel Trim metric AND The filtered Non-Purge Long Term Fuel Trim metric	≤ Purge Rich Limit Table ≤ Non Purge Rich Limit Table		Passive Test decision cannot be made. A passive decision cannot be made when Purge is enabled.	Fail determinations require that the Malfunction Criteria be satisfied for 3 out of 5 intrusive segments.	
Segment Definition -								
				disable conditions:	Engine speed EGR Flow Diag. Intrusive Test Not Active Fuel Level Catalyst Monitor Diag. Intrusive Test Not Active Post O2 Diag. Intrusive Test Not Active Device Control Not Active EVAP Diag. "tank pull down" portion of the test Not Active fuel trim metric updated during decels? (NO)	rpm< 375 or rpm> 7000 < 10 % for at least 30 seconds	Development data indicates that the Fuel Adjustment System Diagnostic (FASD) is typically enabled during 95% of the EPAIII drive cycle while the engine is being	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					No active DTCs:	IAC_SystemRPM_FA MAP_SensorFA MAF_SensorFA MAF_SensorTFTKO AIR_System FA EvapPurgeSolenoidCircuit FA EvapFlowDuringNonPurge FA EvapVentSolenoidCircuit FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSensorCircuit FA Ethanol Composition Sensor FA FuelInjectorCircuit_FA EngineMisfireDetected FA EGRValvePerformance FA EGRValveCircuit_FA MAP_EngineVacuumStatus AmbientAirDefault_NA	the engine is being fueled. This is also typical of real-world driving, however values will vary (higher or lower) based on the actual conditions present during the drive cycle.	
Fuel System Too Lean Bank 2	P0174	Determines if the fuel control system is in a lean condition, based on the filtered long-term fuel trim.	The filtered long-term fuel trim metric	≥ Long Term Trim Lean Table	Engine speed 375 <rpm< 7000 BARO > 70 kPa Coolant Temp -40 <°C< 150 MAP 10 <kPa< 255 Inlet Air Temp -20 <°C< 150 MAF 1.0 <g/s< 510.0 VSS < 83 mph Fuel Level > 10 % or if fuel sender is faulty Long Fuel Trim data accumulation: > 30 seconds of data must accumulate on each trip, with at least 10 seconds of data in the current fuel trim cell before a pass or fail decision can be made.	375 <rpm< 7000 > 70 kPa -40 <°C< 150 10 <kPa< 255 -20 <°C< 150 1.0 <g/s< 510.0 < 83 mph > 10 % or if fuel sender is faulty > 30 seconds of data must accumulate on each trip, with at least 10 seconds of data in the current fuel trim cell before a pass or fail decision can be made.	> 100 ms Frequency: Continuous Development data indicates that the Fuel Adjustment System Diagnostic (FASD) is typically enabled during 95% of the EPAIII drive cycle while the engine is being fueled. This is also typical of real-world driving, however values	Type B 2 Trips
Closed loop fueling Enabled								

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Long Fuel Trim enabled	Closed Loop Enabled and coolant temp > 39 and < 140	will vary (higher or lower) based on the actual conditions present during the drive cycle.	
				disable conditions:	Engine speed Fuel Level EGR Flow Diag. Intrusive Test Active Catalyst Monitor Diag. Intrusive Test Active Post O2 Diag. Intrusive Test Active Device Control Active EVAP Diag. "tank pull down" portion of the test Active fuel trim metric updated during decels? (NO) No active DTCs:	rpm < 375 or rpm > 7000 < 10 % for at least 30 seconds IAC_SystemRPM_FA MAP_SensorFA MAF_SensorFA MAF_SensorTFTKO AIR System FA EvapPurgeSolenoidCircuit FA EvapFlowDuringNonPurge FA EvapVentSolenoidCircuit FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSensorCircuit FA Ethanol Composition Sensor FA FuelInjectorCircuit_FA EngineMisfireDetected FA EGRValvePerformance FA EGRValveCircuit_FA MAP_EngineVacuumStatus AmbientAirDefault_NA		
Fuel System Too Rich Bank 2	P0175	Determines if the fuel control system is in a rich condition, based on the filtered long-term fuel trim metric. There are two different. vet related				BARO > 70 kPa Coolant Temp -40 <°C< 150 MAP 10 <kPa< 255 IAT -20 <°C< 150 MAF 1.0 <g/s< 510.0 VSS < 83 mph	> 100 ms Frequency: Continuous	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		There are two additional, yet passive tests that are used to determine a Rich fault, they are Passive and Intrusive and are described below:			Fuel Level Long Fuel Trim data accumulation:	> 10 % or if fuel sender is faulty > 30 seconds of data must accumulate on each trip, with at least 10 seconds of data in the current fuel trim cell before a pass or fail decision can be made.		
					Closed loop fueling Enabled			
			Long Fuel Trim enabled		Closed Loop Enabled and coolant temp > 39 and < 140			
		Passive Test: Non-purge cells are monitored to determine if a rich condition exists.	The filtered Non-Purge Long Term Fuel Trim metric	\leq Non Purge Rich Limit Table				
		Intrusive Test- When the Purge Long Term fuel trim metric is \leq the Purge Rich Limit Table , Purge is ramped off to determine if excess purge vapor is the cause of the Rich condition. If the filtered Purge-on Long Term fuel trim > Purge Rich Limit Table the test passes without checking the Non-Purge Long Term fuel trim metric.	If the Purge Long Term Fuel Trim metric AND The filtered Non-Purge Long Term Fuel Trim metric	\leq Purge Rich Limit Table \leq Non Purge Rich Limit Table		Passive Test decision cannot be made. A passive decision cannot be made when Purge is enabled.	Fail determinations require that the Malfunction Criteria be satisfied for 3 out of 5 intrusive segments.	
					Segment Definition -			
				disable conditions:	Engine speed EGR Flow Diag. Intrusive Fuel Level Catalyst Monitor Diag. Post O2 Diag. Device Control EVAP Diag. "tank pull down" portion of the test No active DTCs:	rpm < 375 or rpm > 7000 Test Not Active < 10 % for at least 30 seconds Intrusive Test Not Active Intrusive Test Not Active Device Control Not Active "tank pull down" portion of the test Not Active during decels? (NO) IAC_SystemRPM_FA MAP_SensorFA MAF_SensorFA MAF_SensorTFTKO AIR System FA EvapPurgeSolenoidCircuit FA EvapFlowDuringNonPurge FA	Development data indicates that the Fuel Adjustment System Diagnostic (FASD) is typically enabled during 95% of the EPAIII drive cycle while the engine is being fueled. This is also typical of real-world driving, however values will vary (higher or lower) based on the actual conditions present during the drive cycle.	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						EvapVentSolenoidCircuit FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSensorCircuit FA Ethanol Composition Sensor FA FuelInjectorCircuit_FA EngineMisfireDetected FA EGRValvePerformance FA EGRValveCircuit_FA MAP_EngineVacuumStatus AmbientAirDefault_NA		
Injector 1	P0201	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 18 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	Type B 2 trips
Injector 2	P0202	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 18 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	Type B 2 trips
Injector 3	P0203	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 18 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	Type B 2 trips
Injector 4	P0204	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 18 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	Type B 2 trips
Injector 5	P0205	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 18 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Injector 6	P0206	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 18 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	Type B 2 trips
Injector 7	P0207	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 18 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	Type B 2 trips
Injector 8	P0208	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 18 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	Type B 2 trips
TPS2 Circuit	P0220	Detects a continuous or intermittent short or open in TPS2 circuit on the secondary processor but sensor is in range on the primary processor	Secondary TPS2 Voltage < or Secondary TPS2 Voltage >	0.25 4.59		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No 5 V reference error No 5 V reference DTCs	19/39 counts or 14 counts continuous; 12.5 msec/count in the Secondary processor	Type A 1 trip
TPS2 Circuit Low	P0222	Detects a continuous or intermittent short in TPS2 circuit on both processors or just the primary processor	Primary TPS2 Voltage < Secondary TPS2 Voltage <	0.25 0.25		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No 5 V reference error No 5 V reference DTCs	79/159 counts; 57 counts continuous; 3.125 msec /count in the Primary processor 19/39 counts or 14 counts continuous; 12.5 msec/count in the Secondary processor	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
TPS2 Circuit High	P0223	Detects a continuous or intermittent short or open in TPS2 circuit on both processors or just the primary processor	Primary TPS2 Voltage >	4.59		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No 5 V reference error	79/159 counts; 57 counts continuous; 3.125 msec /count in the Primary processor	Type A 1 trip
			Secondary TPS2 Voltage >	4.59		No 5 V reference DTCs	19/39 counts or 14 counts continuous; 12.5 msec/count in the Secondary processor	
Fuel Pump Primary Circuit (ODM)	P0230	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Run/Crank Voltage Engine Speed	11 volts ≤ Voltage ≤ 18 volts ≥ 0 RPM	8 failures out of 10 samples 250 ms /sample Continuous	Type B 2 trips
Random Misfire Detected Cylinder 1 Misfire Detected Cylinder 2 Misfire Detected Cylinder 3 Misfire Detected Cylinder 4 Misfire Detected Cylinder 5 Misfire Detected Cylinder 6 Misfire Detected Cylinder 7 Misfire Detected Cylinder 8 Misfire Detected	P0300 P0301 P0302 P0303 P0304 P0305 P0306 P0307 P0308	These DTC's will determine if a random or a cylinder specific misfire is occurring by monitoring crankshaft velocity	Deceleration index vs. Engine Speed Vs Engine load Deceleration index calculation is tailored to specific veh. Tables used are 1st tables encountered that are not max of range. Undetectable region at a given speed/load point is where all tables are max of range point. see Algorithm Description Document for additional details. Misfire Percent Emission Failure Threshold	(>Idle SCD AND > Idle SCD ddt Tables) OR (>SCD Delta AND > SCD Delta ddt Tables) OR (>Idle Cyl Mode AND > Idle Cyl Mode ddt Tables) OR (>Cyl Mode AND > Cyl Mode ddt Tables) OR (>Rev Mode Table) OR (> AFM Table in Cyl Deact mode) ≥ 1.24% P0300 ≥ 1.5% emission	Engine Run Time ECT If ECT at startup ECT System Voltage + Throttle delta - Throttle delta	> 2 crankshaft revolutions -7°C < ECT < 130°C -7°C 21°C < ECT < 130°C 9.00<volts<18.00 < 75.00% per 25 ms < 75.00% per 25 ms	Emission Exceedence = (5) failed 200 rev blocks of 16. Failure reported with (1) Exceedence in 1st (16) 200 rev block, or (4) Exceedences thereafter. 1st Catalyst Exceedence = (1) 200 rev block as data supports for catalyst damage. 2nd and subsequent Catalyst Exceedence = (1) 200 rev block with catalyst damage	Type B 2 trips (Mil Flashes with Catalyst Damaging Misfire)

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Misfire Percent Catalyst Damage	>"Catalyst Damaging Misfire Percentage" Table: Except 1 Cylinder Misfire below 1200 RPM and 25.85 % Load			Catalyst damage.	
					Engine Speed	375 < rpm < 5600 Engine speed limit is a function of inputs like Gear and temperature	Continuous	
				disable conditions:	No active DTCs:	TPS_FA EnginePowerLimited MAF_SensorTFTKO n IAT_SensorTFTKO ECT_Sensor_Ckt_TFTKO 5VoltReferenceB_FA CrankSensorTestFailedTKO CrankSensorFaultActive CrankIntakeCamCorrelationFA CrankExhaustCamCorrelationFA CrankCamCorrelationTFTKO AnyCamPhaser_FA AnyCamPhaser_TFTKO	4 cycle delay	
					P0315 & engine speed Fuel Level Low	> 1000 rpm LowFuelConditionDiagnostic	500 cycle delay	
					Cam and Crank Sensors	in sync with each other	4 cycle delay	
					Misfire requests TCC unlock	Not honored because Transmission in hot mode	4 cycle delay	
					Fuel System Status Active Fuel Management	≠ Fuel Cut Transition in progress	4 cycle delay 7 cycle delay	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Undetectable engine speed and engine load region Abusive Engine Over Speed Below zero torque (except CARB approved 3000 rpm to redline triangle.) Below zero torque: TPS Veh Speed EGR Intrusive test Manual Trans Throttle Position AND Automatic transmission shift Driveline Ring Filter active After a low level misfire, another misfire may not be detectable until driveline ringing ceases. If no ringing seen, stop filter early. Filter Driveline ring: Stop filter early: Monitor ABS ABS/TCS system RoughRoad not active not detected (wheel sensor)	invalid speed load range in decel index tables > 8192 rpm <" Zero torque engine load" in Supporting Tables tab ≤ 0% > 48 KPH Active Clutch shift > 95.00%	4 cycle delay 0 cycle delay 4 cycle delay 4 cycle delay 0 cycle delay 4 cycle delay 7 cycle delay 4 engine cycles after misfire 3 Engine cycles after	
Crankshaft Position System Variation Not Learned	P0315	Monitor for valid crankshaft error compensation factors	Sum of Compensation factors	≥ 4.0040 $OR \leq 3.9960$	OBD Manufacturer Enable Counter	0	0.50 seconds Frequency Continuous 100 msec	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Knock Sensor (KS) Module Performance	P0324	This diagnostic will detect a failed internal ECM component associated with knock control	Any Cylinder's Avg Gain Signal or All Cylinder's Actual Signals	> 4.50 Volts ≤ 0.20 Volts	Engine Speed Engine Air Flow No Active DTC's Engine Speed Engine Air Flow No Active DTC's	≥ 400 RPM > 60 mg/cylinder KS_Ckt_Perf_B1B2_F A ≥ 400 RPM > 60 mg/cylinder KS_Ckt_Perf_B1B2_F A	50 Failures out of 63 Samples 100 msec rate	Type A 1 trip
Knock Sensor (KS) Circuit Bank 1	P0325	This diagnostic checks for an open in the knock sensor circuit	Gated Low Pass Filter Voltage	> 4.0 Volts or < 1.24 Volts	Diagnostic Enabled (1 = Enabled) Engine Speed ECT Engine Run Time No Active DTC's Power Take-Off Disabled	= 1 ≥ 400 RPM ≥ -40 deg. C ≥ 2 seconds KS_Ckt_Perf_B1B2_F A Disabled	50 Failures out of 63 Samples 100 msec rate	Type: B 2 trips
Knock Sensor (KS) Performance Bank 1	P0326	This diagnostic checks for an overactive knock sensor caused by excessive knock or noisy engine components	Knock Fast Retard (spark degrees) >	> (FastRtdMax + 6.0 degrees - 2.0) degrees spark See Supporting Tables for FastRtdMax	Diagnostic Enabled (1 = Enabled) Knock Detection Enabled Engine Speed MAP No Active DTC's Power Take-Off Disabled	= 1 > 0 Knock Detection Enabled is calculated by multiplying the following three factors: FastAttackRate FastAttackCoolGain FastAttackBaroGain (see Supporting Tables) ≥ 500 RPM ≥ 10 kPa TPS_ThrottleAuthority Defaulted Disabled	31 Failures out of 63 Samples 100 msec rate	Type: B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Knock Sensor (KS) Circuit Low Bank 1	P0327	This diagnostic checks for an out of range low knock sensor signal	Sensor Input Signal Line or Sensor Return Signal Line	> 2.86 Volts < 1.48 Volts	ECT Enginer Run Time Engine Oil Temp No Active DTC's	≥ -40 deg. C ≥ 2 seconds < 256 deg. C EngOilModeledTempValid	50 Failures out of 63 Samples 100 msec rate	Type: B 2 trips
Knock Sensor (KS) Circuit High Bank 1	P0328	This diagnostic checks for an out of range high knock sensor signal	Sensor Input Signal Line or Sensor Return Signal Line	< 2.02 Volts > 3.76 Volts	ECT Enginer Run Time Engine Oil Temp No Active DTC's	≥ -40 deg. C ≥ 2 seconds < 256 deg. C EngOilModeledTempValid	50 Failures out of 63 Samples 100 msec rate	Type: B 2 trips
Knock Sensor (KS) Circuit Bank 2	P0330	This diagnostic checks for an open in the knock sensor circuit	Gated Low Pass Filter Voltage	> 4.0 Volts or < 1.24 Volts	Diagnostic Enabled (1 = Enabled) Engine Speed ECT Enginer Run Time No Active DTC's Power Take-Off Disabled	= 1 ≥ 400 RPM ≥ -40 deg. C ≥ 2 seconds KS_Ckt_Perf_B1B2_FA Disabled	50 Failures out of 63 Samples 100 msec rate	Type: B 2 trips
Knock Sensor (KS) Circuit Low Bank 2	P0332	This diagnostic checks for an out of range low knock sensor signal	Sensor Input Signal Line or Sensor Return Signal Line	> 2.86 Volts < 1.48 Volts	ECT Enginer Run Time Engine Oil Temp No Active DTC's	≥ -40 deg. C ≥ 2 seconds < 256 deg. C EngOilModeledTempValid	50 Failures out of 63 Samples 100 msec rate	Type: B 2 trips
Knock Sensor (KS) Circuit High Bank 2	P0333	This diagnostic checks for an out of range high knock sensor signal	Sensor Input Signal Line or Sensor Return Signal Line	< 2.02 Volts > 3.76 Volts	ECT Enginer Run Time Engine Oil Temp No Active DTC's	≥ -40 deg. C ≥ 2 seconds < 256 deg. C EngOilModeledTempValid	50 Failures out of 63 Samples 100 msec rate	Type: B 2 trips
Crankshaft Position (CKP) Sensor A Circuit	P0335	Determines if a fault exists with the crank position sensor signal	<u>Engine-Cranking Crankshaft Test:</u> Time since last crankshaft position sensor pulse received	 >= 4.0 seconds	<u>Engine-Cranking Crankshaft Test:</u> Starter engaged AND (cam pulses being received) OR (DTC P0101 AND DTC P0102 AND DTC P0103	 = FALSE = FALSE = FALSE	<u>Engine-Cranking Crankshaft Test:</u> Continuous every 100 msec	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			<p><u>Time-Based Crankshaft Test:</u></p> <p>No crankshaft pulses received</p> <p><u>Event-Based Crankshaft Test:</u></p> <p>No crankshaft pulses received</p>	<p>>= 0.1 seconds</p>	<p>AND Engine Air Flow</p> <p><u>Time-Based Crankshaft Test:</u></p> <p>Engine is Running Starter is not engaged</p> <p>No DTC Active:</p> <p><u>Event-Based Crankshaft Test:</u></p> <p>Engine is Running OR Starter is engaged No DTC Active:</p>	<p>> 3.0 grams/second))</p> <p>5VoltReferenceB_FA</p> <p>5VoltReferenceA_FA</p> <p>5VoltReferenceB_FA</p> <p>P0340 P0341</p>	<p><u>Time-Based Crankshaft Test:</u></p> <p>Continuous every 12.5 msec</p> <p><u>Event-Based Crankshaft Test:</u></p> <p>2 failures out of 10 samples</p> <p>One sample per engine revolution</p>	
Crankshaft Position (CKP) Sensor A Performance	P0336	Determines if a performance fault exists with the crank position sensor signal	<p><u>Crank Re-synchronization Test:</u></p> <p>Time in which 25 or more crank re-synchronizations occur</p> <p><u>Time-Based Crankshaft Test:</u></p> <p>No crankshaft synchronization gap found</p> <p><u>Engine Start Test during Crank:</u></p> <p>Time since starter engaged without detecting crankshaft synchronization gap</p>	<p>< 20.0 seconds</p> <p>>= 0.4 seconds</p> <p>>= 1.5 seconds</p>	<p><u>Crank Re-synchronization Test:</u></p> <p>Engine Air Flow Cam-based engine speed</p> <p>No DTC Active:</p> <p><u>Time-Based Crankshaft Test:</u></p> <p>Engine is Running Starter is not engaged</p> <p>No DTC Active:</p> <p><u>Engine Start Test during Crank:</u></p> <p>Starter engaged AND (cam pulses being received</p>	<p>>= 3.0 grams/second > 450 RPM</p> <p>5VoltReferenceB_FA</p> <p>P0335</p> <p>5VoltReferenceB_FA</p>	<p><u>Crank Re-synchronization Test:</u></p> <p>Continuous every 250 msec</p> <p><u>Time-Based Crankshaft Test:</u></p> <p>Continuous every 12.5 msec</p> <p><u>Engine Start Test during Crank:</u></p> <p>Continuous every 100 msec</p>	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			<p><u>Event-Based Crankshaft Test:</u></p> <p>Crank Pulses received in one engine revolution OR Crank Pulses received in one engine revolution</p>	<p>< 53</p> <p>> 63</p>	<p>OR (DTC P0101 AND DTC P0102 AND DTC P0103 AND Engine Air Flow</p> <p><u>Event-Based Crankshaft Test:</u></p> <p>Engine is Running OR Starter is engaged No DTC Active:</p>	<p>= FALSE = FALSE = FALSE > 3.0 grams/second))</p> <p>5VoltReferenceA_FA 5VoltReferenceB_FA P0340 P0341</p>	<p><u>Event-Based Crankshaft Test:</u></p> <p>8 failures out of 10 samples</p> <p>One sample per engine revolution</p>	
Camshaft Position (CMP) Sensor Circuit Bank 1 Sensor A	P0340	Determines if a fault exists with the cam position bank 1 sensor A signal	<p><u>Engine Cranking Camshaft Test:</u></p> <p>Time since last camshaft position sensor pulse received</p> <p>OR</p> <p>Time that starter has been engaged without a camshaft sensor pulse</p> <p><u>Time-Based Camshaft Test:</u></p> <p>Fewer than 4 camshaft pulses received in a time</p> <p><u>Fast Event-Based Camshaft Test:</u></p> <p>No camshaft pulses received during first 24 MEDRES events</p>	<p>>= 5.5 seconds</p> <p>>= 4.0 seconds</p> <p>> 3.0 seconds</p>	<p><u>Engine Cranking Camshaft Test:</u></p> <p>Starter engaged AND (cam pulses being received</p> <p>OR (DTC P0101 AND DTC P0102 AND DTC P0103 AND Engine Air Flow</p> <p><u>Time-Based Camshaft Test:</u></p> <p>Engine is Running Starter is not engaged No DTC Active:</p> <p><u>Fast Event-Based Camshaft Test:</u></p> <p>Crankshaft is synchronized Starter must be engaged to enable the diagnostic, but the</p>	<p>= FALSE = FALSE = FALSE > 3.0 grams/second))</p> <p>5VoltReferenceA_FA</p>	<p><u>Engine Cranking Camshaft Test:</u></p> <p>Continuous every 100 msec</p> <p><u>Time-Based Camshaft Test:</u></p> <p>Continuous every 100 msec</p> <p><u>Fast Event-Based Camshaft Test:</u></p> <p>Continuous every MEDRES event</p>	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			(There are 24 MEDRES events per engine cycle) <u>Slow Event-Based Camshaft Test:</u> The number of camshaft pulses received during 100 engine cycles	= 0	diagnostic will not disable when the starter is disengaged No DTC Active: <u>Slow Event-Based Camshaft Test:</u> Crankshaft is synchronized No DTC Active:	5VoltReferenceA_FA 5VoltReferenceB_FA CrankSensor_FA 5VoltReferenceA_FA 5VoltReferenceB_FA CrankSensor_FA	<u>Slow Event-Based Camshaft Test:</u> 8 failures out of 10 samples Continuous every engine cycle	
Camshaft Position (CMP) Sensor Performance Bank 1 Sensor A	P0341	Determines if a performance fault exists with the cam position bank 1 sensor A signal	<u>Fast Event-Based Camshaft Test:</u> The number of camshaft pulses received during first 24 MEDRES events is less than 2 or greater than 8 (There are 24 MEDRES events per engine cycle) <u>Slow Event-Based Camshaft Test:</u> The number of camshaft pulses received during 100 engine cycles OR	< 398 > 402	<u>Fast Event-Based Camshaft Test:</u> Crankshaft is synchronized Starter must be engaged to enable the diagnostic, but the diagnostic will not disable when the starter is disengaged No DTC Active: <u>Slow Event-Based Camshaft Test:</u> Crankshaft is synchronized No DTC Active:	5VoltReferenceA_FA 5VoltReferenceB_FA CrankSensor_FA 5VoltReferenceA_FA 5VoltReferenceB_FA CrankSensor_FA Crank circuit	<u>Fast Event-Based Camshaft Test:</u> Continuous every MEDRES event <u>Slow Event-Based Camshaft Test:</u> 8 failures out of 10 samples Continuous every engine cycle	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
IGNITION CONTROL #1 CIRCUIT	P0351	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for Cylinder 1 (Cylinders 1 and 4 for V6 with waste spark)	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type B 2 Trips
IGNITION CONTROL #2 CIRCUIT	P0352	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for Cylinder 2 (Cylinders 2 and 5 for V6 with waste spark)	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type B 2 trips
IGNITION CONTROL #3 CIRCUIT	P0353	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for Cylinder 3 (Cylinders 3 and 6 for V6 with waste spark)	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type B 2 trips
IGNITION CONTROL #4 CIRCUIT	P0354	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for Cylinder 4 (if applicable)	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type B 2 trips
IGNITION CONTROL #5 CIRCUIT	P0355	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for Cylinder 5 (if applicable)	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type B 2 trips
IGNITION CONTROL #6 CIRCUIT	P0356	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for	The ECM detects that the		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Cylinder 6 (if applicable)	commanded state of the driver and the actual state of the control circuit do not match.				100 msec rate	
IGNITION CONTROL #7 CIRCUIT	P0357	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for Cylinder 7 (if applicable)	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type B 2 trips
IGNITION CONTROL #8 CIRCUIT	P0358	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for Cylinder 8 (if applicable)	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type B 2 trips
Catalyst System Low Efficiency Bank 1	P0420	Oxygen Storage (Stored Oxygen Release Monitor or STORM)	OSC Mass EWMA (EWMA filtered)	<= 2.750 grams air		<u>Diagnostic Enable Conditions</u>	Minimum of 1 test per trip Maximum of 8 tests per trip Frequency: 12.5 ms continuous	Type A 1 Trip
		The catalyst washcoat contains Cerium Oxide. Cerium Oxide reacts with NO and O2 during lean A/F excursions to store the excess oxygen (i.e. Cerium Oxidation). During rich A/F excursions, Cerium Oxide reacts with CO and H2 to release this stored oxygen (i.e. Cerium Reduction). This is referred to as the Oxygen Storage Capacity, or OSC. The catalyst diagnostic's strategy is to essentially measure this through a forced Rich A/F excursion following a decel fuel cutoff event. OSC Period = HO2S2 Resp Time – HO2S1 Resp Time – Inert Catalyst Transport Delay. OSC Mass = Integrate{ MAF(Bank,t) * [EquivalenceRatio(t)/FuelTrim LT – 1]} @ t, t=0 to OSC Period. Normalized OSC Mass = OSC Mass *Catalyst Temperature Compensation Factor. (Compensation table to the OSC Mass based on Cat Temp. Refer to "Supporting Tables")	Test Completion: HO2S1 ≥ 600 mV and HO2S2 ≥ 200 mV OR HO2S2 Response Time - HO2S1 Response Time > 2.10 seconds	This diagnostic has the ability to run as a stand alone diagnostic or following the Post O2 Performance Diagnostic (POPD) depending on the calibration value below: Stand Alone Diagnostic: 1 (a value of 1 means the diagnostic is running in the stand alone state and a value of 0 means the diagnostic is running following POPD's completion of the rich to lean portion of the diagnostic). If calibrated to run stand alone then the catalyst diagnostic must not have completed for trip. If calibrated to run following POPD's completion of the rich to lean portion of the diagnostic (i.e. Stand Alone Diagnostic = 0) then POPD must make the request for decel fuel cutoff through the catalyst diagnostic.				

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		<p>The Catalyst Monitoring Test is done during a deceleration. Several conditions must be met in order to execute this test. These conditions and their related values are listed in the secondary parameters area of this document.</p>			<p>Predicted Catalyst Temperature ≥ 500 degC for > 60 seconds</p> <p>Engine speed and Vehicle Speed ≥ 900 RPM and > 43 KPH respectively for a minimum of 20 seconds</p> <p>Predicted Catalyst Temperature ≥ 500 degC and ≤ 900 degC</p> <p>Tests attempted this trip < 255</p> <p>The catalyst diagnostic has not yet completed for the Device control is Disabled</p> <p>Green Converter Delay Not Active</p> <p>Induction Air $-20 \leq ^\circ\text{C} \leq 100$</p> <p>Fuel Level ≥ 2 percent (if there is no fuel level fault present) or ≥ 0 percent if there is a fuel level fault active</p> <p>RunCrank Voltage ≥ 11.00 Volts</p> <p>Minimum Learn Enable Time to ensure stable BLM and PLM values ≥ 100 seconds or ≥ 100 seconds if the fuel tank level increases by ≥ 10 percent or following a code clearing event</p> <p>ECT $73 \leq ^\circ\text{C} \leq 128$</p> <p>Barometric Pressure ≥ 70 KPA</p> <p>Rapid Step Response (RSR) feature will initiate If the difference between current EWMA value and the Maximum of 24 RSR tests to detect failure when RSR is</p> <p>Green Converter Delay Criteria This is part of the check for the Diagnostic Enable The diagnostic will not be enabled until the following has Predicted catalyst temperature > 550 ° C for 3600</p> <p>To allow a DFCO Event This is checked once a decel fuel cutoff event is detected</p> <p>Torque Request ≤ 5.00 NM's</p> <p>Valid DFCO Period Criteria Prior Enable Criteria Met</p> <p>Decel Fuel Cutoff Time ≥ 1.75 seconds</p> <p>HO2S1 (pre-O2 sensor) ≤ 300.000 mV prior to DFCO exit</p> <p>HO2S2 (post-O2 sensor) ≤ 101 mV for 2.00 seconds prior to DFCO exit</p> <p>Valid DFCO Exit Criteria</p>			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Cumulative Throttle Movement Equivalence Ratio General Enable DTC's Not Set MAF_SensorFA MAF_SensorTFTKO AmbientAirDefault IAT_SensorCircuitFA IAT_SensorCircuitTFTKO ECT_Sensor_FA O2S_Bank_1_Sensor_1_FA O2S_Bank_1_Sensor_2_FA O2S_Bank_2_Sensor_1_FA O2S_Bank_2_Sensor_2_FA FuelTrimSystemB1_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA EvapPurgeSolenoidCircuit_FA IAC_SystemRPM_FA EGRValvePerformance_FA EGRValveCircuit_FA CamSensorAnyLocationFA CrankSensor_FA TPS_Performance_FA EnginePowerLimited VehicleSpeedSensor_FA PTO Not Active AmbientAirDefault_NoSnr	< 20.00 percent ≥ 1.00		
Catalyst System Low Efficiency Bank 2	P0430	Oxygen Storage (Stored Oxygen Release Monitor or STORM)	OSC Mass EWMA (EWMA filtered)	<= 2.750 grams air		<u>Diagnostic Enable Conditions</u>	Minimum of 1 test per trip Maximum of 8 tests per trip Frequency: 12.5 ms continuous	Type A 1 Trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		<p>The catalyst washcoat contains Cerium Oxide. Cerium Oxide reacts with NO and O2 during lean A/F excursions to store the excess oxygen (I.e. Cerium Oxidation). During rich A/F excursions, Cerium Oxide reacts with CO and H2 to release this stored oxygen (I.e. Cerium Reduction). This is referred to as the Oxygen Storage Capacity, or OSC. The catalyst diagnostic's strategy is to essentially measure this through a forced Rich A/F excursion following a decel fuel cutoff event.</p> <p>OSC Period = HO2S2 Resp Time – HO2S1 Resp Time – Inert Catalyst Transport Delay.</p> <p>OSC Mass = Integrate{ MAF(Bank,t) * [EquivalenceRatio(t)/FuelTrim LT – 1]} @ t, t=0 to OSC Period.</p> <p>Normalized OSC Mass = OSC Mass *Catalyst Temperature Compensation Factor. (Compensation table to the OSC Mass based on Cat Temp. Refer to "Supporting Tables")</p> <p>The Catalyst Monitoring Test is done during a deceleration. Several conditions must be meet in order to execute this test. These conditions and their related values are listed in the secondary parameters area of this document.</p>		<p>Test Completion:</p> <p>HO2S1 ≥ 600 mV and HO2S2 ≥ 200 mV</p> <p>OR</p> <p>HO2S2 Response Time - HO2S1 Response Time > 2.10 seconds</p>	<p>This diagnostic has the ability to run as a stand alone diagnostic or following the Post O2 Performance Diagnostic (POPD) depending on the calibration value below:</p> <p>Stand Alone Diagnostic: 1 (a value of 1 means the diagnostic is running in the stand alone state and a value of 0 means the diagnostic is running following POPD's completion of the rich to lean portion of the diagnostic).</p> <p>If calibrated to run stand alone then the catalyst diagnostic must not have completed for trip.</p> <p>If calibrated to run following POPD's completion of the rich to lean portion of the diagnostic (i.e. Stand Alone Diagnostic = 0) then POPD must make the request for decel fuel cutoff through the catalyst diagnostic.</p> <p>Predicted Catalyst Temperature ≥ 500 degC for > 60 seconds</p> <p>Engine speed and Vehicle Speed ≥ 900 RPM and > 43 KPH respectively for a minimum of 20 seconds</p> <p>Predicted Catalyst Temperature ≥ 500 degC and ≤ 900 degC</p> <p>Tests attempted this trip < 255</p> <p>The catalyst diagnostic has not yet completed for the</p> <p>Device control is Disabled</p> <p>Green Converter Delay Not Active</p> <p>Induction Air -20 ≤ °C ≤ 100</p> <p>Fuel Level ≥ 2 percent (if there is no fuel level fault present) or ≥ 0 percent if there is a fuel level fault active</p> <p>RunCrank Voltage ≥ 11.00 Volts</p>			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Minimum Learn Enable Time to ensure stable BLM and PLM values ECT Barometric Pressure Rapid Step Response (RSR) feature will initiate If the difference between current EWMA value and the Maximum of 24 RSR tests to detect failure when RSR is Green Converter Delay Criteria This is part of the check for the Diagnostic Enable The diagnostic will not be enabled until the following has Predicted catalyst temperature > 550 ° C for 3600 To allow a DFCO Event This is checked once a decel fuel cutoff event is detected Torque Request Valid DFCO Period Criteria Prior Enable Criteria Met Decel Fuel Cutoff Time HO2S1 (pre-O2 sensor) HO2S2 (post-O2 sensor) Valid DFCO Exit Criteria Cumulative Throttle Movement Equivalence Ratio General Enable DTC's Not Set MAF_SensorFA MAF_SensorTFTKO AmbientAirDefault IAT_SensorCircuitFA IAT_SensorCircuitTFTKO ECT_Sensor_FA O2S_Bank_1_Sensor_1_FA O2S_Bank_1_Sensor_2_FA O2S_Bank_2_Sensor_1_FA O2S_Bank_2_Sensor_2_FA FuelTrimSystemB1_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA EvapPurgeSolenoidCircuit_FA IAC_SystemRPM_FA	≥ 100 seconds or ≥ 100 seconds if the fuel tank level increases by ≥ 10 percent or following a code clearing event 73 ≤ °C ≤ 128 ≥ 70 KPA ≤ 5.00 NM's ≥ 1.75 seconds ≤ 300.000 mV prior to DFCO exit ≤ 101 mV for 2.00 seconds prior to DFCO exit < 20.00 percent ≥ 1.00		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					EGRValvePerformance_FA EGRValveCircuit_FA CamSensorAnyLocationFA CrankSensor_FA TPS_Performance_FA EnginePowerLimited VehicleSpeedSensor_FA PTO Not Active AmbientAirDefault NoSnsr			
Evaporative Emission (EVAP) System Small Leak Detected	P0442	This DTC will detect a small leak ($\geq 0.020"$) in the EVAP system between the fuel fill cap and the purge solenoid. The engine off natural vacuum method (EONV) is used. EONV is an evaporative system leak detection diagnostic that runs when the vehicle is shut off when enable conditions are met. Prior to sealing the system and performing the diagnostic, the fuel volatility is analyzed. In an open system (Canister Vent Solenoid [CVS] open) high volatility fuel creates enough flow to generate a measurable pressure differential relative to atmospheric. After the volatility check, the vent solenoid will close. After the vent is closed, typically a build up of pressure from the hot soak begins (phase-1). The pressure typically will peak and then begin to decrease as the fuel cools. When the pressure drops (-62.27) Pa	The total delta from peak pressure to peak vacuum during the test is normalized against a calibration pressure threshold table that is based upon fuel level and ambient temperature. (See P0442: EONV Pressure Threshold Table on Supporting Tables Tab). The normalized value is calculated by the following equation: $1 - (\text{peak pressure} - \text{peak vacuum}) / \text{pressure threshold}$. The normalized value is entered into EWMA (with 0= perfect pass and 1= perfect fail). When EWMA is > 0.65 the DTC light is illuminated. The DTC light can be turned off if the EWMA is ≤ 0.35	> 0.65 (EWMA Fail Threshold) ≤ 0.35 (EWMA Re-Pass Threshold)	Fuel Level Drive Time Drive length ECT Baro Odometer Engine not run time before key off must be Time since last complete test if normalized result and EWMA is passing OR Time since last complete test if normalized result or EWMA is failing Estimated ambient temperature at end of drive Estimate of Ambient Air Temperature Valid	$10\% \leq \text{Percent} \leq 90\%$ ≥ 600 seconds ≥ 3.1 miles ≥ 70 °C ≥ 70 kPa ≥ 10.0 miles \leq refer to "P0442: Engine Off Time Before Vehicle Off Maximum as a Function of Estimated Ambient Temperature table" in Supporting Tables ≥ 17 hours ≥ 10 hours $0\text{ }^\circ\text{C} \leq \text{Temperature} \leq 34\text{ }^\circ\text{C}$	Once per trip, during hot soak (up to 2400 sec.). No more than 2 unsuccessful attempts between completed tests.	Type A 1 trip EWMA Average run length is 7 under normal conditions Run length is 3 to 6 trips after code clear or non-volatile reset

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		<p>from peak pressure, the vent is then opened for 60 seconds to normalize the system pressure. The vent is again closed to begin the vacuum portion of the test (phase-2). As the fuel temperature continues to fall, a vacuum will begin forming. The vacuum will continue until it reaches a vacuum peak. When the pressure rises 62.27 Pa from vacuum peak, the test then completes. If the key is turned on while the diagnostic test is in progress, the test will abort.</p>	<p>and stays below the EWMA fail threshold for 2 additional consecutive trips.</p>	<p>Abort Conditions:</p>	<p>Conditions for Estimate of Ambient Air Temperature to be valid:</p> <p>1. Cold Start Startup delta deg C (ECT-IAT) ≤ 8 °C OR</p> <p>2. Short Soak and Previous EAT Valid Previous time since engine off ≤ 7200 seconds OR</p> <p>3. Less than a short soak and Previous EAT Not Valid Previous time since engine off ≤ 7200 seconds AND Must expire Estimate of Ambient Temperature Valid Conditioning Time. "P0442: Estimate of Ambient Temperature Valid Conditioning Time" in Supporting Tables Tab. OR</p> <p>4. Not a Cold Start and greater than a Short Soak Previous time since engine off > 7200 seconds AND Must expire maximum value in Estimate of Ambient Temperature Valid Conditioning Time. Please see "P0442: Estimate of Ambient Temperature Valid Conditioning Time" in Supporting Tables Tab.</p> <p>1. High Fuel Volatility During the volatility phase, pressure in the fuel tank is integrated vs. time. If the integrated pressure is > -5 then test aborts and unsuccessful attempts is incremented.</p>			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					OR			
					2. Vacuum Refueling Detected			
					See P0454 Fault Code for information on vacuum refueling algorithm.			
					OR			
					3. Fuel Level Refueling Detected			
					See P0464 Fault Code for information on fuel level refueling.			
					OR			
					4. Vacuum Out of Range and No Refueling			
					See P0451 Fault Code for information on vacuum sensor out of range and P0464 Fault Code for information on fuel level refueling.			
					OR			
					5. Vacuum Out of Range and Refueling Detected			
					See P0451 Fault Code for information on vacuum sensor out of range and P0464 Fault Code for information on fuel level refueling.			
					OR			
					6. Vent Valve Override Failed			
					Device control using an off-board tool to control the vent solenoid, cannot exceed during the EONV test		0.50 seconds	
					OR			
					7. Key up during EONV test			
					No active DTCs:	FuelLevelDataFault MAF_SensorFA ECT_Sensor_FA IAT_SensorFA VehicleSpeedSensor_F A IgnitionOffTimeValid AmbientAirDefault AmbientAirDefault AmbientAirDefault P0443 P0446 P0449 P0452 P0453 P0455 P0496		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			<p>voltage)</p> <p>The difference between tank vacuum sensor voltage and the nominal offset voltage is then normalized against the appropriate threshold listed above to produce a ratio between 0.0 and 1.0. This normalized re-zero ratio is then filtered with a EWMA (with 0= perfect pass and 1=perfect fail).</p> <p>When EWMA is > 0.73 (EWMA Fail Threshold) the DTC light is illuminated. The DTC light can be turned off if the EWMA is ≤ 0.40 (EWMA Re-Pass Threshold) and stays below the EWMA fail threshold for 2 additional consecutive trips.</p>	0.2 volts			The length of the test is determined by the refueling rationality test, which can take up to 600 seconds to complete.	trips after code clear or non-volatile reset
Fuel Tank Pressure (FTP) Sensor Circuit Low Voltage	P0452	This DTC will detect a fuel tank pressure sensor signal that is too low out of range.	<p>Fuel tank pressure sensor signal</p> <p>The normal operating range of the fuel tank pressure sensor is 0.5 volts (~1245 Pa) to 4.5 volts (~ - 3736 Pa).</p>	< 0.15 volts (3 % of Vref or ~ 1681 Pa)	<p>Time delay after sensor power up for sensor warm-up</p> <p>ECM State ≠ crank</p>	is 0.10 seconds	<p>80 failures out of 100 samples</p> <p>100 ms / sample</p> <p>Continuous</p>	Type B 2 trips
Fuel Tank Pressure (FTP) Sensor Circuit High Voltage	P0453	This DTC will detect a fuel tank pressure sensor signal that is too high out of range.	<p>Fuel tank pressure sensor signal</p> <p>The normal operating range of the fuel tank pressure sensor is 0.5 volts (~1245 Pa) to 4.5 volts (~ - 3736 Pa).</p>	> 4.85 volts (97% of Vref or ~ - 4172 Pa)	<p>Time delay after sensor power up for sensor warm-up</p> <p>ECM State ≠ crank</p>	is 0.10 seconds	<p>80 failures out of 100 samples</p> <p>100 ms / sample</p> <p>Continuous</p>	Type B 2 trips
Fuel Tank Pressure (FTP) Sensor Circuit Intermittent	P0454	This DTC will detect intermittent tank vacuum sensor signals that would have caused the engine-off natural vacuum small leak test to abort due to an apparent re-fueling event.	If an abrupt change in tank vacuum is detected the engine-off natural vacuum test is aborted due to an apparent refueling event. Subsequent to the abort, a refueling rationality test is executed to confirm that a		This test will execute whenever the engine-off natural vacuum small leak test (P0442) executes		This test is executed during an engine-off natural vacuum small leak test. The test can only execute up to once per engine-	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			<p>refueling event occurred. If a refueling is confirmed, then the test sample is considered passing. Otherwise, the sample is considered failing indicating an intermittent signal problem.</p> <p>The abrupt change is defined as a change in vacuum:</p> <p>in the span of 1.0 seconds.</p> <p>A refueling event is confirmed if the fuel level has a persistent change of 10 % for 30 seconds.</p>	112 Pa < Vacuum < 249 Pa			<p>off period.</p> <p>The length of the test is determined by the refueling rationality test, which can take up to 600 seconds to complete.</p> <p>The test will report a failure if 2 out of 3 samples are failures.</p>	
Evaporative Emission (EVAP) System Large Leak Detected	P0455	<p>This DTC will detect a weak vacuum condition (large leak or purge blockage) in the EVAP system.</p> <p>Purge valve is controlled (to allow purge flow) and vent valve is commanded closed.</p>	<p>Purge volume</p> <p>BEFORE</p> <p>Tank vacuum</p> <p>2 liters of fuel must be consumed after setting the DTC active the first time to set the DTC active the second time.</p> <p><u>Weak Vacuum Follow-up Test</u> (fuel cap replacement test) Weak Vacuum Test failed. Passes if tank vacuum</p> <p>Note: Weak Vacuum Follow-up Test can only report a pass.</p>	<p>> 17 liters</p> <p>≤ 2740 Pa</p> <p>≥ 2740 Pa</p>	<p>Fuel Level</p> <p>System Voltage</p> <p>BARO</p> <p>Purge Flow</p> <p>No active DTCs:</p> <p><u>Cold Start Test</u> If ECT > IAT, Startup temperature delta (ECT-IAT):</p>	<p>10% ≤ Percent ≤ 90%</p> <p>11 volts ≤ Voltage ≤ 18 volts</p> <p>≥ 70 kPa</p> <p>≥ 3.75 %</p> <p>MAP_SensorFA</p> <p>TPS_FA</p> <p>VehicleSpeedSensor_FA</p> <p>IAT_SensorCircuitFA</p> <p>ECT_Sensor_FA</p> <p>AmbientAirDefault</p> <p>EnginePowerLimited</p> <p>P0443</p> <p>P0449</p> <p>P0452</p> <p>P0453</p> <p>P0454</p> <p>≤ 8 °C</p>	<p>Once per cold start</p> <p>Time is dependent on driving conditions</p> <p>Maximum time before test abort is 1000 seconds</p> <p><u>Weak Vacuum Follow-up Test</u> With large leak detected, the follow-up test is</p>	Type B trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Cold Test Timer Startup IAT Temperature Startup ECT Weak Vacuum Follow-up Test This test can run following a weak vacuum failure or on a hot restart.	≤ 1000 seconds $4\text{ }^{\circ}\text{C} \leq \text{Temperature} \leq 30\text{ }^{\circ}\text{C}$ $\leq 35\text{ }^{\circ}\text{C}$	limited to 1300 seconds. Once the MIL is on, the follow-in test runs	
Fuel Level Sensor 1 Performance	P0461	This DTC will detect a fuel sender stuck in range in the primary fuel tank.	Delta Fuel Volume change over an accumulated 150 miles.	< 3 liters	Engine Running No active DTCs:	VehicleSpeedSensor_F A	250 ms / sample Continuous	Type B 2 trips
Fuel Level Sensor 1 Circuit Low Voltage	P0462	This DTC will detect a fuel sender stuck out of range low in the primary fuel tank.	Fuel level Sender % of 5V range	< 10 %	Run/Crank Voltage	11 volts \leq Voltage \leq 18 volts	180 failures out of 225 samples 100 ms / sample Continuous	Type B 2 trips
Fuel Level Sensor 1 Circuit High Voltage	P0463	This DTC will detect a fuel sender stuck out of range high in the primary fuel tank.	Fuel level Sender % of 5V range	> 60 %	Run/Crank Voltage	11 volts \leq Voltage \leq 18 volts	180 failures out of 225 samples 100 ms / sample Continuous	Type B 2 trips
Fuel Level Sensor 1 Circuit Intermittent	P0464	This DTC will detect intermittent fuel level sensor signals that would have caused the engine-off natural vacuum small leak test to abort due to an apparent re-fueling event.	If a change in fuel level is detected, the engine-off natural vacuum test is aborted due to an apparent refueling event. Subsequent to the abort, a refueling rationality test is executed to confirm that an actual refueling event occurred. If a refueling event is confirmed, then the test sample is considered passing. Otherwise, the sample is considered failing indicating an intermittent signal problem. An intermintant change in fuel level is defined as: The fuel level changes and does not remain for 30 seconds during a 600 second refueling rationality test.	by 10 % > 10 %	This test will execute whenever the engine-off natural vacuum small leak test (P0442) executes		This test is executed during an engine-off natural vacuum small leak test. The test can only execute up to once per engine-off period. The length of the test is determined by the refueling rationality test, which can take up to 600 seconds to complete. The test will report a failure if 2 out of 3 samples are failures.	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Cooling Fan 1 Relay Control Circuit (ODM)	P0480	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Run/Crank Voltage Engine Speed	11 volts ≤ Voltage ≤ 18 volts ≥ 0 RPM	20 failures out of 25 samples 250 ms / sample Continuous with fan operation	Type B 2 trips
Cooling Fan 1 Relay Control Circuit (ODM)	P0481	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Run/Crank Voltage Engine Speed	11 volts ≤ Voltage ≤ 18 volts ≥ 0 RPM	20 failures out of 25 samples 250 ms / sample Continuous with fan operation	Type B 2 trips
Cooling Fan 3 Relay Control Circuit (ODM)	P0482	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Run/Crank Voltage Engine Speed	11 volts ≤ Voltage ≤ 18 volts ≥ 0 RPM	20 failures out of 25 samples 250 ms / sample Continuous with fan operation	Type B 2 trips
Evaporative Emission (EVAP) System Flow During Non-Purge	P0496	This DTC will determine if the purge solenoid is leaking to engine manifold vacuum. This test will run with the purge valve closed and the vent valve closed.	Tank Vacuum > 2491 Pa for 5 seconds BEFORE Test time	> 2491 Pa ≥ refer to "P0496: Purge Valve Leak Test Engine Vacuum Test Time (Cold Start) as a Function of Fuel Level table" in Supporting Tables Tab.	Fuel Level System Voltage BARO Startup IAT Temperature Startup ECT No active DTCs:	10% ≤ Percent ≤ 90% 11 volts ≤ Voltage ≤ 18 volts ≥ 70 kPa 4 °C ≤ Temperature ≤ 30 °C ≤ 35 °C MAP_SensorFA TPS_FA VehicleSpeedSensor_FA IAT_SensorCircuitFA ECT_Sensor_FA AmbientAirDefault EnginePowerLimited P0443 P0449 P0452 P0453 P0454	Once per cold start Cold start: max time is 1000 seconds	Type B 2 trips
Engine Oil Pressure (EOP) Sensor Performance	P0521	Determines if the Engine Oil Pressure (EOP) Sensor is stuck or biased in range	To fail a currently passing test: The weighted filtered difference between measured EOP and predicted EOP (a function of engine speed and engine oil temp.):	> 0 kPa and (< -50 kPa OR > 50	Diagnostic enabled/disabled	Enabled	Performed every 100 msec	Type B 2 trips
					Oil Pressure Sensor In Use	Present		
					Filtered engine oil pressure test weighting (function of engine speed, engine oil temperature,			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
				kPa) To pass a currently failing test: The weighted filtered difference between measured EOP and predicted EOP (a function of engine speed and engine oil temp.): > 0 kPa and (> -47 kPa AND < 47 kPa)	predicted oil pressure, and engine load stability). Details on Supporting Tables Tab (P0521 Section) No active DTC's	>= .3 ratio Fault bundles: CrankSensorFA ECT_Sensor_FA MAF_SensorFA IAT_SensorFA EOPCircuit_FA		
Engine Oil Pressure (EOP) Sensor Circuit Low Voltage	P0522	Determines if the Engine Oil Pressure (EOP) Sensor circuit voltage is too low	(Engine Oil Pressure Sensor Circuit Voltage) / 5 Volts	< 5 percent	Engine Running Ignition Voltage Sensor Present Diagnostic enabled/disabled	= True <= 18.0 V and >= 11.0 No Enabled	50 failures out of 63 samples Performed every 100 msec	Type B 2 trips
Engine Oil Pressure (EOP) Sensor Circuit High Voltage	P0523	Determines if the Engine Oil Pressure (EOP) Sensor circuit voltage is too high	(Engine Oil Pressure Sensor Circuit Voltage) / 5	> 85 percent	Engine Running Ignition Voltage Sensor Present Diagnostic enabled/disabled	= True <= 18.0 V and >= 11.0 No Enabled	204 failures out of 255 samples Performed every 100 msec	Type B 2 trips
Control Module Read Only Memory (ROM)	P0601	This DTC will be stored if the calibration check sum is incorrect	Output state invalid		PCM State	= crank or run	Diagnostic runs continuously in the background Diagnostic reports a fault if 1 failure occurs on the first pass. Diagnostic reports a fault if 5 failures occur after the first pass is complete.	Type A 1 trip
Control Module Not Programmed	P0602	This DTC will be stored if the PCM is a service PCM that has not been programmed.	Output state invalid		PCM State	= crank or run PCM is identified through calibration as a	Diagnostic runs at powerup	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Control Module Long Term Memory Reset	P0603	Non-volatile memory checksum error at controller power-up	Checksum at power-up does not match checksum at power-down				Diagnostic runs at powerup Diagnostic reports a fault if 1 failure occurs	Type A 1 trip
ECM RAM Failure	P0604	Indicates that the ECM is unable to correctly read data from or write data to RAM	1. Primary processor data pattern written doesn't match the pattern read for a count >	1 count if found on first memory scan. 5counts if found on subsequent scans.			1. Will finish first memory scan within 30 seconds at all engine conditions - diagnostic runs continuously	Type A 1 trip
			2. Secondary processor battery backed RAM failed checksum twice for original values at power up and the defaulted values			2. Completion at initialization, <500 ms		
			3. Secondary processor copy of calibration area to RAM failed for a count >	2counts		3. Completion at initialization, <500 ms		
			4. Secondary Processor data pattern written doesn't match the pattern read consecutive times			4. Will finish within 30 seconds at all engine conditions.		
			5. Secondary Processor TPS or APPS minimum learned values fail compliment check continuously			5. 0.0625sec continuous		
ECM Processor	P0606	Indicates that the ECM has detected an internal processor integrity fault						Type A 1 trip
1.Communication of Seed & Key values between processors			Returned values from Seed & Key algorithm different than expected			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No errors exist in intercommunication between primary and secondary processors	1. 3/17 counts; 50.0ms/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
2. Processor Performance Check - ETC software is not executed or it is not executed in proper order			Software tasks on the Primary Processor in the 12.5 ms loop were not executed or were not executed in the correct order.	0.0625sec continuous		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	0.0625sec continuous	
			Software tasks on the Primary Processor in the 25 ms loop were not executed or were not executed in the correct order.	0.1250sec continuous			0.1250sec continuous	
			Software tasks on the Primary Processor in the 50 ms loop were not executed or were not executed in the correct order.	0.2500sec continuous			0.2500sec continuous	
			Software tasks on the Primary Processor in the 100 ms loop were not executed or were not executed in the correct order.	0.5000sec continuous			0.5000sec continuous	
			The first completion of the RAM diagnostic on the Primary Processor was completed > the amount of time	360.0000sec continuous			360.0000sec continuous	
			The first completion of the ROM diagnostic on the Primary Processor was completed > the amount of time	360.0000sec continuous			360.0000sec continuous	
			Software tasks on the Secondary Processor were not executed or were not executed in the correct order.	Two Consecutive Loops (12.5ms * 2) 25ms			25 ms	
3. Processor Performance Check - SPI Failure			Loss or invalid message of SPI communication from the Secondary Processor at initialization detected by the Primary Processor or loss or invalid message of SPI communication from the Secondary Processor after a valid message was recieved by the Primary Processor			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	In the primary processor, 159/400 counts intermittent or 15 counts continuous; 39 counts continuous @ initialization	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Loss or invalid message of SPI communication from the Primary Processor at initialization detected by the Secondary Processor or loss or invalid message of SPI communication from the Primary Processor after a valid message was recieved by the Secondary Processor				In the secondary processor 0.4750sec at initialization, 0.1750sec continuous or 20/200 intermittent.	
4. Processor Performance Check - Secondary Processor state of health (Main)			Primary processor check of the secondary processor by verifying the hardware line toggle between the two processors toggles within the threshold values	9.3750sec and 15.6250sec		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	9counts continuous at initialization or 9 counts continuous; 12.5 msec /count in the Primary processor	
5. Processor Performance Check - Primary Processor Learn Corruption Fault			Primary Processor TPS or APPS minimum learned values fail compliment check			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	0.1000sec continuous	
6. Processor Performance Check - Primary Processor Clock Fault			The ocllator failed for the Primary processor where the clock is outside the threshold	27.85 kHz and 37.68 kHz		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	100ms continuous	
7. Processor Performance Check - Secondary Processor ALU Fault			The secondary check of the ALU failed to compute the expected result			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	12.5ms continuous	
8. Processor Performance Check - Secondary Processor Register Configuration Fault			Secondary processor failed configuration check of the registers.			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	12.5ms continuous	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
9. Processor Performance Check - Secondary Processor StackFault			Secondary processor checks stack beginning and end point for pattern written at initialization .			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	12.5ms continuous	
10. Processor Performance Check - Secondary Processor MAIN Processor Fault			Secondary processor check that the Primary processor hasn't set a select combination of internal processor faults			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	12.5ms continuous	
11. Processor Performance Check - Primary Processor ALU Fault			The primary processor check of the ALU failed to compute the expected result	Two Consecutive Times			12.5ms continuous	
12. Processor Performance Check - Primary Processor Register Configuration Fault			Primary processor failed configuration check of the registers.				12.5ms continuous	
Control Module Accelerator Pedal Position (APP) System Performance	P060D	Verify that the indicated accelerator pedal position calculation is correct	1. PPS sensor switch fault - When the APP sensor 2 is shorted to ground, the sensor value is >	41		1. Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions Engine Running TPS minimum learn is not active No Pedal related errors or diagnostic faults. Diagnostic is enabled (Only applicable for Legacy accelerator pedals)	Consecutive checks within 200ms or 2/2 counts; 175msec/count	Type A 1 trip
			2. Difference between primary processor indicated accelerator pedal position and secondary indicated accelerator pedal position is >				2. Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
				5		Primary Processor Pedal Sync Error is FALSE Engine Running TPS minimum learn is not active Diagnostic is enabled (Only applicable for Legacy accelerator pedals)		
Control Module EEPROM Error	P062F	Indicates that the NVM Error flag has not been cleared	Last EEPROM write did not complete		Ignition State	= unlock/accessory, run, or crank	1 test failure Diagnostic runs once at powerup	Type A 1 trips
5 Volt Reference #1 Circuit	P0641	Detects a continuous or intermittent short on th 5 volt reference circuit #1	Primary Processor Vref1 <	4.432		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	19/39 counts or 0.1875sec continuous; 12.5 msec/count in Primary processor	Type A 1 trips
			Primary Processor Vref1 >	4.659				
			Secondary Processor Vref1 <	4.432				
			Secondary Processor Vref1 >	4.659				
Malfunction Indicator Lamp (MIL) Control Circuit (ODM)	P0650	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Run/Crank Voltage Remote Vehicle Start is not active	11 volts ≤ Voltage ≤ 18 volts	20 failures out of 25 samples 250 ms / sample Continuous	Type B 2 trips NO MIL
5 Volt Reference #2 Circuit	P0651	Detects a continuous or intermittent short on th 5 volt reference circuit #2	Primary Processor Vref2 <	4.432		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	19/39 counts or 0.1875sec continuous; 12.5 msec/count in main /Secondary processor	Type A 1 trip
			or Primary Processor Vref2 >	4.659				
			Secondary Processor Vref1 <	4.432				
			Secondary Processor Vref1 >	4.659				
							19/39 counts or 15 counts continuous; 12.5 msec/count in Secondary processor	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			And Delta between powerup ECT and IAT	<= 15.75 °C	Propulsion active time Engine-off time	> 10 Seconds > 28800 seconds	Continuous	
Hybrid Powertrain Control Module	P0A1D	Indicates that the MCPA has detected an HCP Status Failure fault	ECM criteria to look for MCPA message			Run/Crank High for at least 2.5000sec All other parameters and enable conditions are controlled by the PLD and MCPA processors in the HCP.	3/4 counts; 12.5ms/count	Type A 1 trip Type B 2 Trip
Hybrid Powertrain Control Module Request MIL Illumination	P0AC4	Monitor Hybrid Control Module (HCP) MIL Request to determine when the HCP has detected a MIL illuminating fault.	HCP Emissions-Related DTC set			Time since power-up > 3 seconds Time Since Code Clear > 2 seconds Diagnostic System not Disabled for Service Run Crank Active	Continuous 100 msec	Type A 1 trip
Inlet Airflow System Performance (naturally aspirated applications)	P1101	Determines if there are multiple air induction problems affecting airflow and/or manifold pressure.	Filtered Throttle Model AND (ABS(Measured Flow – Modeled Air Flow) Filtered OR ABS(Measured MAP – MAP Model 1) Filtered AND ABS(Measured MAP – MAP Model 2) Filtered	<= 150 kPa/(g/s) > 10 grams/sec > 15.0 kPa) > 15.0 kPa	Engine Speed Engine Speed Coolant Temp Coolant Temp Intake Air Temp Intake Air Temp Minimum total weight factor (all factors multiplied together)	>= 450 RPM <= 8000 RPM > -7 Deg C < 125 Deg C > -7 Deg C < 125 Deg C < 0.00 Filtered Throttle Model multiplied by TPS Residual Weight Factor based on RPM Modeled Air Flow multiplied by MAF	Continuous Calculation are performed every 12.5 msec	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					No Active DTCs:	Residual Weight Factor based on RPM and MAF Residual Weight Factor Based on MAF Estimate MAP Model 1 multiplied by MAP1 Residual Weight Factor based on RPM MAP Model 2 multiplied by MAP2 Residual Weight Factor based on RPM See table "IFRD Residual Weighting Factors". MAP_SensorCircuitFA EGRValve_FP EGRValvePerformance_FA MAF_SensorCircuitFA CrankSensorFA ECT_sensor_FA ECT_Sensor_FP IAT_SensorFA IAT_SensorCircuitFP CylDeacSystemTFTKO		
O2S Insufficient Switching Bank 1 Sensor 1	P1133	This DTC determines if the O2 sensor is no longer sufficiently switching.	Fault condition present if Half Cycle L/R or R/L Switches are below the threshold. OR If Slope Time L/R or R/L Switches are below the threshold.	H/C L/R switches < Threshold, or H/C R/L switches < Threshold, (refer to table named "P1133 - O2S HC L to R Switches Limit Bank 1 Sensor 1" Pass/Fail Threshold table & "P1133 - O2S HC R to L Switches Limit Bank 1 Sensor 1" Pass/Fail Threshold table in Supporting tables tab) OR	No Active DTC's	TPS_ThrottleAuthority Defaulted MAP_SensorFA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault MAF_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA	Sample time is 40 seconds Frequency: Once per trip Green Sensor Delay Criteria	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
				S/T L/R switches < 1, or S/T R/L switches < 1	EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR System FA EthanolCompositionSensor_FA EngineMisfireDetected_FA = P0131, P0132 or P0134 Bank 1 Sensor 1 DTC's not active System Voltage < 10.0 volts < system voltage < 18.0 volts EGR Device Control = Not active Idle Device Control = Not active Fuel Device Control = Not active AIR Device Control = Not active Low Fuel Condition Diag = False Green O2S Condition = Not Valid O2 Heater on for >= 0 seconds Learned Htr resistance = Valid Engine Coolant > 55 °C IAT > -40 °C Engine run Accum > 160 seconds Purge duty cycle >= 0 % duty cycle Engine airflow > 20 gps <= engine airflow <= 55 gps Engine speed 1000 <= RPM <= 3000 Fuel < 87 % Ethanol Baro > 70 kpa Air Per Cylinder >= 150 mGrams Low Fuel Condition Diag = False Fuel Control State = Closed Loop Closed Loop Active = TRUE LTM fuel cell = Enabled Transient Fuel Mass <= 100.0 mgrams Baro = Not Defaulted not = Power Fuel Control State = Enrichment	EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR System FA EthanolCompositionSensor_FA EngineMisfireDetected_FA = P0131, P0132 or P0134 Bank 1 Sensor 1 DTC's not active System Voltage < 10.0 volts < system voltage < 18.0 volts EGR Device Control = Not active Idle Device Control = Not active Fuel Device Control = Not active AIR Device Control = Not active Low Fuel Condition Diag = False Green O2S Condition = Not Valid O2 Heater on for >= 0 seconds Learned Htr resistance = Valid Engine Coolant > 55 °C IAT > -40 °C Engine run Accum > 160 seconds Purge duty cycle >= 0 % duty cycle Engine airflow > 20 gps <= engine airflow <= 55 gps Engine speed 1000 <= RPM <= 3000 Fuel < 87 % Ethanol Baro > 70 kpa Air Per Cylinder >= 150 mGrams Low Fuel Condition Diag = False Fuel Control State = Closed Loop Closed Loop Active = TRUE LTM fuel cell = Enabled Transient Fuel Mass <= 100.0 mgrams Baro = Not Defaulted not = Power Fuel Control State = Enrichment	The diagnostic will not be enabled until the next ignition cycle after the following has been met: Airflow greater than 22 gps for 120000 grams of accumulated flow non-continuously. (Note that all other enable criteria must be met on the next ignition cycle for the test to run on that ignition cycle). Note: This feature is only enabled when the vehicle is new and cannot be enabled in service		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Purge duty cycle Engine airflow Engine speed Fuel Baro Air Per Cylinder Low Fuel Condition Diag Fuel Control State Closed Loop Active LTM fuel cell Transient Fuel Mass Baro Fuel Control State Fuel State Commanded Proportional Gain Time All of the above met for	>= 0 % duty cycle 20 gps <= engine airflow <= 55 gps 1000 <= RPM <= 3000 < 87 % Ethanol > 70 kpa >= 150 mGrams = False = Closed Loop = TRUE = Enabled <= 100.0 mgrams = Not Defaulted not = Power Enrichment DFCO not active >= 0.0 % > 4.5 seconds		
EngineMetal OvertempActive	P1258	The objective of the algorithm is to protect the engine in the event of engine metal overtemperature, mainly due to loss of coolant	The ECM detects that the engine coolant has exceeded a threshold for certain amount of time.	Engine Coolant > 132 for 10 seconds	If feature was active and it set the coolant sensor fault then feature will be enabled on coolant sensor fault pending on the next trip.	KeEMOG_b_DisableO vertempProtect = 0 Feature is enabled only if KeEMOG_b_DisableO vertempProtect = 1 and Engine Run time > 10	Time that EMOP active must be true for P1258 to be set is 0 seconds	Type A 1 trips
ABS Rough Road malfunction	P1380	This diagnostic detects if the ABS controller is indicating a fault, and misfire is present. When this occurs, misfire will continue to run.	GMLan Message: "Wheel Sensor Rough Road Magnitude Validity"	= FALSE	Vehicle Speed Engine Speed Engine Load RunCrankActive Active DTC	VSS ≥ 8 kph rpm < 8192 load < 60 = TRUE P0300, MIL Request	40 failures out of 80 samples 250 ms /sample Continuous	"Special Type C" 1 trip No MIL
ABS System Rough Road Detection Communication Fault	P1381	This diagnostic detects if the rough road information is no longer being received from the ABS controller, and misfire is present. When this occurs, misfire will continue to run.	Loss of GMLan Message: "Wheel Sensor Rough Road Magnitude"	= FALSE	Vehicle Speed Engine Speed Engine Load RunCrankActive Active DTC	VSS ≥ 8 kph rpm < 8192 load < 60 = TRUE P0300, MIL Request	40 failures out of 80 samples 250 ms /sample Continuous	"Special Type C" 1 trip No MIL

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Cold Start Emissions Reduction System Fault	P1400	Model based test computes power from exhaust flow and thermal energy resulting from elevated idle speed and retarded spark advance. Detects if the cold start emission reduction system has failed resulting in the delivered power being out of range.	Average desired accumulated exhaust power - Average estimated accumulated exhaust power OR Average desired accumulated exhaust power - Average estimated accumulated exhaust power	< -11.00 KJ/s (high RPM failure mode) > 6.00 KJ/s (low RPM failure mode)	Cold Start Emission Reduction Strategy Is Active. To enable the cold start emission reduction strategy the catalyst temperature must be < 300.00 degC and the engine coolant must be > 0.00 degC. The Cold Start Emission Reduction strategy will exit when Vehicle Speed < 2 kph Driver must be off the accel pedal. This checks that the A change in throttle position (tip-in/tip-out) will initiate a Idle Speed Control System is Active (always TRUE in General Enable DTC's Not Set AcceleratorPedalFailure ECT_Sensor_FA IAT_SensorCircuitFA IAT2_SensorCircuitFA CrankSensorFaultActive FuelInjectorCircuit_FA MAF_SensorFA MAP_SensorFA EngineMisfireDetected_FA Clutch Sensor FA IAC_SystemRPM_FA IgnitionOutputDriver_FA TPS_FA VehicleSpeedSensor_FA 5VoltReferenceMAP_OOR_Flt TransmissionEngagedState_FA EngineTorqueInaccurate	Runs once per trip when the cold start emission reduction strategy is active Frequency: 100ms Loop Test completes after 15 seconds of accumulated qualified data.	Type A 1 Trip	
Throttle Actuator Control - Position Performance	P1516	1) Detect a throttle positioning error	The throttle model and actual Throttle position differ by > or The throttle model and actual Throttle position differ by <	7.19% 7.19%	Engine Running or Ignition Voltage >	Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions 11	0.1875sec in the Secondary processor	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					and Ignition Voltage > and Throttle is being Controlled and Communication Fault (SPI is not set) and TPS minimum learn is not active Ignition voltage failure is false (P1682)	5.4		
		2) Detect throttle control is driving the throttle in the incorrect direction	Thottle Position >	39.76%	(Throttle is being Controlled and TPS minimum learn is active) or Reduce Engine Power is Active	Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	0.1375sec continuous	
		3) Degraded Motor	Desired throttle position is stable within 0.25% for 4.0000sec and the delta between Indicated throttle position and desired throttle position is greater than 2.00%		Engine Running or Ignition Voltage > and Ignition Voltage > and Throttle is being Controlled and Communication Fault (SPI is not set) and TPS minimum learn is not active Ignition voltage failure is false (P1682)	11 5.4	0.4875sec continuous on secondary processor	
Hybrid Control Torque Request Circuit	P15F2	Determines if torque request from the HCP is valid	1. Serial Communication 2's complement not equal for message \$0A9 OR 2. Serial Communication rolling count value shall be + 1 from previous \$0A9 message	Message <> 2's complement of message Message rolling count value <> previous message rolling count value plus one	Secondary High Speed Bus is Present No Serial communication loss to HCP (U1817) Run Crank Active	>= 500 msec	1. # of Protect Errors >= 10 out of 16 samples OR . # of Alive Rolling Errors >= 10 out of 16 samples	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							Pass diagnostic if samples >= 16 Performed every 12.5 msec	
Ignition Voltage Correlation	P1682	Detect a continuous or intermittent out of correlation between the Run/Crank Ignition Voltage & the Powertrain Relay Ignition Voltage	Run/Crank – ETC Run/Crank >	3.00Volts	Powertrain commanded on and Run/crank voltage > or ETC Run/crank voltage > and Run/crank voltage >	Table, f(IAT). See supporting tables 5.5 5.5	240/480 counts 12.5 msec/count in main processor or 0.175 sec when ETC Run/Crank is lower than Run/Crank by the threshold value continuous;	Type A 1 trip
Internal Control Module Redundant Memory Performance	P16F3	Detect Processor Calculation faults due to RAM corruptions, ALU failures and ROM failures	Desired engine torque request greater than redundant calculation plus threshold	61.77Nm	Ignition in unlock/accessory, run or crank Engine speed greater than 0rpm and less than 3200rpm Ignition in unlock/accessory, run or crank LoRes if engine rpm < 4500/4700rpm (hysteresis pair) 6.25ms if engine rpm >= 4500/4700rpm (hysteresis pair) Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	Type A 1 trip	
			Cylinders active greater than commanded	1 cylinder		6/8 counts; each cylinder firing event/count		
			Engine min capacity above threshold	61.77Nm		3/4 counts; 12.5msec/count		
			No fast unmanaged retarded spark above the applied spark plus the threshold	Table, f(Erpm). See supporting tables		6/8 counts; each cylinder firing event/count		
			Absolute difference of adjustment factor based on temperature and its dual store above threshold	3.99m/s		2/4 counts; 100.0msec/count		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			1) Absolute difference of redundant calculated engine speed above threshold 2)Time between lores events and its dual store do not equal	1) Table. f(Erpm). See supporting tables		Engine speed greater than 0rpm	6/8 counts; each cylinder firing event/count	
			After throttle blade pressure and its dual store do not match	N/A		Ignition in unlock/accessory, run or crank	8/16 counts; 12.5msec/count	
			Engine oil temperature and its dual store do not equal	N/A		Ignition in unlock/accessory, run or crank	3/4 counts; 50.0msec/count	
			Desired throttle position greater than redundant calculation plus threshold		7.20%	Ignition in unlock/accessory, run or crank	8/16 counts; 12.5msec/count	
			Absolute difference of the rate limited pre-throttle pressure and its redundant calculation greater than threshold	0.72 kpa/s		Ignition in unlock/accessory, run or crank	8/16 counts; 12.5msec/count	
			Throttle desired torque above desired torque plus threshold	0.00Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Desired filtered throttle torque exceeds the threshold plus the higher of desired throttle torque or modeled throttle torque	62.77Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Torque feedback proportional term is out of allowable range or its dual store copy does not match	High Threshold 31.39Nm Low Threshold -31.39Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Torque feedback integral term magnitude or rate of change is out of allowable range or its dual store copy does not match	High Threshold 62.77Nm Low Threshold -62.77Nm Rate of change threshold 7.85Nm/loop		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Difference of Final Torque feedback proportional plus integral term and its redundant calculation is out of bounds given by threshold range	High Threshold 0.00Nm Low Threshold -0.00Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Difference of torque desired throttle area and its redundant calculation is out of bounds given by threshold range	High Threshold 0.50% Low Threshold -0.50%		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Difference of torque model coefficients and its redundant calculation is out of bounds given by threshold range	High Threshold 0.00 Low Threshold -0.00		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Difference of base friction torque and its redundant calculation is out of bounds given by threshold range	High Threshold 1.00Nm Low Threshold -1.00Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Accessory drive friction torque is out of bounds given by threshold range	High Threshold 62.77Nm Low Threshold 0.00Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			AC friction torque is out of bounds given by threshold range	High Threshold 62.77Nm Low Threshold 0.00Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Difference of Oil temperature delta friction torque and its redundant calculation is out of bounds given by threshold range	High Threshold 1.00Nm Low Threshold -1.00Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Generator friction torque is out of bounds given by threshold range	High Threshold 62.77Nm Low Threshold 0.00Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Supercharger friction torque is out of bounds given by threshold range	High Threshold 62.77Nm Low Threshold 0.00Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Filtered Torque error magnitude or its increase rate of change is out of allowable range or its dual store copy does not match	High Threshold 62.77Nm Low Threshold -62.77Nm Rate of change threshold 7.85Nm/loop		Engine speed >0rpm MAF, MAP and Baro DTCs are false	4/8 counts; 25.0msec/count	
			Torque error compensation is out of bounds given by threshold range	High Threshold 62.77Nm Low Threshold 0.00Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Delta Torque Baro compensation is out of bounds given by threshold range	High Threshold 16.70Nm Low Threshold -12.68Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			1) Difference of reserve torque value and its redundant calculation exceed threshold 2) Reserve request does not agree with operating conditions 2) Difference of final predicted torque and its redundant calculation exceed threshold 3) Rate of change of reserve torque exceeds threshold, increasing direction only 4) Reserve engine torque above allowable capacity by the threshold	1) 61.77Nm 2) NA 3) 61.77Nm 4) 61.77Nm		1&2) Torque reserve (condition when spark control greater than optimum to allow fast transitions for torque disturbances) > 62.77Nm 3&4) Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Absolute difference of the calculated spark offset for equivalence ratio and its redundant calculation greater than threshold	3.17 degrees		Engine speed >0rpm	6/8 counts; if engine rpm< 2900.00rpm, each cylinder firing event/count or if engine rpm >=2900.00rpm, 12.5ms/count	
			Engine Vacuum and its dual store do not match	N/A		Ignition in unlock/accessory, run or crank	8/16 counts; 12.5msec/count	
			Absolute difference of the calculated Intake Manifold Pressure during engine event versus during time event is greater than threshold	Table, f(Engine Torque). See supporting tables		Engine speed >0rpm	6/8 counts; each cylinder firing event/count	
			Min. Axle Torque Capacity is greater than threshold	1946.19Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Predicted torque for zero pedal determination is greater than threshold	62.77 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Commanded Predicted Axle Torque and its dual store do not match	1 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Steady State Estimated Engine Torque and its dual store are not equal	N/A		DoD not changing from Active to Inactive and preload torque not changing and one loop after React command Engine speed >0rpm	4/8 counts; 25.0msec/count	
			Difference of Weighting factor for number of cylinders fueled and its redundant calculation is above threshold	0.26		Engine run flag = TRUE > 1.00s	6/8 counts; 25.0msec/count	
			Difference of minimum spark advance limit and its redundant calculation is out of bounds given by threshold range	3.17 degrees		Ignition in unlock/accessory, run or crank	6/8 counts; if engine rpm < 4500rpm, 12.5msec/count or if engine rpm >=4500rpm, 50ms/count	
			Difference of commanded spark advance and adjusted delivered is out of bounds given by threshold range	3.17 degrees		Engine speed >0rpm	6/8 counts; if engine rpm < 4500/4700rpm (hysteresis pair), each cylinder firing event/count or if engine rpm >=4500/4700rpm (hysteresis pair), 6.25ms/count	
			Estimated Engine Torque and its dual store are not match	62.77Nm		Engine speed >0rpm	4/8 counts; 25.0msec/count	
			Estimated Engine Torque without reductions due to torque control and its dual store are not match	62.77Nm		Engine speed >0rpm	4/8 counts; 25.0msec/count	
			Commanded Engine Torque from Hybrid control module and its dual store are not equal	N/A		Ignition in unlock/accessory, run or crank	10/16 counts; 12.5msec/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Difference of desired spark advance for managed torque and its redundant calculation is out of bounds given by threshold range	3.17 degrees		Torque reserve (condition when spark control greater than optimum to allow fast transitions for torque disturbances) > 62.77Nm	6/8 counts; if engine rpm < 4500/4700rpm (hysteresis pair), each cylinder firing event/count or if engine rpm >=4500/4700rpm (hysteresis pair), 6.25ms/count	
			Absolute difference of Engine Capacity Minimum Running Immediate Brake Torque Excluding Cylinder Sensitivity and its redundant calculation is out of bounds given by threshold range	62.77Nm		Engine speed >0rpm	4/8 counts; 25.0msec/count	
			One step ahead calculation of air-per-cylinder and its dual store do not match	41.00g/s		Engine speed >0rpm	6/8 counts; each cylinder firing event/count	
			One step ahead calculation of air-per-cylinder greater than two step ahead calculation by threshold for time	Threshold: Dynamically calculated based on current engine conditions Fault Pending Threshold: 100ms Fault Active Threshold: 175ms		Engine speed > 500rpm	175.0000ms continuous	
			Rate limited cruise axle torque request and its dual store do not match	243.27Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			1) Absolute difference of Calculated accelerator pedal position compensated for carpet learn and error conditions and its redundant calculation is out of bounds given by threshold range 2) Absolute difference of Calculated accelerator pedal position compensated for carpet learn and error conditions and its dual store do not equal 3) Absolute difference of Calculated accelerator pedal position and its dual store do not equal	1) 1.00% 2) NA 3) NA		Ignition in unlock/accessory, run or crank	8/16 counts; 12.5msec/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Commanded axle torque is greater than its redundant calculation by threshold	1946.00Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Commanded axle torque is less than its redundant calculation by threshold	-1460.00Nm		Ignition in unlock/accessory, run or crank Redundant commanded axle torque < --1460.00Nm	4/8 counts; 25.0msec/count	
			Preload Throttle Area is greater than its redundant calculation by threshold		0.10%	Engine speed >0rpm	6/8 counts; each cylinder firing event/count	
			Preload timer and its redundant calculation do not equal	NA		Ignition in unlock/accessory, run or crank	6/8 counts; each cylinder firing event/count	
			Preload Throttle Area and its dual store do not equal	NA		Ignition in unlock/accessory, run or crank	6/8 counts; each cylinder firing event/count	
			Commanded engine torque due to fast actuators and its dual store do not equal	NA		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Commanded engine torque due to slow actuators and its dual store do not equal	NA		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Signed filtered defaulted output speed calculated from TOS and its dual store do not equal	NA		Hybrid control module only Ignition in unlock/accessory, run or crank	5/15 counts; 25.0msec/count	
			Arbitrated Air-Per-Cylinder filter coefficient is out of bounds given by threshold range	High Threshold 1.000 Low Threshold 0.200		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Shaped driver axle torque is out of bounds given by threshold range	High Threshold 1946.00Nm Low Threshold -2920.00Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Launch spark is active but the launch spark redundant path indicates it should not be active	NA		Engine speed < 4500.00 or 4700.00 rpm (hysteresis pair)	6/8 counts; 12.5msec/count	
			Rate limited vehicle speed and its dual store do not equal	NA		Time since first CAN message with vehicle speed >= 0.500sec	4/8 counts; 25.0msec/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			transfer case neutral and its dual store do not equal	NA		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Throttle progression mode and its dual store do not equal	NA		Ignition in unlock/accessory, run or crank	8/16 counts; 12.5msec/count	
			TOS to wheel speed conversion factor is out of bounds given by threshold range	High Threshold 1.10 T/C Range Hi 0.10 T/C Range Lo Low Threshold 1.10 T/C Range Hi 0.10 T/C Range Lo		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			TOS to wheel speed conversion factor and its dual store do not equal	NA		Ignition in unlock/accessory, run or crank	5/15 counts; 25.0msec/count	
			Cylinders active greater than commanded	2 cylinders		Engine run flag = TRUE > 2.00s Number of cylinder events since engine run > 24 No fuel injector faults active	6/8 counts; each cylinder firing event/count	
			Absolute difference of Friction torque and its redundant calculation is out of bounds given by threshold range	62.77Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Absolute difference of Accessory torque and its redundant calculation is out of bounds given by threshold range	62.77Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Absolute difference of Filtered Air-per-cylinder and its redundant calculation is out of bounds given by threshold range	41.00mg		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Absolute difference between the previous Final Advance and the current Final Advance not Adjusted for Equivalence Ratio is out of bounds given by threshold range	3.17degrees			6/8 counts; if engine rpm < 4500/4700rpm (hysteresis pair), each cylinder firing event/count or if engine rpm >= 4500/4700rpm (hysteresis pair), 6.25ms/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Equivance Ratio torque compensation exceeds threshold	-62.77Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Absolute difference between Equivance Ratio torque compensation and its dual store out of bounds given bt threshold	62.77Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Zero pedal axle torque is out of bounds given by threshold range	High Threshold 1946.00Nm Low Threshold -1500.00Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
			Creep Coast Axle Torque is out of bounds given by threshold range	High Threshold 1946.00Nm Low Threshold -1500.00Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0msec/count	
Control Module Throttle Actuator Position Performance	P2101	1) Detect a throttle positioning error	Difference between measured throttle position and modeled throttle position >	7.20%	TPS minimum learn is not active and Throttle is being Controlled and (Engine Running or Ignition Voltage > OR Ignition Voltage > Ignition voltage failure is false (P1682)	Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	1. 15/15 counts; 12.5 msec/count in the primary processor	Type A 1 trip
		2) Detect throttle control is driving the throttle in the incorrect direction or exceed the reduced power limit	Thottle Position >	39.26%	TPS minimum learn is active	11 5.5	2. 11counts; 12.5 msec/count in the primary processor	
			Thottle Position >	39.06%	Reduced Power is True			
Accelerator Pedal Position (APP) Sensor #1	P2120	Detects a continuous or intermittent short or open in APP1 circuit on the secondary processor but sensor is in range on the primary processor	Secondary APP1 Voltage <	0.463		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	19/39counts or 14counts continuous; 12.5 msec/count in the secondary processor	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			or Secondary APP1 Voltage >	4.75	No 5 V reference error No 5 V reference DTCs			
Accelerator Pedal Position (APP) Sensor 1 Lo	P2122	Detects a continuous or intermittent short or open in APP1 circuit on both processors or just the primary processor	1. Primary APP1 Voltage <	0.463	No 5 V reference error	Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	1. 19/39counts or 14counts continuous; 12.5 msec/count in the primary processor	Type A 1 trip
			2. Secondary APP1 Voltage <	0.463	No 5 V reference DTCs			
Accelerator Pedal Position (APP) Sensor 1 Hi	P2123	Detect a continuous or intermittent short in the APP1 sensor on both processors or just the primary processor	1. Primary APP1 Voltage >	4.75		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	1. 19/39counts or 14counts continuous; 12.5 msec/count in the primary processor	Type A 1 trip
			2. Secondary APP1 Voltage >	4.75	No 5 V reference error No 5 V reference DTCs			
Accelerator Pedal Position (APP) Sensor 2	P2125	Detects a continuous or intermittent short or open in APP2 circuit on the secondary processor but sensor is in range on the primary processor	Secondary APP2 Voltage <	0.325		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	19/39counts or 14counts continuous; 12.5 msec/count in the secondary processor	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			or Secondary APP2 Voltage >	2.6	No 5 V reference error No 5 V reference DTCs			
Accelerator Pedal Position (APP) Sensor 2 Lo	P2127	Detects a continuous or intermittent short or open in APP2 circuit on both processors or just the primary processor	1. Primary APP2 Voltage <	0.325		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	1. 19/39counts or 14counts continuous; 12.5 msec/count in the primary processor	Type A 1 trip
			2. Secondary APP2 Voltage <	0.325	No 5 V reference error No 5 V reference DTCs	2. 19/39counts or 14counts continuous; 12.5 msec/count in the secondary processor		
Accelerator Pedal Position (APP) Sensor 2 Hi	P2128	Detect a continuous or intermittent short in the APP2 sensor on on both processors or just the primary processor	1. Primary APP2 Voltage >	2.6		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	1. 19/39 counts or 14counts continuous; 12.5 msec/count in the primary processor	Type A 1 trip
			2. Secondary APP2 Voltage >	2.6	No 5 V reference error No 5 V reference DTCs	2. 19/39counts or 14counts continuous; 12.5 msec/count in the secondary processor		
Throttle Position (TP) Sensor 1-2 Correlation	P2135	Detects a continuous or intermittent correlation fault between TP sensors #1 and #2 on either processor	1. On the Primary processor, the difference between TPS1 displaced and TPS2 displaced >	7.00% offset at min. throttle position with it linearly increasing to 10% at max. throttle position		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	79/159 counts or 58 counts continuous; 3.125 msec/count in the primary processor	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			On the Secondary processor, the difference between TPS1 displaced and TPS2 displaced >	7.00% offset at min. throttle position with it linearly increasing to 10% at max. throttle position	No TPS Sensor Faults No 5 V reference DTCs			
			2. On the primary processor, the difference between (raw min TPS1) and (raw_min TPS2) >	5.00%	No TPS Sensor Faults No 5 V reference DTCs	Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	19/39 counts or 15 counts continuous; 12.5 msec/count in the secondary processor	
			On the secondary processor, the difference between (raw min TPS1) and (raw_min TPS2) >	5.00%				
Accelerator Pedal Position (APP) Sensor 1-2 Correlation	P2138	Detects a continuous or intermittent correlation fault between APP sensors #1 and #2 on either processor	1. On the primary processor, the difference between APP 1 displaced and APP 2 displaced is > On the secondary processor, the difference between APP 1 displaced and APP 2 displaced is >	9.51% offset at min. throttle position with it linearly increasing to 10% at max pedal position 9.51% offset at min. throttle position with it linearly increasing to 10% at max pedal position	No APP Sensor Faults No 5 V reference DTCs	Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	1. 19/39 counts intermittent or 15 counts continuous, 12.5 msec/count in the primary processor	Type A 1 trip
			2. On the primary processor, the difference between the learned PPS1 min and PPS2 min >	5.00%		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	2. 19/39 counts intermittent or 15 counts continuous, 12.5 msec/count in the secondary processor	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Vehicle Speed – Output Shaft Speed Correlation	P215B	Detect invalid vehicle speed source.	The absolute difference between wheel speed vehicle speed and TOS vehicle speed greater than > Secure vehicle speed source is unavailable	10.00kph	CAN timer >	10.0000sec Secure vehicle speed source is TOS vehicle speed or wheel speed vehicle speed Trans engaged state is not equal to not engaged.	400/800 counts for wheel speed correlation or 400/800 counts for TOS correlation; 25msec/count	Type A 1 trip
Barometric Pressure (BARO) Sensor Performance	P2227	Detects stability of barometric pressure input	Difference between the current Baro sensor reading and the previous Baro sensor reading > 10.0 kPa		Ignition has been on Vehicle Speed Engine Run Time No Active DTCs:	> 10.0 seconds < 100 KPH > 30.00 seconds AmbientAirPressCktFA ECT_Sensor_FA IAT_SensorFA MAF_SensorFA AfterThrottlePressure_NA or TPS_FA TPS_Performance_FA VehicleSpeedSensorError	20 5 failures out of 25 samples 1 sample every 250 msec	Type B 2 trips
Barometric Pressure(BARO) Sensor Circuit Low	P2228	Detects a continuous short to low or open in either the signal circuit or the BARO sensor.	BARO Voltage	< 40.0 % of 5 Volt Range (2.0 Volts = 50.9 kPa)	Engine Run Time	> 30.00 seconds	20 failures out of 25 samples 1 sample every 12.5 msec	Type B 2 trips
Barometric Pressure(BARO) Sensor Circuit High	P2229	Detects an open sensor ground or continuous short to high in either the signal circuit or the BARO sensor.	BARO Voltage	> 90.0 % of 5 Volt Range (4.5 Volts = 115.3 kPa)	Engine Run Time	> 30.00 seconds	20 failures out of 25 samples 1 sample every 12.5 msec	Type B 2 trips
O2 Sensor Signal Stuck Lean Bank 1 Sensor 2	P2270	This DTC determines if the post catalyst O2 sensor is stuck in a normal lean voltage range and thereby can no longer be used for	Post O2 sensor cannot achieve the rich threshold voltage. AND	1) Post O2S signal < 791 mvolts AND	No Active DTC's	TPS_ThrottleAuthority Defaulted ECT_Sensor_FA IAT_SensorFA	Frequency: Once per trip Note: if NaPOPD b Reset	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
		post oxygen sensor fuel control or for catalyst monitoring. The diagnostic is an intrusive test (during coast) which increases the delivered fuel to achieve the required rich threshold.	The Accumulated mass air flow monitored during the Stuck Lean Voltage Test is greater than the threshold before the above voltage threshold is met.	2) Accumulated air flow during stuck lean test > 125 grams.	<p>B1S2 Failed this key cycle</p> <p>System Voltage</p> <p>Learned heater resistance</p> <p>ICAT MAT Burnoff delay</p> <p>Green O2S Condition</p> <p>Low Fuel Condition Diag</p> <p>Engine Speed</p> <p>Engine Airflow</p> <p>Vehicle Speed</p> <p>Closed loop integral</p> <p>Closed Loop Active</p> <p>Evap</p> <p>Ethanol</p> <p>Post fuel cell</p> <p>Power Take Off</p> <p>EGR Intrusive diagnostic</p> <p>All post sensor heater delays</p> <p>O2S Heater on Time</p> <p>Predicted Catalyst temp</p> <p>Fuel State</p>	<p>MAF_SensorFA</p> <p>MAP_SensorFA</p> <p>AIR System FA</p> <p>FuelInjectorCircuit_FA</p> <p>FuelTrimSystemB1_FA</p> <p>FuelTrimSystemB2_FA</p> <p>EngineMisfireDetected_FA</p> <p>EthanolCompositionSensor_FA</p> <p>P013A, P013B, P013E, P013F, P2270 or 10.0 volts < system voltage < 18.0 volts</p> <p>= Valid</p> <p>= Not Valid</p> <p>= Not Valid</p> <p>= False</p> <p>900 <= RPM <= 2500</p> <p>3 gps <= Airflow <= 20 gps</p> <p>31.1 mph <= Veh</p> <p>Speed <= 74.6 mph</p> <p>0.90 <= C/L Int <= 1.06</p> <p>= TRUE</p> <p>not in control of purge</p> <p>not in estimate mode</p> <p>= enabled</p> <p>= not active</p> <p>= not active</p> <p>= not active</p> <p>>= 1.0 sec</p> <p>550 °C <= Cat Temp <= 900 °C</p> <p>= DFCO possible</p>	<p>FastRespFunc= FALSE for the given Fuel Bank OR</p> <p>NaPOPD_b_RapidResponseActive = TRUE, multiple tests per trip are allowed.</p> <p>Green Sensor Delay Criteria</p> <p>The diagnostic will not be enabled until the next ignition cycle after the following has been met: Airflow greater than 22 gps for 120000 grams of accumulated flow non-continuously. (Note that all other enable criteria must be met on the next ignition cycle for the test to run on that ignition cycle).</p> <p>Note: This feature is only enabled when the vehicle is new and cannot be enabled in service</p>		
					All of the above met for at least 2.0 seconds, and then the Force Cat Rich intrusive stage is requested.				

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
O2 Sensor Signal Stuck Rich Bank 1 Sensor 2	P2271	This DTC determines if the post catalyst O2 sensor is stuck in a normal rich voltage range and thereby can no longer be used for post oxygen sensor fuel control or for catalyst monitoring. The diagnostic is an intrusive test which requests the DFCO mode to achieve the required lean threshold.	Post O2 sensor cannot achieve the lean threshold voltage. AND The Accumulated mass air flow monitored during the Stuck Rich Voltage Test is greater than the threshold before the above voltage threshold is met.	1) Post O2S signal > 100 mvolts AND 2) Accumulated air flow during stuck rich test > 65 grams.	No Active DTC's B1S2 Failed this key cycle System Voltage Learned heater resistance ICAT MAT Burnoff delay Green O2S Condition Low Fuel Condition Diag Engine Speed Engine Airflow Vehicle Speed Closed loop integral Closed Loop Active Evap Ethanol Post fuel cell Power Take Off EGR Intrusive diagnostic All post sensor heater delays O2S Heater on Time Predicted Catalyst temp Fuel State DTC's Passed	TPS_ThrottleAuthority Defaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA EthanolCompositionSensor_FA P013A, P013B, P013E, P013F or P2270 10.0 volts < system voltage < 18.0 volts = Valid = Not Valid = Not Valid = False 900 <= RPM <= 2500 3 gps <= Airflow <= 20 gps 31.1 mph <= Veh Speed <= 74.6 mph 0.90 <= C/L Int <= 1.06 = TRUE not in control of purge not in estimate mode = enabled = not active = not active = not active >= 1.0 sec 550 °C <= Cat Temp <= 900 °C = DFCO possible = P2270 (and P2272 (if	Frequency: Once per trip Note: if NaPOPD_b_Reset FastRespFunc= FALSE for the given Fuel Bank OR NaPOPD_b_Rapid ResponseActive = TRUE, multiple tests per trip are allowed. Green Sensor Delay Criteria The diagnostic will not be enabled until the next ignition cycle after the following has been met: Airflow greater than 22 gps for 120000 grams of accumulated flow non-continuously. (Note that all other enable criteria must be met on the next ignition cycle for the test to run on that ignition cycle). Note: This feature is only enabled when the vehicle is new and cannot be enabled in service	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					DTC's Passed DTC's Passed	applicable)) = P013E (and P014A (if applicable)) = P013A (and P013C (if applicable))		
After above conditions are met: DFCO mode is continued (wo driver initiated pedal input).								
O2 Sensor Signal Stuck Lean Bank 2 Sensor 2	P2272	This DTC determines if the post catalyst O2 sensor is stuck in a normal lean voltage range and thereby can no longer be used for post oxygen sensor fuel control or for catalyst monitoring. The diagnostic is an intrusive test (during coast) which increases the delivered fuel to achieve the required rich threshold.	Post O2 sensor cannot achieve the rich threshold voltage. AND The Accumulated mass air flow monitored during the Stuck Lean Voltage Test is greater than the threshold before the above voltage threshold is met.	1) Post O2S signal < 791 mvolts AND 2) Accumulated air flow during stuck lean test > 125 grams.	No Active DTC's B2S2 Failed this key cycle System Voltage Learned heater resistance ICAT MAT Burnoff delay Green O2S Condition Low Fuel Condition Diag Engine Speed Engine Airflow Vehicle Speed Closed loop integral Closed Loop Active Evap Ethanol Post fuel cell Power Take Off	TPS_ThrottleAuthority Defaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA EthanolCompositionSensor_FA P013C, P013D, P014A, P014B, P2272 or 10.0 volts < system voltage < 18.0 volts = Valid = Not Valid = Not Valid = False 900 <= RPM <= 2500 3 gps <= Airflow <= 20 gps 31.1 mph <= Veh Speed <= 74.6 mph 0.90 <= C/L Int <= 1.06 = TRUE not in control of purge not in estimate mode = enabled = not active	Frequency: Once per trip Note: if NaPOPD_b_Reset FastRespFunc= FALSE for the given Fuel Bank OR NaPOPD_b_Rapid ResponseActive = TRUE, multiple tests per trip are allowed. Green Sensor Delay Criteria The diagnostic will not be enabled until the next ignition cycle after the following has been met: Airflow greater than 22 gps for 120000 grams of accumulated flow non-continuously. (Note that all other enable criteria must be met on the next ignition cycle for the test to run on that ignition	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					EGR Intrusive diagnostic = not active All post sensor heater delays = not active O2S Heater on Time >= 1.0 sec Predicted Catalyst temp 550 °C <= Cat Temp <= 900 °C Fuel State = DFCO possible		cycle). Note: This feature is only enabled when the vehicle is new and cannot be enabled in service	
					All of the above met for at least 2.0 seconds, and then the Force Cat Rich intrusive stage is requested.			
O2 Sensor Signal Stuck Rich Bank 2 Sensor 2	P2273	This DTC determines if the post catalyst O2 sensor is stuck in a normal rich voltage range and thereby can no longer be used for post oxygen sensor fuel control or for catalyst monitoring. The diagnostic is an intrusive test which requests the DFCO mode to achieve the required lean threshold.	Post O2 sensor cannot achieve the lean threshold voltage. AND The Accumulated mass air flow monitored during the Stuck Rich Voltage Test is greater than the threshold before the above voltage threshold is met.	1) Post O2S signal > 100 mvolts AND 2) Accumulated air flow during stuck rich test > 65 grams.	No Active DTC's TPS_ThrottleAuthority Defaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA EthanolCompositionSensor_FA B2S2 Failed this key cycle System Voltage Learned heater resistance ICAT MAT Burnoff delay Green O2S Condition Low Fuel Condition Diag Engine Speed Engine Airflow Vehicle Speed Closed loop integral Closed Loop Active	TPS_ThrottleAuthority Defaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA EthanolCompositionSensor_FA P013C, P013D, P014A, P014B or P2272 10.0 volts < system voltage < 18.0 volts = Valid = Not Valid = Not Valid = False 900 <= RPM <= 2500 3 gps <= Airflow <= 20 gps 31.1 mph <= Veh Speed <= 74.6 mph 0.90 <= C/L Int <= 1.06 = TRUE	Frequency: Once per trip Note: if NaPOPD_b_Reset FastRespFunc= FALSE for the given Fuel Bank OR NaPOPD_b_Rapid ResponseActive = TRUE, multiple tests per trip are allowed. Green Sensor Delay Criteria The diagnostic will not be enabled until the next ignition cycle after the following has been met: Airflow greater than 22 grams of accumulated flow non-continuously. (Note that all other	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Evap Ethanol Post fuel cell Power Take Off EGR Intrusive diagnostic All post sensor heater delays O2S Heater on Time Predicted Catalyst temp Fuel State DTC's Passed DTC's Passed DTC's Passed	not in control of purge not in estimate mode = enabled = not active = not active = not active >= 1.0 sec 550 °C <= Cat Temp <= 900 °C = DFCO possible = P2270 (and P2272 (if applicable)) = P013E (and P014A (if applicable)) = P013A (and P013C (if applicable))	enable criteria must be met on the next ignition cycle for the test to run on that ignition cycle). Note: This feature is only enabled when the vehicle is new and cannot be enabled in service	
					After above conditions are met: DFCO mode is continued (wo driver initiated pedal input).			
Engine Hood Switch Circuit	P254F	Circuit Performance	Hood Switch 1 State ≠ Hood Switch 2 State		Ignition Voltage	> 11 volts and < 18 volts	0.5 seconds 100 msec loop	Type B 2 trips
ECM/PCM Internal Engine Off Timer Performance	P2610	This DTC determines if the engine off timer does not initialize or count properly. Clock rate test: Checks the accuracy of the 1 second timer by comparing it with the 12.5 ms timer	Initial value test: Initial ignition off timer value OR Initial ignition off timer value Clock rate test: Time between ignition off timer increments Time between ignition off timer increments Time since last ignition off timer increment Current ignition off time < old ignition off time Current ignition off timer minus old ignition off timer	< 0 seconds > 10 seconds < .8 seconds > 1.2 seconds ≥ 1.375 seconds	ECM is powered down IAT Temperature	-40 °C ≤ Temperature ≤ 125 °C	Initial value test: 3 failures 1.375 sec / sample Clock rate test: 8 failures out of 10 samples 1second / sample test runs once each key-off	Type B 2 trips DTC sets on next key cycle if failure detected
				≠ 1				

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						<p>EngSpeedUpPrLimitEnableTable - Details on Supporting Tables Tab (P3400 Section)</p> <p>Engine coolant >= 36 and <= 132 Deg C</p> <p>Ignition voltage >= 11.0 and <= 18.0 Volts</p> <p>Brake booster vacuum >= 0.0 kPa</p> <p>Engine oil temp >= 16 and <= 128 Deg C</p> <p>PRNDL State</p> <p>HalfCylDisabledPRNDL - See details on Supporting Tables Tab (P3400 Section)</p> <p>Trans Gear</p> <p>HalfCylDisabledTransGr - See details on Supporting Tables Tab (P3400 Section)</p> <p>Percent throttle area < 28 Percent</p> <p>Vehicle speed >= 28 KPH</p> <p>FCO not active for Time since last cylinder deac mode event >= 3.0 Seconds</p> <p>Gear Shift >= 3.0 Seconds Not currently in progress</p> <p>AC Clutch transition Not currently in progress</p> <p>Stored Oxygen Retrieval Monitor Diagnostic Not active</p> <p>Tip In Bump Not active</p> <p>Engine oil pressure >= 187 and <= 455 kPa</p> <p>Filtered engine vacuum > AllCylToHalfCylVacuum - See details on Supporting Tables Tab (P3400 Section) for 0 sec.</p> <p>PRNDL state</p>	Performed once every 100 msec	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Oil aeration present	HalfCylDisabledPRNDL and HalfCylDisabledPRNDL DeviceControl tables (when in device control) - See details on Supporting Tables Tab (P3400 Section) Aeration enabled by engine RPM > 5000 for 15 seconds, disabled by engine RPM < 4000 for 90 seconds		
					After exiting deac mode, must be in all cylinder mode for	>= 60 seconds		
					DFCO mode	Not currently in DFCO		
					Fuel shut off mode other than DFCO	Not currently in fuel shut-off		
					ETC Power management mode			
					Heater Perf.	Not active Not in Heater Performance Mode		
					POSD Intrusive	POSD diagnostic not active		
					POPD Intrusive	POPD diagnostic not active		
					Low range 4WD			
					Vehicle speed	Not in Low Range 4WD		
					AFM is disabled at high percent ethanol	>= 22 Kph		
						Ethanol concentration > 95 % disables AFM. Once disabled, ethanol concentration must be < 85 % to re-enable		
					If feature is enabled, AFM is allowed only when percent ethanol learn is not in progress			
					Catalyst warm-up mode	Feature is Disabled Not in Catalyst warm-up mode		
					Green engine enrichment mode	Not in Green engine enrichment mode		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					2-Mode Hybrid vehicles	Hybrid module not requesting AFM disable		
					<p>IF DEACTIVATED, ANY OF THE CONDITIONS BELOW WILL FORCE CYLINDER REACTIVATION</p> <p>If deactivation mode is active for ≥ 480 seconds</p> <p>then reactivation will occur if:</p> <p>Deac mode active ≥ 600 seconds</p> <p style="text-align: center;">OR</p> <p>Delta vacuum > 5 kPa or < -5 kPa</p> <p>Delta calculated using 1st order vacuum lag filter 0.30 1st order lag filter value</p> <p>Engine RPM $>$ EngSpeedDisableLwr LimitTable AND $<$ EngSpeedDisableUpr LimitTable - Details on Supporting Tables Tab (P3400 Section)</p> <p>Engine Power Limited Mode Active</p> <p>Piston protection Active</p> <p>Engine Oil Temperature < 18 kPa or > 130 kPa</p> <p>Engine Oil Pressure < 172 kPa or > 470 kPa</p> <p>Oil aeration present Aeration enabled by engine RPM > 5000 for 15 seconds, disabled by engine RPM < 4000 for 90 seconds</p> <p>Engine Metal Overtemp Protection Active</p> <p>In device control only, when in Park or Neutral, engine RPM ≤ 8.0 Kph</p> <p>Trans Gear AllCylDisabledTransGr</p>			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					PRNDL state Ignition voltage Engine Coolant Vehicle speed Brake booster vacuum Filtered engine vacuum ETC Power management mode Pct Throttle Area Converter overtemp protect Piston protection Hot Coolant Mode Engine running Engine overspeed protection Gear Shift AC Clutch transition Tip In Bump Engine Metal Overtemp Protect Cat. Temp Low POSD Intrusive FWD Engine Misfire Heater Performance POPD Intrusive	See details on Supporting Tables Tab (P3400 Section) HalfCylDisabledPRNDL and HalfCylDisabledPRNDL DeviceControl tables (when in device control) - See details on Supporting Tables Tab (P3400 Section) < 11.0 or > 18.0 Volts < 40.0 or > 128.0 Deg C < 22.0 KPH < 0.0 kPa > HalfCylToAllCylVacuum - See details on Supporting Tables Tab (P3400 Section) for 0 sec. Active > 30 Percent Active Active Active = False Active In progress In progress Active Active Active Active In low range Detected Active Active		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					No active DTC's	Fault bundles: Map_SensorFA VehicleSpeedSensorError ECT_Sensor_FA EOP_Sensor_FA PowertrainRelayFault BrakeBoosterSensorFA CrankSensorFA CamSensorFA IAT_SensorFA CylinderDeacDriverTFTKO FourWheelDriveLowStateValid EngineTorqueEstInaccurate TransmissionGearDefaulted EnginePowerLimited		
Cylinder 1 Deactivation Solenoid Control Circuit	P3401	Checks the Solenoid Control Circuit electrical integrity for cylinder #1	The ECM detects that commanded state of driver and actual state of the control circuit do not match. (Short to ground, short to voltage, open circuit)		Engine RPM Ignition Voltage Diagnostic enabled/disabled	>= 400.0 RPM <= 18.0 and >= 11.0 Volts Enabled	20 failures out of 25 samples Performed every 250 msec	Type B 2 trips
Cylinder 4 Deactivation Solenoid Control Circuit	P3425	Checks the Solenoid Control Circuit electrical integrity for cylinder #4	The ECM detects that commanded state of driver and actual state of the control circuit do not match. (Short to ground, short to voltage, open circuit)		Engine RPM Ignition Voltage Diagnostic enabled/disabled	>= 400.0 RPM <= 18.0 and >= 11.0 Volts Enabled	20 failures out of 25 samples Performed every 250 msec	Type B 2 trips
Cylinder 6 Deactivation Solenoid Control Circuit	P3441	Checks the Solenoid Control Circuit electrical integrity for cylinder #6	The ECM detects that commanded state of driver and actual state of the control circuit do not match. (Short to ground, short to voltage, open circuit)		Engine RPM Ignition Voltage Diagnostic enabled/disabled	>= 400.0 RPM <= 18.0 and >= 11.0 Volts Enabled	20 failures out of 25 samples Performed every 250 msec	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Cylinder 7 Deactivation Solenoid Control Circuit	P3449	Checks the Solenoid Control Circuit electrical integrity for cylinder #7	The ECM detects that commanded state of driver and actual state of the control circuit do not match. (Short to ground, short to voltage, open circuit)		Engine RPM Ignition Voltage Diagnostic enabled/disabled	>= 400.0 RPM <= 18.0 and >= 11.0 Volts Enabled	20 failures out of 25 samples Performed every 250 msec	Type B 2 trips
Control Module Communication Bus A Off	U0073	This DTC monitors for a BUS A off condition	Bus off failures out of these samples	≥ 3 counts ≥ 5 counts	Bus off delay time	≥ 0.024999 seconds	Diagnostic runs in 12.5 ms loop	Type A 1 trip
Control Module Communication Bus B Off	U0074	Detects that a CAN serial data bus shorted condition has occurred to force the CAN device driver to enter a bus-off state	Bus off failures out of these samples	≥ 3 counts ≥ 5 counts	Bus off delay time	≥ 0.1125 seconds	Diagnostic runs in 12.5 ms loop	Type A 1 trip
Lost Communication With TCM (Automatic Transmission)	U0101	Detects that CAN serial data communication has been lost with the TCM.	Message is not received from controller for this many counts out of these samples	>375 msec	Run/Crank Voltage Power mode is RUN Communication bus is not OFF or is typed as a C code Normal Communication is enabled Normal Transmit capability is TRUE The diagnostic system is not disabled The bus has been on for A message has been selected to monitor.	11 volts ≤ Voltage ≤ 18 volts > .025 seconds	6.25 msec loop	Type A 1 trip
Lost Communication with Transfer Case Control Module	U0102	This DTC monitors for a loss of communication with the transfer case control module	Message is not received from controller for this many counts	> 750 msec	Run/Crank Voltage Power mode is RUN Communication bus is not OFF or is typed as a C code Normal Communication is enabled Normal Transmit capability is TRUE The diagnostic system is not disabled	11 volts ≤ Voltage ≤ 18 volts	6.25 msec loop	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					The diagnostic system is not disabled The bus has been on for A message has been selected to monitor.	> .025 seconds		

ECM SUPPORTING TABLES

P0442: EONV Pressure Threshold Table (in Pascals)

		X axis is fuel level in %																
		Y axis is temperature in deg C																
		0.0000	3.2499	12.4998	18.7497	24.9996	31.2495	37.4994	43.7493	49.9992	56.2491	62.4990	68.7489	74.9989	81.2488	87.4987	93.7486	99.9985
-10.0000	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
-4.3750	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
1.2500	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
6.8750	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
12.5000	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
18.1250	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
23.7500	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
29.3750	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
35.0000	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
40.6250	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
46.2500	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
51.8750	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
57.5000	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
63.1250	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
68.7500	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
74.3750	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
80.0000	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810

P0442: Estimate of Ambient Temperature Valid Conditioning Time

		EAT Valid Conditioning Time (in seconds)	
		Axis is Ignition Off Time (in seconds)	
Axis	Curve		
0	300		
600	450		
1200	500		
1800	600		
2400	650		
3000	650		
3600	650		
4200	650		
4800	650		
5400	650		
6000	625		
6600	600		
7200	575		
7800	550		
8400	525		
9000	500		
9600	480		
10200	460		
10800	440		
11700	420		
12600	400		
13500	380		
14400	360		
15300	340		
16200	320		
17100	300		
18000	280		
19200	260		
20400	240		
21600	220		
22800	200		
24000	200		
25200	200		

P0496: Purge Valve Leak Test Engine Vacuum Test Time (Cold Start) as a Function of Fuel Lev

		Purge Valve Leak Test Engine Vacuum Test Time (in seconds)	
		Axis is Fuel Level in %	
Axis	Curve		
0	55.4		
6	53.9		
12	52.4		
18	50.9		
25	49.4		
31	47.9		
37	46.4		
44	44.9		
50	43.4		
56	42.0		
62	40.5		
69	39.0		
75	37.5		
81	36.1		
87	34.6		
94	33.1		
100	31.6		

P0326 Knock Detection Enabled Factors:

FastRtdMax: X - axis = Engine Speed (RPM)

ECM SUPPORTING TABLES																		
		Y - axis = Manifold Pressure (kPa)																
		0	512	1024	1536	2048	2560	3072	3584	4096	4608	5120	5632	6144	6656	7168	7680	8192
20	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
30	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
40	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
50	0.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
60	0.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
70	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
80	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
90	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
100	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
110	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
120	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
130	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
140	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
150	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
160	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
170	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
180	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
Knock Detection Enabled Factors:	Knock Detection Enable = FastAttackRate * FastAttackCoolGain * FastAttackBaroGain																	
	RPM:	0	512	1024	1536	2048	2560	3072	3584	4096	4608	5120	5632	6144	6656	7168	7680	8192
	FastAttackRate:	3.00	3.00	3.00	2.83	2.67	2.50	2.33	2.17	2.00	2.00	2.12	2.63	3.00	3.00	3.00	3.00	3.00
	ECT (deg. C):	-40	-30	-20	-10	0	10	20	30	40	50	60	70	80	90	100	110	120
	FastAttackCoolGain:	0.00	0.00	0.00	0.00	0.00	0.00	0.25	0.50	0.75	1.00	1.00	1.00	1.00	1.00	1.10	1.10	1.20
	Baro:	55.00	61.25	67.50	73.75	80.00	86.25	92.50	98.75	105.00								
	FastAttackBaroGain:	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00								
Define Close Loop																		
KtFSTA_T_ClosedLoopTemp	Start-Up Coolant	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
	Close Loop Enable Temp	85	80	75	65	45	39	39	39	39	39	39	39	39	39	39	39	39
KtFSTA_T_ClosedLoopTime	Start-Up Coolant	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
	Close Loop Enable Time	120	90	65	45	25	10	10	10	10	10	10	10	10	10	10	10	10
FASD Section_Ian MacEwen																		
P0171 & P0174	Long Term Trim Lean																	
% Ethanol	0.00	6.25	12.50	18.75	25.00	31.25	37.50	43.75	50.00	56.25	62.50	68.75	75.00	81.25	87.50	93.75	100.00	
Long Term Fuel Trim Lean Threshold	1.33	1.33	1.33	1.33	1.33	1.33	1.33	1.33	1.33	1.33	1.33	1.33	1.33	1.33	1.33	1.33	1.33	
P0172 & P0175	Non Purge Rich Limit																	
% Ethanol	0.00	6.25	12.50	18.75	25.00	31.25	37.50	43.75	50.00	56.25	62.50	68.75	75.00	81.25	87.50	93.75	100.00	
Long Term Fuel Non-Purge Rich Threshold	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	
P0172 & P0175	Purge Rich Limit																	
% Ethanol	0.00	6.25	12.50	18.75	25.00	31.25	37.50	43.75	50.00	56.25	62.50	68.75	75.00	81.25	87.50	93.75	100.00	
Long Term Fuel Purge Rich Threshold	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.70	
The following tables define when the engine goes closed loop																		
P0171, P0172, P0174 & P0175	Closed Loop Enable Temp vrs Coolant Temp																	
Start-Up Coolant	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152	
Close Loop Enable Temp	85	80	75	65	45	39	39	39	39	39	39	39	39	39	39	39	39	
P0171, P0172, P0174 & P0175	Closed Loop Enable Time vrs Coolant Temp																	
Start-Up Coolant	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152	
Close Loop Enable Time	120	90	65	45	25	10	10	10	10	10	10	10	10	10	10	10	10	
P0101, P0106, P0121, P012B, P1101: IFRD Residual Weighting Factors	TPS Residual Weight Factor based on RPM																	
RPM	0	250	750	1250	1750	2250	2750	3250	3750	4250	4750	5250	5750	6250	6750	7250	9000	
	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	0.993	0.629	0.566	0.519	0.519	0.519	0.519	
	MAF Residual Weight Factor based on RPM																	
RPM	0	250	750	1250	1750	2250	2750	3250	3750	4250	4750	5250	5750	6250	6750	7250	9000	
	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	0.857	0.857	0.750	0.667	0.667	0.667	0.667	
	MAF Residual Weight Factor Based on MAF Estimate																	
gm/sec	0.0	40.0	47.0	56.0	67.0	79.0	93.0	111.0	131.0	156.0	184.0	218.0	259.0	307.0	363.0	431.0	510.0	
	1.000	1.000	0.909	0.836	0.773	0.719	0.660	0.584	0.501	0.408	0.336	0.294	0.268	0.243	0.219	0.191	0.159	
	MAP1 Residual Weight Factor based on RPM																	
RPM	0	250	750	1250	1750	2250	2750	3250	3750	4250	4750	5250	5750	6250	6750	7250	9000	
	0.625	0.625	1.000	1.000	1.000	1.000	1.000	1.000	1.000	0.417	0.417	0.417	0.417	0.417	0.417	0.417	0.417	
	MAP2 Residual Weight Factor based on RPM																	
RPM	0	250	750	1250	1750	2250	2750	3250	3750	4250	4750	5250	5750	6250	6750	7250	9000	
	0.625	0.625	1.000	1.000	1.000	1.000	1.000	1.000	1.000	0.417	0.417	0.417	0.417	0.417	0.417	0.417	0.417	
	SCIAP1 Residual Weight Factor based on RPM																	
RPM	0	1500	2200	2500	2800	3100	3200	3300	3500	3700	4000	4200	4500	5000	5500	6500	8000	
	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	

ECM SUPPORTING TABLES														
		X axis is ECT Temperature at Power up (° C)												
		Y axis is IAT min during test (° C)												
	IAT Range	Hi	-40	-28	-16	-4	8	20	32	44	56	68	80	
Primary	Low	52.0 ° C	15876	15876	15876	15876	15876	14132	12387	10642	8898	7153	5409	
Alternate	10.0 ° C	10.0 ° C	14376	14376	14376	12917	11460	10000	8542	7084	5625	5625	5625	
P0300-P0308: Idle SCD														
		(decel index > Idle SCD AND > Idle SCD ddt Tables)												
		400	500	600	700	800	900	1000	1100	1200				
load	8	675	575	475	325	250	170	135	100	70				
Load	9	650	550	450	300	220	150	120	80	60				
	11	645	535	425	280	190	130	105	63	55				
	12	580	515	450	285	175	125	90	60	53				
	13	525	500	475	290	180	120	95	75	55				
	14	563	525	488	295	185	128	103	80	57				
	15	600	550	500	300	190	135	110	85	58				
	16	613	563	513	313	195	143	120	88	59				
	17	625	575	525	325	200	150	130	90	60				
	18	638	588	538	338	213	163	138	95	63				
	19	650	600	550	350	225	175	145	100	65				
	21	663	613	563	363	238	183	150	108	68				
	22	675	625	575	375	250	190	155	115	70				
	24	688	638	588	388	263	195	160	120	73				
	25	700	650	600	400	275	200	165	125	75				
	27	713	663	613	413	288	208	170	133	80				
	29	725	675	625	425	300	215	175	140	85				
P0300-P0308: Idle SCD ddt														
		400	500	600	700	800	900	1000	1100	1200				
load	8	725	625	525	325	250	170	135	100	70				
	9	700	600	500	300	220	150	120	70	60				
	11	665	565	465	280	190	130	105	58	50				
	12	640	545	450	280	175	125	90	50	48				
	13	565	520	475	290	180	120	95	60	50				
	14	583	535	488	295	185	128	103	70	53				
	15	600	550	500	300	190	135	110	80	55				
	16	613	563	513	313	195	143	120	83	60				
	17	625	575	525	325	200	150	130	85	65				
	18	638	588	538	338	213	163	138	88	70				
	19	650	600	550	350	225	175	145	90	75				
	21	663	613	563	363	238	183	150	100	78				
	22	675	625	575	375	250	190	155	110	80				
	24	688	638	588	388	263	195	160	118	83				
	25	700	650	600	400	275	200	165	125	85				
	27	738	675	613	413	288	208	170	133	88				
	29	775	700	625	425	300	215	175	140	90				
P0300-P0308: SCD Delta														
		OR (decel index > SCD Delta AND > SCD Delta ddt Tables)												
		400	500	600	700	800	900	1000	1100	1200	1400	1600	1800	2000
load	8	675	575	475	325	250	170	135	100	70	35	32767	32767	32767
Load	9	650	550	450	300	220	150	120	80	60	30	32767	32767	32767
	11	645	535	425	280	190	130	105	63	55	28	32767	32767	32767
	12	580	515	450	285	175	125	90	60	53	28	32767	32767	32767
	13	525	500	475	290	180	120	95	75	55	30	32767	32767	32767
	15	600	550	500	300	190	135	110	85	58	35	32767	32767	32767
	17	625	575	525	325	200	150	130	90	60	40	32767	32767	32767
	19	650	600	550	350	225	175	145	100	65	48	32767	32767	32767
	22	675	625	575	375	250	190	155	115	70	55	32767	32767	32767
	25	700	650	600	400	275	200	165	125	75	65	32767	32767	32767
	29	725	675	625	425	300	215	175	140	85	70	32767	32767	32767
	33	750	700	650	450	325	230	185	155	105	75	32767	32767	32767
	38	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
	42	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
	48	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
	54	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
	61	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
P0300-P0308: SCD Delta ddt														
		400	500	600	700	800	900	1000	1100	1200	1400	1600	1800	2000
load	8	725	625	525	325	250	170	135	100	70	40	32767	32767	32767
Load	9	700	600	500	300	220	150	120	70	60	35	32767	32767	32767
	11	665	565	465	280	190	130	105	58	50	30	32767	32767	32767
	12	640	545	450	280	175	125	90	50	48	28	32767	32767	32767
	13	565	520	475	290	180	120	95	60	50	30	32767	32767	32767
	15	600	550	500	300	190	135	110	80	55	35	32767	32767	32767
	17	625	575	525	325	200	150	130	90	60	40	32767	32767	32767
	19	650	600	550	350	225	175	145	100	65	48	32767	32767	32767
	22	675	625	575	375	250	190	155	115	70	55	32767	32767	32767
	25	700	650	600	400	275	200	165	125	75	65	32767	32767	32767
	29	725	675	625	425	300	215	175	140	80	70	32767	32767	32767
	33	750	700	650	450	325	230	185	150	105	85	32767	32767	32767
	38	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
	42	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
	48	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
	54	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
	61	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
P0300-P0308: Idle Cyl Mode														
		OR (decel index > Idle Cyl Mode AND > Idle Cyl Mode ddt Tables)												
		400	500	600	700	800	900	1000	1100	1200				
load	8	1550	1350	1150	1000	650	600	450	220	200				
Load	9	1500	1300	1100	900	600	500	350	200	175				

ECM SUPPORTING TABLES

	48	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	400	250	180	160	130	115	100	32767	32767
	54	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	450	300	200	175	140	125	110	32767	32767
	61	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	500	350	225	200	150	135	120	32767	32767

P0300-P0308: AFM Mode Table

		OR (decel index > AFM Table if active fuel management)																											
		400	500	600	700	800	900	1000	1100	1200	1400	1600	1800	2000	2200	2400	2600	2800	3000	3500	4000	4500	5000	5500	6000	6500	7000		
load	8	1350	1250	1150	900	750	600	500	350	250	160	125	80	65	50	35	30	25	20	32767	32767	32767	32767	32767	32767	32767	32767		
Load	9	1300	1200	1100	800	700	550	450	310	230	145	110	70	55	45	30	25	23	19	32767	32767	32767	32767	32767	32767	32767	32767		
	11	1250	1150	1050	750	650	500	420	275	215	130	100	60	53	43	28	23	20	18	32767	32767	32767	32767	32767	32767	32767	32767		
	12	1200	1100	1000	700	600	450	385	240	205	125	95	55	50	40	26	21	19	17	32767	32767	32767	32767	32767	32767	32767	32767		
	13	1150	1050	950	675	550	435	350	250	190	120	80	53	48	38	28	20	18	16	32767	32767	32767	32767	32767	32767	32767	32767		
	15	1100	1000	900	650	525	425	340	265	200	130	85	50	45	35	29	21	17	15	32767	32767	32767	32767	32767	32767	32767	32767		
	17	1150	1050	950	625	450	415	345	275	215	140	95	65	48	38	30	22	18	16	32767	32767	32767	32767	32767	32767	32767	32767		
	19	1200	1100	1000	600	440	405	350	300	240	160	115	80	50	45	33	24	20	17	32767	32767	32767	32767	32767	32767	32767	32767		
	22	1250	1150	1050	675	460	415	375	325	270	180	140	100	55	50	40	30	22	18	32767	32767	32767	32767	32767	32767	32767	32767		
	25	1400	1250	1100	750	500	425	400	350	300	200	160	120	65	60	45	35	25	22	32767	32767	32767	32767	32767	32767	32767	32767		
	29	1450	1300	1150	825	550	450	450	400	350	225	180	130	75	65	50	40	30	25	32767	32767	32767	32767	32767	32767	32767	32767		
	33	1500	1350	1200	900	600	500	500	450	400	250	200	140	90	70	55	45	35	30	32767	32767	32767	32767	32767	32767	32767	32767		
	38	1550	1400	1250	950	625	550	550	500	450	300	220	150	110	80	60	50	40	35	32767	32767	32767	32767	32767	32767	32767	32767		
	42	1600	1450	1300	1000	650	600	600	550	500	350	240	160	120	85	65	55	45	40	32767	32767	32767	32767	32767	32767	32767	32767		
	48	1650	1500	1350	1075	675	650	650	600	550	400	260	170	130	90	70	60	50	45	32767	32767	32767	32767	32767	32767	32767	32767		
	54	1700	1550	1400	1150	700	700	650	600	550	450	280	180	140	95	75	65	55	50	32767	32767	32767	32767	32767	32767	32767	32767		
	61	1750	1600	1450	1250	750	750	700	650	600	500	300	190	150	100	80	70	60	55	32767	32767	32767	32767	32767	32767	32767	32767		

P0300-P0308: Zero torque engine load

RPM	Pct load
400	3.00
500	8.54
600	8.15
700	7.93
800	7.80
900	7.88
1000	7.96
1100	8.04
1200	8.12
1400	8.28
1600	8.44
1800	8.60
2000	8.76
2200	8.92
2400	9.08
2600	9.24
2800	9.40
3000	9.56
3500	11.73
4000	13.89
4500	16.06
5000	18.23
5500	20.40
6000	22.56
6500	24.73
7000	26.90

KcMISF_OneCylNoCatDamLvl

Catalyst Damaging Misfire Percentage		0	1000	2000	3000	4000	5000	6000	7000
load	0	11	10	10	6	5	5	5	5
Load	10	11	10	8	6	5	5	5	5
	20	10	8	7	5	5	5	5	5
	30	8	7	6	5	5	5	5	5
	40	7	6	6	5	5	5	5	5
	50	6	5	5	5	5	5	5	5
	60	6	5	5	5	5	5	5	5
	70	5	5	5	5	5	5	5	5
	80	5	5	5	5	5	5	5	5
	90	5	5	5	5	5	5	5	5
	100	5	5	5	5	5	5	5	5

P0133 - O2S Slow Response Bank 1 Sensor 1* Pass/Fail Threshold table

Z axis is the pass/fail result (see note below)
X axis is Lean to Rich response time (msec)
Y axis is Rich to Lean response time (msec)
Note: If the cell contains a "0" then the fault is not indicated, if it contains a "1" a fault is indicated

	0.000	0.060	0.077	0.094	0.111	0.128	0.145	0.162	0.179	0.196	0.213	0.230	0.247	0.264	0.281	0.298	63.999
0.000	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0
0.070	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0
0.087	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0
0.104	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0
0.121	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0
0.138	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0
0.155	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0

ECM SUPPORTING TABLES																	
0.172	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0
0.189	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0
0.206	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0
0.223	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0
0.240	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	0
0.257	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1	0
0.274	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	0
0.291	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	0
0.308	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	0
63.999	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

P0153 - O2S Slow Response Bank 2 Sensor 1* Pass/Fail Threshold table
 Z axis is the pass/fail result (see note below)
 X axis is Lean to Rich response time (msec)
 Y axis is Rich to Lean response time (msec)
 Note: If the cell contains a "0" then the fault is not indicated, if it contains a "1" a fault is indicated

	0.000	0.060	0.077	0.094	0.111	0.128	0.145	0.162	0.179	0.196	0.213	0.230	0.247	0.264	0.281	0.298	63.999
0.000	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0
0.070	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0
0.087	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0
0.104	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0
0.121	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0
0.138	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0
0.155	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0
0.172	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0
0.189	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0
0.206	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0
0.223	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0
0.240	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	0
0.257	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1	0
0.274	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	0
0.291	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	0
0.308	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	0
63.999	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

P1133 - O2S HC L to R Switches Limit Bank 1 Sensor 1* Pass/Fail Threshold table
 Z axis is Limit for LR HC switches
 Y axis is Average flow during the response test (gps)
 X axis is estimated Ethanol percentage
 Note: The cell contains the minimum switches

	0.0	10.0	20.0	50.0	80.0
0.0	20	20	20	20	20
6.3	20	20	20	20	20
12.5	20	20	20	20	20
18.8	20	20	20	20	20
25.0	20	20	20	20	20
31.3	20	20	20	20	20
37.5	20	20	20	20	20
43.8	20	20	20	20	20
50.0	20	20	20	20	20
56.3	20	20	20	20	20
62.5	20	20	20	20	20
68.8	20	20	20	20	20
75.0	20	20	20	20	20
81.3	20	20	20	20	20
87.5	20	20	20	20	20
93.8	20	20	20	20	20
100.0	20	20	20	20	20

P1133 - O2S HC R to L Switches Limit Bank 1 Sensor 1* Pass/Fail Threshold table
 Z axis is Limit for RL HC switches
 Y axis is Average flow during the response test (gps)
 X axis is estimated Ethanol percentage
 Note: The cell contains the minimum switches

	0.0	10.0	20.0	50.0	80.0
0.0	20	20	20	20	20
6.3	20	20	20	20	20
12.5	20	20	20	20	20
18.8	20	20	20	20	20
25.0	20	20	20	20	20
31.3	20	20	20	20	20
37.5	20	20	20	20	20
43.8	20	20	20	20	20
50.0	20	20	20	20	20
56.3	20	20	20	20	20
62.5	20	20	20	20	20
68.8	20	20	20	20	20
75.0	20	20	20	20	20
81.3	20	20	20	20	20
87.5	20	20	20	20	20
93.8	20	20	20	20	20
100.0	20	20	20	20	20

ECM SUPPORTING TABLES

P1153 - O2S HC L to R Switches Limit Bank 2 Sensor 1* Pass/Fail Threshold table

Z axis is Limit for L/R HC switches
Y axis is Average flow during the response test (g/s)
X axis is estimated Ethanol percentage
Note: The cell contains the minimum switches

	0.0	10.0	20.0	50.0	80.0
0.0	20	20	20	20	20
6.3	20	20	20	20	20
12.5	20	20	20	20	20
18.8	20	20	20	20	20
25.0	20	20	20	20	20
31.3	20	20	20	20	20
37.5	20	20	20	20	20
43.8	20	20	20	20	20
50.0	20	20	20	20	20
56.3	20	20	20	20	20
62.5	20	20	20	20	20
68.8	20	20	20	20	20
75.0	20	20	20	20	20
81.3	20	20	20	20	20
87.5	20	20	20	20	20
93.8	20	20	20	20	20
100.0	20	20	20	20	20

P1153 - O2S HC R to L Switches Limit Bank 2 Sensor 1* Pass/Fail Threshold table

Z axis is Limit for R/L HC switches
Y axis is Average flow during the response test (g/s)
X axis is estimated Ethanol percentage
Note: The cell contains the minimum switches

	0.0	10.0	20.0	50.0	80.0
0.0	20	20	20	20	20
6.3	20	20	20	20	20
12.5	20	20	20	20	20
18.8	20	20	20	20	20
25.0	20	20	20	20	20
31.3	20	20	20	20	20
37.5	20	20	20	20	20
43.8	20	20	20	20	20
50.0	20	20	20	20	20
56.3	20	20	20	20	20
62.5	20	20	20	20	20
68.8	20	20	20	20	20
75.0	20	20	20	20	20
81.3	20	20	20	20	20
87.5	20	20	20	20	20
93.8	20	20	20	20	20
100.0	20	20	20	20	20

Tables supporting Engine Oil Temperature Sensor

P0196

	FastFailTempDiff												AXIS is Engine Coolant Temperature at ECM Power-up, Degrees C																
Axis	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152												
Curve	75.0	60.0	45.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0												
	TotalAccumulatedFlow												Axis is Power up Engine Oil temperature, Curve is accumulated engine grams airflow																
Axis	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152												
Curve	15000	14000	13000	12000	11000	10000	9000	8000	7000	6000	5000	4000	5000	4000	3000	3000	3000												

Tables supporting Deactivation System Performance

P3400

	EngSpeedLwrLimitEnableTable										AXIS is Gear State, Curve is RPM																							
Axis	TransGr1	TransGr2	TransGr3	TransGr4	TransGr5	TransGr6	TransGrEVT1	TransGrEVT2	TransGrNeut	TransGrRvrs	TransGrPark	TransGr1	TransGr2	TransGr3	TransGr4	TransGr5	TransGr6	TransGrEVT1	TransGrEVT2	TransGrNeut	TransGrRvrs	TransGrPark	float x	TransGr1	TransGr2	TransGr3	TransGr4	TransGr5	TransGr6	TransGrEVT1	TransGrEVT2	TransGrNeut	TransGrRvrs	TransGrPark
Curve	925.0	925.0	925.0	925.0	925.0	925.0	925.0	925.0	925.0	925.0	925.0	925.0	925.0	925.0	925.0	925.0	925.0	925.0	925.0	925.0	925.0	925.0	float 850.0	500	850	850	850	850	500	500	850	850	850	1
	EngSpeedUprLimitEnableTable										AXIS is Gear State, Curve is RPM																							
Axis	TransGr1	TransGr2	TransGr3	TransGr4	TransGr5	TransGr6	TransGrEVT1	TransGrEVT2	TransGrNeut	TransGrRvrs	TransGrPark	TransGr1	TransGr2	TransGr3	TransGr4	TransGr5	TransGr6	TransGrEVT1	TransGrEVT2	TransGrNeut	TransGrRvrs	TransGrPark												
Curve	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0	2800.0												
	EngSpeedLwrLimitDisableTable										AXIS is Gear State, Curve is RPM																							
Axis	TransGr1	TransGr2	TransGr3	TransGr4	TransGr5	TransGr6	TransGrEVT1	TransGrEVT2	TransGrNeut	TransGrRvrs	TransGrPark	TransGr1	TransGr2	TransGr3	TransGr4	TransGr5	TransGr6	TransGrEVT1	TransGrEVT2	TransGrNeut	TransGrRvrs	TransGrPark												
Curve	850.0	500.0	850.0	850.0	850.0	850.0	500.0	500.0	850.0	850.0	850.0	850.0	500.0	850.0	850.0	850.0	850.0	500.0	500.0	850.0	850.0	850.0												
	EngSpeedUprLimitDisableTable										AXIS is Gear State, Curve is RPM																							
Axis	TransGr1	TransGr2	TransGr3	TransGr4	TransGr5	TransGr6	TransGrEVT1	TransGrEVT2	TransGrNeut	TransGrRvrs	TransGrPark	TransGr1	TransGr2	TransGr3	TransGr4	TransGr5	TransGr6	TransGrEVT1	TransGrEVT2	TransGrNeut	TransGrRvrs	TransGrPark												
Curve	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000												
	HalfCylToAllCylVacuum												Horizontal AXIS is Gear State, Vertical axis is Engine RPM																					
	RPM	TransGr1	TransGr2	TransGr3	TransGr4	TransGr5	TransGr6	TransGrEVT1	TransGrEVT2	TransGrNeut	TransGrRvrs	TransGrPark	TransGr1	TransGr2	TransGr3	TransGr4	TransGr5	TransGr6	TransGrEVT1	TransGrEVT2	TransGrNeut	TransGrRvrs	TransGrPark											
	0.0	0	0	0	0	0	30	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0											
	100.0	0	0	0	0	0	30	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0											
	200.0	0	0	0	0	0	30	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0											
	300.0	0	0	0	0	0	30	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0											
	400.0	0	0	0	0	0	30	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0											
	500.0	0	0	0	0	0	30	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0											

ECM SUPPORTING TABLES												
600.0	0	0	0	0	0	0	30	0	0	0	0	0
700.0	0	0	0	0	0	0	25	0	0	0	0	0
800.0	0	0	0	0	0	0	20	0	0	0	0	0
900.0	0	0	0	0	0	0	15	0	0	0	0	0
1000.0	0	0	0	0	0	0	10	0	0	0	0	0
1100.0	0	0	0	0	0	0	5	0	0	0	0	0
1200.0	0	0	0	0	0	0	5	0	0	0	0	0
1300.0	0	0	0	0	0	0	5	0	0	0	0	0
1400.0	0	0	0	0	0	0	5	0	0	0	0	0
1500.0	0	0	0	0	0	0	5	0	0	0	0	0
1600.0	0	0	0	0	0	0	5	0	0	0	0	0
1700.0	0	0	0	0	0	0	5	0	0	0	0	0
1800.0	0	0	0	0	0	0	5	0	0	0	0	0
1900.0	0	0	0	0	0	0	5	0	0	0	0	0
2000.0	0	0	0	0	0	0	5	0	0	0	0	0
2100.0	0	0	0	0	0	0	5	0	0	0	0	0
2200.0	0	0	0	0	0	0	5	0	0	0	0	0
2300.0	0	0	0	0	0	0	5	0	0	0	0	0
2400.0	0	0	0	0	0	0	5	0	0	0	0	0
2500.0	0	0	0	0	0	0	5	0	0	0	0	0
2600.0	0	0	0	0	0	0	5	0	0	0	0	0
2700.0	0	0	0	0	0	0	5	0	0	0	0	0
2800.0	0	0	0	0	0	0	5	0	0	0	0	0
2900.0	0	0	0	0	0	0	5	0	0	0	0	0
3000.0	0	0	0	0	0	0	5	0	0	0	0	0
3100.0	0	0	0	0	0	0	5	0	0	0	0	0
3200.0	0	0	0	0	0	0	5	0	0	0	0	0
HalfCylDisabledPRNDL												
PRNDL Drive 1					1							1
PRNDL Drive 2					1							1
PRNDL Drive 3					1							1
PRNDL Drive 4					1							1
PRNDL Drive 5					1							1
PRNDL Drive 6					0							0
PRNDL Neutral					1							0
PRNDL Reverse					1							1
PRNDL Park					1							0
PRNDL Transitional 1					1							1
PRNDL Transitional 2					1							1
PRNDL Transitional 4					1							1
PRNDL Transitional 7					1							1
PRNDL Transitional 8					1							1
PRNDL Transitional 11					1							1
PRNDL Transitional 13					1							1
PRNDL Transitional Illegal					1							1
PRNDL Transitional Between State					1							1
HalfCylDisabledPRNDLDeviceControl												
PRNDL Drive 1												1
PRNDL Drive 2												1
PRNDL Drive 3												1
PRNDL Drive 4												1
PRNDL Drive 5												1
PRNDL Drive 6												0
PRNDL Neutral												0
PRNDL Reverse												1
PRNDL Park												0
PRNDL Transitional 1												1
PRNDL Transitional 2												1
PRNDL Transitional 4												1
PRNDL Transitional 7												1
PRNDL Transitional 8												1
PRNDL Transitional 11												1
PRNDL Transitional 13												1
PRNDL Transitional Illegal												1
PRNDL Transitional Between State												1
HalfCylDisabledTransGr Table												
AXIS is Gear State												
TransGr1	TransGr2	TransGr3	TransGr4	TransGr5	TransGr6	TransGrEVT1	TransGrEVT2	TransGrNeut	TransGrRvrs	TransGrPark		
0	0	0	0	0	0	0	0	1	1	1		
AllCylToHalfCylVacuum												
Horizontal AXIS is Gear State, Vertical axis is Engine RPM												
RPM	TransGr1	TransGr2	TransGr3	TransGr4	TransGr5	TransGr6	TransGrEVT1	TransGrEVT2	TransGrNeut	TransGrRvrs	TransGrPark	
0.0	0	0	0	0	0	0	0	0	0	0	0	0
100.0	0	0	0	0	0	0	0	0	0	0	0	0
200.0	0	0	0	0	0	0	0	0	0	0	0	0
300.0	0	0	0	0	0	0	0	0	0	0	0	0
400.0	0	0	0	0	0	0	0	0	0	0	0	0
500.0	0	0	0	0	0	0	0	0	0	0	0	0
600.0	0	0	0	0	0	0	0	0	0	0	0	0
700.0	0	0	0	0	0	0	0	0	0	0	0	0
800.0	0	0	0	0	0	0	0	0	0	0	0	0
900.0	0	0	0	0	0	0	0	0	0	0	0	0
1000.0	0	0	0	0	0	0	0	0	0	0	0	0
1100.0	0	0	0	0	0	0	0	0	0	0	0	0
1200.0	0	0	0	0	0	0	0	0	0	0	0	0
1300.0	0	0	0	0	0	0	0	0	0	0	0	0
1400.0	0	0	0	0	0	0	0	0	0	0	0	0
1500.0	0	0	0	0	0	0	0	0	0	0	0	0
1600.0	0	0	0	0	0	0	0	0	0	0	0	0
1700.0	0	0	0	0	0	0	0	0	0	0	0	0
1800.0	0	0	0	0	0	0	0	0	0	0	0	0
1900.0	0	0	0	0	0	0	0	0	0	0	0	0
2000.0	0	0	0	0	0	0	0	0	0	0	0	0
2100.0	0	0	0	0	0	0	0	0	0	0	0	0
2200.0	0	0	0	0	0	0	0	0	0	0	0	0
2300.0	0	0	0	0	0	0	0	0	0	0	0	0
2400.0	0	0	0	0	0	0	0	0	0	0	0	0
2500.0	0	0	0	0	0	0	0	0	0	0	0	0
2600.0	0	0	0	0	0	0	0	0	0	0	0	0
2700.0	0	0	0	0	0	0	0	0	0	0	0	0
2800.0	0	0	0	0	0	0	0	0	0	0	0	0
2900.0	0	0	0	0	0	0	0	0	0	0	0	0
3000.0	0	0	0	0	0	0	0	0	0	0	0	0
3100.0	0	0	0	0	0	0	0	0	0	0	0	0

ECM SUPPORTING TABLES																	
	3200.0	0	0	0	0	0	0	0	0	0	0	0					
P0521																	
EngSpeedWeightFactorTable																	
AXIS is Engine RPM, Curve is Weight Factor																	
Axis	0	500	900	1000	2000	3000	4000	5000	6000								
Curve	0.0000	0.0000	0.0000	0.4500	0.4500	0.4500	0.4600	0.4400	0.0000								
EngOilTempWeightFactorTable																	
AXIS is Engine Oil Temp Deg C, Curve is Weight Factor																	
Axis	-40	40	60	80	90	100	120	130	140								
Curve	0.5780	0.7000	0.7000	0.7000	0.7000	0.7000	0.7000	0.7000	0.0000								
EngLoadStabilityWeightFactorTable																	
AXIS is Engine RPM, Curve is Weight Factor																	
Axis	0	5	10	20	30	50	100	200	399								
Curve	0.9999	0.9999	0.5000	0.3000	0.0000	0.0000	0.0000	0.0000	0.0000								
EngOilPredictionWeightFactorTable																	
AXIS is Engine RPM, Curve is Engine Oil Prediction Weight Factor Ratio																	
Axis	0	170	250	275	350	375	400	500	600								
Curve	0.0000	0.0000	0.1000	1.0000	1.0000	1.0000	1.0000	0.8600	0.0000								
EGR Section																	
KIEGRD_p_StepDelta																	
X axis is Kpa BARO																	
	65	70	75	80	85	90	95	100	105								
	3.1953	3.1953	3.1953	3.1953	3.1953	3.1953	3.1953	3.1953	3.1953								
KIEGRD_p_StepMAP_DIFF																	
X axis is Kpa BARO																	
	65	70	75	80	85	90	95	100	105								
	-0.0391	-0.0391	-0.0391	-0.0391	-0.0391	-0.0391	-0.0391	-0.0391	-0.0391								
KIEGRD_Cnt_StepSamplesPerTrip																	
X axis is Kpa BARO																	
	65	70	75	80	85	90	95	100	105								
	1.0000	1.0000	1.0000	1.0000	1.0000	1.0000	1.0000	1.0000	1.0000								
KIEGRD_Cnt_SamplesAfterStep																	
X axis is Kpa BARO																	
	65	70	75	80	85	90	95	100	105								
	10.0000	10.0000	10.0000	10.0000	10.0000	10.0000	10.0000	10.0000	10.0000								
KIEGRD_Cnt_SamplesAfterReset																	
X axis is Kpa BARO																	
	65	70	75	80	85	90	95	100	105								
	10.0000	10.0000	10.0000	10.0000	10.0000	10.0000	10.0000	10.0000	10.0000								
Phaser Section																	
KIPHSd_phi_CamPosErrorLimic1																	
X axis is Deg C																	
Y axis is RPM																	
	-40.0000	-28.0000	-16.0000	-4.0000	8.0000	20.0000	32.0000	44.0000	56.0000	68.0000	80.0000	92.0000	104.0000	116.0000	128.0000	140.0000	152.0000
400	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
800	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
1200	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
1600	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
2000	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
2400	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
2800	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
3200	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
3600	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
4000	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
4400	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
4800	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
5200	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
5600	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
6000	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
6400	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
6800	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
KIPHSd_t_StablePositionTimeic1																	
X axis is Deg C																	
Y axis is RPM																	
	-40.0000	-28.0000	-16.0000	-4.0000	8.0000	20.0000	32.0000	44.0000	56.0000	68.0000	80.0000	92.0000	104.0000	116.0000	128.0000	140.0000	152.0000
400	100.0000	80.0000	20.0000	8.0000	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	5.000	7.500
800	100.0000	80.0000	20.0000	8.0000	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	5.000	7.500
1200	100.0000	80.0000	20.0000	8.0000	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	5.000	7.500
1600	100.0000	80.0000	20.0000	8.0000	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	5.000	7.500
2000	100.0000	80.0000	20.0000	8.0000	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	5.000	7.500
2400	100.0000	80.0000	20.0000	8.0000	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	5.000	7.500
2800	100.0000	80.0000	20.0000	8.0000	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	5.000	7.500
3200	100.0000	80.0000	20.0000	8.0000	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	5.000	7.500
3600	100.0000	80.0000	20.0000	8.0000	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	5.000	7.500
4000	100.0000	80.0000	20.0000	8.0000	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	5.000	7.500
4400	100.0000	80.0000	20.0000	8.0000	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	3.350	5.000	7.500

09 OBDG10 Diagnostics

MAIN SECTION
1 of 1 Section

ECM SUPPORTING TABLES

Table with 10 columns of numerical data, likely representing engine parameters or thresholds.

P0068: MAP / MAF / TPS Correlation

Table for P0068: MAP / MAF / TPS Correlation. X-axis is TPS (%), Data is MAP threshold (kPa). Values range from 4.9988 to 99.9985.

Table for P0068: MAP / MAF / TPS Correlation. X-axis is MAF threshold (grams/sec), Data is MAF threshold (grams/sec). Values range from 4.9988 to 255.0000.

P1682: Ignition Voltage Correlation

Table for P1682: Ignition Voltage Correlation. X-axis is IAT (DegC), Data is Voltage threshold (V). Values range from 7.0000 to 105.0000.

P16F3: No fast unmanaged retarded spark above the applied spark

Table for P16F3: No fast unmanaged retarded spark above the applied spark. X-axis is Erpm, Y-axis is Air per Cylinder (mg), Data is spark delta threshold (kPa).

Large table for P16F3: No fast unmanaged retarded spark above the applied spark. Columns include KISPRK, phi, DeltTorque, and ScryAdv. Values range from 500.00 to 8191.88.

P16F3: Absolute difference of redundant calculated engine speed

Table for P16F3: Absolute difference of redundant calculated engine speed. X-axis is engine speed (rpm), Data is engine speed delta (rpm). Values range from 0.0000 to 1000.0000.

P16F3: Absolute difference of the calculated Intake Manifold Pressure during engine event versus during time event

Table for P16F3: Absolute difference of the calculated Intake Manifold Pressure during engine event versus during time event. X-axis is engine torque (Nm), Data is MAP delta threshold (kPa). Values range from 0.0000 to 408.0000.

Transfer Case HIGH Ratio Margin

Table for Transfer Case HIGH Ratio Margin. X-axis is Veh Spd km/hr, Y-axis is Engine Torq N-m, Data is Ratio Margin. Values range from 0.0 to 24.0.

Transfer Case LOW Ratio Margin

Table for Transfer Case LOW Ratio Margin. X-axis is Veh Spd km/hr, Y-axis is Engine Torq N-m, Data is Ratio Margin. Values range from 0.0 to 24.0.

ECM SUPPORTING TABLES										
	-200	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
	-150	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
	-100	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
	-50	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
	0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
	50	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
	100	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
	150	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
	200	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
Transfer Case NEUTRAL Ratio Margin										
		X-axis is Veh Spd km/hr Y-axis is Engine Torq N-m Data is Ratio Margin								
		0.0	3.0	5.0	5.1	12.0	15.0	18.0	21.0	24.0
	-200	8.0	8.0	8.0	1.0	0.1	0.1	0.1	0.1	0.1
	-150	8.0	8.0	8.0	1.0	1.0	0.5	0.5	0.5	0.5
	-100	8.0	8.0	8.0	2.0	2.0	1.0	1.0	1.0	1.0
	-50	8.0	8.0	8.0	4.0	4.0	4.0	2.0	2.0	2.0
	0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
	50	8.0	8.0	8.0	4.0	4.0	4.0	2.0	2.0	2.0
	100	8.0	8.0	8.0	2.0	2.0	2.0	1.0	1.0	1.0
	150	8.0	8.0	8.0	1.0	1.0	1.0	0.5	0.5	0.5
	200	8.0	8.0	8.0	1.0	0.1	0.1	0.1	0.1	0.1

ECM FAULT BUNDLE DEFINITIONS										
Cert Doc Bundle Name	Pcodes									
CatalystSysEfficiencyLoB1_FA	P0420									
CatalystSysEfficiencyLoB2_FA	P0430									
EvapPurgeSolenoidCircuit_FA	P0443									
EvapFlowDuringNonPurge_FA	P0496									
EvapVentSolenoidCircuit_FA	P0449									
EvapSmallLeak_FA	P0442									
EvapEmissionSystem_FA	P0455	P0446								
FuelTankPressureSnsrCkt_FA	P0452	P0453								
CoolingFanSpeedTooHigh_FA	P0495									
FuelLevelDataFault	P0461	P0462	P0463	P2066	P2067	P2068				
PowertrainRelayFault	P1682									
PowertrainRelayStateOn_FA	P0685									
PowertrainRelayStateOn_Error	P0685									
IgnitionOffTimer_FA	P2610									
IgnitionOffTimeValid	P2610									
TimeSinceEngineRunningValid	P2610									
VehicleSpeedSensor_FA	P0502	P0503	P0722	P0723						
VehicleSpeedSensorError	P0502	P0503	P0722	P0723						
FuelTrimSystemB1_FA	P0171	P0172								
FuelTrimSystemB1_FA	P0171	P0172								
FuelTrimSystemB2_FA	P0174	P0175								
FuelTrimSystemB2_FA	P0174	P0175								
A/F Imbalance Bank1	P1174									

ECM FAULT BUNDLE DEFINITIONS											
A/F Imbalance Bank2	P1175										
AIRSystemPressureSensor FA	P2430	P2431	P2432	P2433	P2435	P2436	P2437	P2438			
AIR System FA	P0411	P2440	P2444								
AIRValveControlCircuit FA	P0412										
AIRPumpControlCircuit FA	P0418										
Clutch Sensor FA	P0806	P0807	P0808								
EthanolCompositionSensor_FA	P0178	P0179									
EngineMisfireDetected_TFTKO	P0300	P0301	P0302	P0303	P0304	P0305	P0306	P0307	P0308		
EngineMisfireDetected_FA	P0300	P0301	P0302	P0303	P0304	P0305	P0306	P0307	P0308		
KS_Ckt_Perf_B1B2_FA	P0324	P0325	P0326	P0327	P0328	P0330	P0332	P0333			
IgnitionOutputDriver_FA	P0351	P0352	P0353	P0354	P0355	P0356	P0357	P0358			
O2S_Bank_1_TFTKO	P0131	P0132	P0134	P2A00							
O2S_Bank_2_TFTKO	P0151	P0152	P0154	P2A03							
O2S_Bank_1_Sensor_1_FA	P2A00	P0131	P0132	P0133	P0134	P0135	P0053	P1133			
O2S_Bank_1_Sensor_2_FA	P013A	P013B	P013E	P013F	P2270	P2271	P0137	P0138	P0140	P0141	P0054
O2S_Bank_2_Sensor_1_FA	P2A03	P0151	P0152	P0153	P0154	P0155	P0059	P1153			
O2S_Bank_2_Sensor_2_FA	P013C	P013D	P014A	P014B	P2272	P2273	P0157	P0158	P0160	P0161	P0060
ECT_Sensor_Ckt_FA	P0117	P0118									
ECT_Sensor_Ckt_TPTKO	P0117	P0118									
ECT_Sensor_Ckt_TFTKO	P0117	P0118									
ECT_Sensor_DefaultDetected	P0117	P0118	P0116	P0125							
ECT_Sensor_FA	P0117	P0118	P0116	P0125	P0128						
ECT_Sensor_TFTKO	P0117	P0118	P0116	P0125							
ECT_Sensor_Perf_FA	P0116										

ECM FAULT BUNDLE DEFINITIONS									
ECT_Sensor_Ckt_FP	P0117	P0118							
ECT_Sensor_Ckt_High_FP	P0118								
ECT_Sensor_Ckt_Low_FP	P0117								
AmbientAirPressCktFA	P2228	P2229							
AmbientAirPressCktFA_NoSnsr	P0106	P0107	P0108						
AmbientAirDefault_NA	P0106	P0107	P0108	P2227	P2228	P2229			
AmbientAirDefault_SC	P012B	P012C	P012D	P2227	P2228	P2229			
AmbientAirDefault_NoSnsr	P0106	P0107	P0108						
AmbientAirDefault	NA is has Baro Sensor and Normally Aspirated, SC if suprecharged, NoSnsr is Normally Aspirated with no Baro Sensor								
IAT_SensorCircuitTFTKO	P0112	P0113							
IAT_SensorCircuitFA	P0112	P0113							
IAT_SensorCircuitFP	P0112	P0113							
IAT_SensorTFTKO	P0111	P0112	P0113						
IAT_SensorFA	P0111	P0112	P0113						
IAT2_SensorCktTFTKO	P0097	P0098							
IAT2_SensorCktTFTKO_NoSnsr	P0112	P0113							
IAT2_SensorCircuitFA	P0097	P0098							
IAT2_SensorCircuitFA_NoSnsr	P0112	P0113							
IAT2_SensorcircuitFP	P0097	P0098							
IAT2_SensorcircuitFP_NoSnsr	P0112	P0113							
IAT2_SensorTFTKO	P0096	P0097	P0098						
IAT2_SensorTFTKO_NoSnsr	P0111	P0112	P0113						
IAT2_SensorFA	P0096	P0097	P0098						
IAT2_SensorFA_NoSnsr	P0111	P0112	P0113						
SuperchargerBypassValveFA	P2261								
CylDeacSystemTFTKO	P3400								
MAF_SensorPerfFA	P0101								
MAF_SensorPerfTFTKO	P0101								
MAP_SensorPerfFA	P0106								

ECM FAULT BUNDLE DEFINITIONS												
MAP_SensorPerfTFTKO	P0106											
SCIAP_SensorPerfFA	P012B											
SCIAP_SensorPerfTFTKO	P012B											
ThrottlePositionSnsrPerfFA	P0121											
ThrottlePositionSnsrPerfTFTKO	P0121											
MAF_SensorFA	P0101	P0102	P0103									
MAF_SensorTFTKO	P0101	P0102	P0103									
MAF_SensorFP	P0102	P0103										
MAF_SensorCircuitFA	P0102	P0103										
MAF_SensorCircuitTFTKO	P0102	P0103										
MAP_SensorTFTKO	P0106	P0107	P0108									
MAP_SensorFA	P0106	P0107	P0108									
SCIAP_SensorFA	P012B	P012C	P012D									
SCIAP_SensorTFTKO	P012B	P012C	P012D									
SCIAP_SensorCircuitFP	P012C	P012D										
AfterThrottlePressureFA_NA	P0106	P0107	P0108									
AfterThrottlePressureFA_SC	P012B	P012C	P012D									
AfterThrottleVacuumTFTKO_NA	P0106	P0107	P0108									
AfterThrottleVacuumTFTKO_SC	P012B	P012C	P012D									
SCIAP_SensorCircuitFA	P012C	P012D										
AfterThrottlePressTFTKO_NA	P0106	P0107	P0108									
AfterThrottlePressTFTKO_SC	P012B	P012C	P012D									
MAP_SensorCircuitFA	P0107	P0108										
MAP_EngineVacuumStatus	MAP_SensorFA OR P0107, P0108 Pending											
CrankCamCorrelationTFTKO	P0016	P0017	P0018	P0019								
CrankSensorFA	P0335	P0336										
CrankSensorTFTKO	P0335	P0336										
CamSensorFA	P0016	P0017	P0018	P0019	P0340	P0341	P0345	P0346	P0365	P0366	P0390	P0391
CamSensorTFTKO	P0016	P0017	P0018	P0019	P0340	P0341	P0345	P0346	P0365	P0366	P0390	P0391
CrankIntakeCamCorrelationFA	P0016	P0018										
CrankExhaustCamCorrelationFA	P0017	P0019										

ECM FAULT BUNDLE DEFINITIONS												
IntakeCamSensorTFTKO	P0016	P0018	P0340	P0341	P0345	P0346						
IntakeCamSensorFA	P0016	P0018	P0340	P0341	P0345	P0346						
ExhaustCamSensorTFTKO	P0017	P0019	P0365	P0366	P0390	P0391						
ExhaustCamSensorFA	P0017	P0019	P0365	P0366	P0390	P0391						
IntakeCamSensor_FA	P0016	P0018	P0340	P0341	P0345	P0346						
IntakeCamSensor_TFTKO	P0016	P0018	P0340	P0341	P0345	P0346						
ExhaustCamSensor_FA	P0017	P0019	P0365	P0366	P0390	P0391						
ExhaustCamSensor_TFTKO	P0017	P0019	P0365	P0366	P0390	P0391						
CrankIntakeCamCorrFA	P0016	P0018										
CrankExhaustCamCorrFA	P0017	P0019										
CrankSensorFaultActive	P0335	P0336										
CrankSensor_FA	P0335	P0336										
CrankSensorTestFailedTKO	P0335	P0336										
CrankSensor_TFTKO	P0335	P0336										
CamSensor_FA	P0016	P0017	P0018	P0019	P0340	P0341	P0345	P0346	P0365	P0366	P0390	P0391
CamSensorAnyLocationFA	P0016	P0017	P0018	P0019	P0340	P0341	P0345	P0346	P0365	P0366	P0390	P0391
CamSensor_TFTKO	P0016	P0017	P0018	P0019	P0340	P0341	P0345	P0346	P0365	P0366	P0390	P0391
AnyCamPhaser_FA	P0010	P0011	P0013	P0014	P0020	P0021	P0023	P0024				
AnyCamPhaser_TFTKO	P0010	P0011	P0013	P0014	P0020	P0021	P0023	P0024				
IntkCamPhaser_FA	P0010	P0011	P0020	P0021								
EGRValvePerformance_FA	P0401	P042E										
EGRValveCircuit_FA	P0403	P0404	P0405	P0406								
EGRValve_FP	P0405	P0406	P042E									
EGRValveCircuit_TFTKO	P0403	P0404	P0405	P0406								
EGRValvePerformance_TFTKO	P0401	P042E										
EngineMetalOvertempActive	P1258											
	no codes?											
A/C_FailedOn	P0645											

ECM FAULT BUNDLE DEFINITIONS												
EngOilTempSensorCircuitFA	P0197	P0198										
EngOilModeledTempValid	ECT_Sensor_FA or IAT_SensorCircuitFA											
EngOilPressureSensorCktFA	P0522	P0523										
EngOilPressureSensorFA	P0521	P0522	P0523									
see Trans Summary Tables												
CylinderDeacDriverTFTKO	P3401	P3409	P3417	P3425	P3433	P3441	P3449					
BrakeBoosterSensorFA	P0556	P0557	P0558									
BrakeBoosterVacuumValid	P0556	P0557	P0558									
BrakeBoosterVacuumValid	VehicleSpeedSensorError or MAP_SensorFA											
FuelInjectorCircuit_FA	P0201	P0202	P0203	P0204	P0205	P0206	P0207	P0208				
FuelInjectorCircuit_TFTKO	P0201	P0202	P0203	P0204	P0205	P0206	P0207	P0208				
ControllerProcessorPerf_FA	P0606											
ControllerRAM_Error_FA	P0604											
TPS_Performance_FA	P0068	P0121	P1516	P2101								
EnginePowerLimited	P0068	P0606	P0120	P0122	P0123	P0220	P0222	P0223	P0641	P0651		
	P1516	P2101	P2120	P2122	P2123	P2125	P2127	P2128	P2135	P2138	P2176	
TPS1_OutOfRange_Composite	P0120	P0122	P0123									
TPS2_OutOfRange_Composite	P0220	P0222	P0223									
TPS_FA	P2135	(TPS1_OutOfRange_Composite and TPS2_OutOfRange_Composite)										
TPS_FaultPending	Always set to FALSE, As ETC diagnostics are set within 200 msec there is no real need for a pending flag											
TPS_ThrottleAuthorityDefaulted	P0068	P0606	P1516	P2101	P2135	P2176	V5B_OutOfRange_Composite					

ECM FAULT BUNDLE DEFINITIONS									
	(TPS1_OutOfRange_Composite and TPS2_OutOfRange_Composite)								
	(MAP_OutOfRange_Composite and MAF_OutOfRange_Composite)								
AcceleratorEffectivePstnValid	Always set to TRUE, no P codes will set to FALSE								
5VoltReferenceA_FA	P0641								
5VoltReferenceB_FA	P0651								
5VoltReferenceMAP_OOR_Fit	P0697								
IAC_SystemRPM_FA	P0506	P0507							
IAC_SystemRPM_FA	P0506	P0507							
TransmissionGearDefaulted	P182E	P1915							
TransmissionEngagedState_FA	P182E	P1915							
FourWheelDriveLowStateValid	P2771								
EngineTorqueInaccurate	EngineMisfireDetected_FA or FuelInjectorCircuit_FA or FuelInjectorCircuit_TFTKO or FuelTrimSystemB1_FA or FuelTrimSystemB2_FA or MAF_SensorTFTKO or MAP_SensorTFTKO or EGRValvePerformance_FA								
PECL_Circuit_FA	P0A02	P0A03							
AcceleratorPedalFailure	P2122	P2123	P2127	P2128	P2138	P0697	P06A3		
<u>Long Name</u>	<u>Short Name</u>								
Bank	B								

ECM FAULT BUNDLE DEFINITIONS													
Brake	Brk												
Circuit	Ckt												
Engine	Eng												
Fault Active	FA												
Fault	Fit												
Intake	Intk												
Naturally Aspirated	NA												
Out of Range	OOR												
Performance	Perf												
Position	Pstn												
Pressure	Press												
Sensor	Snsr												
Supercharged	SC												
System	Sys												
Test Failed This Key On	TFTKO												
LowFuelConditionDiagnostic	Flag set to TRUE if the fuel level < 10 %												
	AND												
	No Active DTCs:		FuelLevelDataFault										
			P0462										
			P0463										
	for at least 30 seconds.												
Transfer Pump is Commanded On	Fuel Volume in Primary Fuel Tank < 0.0 liters												
	AND												
	Fuel Volume in Secondary Fuel Tank ≥ 100.0 liters												
	AND												
	Transfer Pump on Time < TransferPumpOnTimeLimit Table												
	AND												
	Transfer Pump had been Off for at least 0.0 seconds												
	AND												

ECM FAULT BUNDLE DEFINITIONS										
	Evap Diagnostic (Purge Valve Leak Test, Large Leak Test, and Waiting for Purge) is not running									
	AND									
	Engine Running									

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Idle Speed Diagnostics								
Idle Diagnostics P0506, P0507 have the following common enable criteria (for Reference Only)	**				Motor A speed faults: P0A3F, P1B03, P0A40, P0C52, P0C53, P0C5C, P0C5D Motor B speed faults: P0A45, P1B04, P0A46, P0C57, P0C58, P0C61, P0C62 Vehicle Speed/TOS sensor faults: P0722, P077B, P215C Accelerator pedal position Accel Pedal position Engine State Vehicle speed Commanded RPM Delta IdleConditions present	Not active Not active Not active Not Defaulted <= 1 % Running (not starting or stopping states) <= 1 kph < 50 25 RPM for >= 5 seconds		
Idle Air Control (IAC) System - RPM Too Low	P0506	This DTC sets when the idle speed is lower than the targeted idle speed	Idle speed	Filtered input speed error (desired - actual) is greater than fail threshold 75 25 RPM. Filter coefficient for engine speed = 0.002	** Common Enables		1 loop execution at 100 ms rate	Type B 2 Trips
		DTC Pass	Idle speed	Filtered input speed error (desired - actual), is less than fail threshold 50. Filter coefficient for engine speed = 0.0023	** Common Enables		Pass condition met for 15 seconds	
		DTC RePass after failure	Idle Speed		Hi idle diagnostic ** Common Enables	Fault Active	Pass condition met for 15 seconds	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Idle Air Control (IAC) System - RPM Too High	P0507	This DTC sets when the idle speed is higher than the targeted idle speed	Idle speed	Filtered input speed error (desired - actual) is less than fail threshold -150 182 RPM. Filter coefficient for engine speed = 0.002 3	** Common Enables		1 loop execution at 100 ms rate	Type B 2 Trips
		DTC Pass	Idle speed		** Common Enables		Pass condition met for 15 seconds	
		DTC RePass after failure	Idle Speed	Filtered input speed error (desired - actual), is greater than fail threshold -140. Filter coefficient for engine speed = 0.002 3	Low idle diagnostic ** Common Enables	Fault Active	Pass condition met for 15 seconds	
Power Moding Diagnostics								
System Voltage Low	P0562	Sets when the low voltage system voltage is below a threshold	Ignition Voltage	Ignition Voltage <= 10 Volts	Ignition Key Status Engine Speed	RUN/CRANK >= 0 RPM	(5 * 1) seconds in a (6 * 1) second window	Special Type C No Mil
		DTC Pass		Ignition Voltage > 10 Volts			(6 - 5) * 1 seconds	
System Voltage Hi	P0563	Sets when the low voltage system voltage is above a threshold	Ignition Voltage	Ignition Voltage >= 18 Volts	Ignition Key Status	RUN/CRANK	(5 * 1) seconds in a (6 * 1) second window	Special Type C No Mil
		DTC Pass		Ignition Voltage < 18 Volts			(6 - 1) * 1 seconds	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Ignition Switch Run/Start Position Circuit Low	P2534	Detects a run crank relay open circuit	Runk Crank Line voltage	Ignition Run Crank line voltage <= 2 Volts	CAN Communication ECM run crank active data	enabled available and active	(2400 * 0.025) seconds in a (2600 * 0.025) second window (215 - 200) * 0.025 seconds	Type A 1 Trip
Stuck Clutch Diagnostics								
Common Stuck Clutch diagnostic secondary enables for codes P07A3, P07A5, P07A7, P07A9 (For Reference Only)	***				Input speed - Input speed profile	> 250 Rpm		
Transmission Friction Element A Stuck On	P07A3	Detects a stuck C1 clutch	C1 Slip speed	C1 slip speed <= 80 RPM FOR > (60 + 120) * 0.025 seconds	Range State C1 slip acceleration Excess torque on C1 ***	Mode 2 <= 30 RPM/s > 350 320 Nm FOR 10 * 0.025 seconds	(120* 0.025) seconds	Type B 2 Trips
		DTC Pass	C1 Slip Speed	C1 Slip Speed > 45 RPM	Operating Mode	Neutral, Mode 2, Gear 3, Gear 4	(15 * 0.025) seconds	
Transmission Friction Element B Stuck On	P07A5	Detects a stuck C2 clutch	C2 Slip speed	C2 slip speed <= 50 RPM FOR > (8 + 120) * 0.025 seconds	Range State C2 slip acceleration Excess torque on C2	Mode 1 <= 10000 RPM/s > 350 320 Nm FOR 5 * 0.025 seconds	(120 * 0.025) seconds	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		DTC Pass	C4 Slip Speed	C4 Slip Speed > 150 RPM	Operating Mode	Neutral, Mode 1, Mode 2, Gear 2, Gear 4	(10 * 0.025) seconds	
Transmission Auxilary Oil Pump Diagnostics								
Transmission Auxiliary Oil Pump (TAOP) Feedback Signal out of Bound	P0C2B	This DTC sets when the TAOP controller is not communicating with the HCP	Incomplete or no fault message communication with TAOP controller.	A complete fault status message must be received every 1.5 seconds	RunCrankActive	= 1 for more than 0.2 seconds	1.5 seconds	Type B 2 Trips
Auxiliary Transmission Fluid Pump Performance	P2797	This diagnostic monitors the aux pump performance based on aux pump desired and actual speed values	Aux pump speed	Aux pump speed - Commanded Aux pump Speed > 500 RPM Aux pump speed - Commanded Aux pump Speed <= 500 RPM	RunCrankActive Desired Speed	= 1 for more than KeTAPD_t_DiagDlyIgnOn seconds >= KeTAPD_n_PmpPerf_MinSpd	Fail Condition met for (160 * 0.025) seconds in a (165 * 0.025) second window Pass met for (165-160) * 0.025 seconds	Type B 2 Trips
System Speed Rationality								
Internal Control Module Drive Motor/Generator - Engine Speed Sensor Performance	P0C2F	The DTC Monitors the Calculated Input Speed and Compares this with the Sensed Engine Speed	SPI Sensed Engine Speed and Input Speed	Sensed SPI Engine Speed Above 1500 RPM a difference ≥ 250 RPM else ≥ 1500 RPM	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	160 failure counts out of 320 sample @12.5 ms loop	Type A 1 Trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			CAN Sensed Engine Speed and Input Speed	Sensed CAN Engine Speed Above 1500 RPM a difference \geq 250 RPM else \geq 1500 RPM			Pass Conditions: Sensed SPI Engine Speed Above 500 RPM a difference \leq 150 RPM else \leq 1500 RPM	
							Pass Conditions: Sensed CAN Engine Speed Above 500 RPM a difference \leq 150 RPM else \leq 1500 RPM for 500ms	
Transmission Output Speed Sensor								
Output Speed Sensor Circuit Direction Error	P077B	The DTC detects if the Transmission Output Speed Sensor Direction is Incorrect by Comparing with Calculated Direction from Motor Speed Sign	Transmission Output Speed Direction Raw	\neq Motor Direction	Transmission Output Speed	Not FAULT ACTIVE	4.45 0.3 seconds (46 12 counts at 25ms)	Type A 1 Trip
					Hybrid Motor Speed based Estimated Output Speed is Valid	Calculated based on M1 or M2 Speed Equation		
					Transmission Output Speed and Motor Output Speed Difference	\leq 50 RPM	Pass Conditions: Same as FAIL for 5 seconds (200 counts at 25ms)	
					Motor Estimated Transmission Output Speed	\geq 50 RPM		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Internal Mode Switch 2								
Internal Mode Switch 2 R1 Circuit Low Voltage	P181C	The DTC Monitors if the IMS R1 Circuit is Shorted to a Low Voltage	Converted Directional IMS	Transitional 17	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds	Type B 2 Trips
			AND Directional IMS R1	R1 Position Has Not Been Observed High	Converted Directional IMS	Transitional 2	Pass Conditions: Has Been Observed High for 3.125 seconds	
					AND Directional IMS R1	R1 Position NOT High for 5 seconds		
Internal Mode Switch 2 R1 Circuit High Voltage	P181D	The DTC Monitors if the IMS R1 Circuit is Shorted to a High Voltage	Converted Directional IMS	Transitional 30	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds	Type B 2 Trips
			AND Directional IMS R1	R1 Position Has Not Been Observed Low			Pass Conditions: Has Been Observed Low for 3.125 seconds	
Internal Mode Switch 2 R2 Circuit Low Voltage	P181E	The DTC Monitors if the IMS R2 Circuit is Shorted to a Low Voltage	Converted Directional IMS	DRIVE	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds	Type B 2 Trips
			AND Directional IMS R2	R2 Position Has Not Been Observed High	Converted Directional IMS	PARK	Pass Conditions: Has Been Observed High for 3.125 seconds	
					AND Directional IMS R2	R2 Position Low for 5 seconds		
Internal Mode Switch 2 R2 Circuit High Voltage	P181F	The DTC Monitors if the IMS R2 Circuit is Shorted to a High Voltage	Converted Directional IMS	Transitional 14 OR Transitional 29	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			AND Directional IMS R2	R2 Position Has Not Been Observed Low			Pass Conditions: Has Been Observed Low for 3.125 seconds	
Internal Mode Switch 2 D1 Circuit Low Voltage	P183A	The DTC Monitors if the IMS D1 Circuit is Shorted to a Low Voltage	Converted Directional IMS	Transitional 8 OR Transitional 20	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds	Type B 2 Trips
			AND Directional IMS D1	D1 Position Has Not Been Observed High			Pass Conditions: Has Been Observed High for 3.125 seconds	
Internal Mode Switch 2 D1 Circuit High Voltage	P183B	The DTC Monitors if the IMS D1 Circuit is Shorted to a High Voltage	Converted Directional IMS	Transitional 27	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds	Type B 2 Trips
			AND Directional IMS D1	D1 Position Has Not Been Observed Low			Pass Conditions: Has Been Observed Low for 3.125 seconds	
Internal Mode Switch 2 D2 Circuit Low Voltage	P183C	The DTC Monitors if the IMS D2 Circuit is Shorted to a Low Voltage	Converted Directional IMS	Transitional 24	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds	Type B 2 Trips
			AND Directional IMS D1	D2 Position Has Not Been Observed High			Pass Conditions: Has Been Observed High for 3.125 seconds	
Internal Mode Switch 2 D2 Circuit High Voltage	P183D	The DTC Monitors if the IMS D2 Circuit is Shorted to a High Voltage	Converted Directional IMS	Transitional 11 AND Transitional 23	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			AND Directional IMS D2	D2 Position Has Not Been Observed Low			Pass Conditions: Has Been Observed Low for 3.125 seconds	
Internal Mode Switch 2- Invalid Range	P183E	The DTC Monitors if the IMS is in an Invalid Range	Converted Directional IMS	Illegal (All Circuits Open)	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds	Type B 2 Trips
							Pass Conditions: Same as Fail for 3.125 seconds	
Internal Mode Switch 1- 2 Correlation	P183F	The DTC Monitors if the IMS Direction and Range Correlation is Invalid	Converted Directional IMS	Correlation Fault Neutral (With No IMS Faults the Direction IMS and Range IMS Indicate Different Detent Postions)	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	1.25 seconds	Type A 1 Trip
							Pass Conditions: Same as Fail for 1.7 seconds	
Internal Mode Switch 2 S Circuit Low Voltage	P184A	The DTC Monitors if the IMS S Circuit is Shorted to a Low Voltage	Converted Directional IMS	Transitional 9	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds	Type B 2 Trips
			AND Directional IMS S	S Position Has Not Been Observed High			Pass Conditions: Has Been Observed High for 3.125 seconds	
Internal Mode Switch 2 S Circuit High Voltage	P184B	The DTC Monitors if the IMS S Circuit is Shorted to a High Voltage	Converted Directional IMS	Transitional 26 AND DRIVE	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			AND Directional IMS S	S Position Has Not Been Observed Low			Pass Conditions: Has Been Observed Low for 3.125 seconds	
			AND Directional IMS R1	R1 Has Been Observed Low				

Transmission Output Speed Sensor

Vehicle Speed Output Shaft Speed Correlation	P215B	The DTC Monitors if the Difference between the Transmission Output Speed and Output Speed Calculated from the Wheel Speed Sensors Difference	Transmission Output Speed and Output Speed Calculated from the Wheel Speed Sensors Difference	10 kph	Number of Secured Vehicle Speed Sources	2	10 seconds (400 counts at 25ms)	Type B 2 Trips			
									Secured Vehicle Speed Use Transmission Output Speed	TRUE	
									Secured Vehicle Speed Use Wheel Speed	TRUE	Pass Conditions: Same as Fail for 20 seconds (800 counts at 25ms)

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Controller Diagnostics								
Control Module Read Only Memory (Rom)	P0601	This DTC will be stored if any software or calibration check sum is incorrect	Calculated Checksum does not match stored checksum		Ignition Status	Run or Crank	1 failure if it occurs during the first ROM test of the ignition cycle, otherwise 5 failures Frequency: Runs continuously in the background	Type A 1 Trip
Control Module Not Programmed	P0602	Indicates that the HCP needs to be programmed	Fails if No Start Calibration is set to true which is only available on a new un-programmed HCP		Ignition Status	Run or Crank	Runs once at power up	Type A 1 Trip
Control Module Long Term Memory Reset	P0603	Non-volatile memory checksum error at controller power-up	Checksum at power-up does not match checksum at power-down		Ignition Status	Run or Crank	1 failure Frequency: Once at powerup	Type A 1 Trip
Control Module Random Access Memory (RAM) Failure	P0604	Indicates that HCP is unable to correctly write and read data to and from RAM	Data read does not match data written		Ignition Status	Run or Crank	Should finish within 30 seconds at all operating conditions	Type A 1 Trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
PCM Processor Performance/Integrity Check 1. Main processor Arithmetic Logic Unit (ALU) fault 2. Main configuration register fault 3. Software timed loop execution 4. Communication (SPI bus) between main and secondary processors	P0606	Indicates that the HCP has detected an internal processor integrity fault	1. ALU not reporting as expected 2. Configuration register not reporting as expected 3. Software tasks loops > schedule tasks loop 4. Loss of SPI communication between main and secondary processors		Ignition Status	Accessory, Run, Crank	1. Main (ALU) Failure: 2 times in a row @ 50ms 2.Main (config) Failure: 2 times in a row @ 50ms 3. N/A 4. SPI Failure: MCP 10 fail counts out of 30 sample counts Executes: 6.25ms loop PLD 3 fail counts out of 10 sample counts Executes: 50ms loop	Type A 1 Trip
					Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts		
Control Module Long Term Memory Performance	P062F	Indicates that the NVM Error flag has not been cleared	Last EEPROM write did not complete		Ignition voltage	≥ 5 volts	1 failure	Type A 1 Trip
							Frequency: Once at power-up	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Torque Security Diagnostics								
Internal Control Module Torque Performance	P061A	The regenerative braking ring compares the primary path torque calculations to the value created by a redundant secondary calculation. The values should be equal.						Type A 1 Trip
		Fail Case 1: The regenerative braking ring compares the primary path output torque calculations to the value created by a redundant secondary calculation. The values should be equal.	The primary path calculation of regen output torque differs from the redundant calculation	>100 Nm	Regenerative Braking Torque	> 0 Nm	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 2: The regenerative braking ring compares the primary path axle torque calculations to the value created by a redundant secondary calculation. The values should be equal.	The primary path calculation of regen axle torque differs from the redundant calculation	>100 Nm	Regenerative Braking Torque	> 0 Nm	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
Internal Control Module Torque Calculation Performance	P061B	The system torque monitor compares the primary path torque calculations to limits created by a redundant secondary calculation.						Type A 1 Trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 1: Exceeds upper torque limit	When the redundant calculation of the system torque exceeds the upper limit created by the primary torque calculation (0.2g = 678Nm offset) for greater than 200ms	678Nm (equivalent to .2g)		Runs continuously when a torque source is present	14 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 2: Exceeds lower torque limit	When the redundant calculation of the system torque exceeds the lower limit created by the primary torque calculation (0.15g = 508Nm offset) for greater than 200ms	508Nm (equivalent to .15g)		Runs continuously when a torque source is present	14 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 3: Transmission output torque rationality check violated	Axle torque request is converted to transmission output torque. When this converted output torque violates the rationality check comparison by 1 Nm for greater than 200ms a failure is flagged.	1Nm		Runs continuously when a torque source is present	14 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 4: Brake torque request rationality check violated	Brake torque request is converted to transmission output torque. When this converted output torque violates the rationality check comparison by 1 Nm for greater than 200ms a failure is flagged.	1Nm		Runs continuously when a torque source is present	14 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 5: Output torque negative when driver request is positive	When the PRNDL equals drive and the driver requested torque is positive while the commanded output torque is negative and below a -0.1g (-340Nm) threshold for greater than 200ms.	-340Nm (equivalent to -0.1g)		Enabled at low speed (7mph or less) or a TOSS sensor fault is active or vehicle speed sensor fault is active	14 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 6: Output torque positive when driver request is negative	When the PRNDL equals reverse and driver requested torque is negative while the commanded output torque is positive and greater than a 0.1g (340Nm) threshold for greater than 200ms.	340Nm (equivalent to 0.1g)		Enabled at low speed (7mph or less) or a TOSS sensor fault is active or vehicle speed sensor fault is active	14 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 7: Input Torque correction rationality check violated	When the difference between the primary and the redundantly calculated input torque correction exceeds 1Nm for greater than 200ms a failure is flagged	1Nm		Runs continuously when a torque source is present	14 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
Torque Management System – Forced Engine Shutdown	P06AF	The main processor monitor ring compares the ECM 2nd pattern (nibble pattern) to known good pattern to determine ECM state of health.	The nibble pattern is incorrect	The pattern does not match (F, 5, B, D, A, 6, 3, 0)	Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	4 fail counts out of 6 sample counts Executes in a 12.5 ms Loop Detects in 200ms	Type A 1 Trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Alive Rolling Count / Protection Value fault for the Regenerative Braking Axle Torque	P1B15	Detect the ARC (Alive Rolling Count) or Protection Value fault by checking the ARC and Protection Value of the Regenerative Braking Axle Torque	The current alive rolling count value does not equal the previous alive rolling count value incremented by 1	Current ARC ≠ Previous ARC +1	Ignition Key Status	Run/Crank for > 0.5 s	20 fail counts out of 30 sample counts	Type A 1 Trip
			The primary signal value does not equal the protection value	Primary Value ≠ Protection Value			Executes in a 6.25 ms Loop	
							Detects in 200ms	
Alive Rolling Count / Protection Value fault for the Engine Actual Torque Steady State	P15F0	Detect the ARC (Alive Rolling Count) or Protection Value fault by checking the ARC and Protection Value of the Engine Actual Torque Steady State	The current alive rolling count value does not equal the previous alive rolling count value incremented by 1	Current ARC ≠ Previous ARC +1	Ignition Key Status	Run/Crank for > 0.5 s	10 fail counts out of 16 sample counts	Type A 1 Trip
			The primary signal value does not equal the protection value	Primary Value ≠ Protection Value			Executes in a 12.5 ms Loop	
							Detects in 200ms	
Alive Rolling Count / Protection Value fault for the commanded predicted axle torque	P15F1	Detect the ARC (Alive Rolling Count) or Protection Value fault by checking the ARC and Protection Value of the commanded predicted axle torque	The current alive rolling count value does not equal the previous alive rolling count value incremented by 1	Current ARC ≠ Previous ARC +1	Ignition Key Status	Run/Crank for > 0.5 s	10 fail counts out of 16 sample counts	Type A 1 Trip
			The primary signal value does not equal the protection value	Primary Value ≠ Protection Value			Executes in a 12.5ms loop	
							Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Internal Control Module Transmission Direction Range Switch	P16F2	Detect transmission direction errors by reading the states of the Direction IMS switches as well as determining a transmission direction and comparing it to the transmission direction from the primary controls path.						Type A 1 Trip
		Fail Case 1: No direction match with no IMS failures	Read the Direction IMS switches and determine that they represent a valid transmission direction (P,R,N,D) but it does not match the transmission direction determined by the primary controls path.		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 2: Multiple transmission directions with no IMS failures	Read the Direction IMS switches and determine that they represent more than one valid transmission direction (P,R,N,D).		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 3: No direction match with one IMS failure	Read the Direction IMS switches and determine that one switch has failed and calculate a transmission direction, but it does not match the transmission direction determined by the primary controls path.		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 4: Multiple transmission directions with one IMS failure	Read the Direction IMS switches and determine that one switch has failed and		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			calculate a transmission direction and determine that they represent more than one valid transmission direction (P,R,N,D).				Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 5: Unable to determine transmission direction	Reads the Direction IMS switches and determine that more than one switch has failed and cannot calculate a transmission direction.		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts Executes in a 12.5ms loop Detects in 200ms	
Dual Store Fault	P16F3	Detect the dual store memory fault by comparing the primary value and the dual store value of the individual variables						Type A 1 Trip
		Fail Case 1: Detect the dual store memory fault by comparing the primary value and the dual store value of the brake torque request output	The primary value and the dual store value of the brake torque request output are not equal (ATRR)			Runs continuously	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 2: Detect the dual store memory fault by comparing the primary value and the dual store value of the immediate output torque request	The primary value and the dual store value of the immediate output torque request are not equal (ATRR)			Runs continuously	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 3: Detect the dual store memory fault by comparing the primary value and the dual store value of the commanded predicted axle torque	The primary value and the dual store value of the commanded predicted axle torque are not equal (AXLR)			Runs continuously	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 4: Detect the dual store memory fault by comparing the primary value and the dual store value of the Engine Actual Torque Steady State	The primary value and the dual store value of the Engine Actual Torque Steady State are not equal (ETQR)			Runs continuously	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 5: Detect the dual store memory fault by comparing the primary value and the dual store value of the transfer case range (4wd) variables	The primary value and the dual store value of the transfer case range (4wd) are not equal (FWDR)			Runs continuously	5 fail counts out of 16 sample counts Executes in a 25ms loop Detects in 200ms	
		Fail Case 6: Detect the dual store memory fault by comparing the primary value and the dual store value of the selected range equation	The primary value and the dual store value of the selected range equation are not equal (HSER)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 7: Detect the dual store memory fault by comparing the primary value and the dual store value of the range state	The primary value and the dual store value of the range state are not equal. (HSER)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	
		Fail Case 8: Detect the dual store memory fault by comparing the primary value and the dual store value of the Motor A torque command	The primary value and the dual store value of the Motor A torque command are not equal. (HTDR)			Runs continuously	20 fail counts out of 30 sample counts Executes in a 6.25ms loop Detects in 200ms	
		Fail Case 9: Detect the dual store memory fault by comparing the primary value and the dual store value of the Motor B torque command	The primary value and the dual store value of the Motor B torque command are not equal (HTDR)			Runs continuously	20 fail counts out of 30 sample counts Executes in a 6.25ms loop Detects in 200ms	
		Fail Case 10: Detect the dual store memory fault by comparing the primary value and the dual store value of the Motor A torque achieved	The primary value and the dual store value of the Motor A torque achieved are not equal (MTQR)			Runs continuously	20 fail counts out of 30 sample counts Executes in a 6.25ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 11: Detect the dual store memory fault by comparing the primary value and the dual store value of the Motor B torque achieved	The primary value and the dual store value of the Motor B torque achieved are equal (MTQR)			Runs continuously	20 fail counts out of 30 sample counts Executes in a 6.25ms loop Detects in 200ms	
		Fail Case 12: Detect the dual store memory fault by comparing the primary value and the dual store value of the Estimated Regenerative Braking Axle torque	The primary value and the dual store value of the Estimated Regenerative Braking Axle torque are not equal. (RGNR)			Runs continuously	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 13: Detect the dual store memory fault by comparing the primary value and the dual store value of the Estimated Regenerative Braking Output Torque	The primary value and the dual store value of the Estimated Regenerative Braking Output Torque are not equal (RGNR)			Runs continuously	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 14: Detect the dual store memory fault by comparing the primary value and the dual store value of the Regenerative Braking Axle Torque Request	The primary value and the dual store value of the Regenerative Braking Axle Torque Request are not equal (RGNR)			Runs continuously	20 fail counts out of 30 sample counts Executes in a 6.25ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 15: Detect the dual store memory fault by comparing the primary value and the dual store value of the Trans input speed	The primary value and the dual store value of the Trans input speed are not equal (TISR)			Runs continuously	20 fail counts out of 30 sample counts Executes in a 6.25ms loop Detects in 200ms	
		Fail Case 16: Detect the dual store memory fault by comparing the primary value and the dual store value of the Hybrid Commanded Engine Torque	The primary value and the dual store value of the Hybrid Commanded Engine Torque are not equal (TRAR)			Runs continuously	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 17: Detect the dual store memory fault by comparing the primary value and the dual store value of the Direction IMS Failure Active status	The primary value and the dual store value of the Direction IMS Failure Active status are not equal (TRGR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	
		Fail Case 18: Detect the dual store memory fault by comparing the primary value and the dual store value of the Trans Direction State Fault Active	The primary value and the dual store value of the Trans Direction State Fault Active are not equal (TRGR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 19: Detect the dual store memory fault by comparing the primary value and the dual store value of the Transmission Direction State.	The primary value and the dual store value of the Transmission Direction State are not equal (TRGR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	
		Fail Case 20: Detect the dual store memory fault by comparing the primary value and the dual store value of the Validated Trans Range State	The primary value and the dual store value of the Validated Trans Range State are not equal (TRGR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	
		Fail Case 21: Detect the dual store memory fault by comparing the primary value and the dual store value of the conversion factor for TOS	The primary value and the dual store value of the conversion factor for TOS are not equal (VSPR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	
		Fail Case 22: Detect the dual store memory fault by comparing the primary value and the dual store value of the rate limited secure vehicle speed	The primary value and the dual store value of the rate limited secure vehicle speed are not equal (VSPR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 23: Detect the dual store memory fault by comparing the primary value and the dual store value of the Signed, Filtered, Default Output speed	The primary value and the dual store value of the Signed, Filtered, Default Output speed are not equal (TOSR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	
		Fail Case 24: Detect the dual store memory fault by comparing the primary value and the dual store value of the Trans Output Acceleration	The primary value and the dual store value of the Trans Output Acceleration are not equal (TOSR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	
		Fail Case 25: Detect the dual store memory fault by comparing the primary value and the dual store value of the Motor A correction torque	The primary value and the dual store value of the Motor A correction torque are not equal (HTDR)			Runs continuously	20 fail counts out of 30 sample counts Executes in a 6.25ms loop Detects in 200ms	
		Fail Case 26: Detect the dual store memory fault by comparing the primary value and the dual store value of the Motor B correction torque	The primary value and the dual store value of the Motor B correction torque are not equal (HTDR)			Runs continuously	20 fail counts out of 30 sample counts Executes in a 6.25ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Internal Control Module Transmission Range Control Performance	P16F4	Detect transmission range errors by comparing the						Type A 1 Trip
		Fail Case 1: Positive transmission ranges that do not match	The Range IMS and Direction IMS from the primary controls path and both have valid transmission positions (P, R, N, D) but the two do not match.		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts	
							Executes in a 12.5ms loop	
							Detects in 200ms	
		Fail Case 2: Error corrected Direction IMS does not match	The Range IMS has a valid transmission position and the Direction IMS from the primary controls path has an error corrected transmission position, but the two do not match.		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts	
							Executes in a 12.5ms loop	
							Detects in 200ms	
		Fail Case 3: Range IMS is between valid transmission positions and Direction IMS is error corrected	The Range IMS indicates a transitional PRNDL position and the Direction IMS has an error corrected transmission position.		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts	
							Executes in a 12.5ms loop	
							Detects in 200ms	
		Fail Case 4: Range IMS is invalid and Direction IMS is error corrected	The Range IMS is invalid due to a fault or a problem with the TCM, and the Direction IMS has an error corrected transmission position.		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts	
							Executes in a 12.5ms loop	
							Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 5: Range IMS is between valid transmission positions and Direction IMS is invalid	The Range IMS indicates a transitional PRNDL position and the Direction IMS is invalid due to a fault or a problem with the HCP		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts	
						Executes in a 12.5ms loop		
						Detects in 200ms		
		Fail Case 6: Range IMS and Direction IMS are both invalid	The Range IMS is invalid due to a fault or a problem with the TCM, and the Direction IMS is invalid due to a fault or a problem with the HCP		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts	
						Executes in a 12.5ms loop		
						Detects in 200ms		
Internal Control Module Programmable Logic Device	P16F5	The main processor monitor rings tests the capability of the PLD to detect any incorrect keys.	The hardwired signal that is from the PLD indicates receipt of a correct key when the main processor monitor deliberately sends bad keys			Does not run during shutdown test (see P16F9)	4 fail counts out of 6 sample counts	Type A 1 Trip
							Executes in a 12.5 ms Loop	
					Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	Detects in 200ms	
Internal Control Module Commanded Range State	P16F6	The Transmission Range State monitor verifies that there are no mismatches in system equations, the transmission range state being executed is valid, and the transmission range state has not performed an invalid transition						Type A 1 Trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 1: Invalid Transmission Range State	The current Transmission Range State being used by the system is detected to be an invalid value within the current Transmission Range State Group.			Runs continuously	1 failure Detected within 25ms of failure	
		Fail Case 2: Invalid Transmission Range State Group	The current Transmission Range State Group being used by the system is an invalid value.			Runs continuously	1 failure Detected within 25ms of failure	
		Fail Case 3: Invalid Transmission Range State transition	The current Transmission Range State has changed, and the change in value is not one of the supported transitions from the previous Transmission Range State.			Runs continuously	1 failure Detected within 25ms of failure	
		Fail Case 4: Range Equation mismatches current Transmission Range State	The Range Equation can not be rationalized against the current Transmission Range State.			Runs continuously	1 failure Detected within 25ms of failure	
		Fail Case 5: Torque Determination State mismatches current Transmission Range State	The Torque Determination State can not be rationalized against the current Transmission Range State.			Runs continuously	1 failure Detected within 25ms of failure	
		Fail Case 6: Input Torque Optimization State mismatches current Transmission Range State	The Input Torque Optimization State can not be rationalized against the current Transmission Range State			Runs continuously	1 failure Detected within 25ms of failure	
Internal Control Module Shutdown Performance	P16F9	The main processor monitor ring is testing the ability of the PLD to detect a seed/key error and take necessary action						Type A 1 Trip
		Fail Case 1: Monitor MCPA for shutdown path test passed	The CAN signal that is from MCPA indicates test status equals failed	A value of 1 at test startup or a value of 0 at the end of test would fail	1. Ignition Key Status High Voltage Contactor Status	OFF OPEN	Executes in a 12.5 ms Loop	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					2. Ignition Key Status AND P16F9 Status	Run/Crank Test Failed on Previous Key Cycle		
		Fail Case 2: Monitor MCPB for shutdown path test passed	The SPI signal that is from MCPB indicates test status equals failed	A value of 1 at test startup or a value of 0 at the end of test would fail	1. Ignition Key Status High Voltage Contactor Status 2. Ignition Key Status AND P16F9 Status	OFF OPEN Run/Crank Test Failed on Previous Key Cycle	Executes in a 12.5 ms Loop Detects in 350ms	
Alive Rolling Count / Protection Value fault for the Transfer case range (4WD Hi-Lo-Neutral)	P279D	Detect the ARC (Alive Rolling Count) or Protection Value fault by checking the ARC and Protection Value of the Transfer case range (4WD Hi-Lo-Neutral)	The current alive rolling count value does not equal the previous alive rolling count value incremented by 1 The primary value does not equal the protection value	Current ARC ≠ Previous ARC +1 Primary Value ≠ Protection Value	Ignition Key Status	Run/Crank for > 0.5 s	5 fail counts out of 8 sample counts Executes in a 12.5 ms Loop Detects in 200ms	Type A 1 Trip
Battery Pack Diagnostics								
Hybrid Battery System Discharge Time Too Long	P0C76	High voltage bus discharge time too long	Failed discharge after key off: Discharge time Failed discharge count	> 200 V > 500 ms ≥ 2			2 consecutive failed discharge events (250ms each event)	Special Type C No MIL

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Hybrid Battery Pack Overtemperature	P0A7E	High voltage battery overtemperature	Battery temperature	> 73°C			5 minutes (3000 fail / 3600 sample; 100ms frequency)	Special Type C No MIL
Hybrid Battery Contactor Control Sequence Incorrect	P1A21	Contactor control functionality	Contactors closed this key on & Shutdown in process & Battery contactor state	= TRUE = FALSE ≠ CLOSED			50 ms	Type A 1 Trip
Autostart Diagnostics								
Hybrid System Performance	P0AB9	This diagnostic indicates an autostart or autostop attempt failed.	A problem during the autostart/stop process causes the engine to stall.				12.5 ms	Type A 1 Trip
Communication Diagnostics								
Control Module Communication Bus A Off	U0073	Detects that a CAN serial data bus shorted condition has occurred to force the CAN device driver to enter a bus-off state.	CAN device driver	= bus-off state.	Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	3 failures out of 5 samples Detects in 450 msec at loop rate of 12.5 msec	Type A 1 Trip
Control Module Communication Bus B Off	U0074	Detects that a CAN serial data bus shorted condition has occurred to force the CAN device driver to enter a bus-off state.	CAN device driver	= bus-off state.	Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	3 failures out of 5 samples Detects in 450 msec at loop rate of 12.5 msec	Type A 1 Trip
Lost Communication With ECM/PCM on Bus A	U0100	Detects that CAN serial data communication has been lost with the ECM on Bus A	Missed ECM Messages		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	Detects within 500 msec at 6.25 msec loop rate	Type A 1 Trip
Lost Communication With ECM/PCM on Bus B	U1818	Detects that CAN serial data communication has been lost with the ECM on Bus B	Missed ECM Messages		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	Detects within 500 msec at 6.25 msec loop rate	Type A 1 Trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Lost Communication With TCM	U0101	Detects that CAN serial data communication has been lost with the ECM on Bus A	Missed TCM Messages		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	Detects within 500 msec at 6.25 msec loop rate	Type A 1 Trip
Lost Communication With Transfer Case Control Module (supported when applicable)	U0102	Detects that CAN serial data communication has been lost with the TCCM on Bus A	Missed TCCM Messages		Ignition switch System Voltage	Run 10 V to 18 V	Detects within 500 msec at 6.25 msec loop rate	Type B 2 Trips
Lost Communication With Brake System Control Module	U0129	Detects that CAN serial data communication has been lost with the EBCM on Bus A	Missed EBCM Messages		Ignition switch System Voltage	Run 10 V to 18 V	Detects within 500 msec at 6.25 msec loop rate	Type B 2 Trips
Lost Communication With Motor Control Processor on Bus B	U1815	Detects that CAN serial data communication has been lost with the MCPA on Bus B	Missed MCPA Messages		Ignition switch System Voltage	Run 10 V to 18 V	Detects within 500 msec at 6.25 msec loop rate	Type B 2 Trips
Lost Communication With Battery Pack Control Module	U1888	Detects that CAN serial data communication has been lost with the BPCM	Missed BPCM Messages		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	Detects within 500 msec at 6.25 msec loop rate	Type A 1 Trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Power Moding Diagnostics								
System Voltage Low	P0562	Sets when the low voltage system voltage is below a threshold DTC Pass	Ignition Voltage	Ignition Voltage <= 10 Volts Ignition Voltage > 10 Volts	RunCrankActive Engine Speed	= 1 => 0 RPM	(5 * 1) seconds in a (6 * 1) second window (6 - 5) * 1 seconds	Special Type C No MIL
System Voltage Hi	P0563	Sets when the low voltage system voltage is above a threshold DTC Pass	Ignition Voltage	Ignition Voltage >= 18 Volts Ignition Voltage < 18 Volts	RunCrankActive	= 1	(5 * 1) seconds in a (6 * 1) second window (6 - 1) * 1 seconds	Special Type C No MIL
Shift Solenoid Hydraulic Diags								
Shift Solenoid Hydraulic Diagnostics P0751, P0752, P0756, P0757 have the following common enable criteria (Reference Only)	***				LinePressureEstimate Propulsion System Active	> 350 kpa AND >= 300 kpa FOR > 1 seconds AND > (Minimum Line Pressure - 30) kpa Where MinLinePressure is a lookup table Trans Fluid Temp vs Line Pressure: Temp Kpa -40 1550 -30 1550 -20 1200 -10 800 0 600 1		
Shift Solenoid Valve A Stuck Off	P0751	This DTC will indicate when Shift Solenoid Valve A (X Valve) is stuck in the hydraulically low position This detection only occurs during an X valve transition	X valve is determined to be in a hydraulically Low state when it has been commanded hydraulically High.	X Commanded Hi for > XvalveTurnOnTime + 1 seconds Where XValveTurnOnTime: Trans Fluid Temp Time -40 0.40 -30 0.25 -20 0.10 -10 0.04 0 0.03 - - - - -	X Command X Position	1 0	Fail Conditions met for 3 seconds	Type B Trip 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.																								
		DTC Pass	X valve completes Low to High transition without failure		X Command X Position	1 1	1 loop execution at 0.0125 seconds																									
Shift Solenoid Valve A Stuck On	P0752	<p>This DTC will indicate when Shift Solenoid Valve A (X Valve) is stuck in the hydraulically hi position</p> <p>This DTC is linked to both a steady state and transitional test.</p> <p>DTC Pass (Transitional Pass)</p>	<p>X valve is determined to be in a hydraulically high state when it has been commanded to a low state.</p> <p>X valve completes High to Low transition without failure</p>	<p>Transition Case: X commanded Low for > (XvalveTurnOffTm + 1) seconds</p> <p>Where XValveTurnOffTime:</p> <p>Trans Fluid Temp Time</p> <table border="1"> <tr><td>-40</td><td>0.50</td></tr> <tr><td>-30</td><td>0.40</td></tr> <tr><td>-20</td><td>0.12</td></tr> <tr><td>-10</td><td>0.08</td></tr> <tr><td>0</td><td>0.03</td></tr> <tr><td>140</td><td>0.0325</td></tr> </table> <p>Steady State Case: Simultaneous failures occur on both PCS2 and PCS4 monitors</p>	-40	0.50	-30	0.40	-20	0.12	-10	0.08	0	0.03	140	0.0325	<p>X Command X Position</p> <p>PCS2 and PCS4 Monitors XY state</p> <p>PCS2 and PCS4 faults</p>	<p>0 1</p> <p>0 0 No Fault Pending EVT Lo OR EVT Hi</p> <p>Occur Simultaneously within (VlvXStckHiSteadyStWindow + 0.1) seconds</p> <p>Where VlvXStckHiSteadyStWindow:</p> <p>Trans Fluid Temp Time</p> <table border="1"> <tr><td>-50</td><td>0.50</td></tr> <tr><td>-32</td><td>0.50</td></tr> <tr><td>-24</td><td>0.50</td></tr> <tr><td>-5</td><td>0.50</td></tr> <tr><td>4</td><td>0.50</td></tr> <tr><td>40</td><td>0.50</td></tr> </table>	-50	0.50	-32	0.50	-24	0.50	-5	0.50	4	0.50	40	0.50	<p>Fail Conditions met for 3 seconds</p> <p>5 seconds</p> <p>Fail Conditions met for 2 seconds</p>	<p>Type B Trip 2</p>
-40	0.50																															
-30	0.40																															
-20	0.12																															
-10	0.08																															
0	0.03																															
140	0.0325																															
-50	0.50																															
-32	0.50																															
-24	0.50																															
-5	0.50																															
4	0.50																															
40	0.50																															

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		DTC Pass (Steady State Pass)	X valve completes High to Low transition without failure	Stuck In Bore Case: X stuck in bore detection is indeterminant for an extended period of time	X Command X position PCS2 and PCS4 Monitors PCS4 hydraulic stuck high failure detected upon key up XY state X commanded high this key cycle	0 0 No Fault Pending TRUE EVT Lo FALSE	5 seconds Fail conditions met for > 1800 seconds	
Shift Solenoid Valve B Stuck Off	P0756	This DTC will indicate when Shift Solenoid Valve B (Y Valve) is stuck in the hydraulically low position This detection only occurs during an Y valve transition DTC Pass	The Y valve is determined to be in a hydraulically Low state when it has been commanded hydraulically High. Y valve completes Low to High transition without failure	Y Commanded Hi for > (Yvalve_TurnOnTm + 1 seconds) Where Yvalve_TurnOnTm: Trans Fluid Temp Time -40 0.90 -30 0.60 -20 0.28 -10 0.20 20 0.05 140 0.035	Y Command Y Position Y command Y Position	1 0 1 1 (as indicated by YPSw showing 0 value)	Fail Conditions met for 4.5 seconds Pass conditions met for 2 seconds	Type B Trip 2
Shift Solenoid Valve B Stuck On	P0757	This DTC will indicate when Shift Solenoid Valve B (Y Valve) is stuck in the hydraulically hi position This detection only occurs during an Y valve transition	The Y valve is determined to be in a hydraulically Hi state when it has been commanded hydraulically Lo	Y Commanded Lo for > (Yvalve_TurnOffTm + 1) seconds Where Yvalve_TurnOffTm: Trans Fluid Temp Time -40 2.17 -30 1.35 -20 0.54 -10 0.20 20 0.064 140 0.05	Y Command Y Position	0 1	Fail Conditions met for 4.5 seconds	Type A Trip 1

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		DTC Pass	Y valve completes High to Low transition without failure		Y Command Y Position	0 0 (as indicated by YPSw showing 1 value)	Pass conditions met for 2 seconds	
Pressure Control Solenoid Hydraulic Diagnostics								
Pressure Control Solenoid hydraulic diagnostics P0776, P0777, P0796, P0797 P2714, P2715, share these common secondary parameter enable conditions (Reference Only)	***				Engine speed Xvalve transition X Valve Stuck Hi Detection LinePressureEstimate Propulsion System Active	(> 550 RPM FOR > 100 * .0125 seconds) OR (<= 50 RPM FOR 110 * 0.0125 seconds) X valve s not in a transition, and hasn't transitioned in the last (0.025 + .25) seconds No fault pending > 350 kpa AND >= 300 kpa FOR > 1 seconds AND > (MinLinePressure - 30) kpa Where MinLinePressure is a lookup table TransTemp vs Line Pressure: Temp Kpa -40 1550 -30 1550 -20 1200 -10 800 0 600 1		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Pressure Control (PC) Solenoid B Stuck Off	P0776	This DTC will determine if Pressure Control Solenoid 2 (B) is stuck in the hydraulically low position. This DTC has two fail cases. DTC Pass	The pressure switch associated with pressure control solenoid B (PCS2) is indicating that the PCS is regulating exhaust when the PCS has been commanded full feed.	Fail Case 1: PCS2PS (PSw3) indicates low hydraulic pressure	PCS commanded pressure *** Common Hydraulic Enables	>= 1800 kpa for >= (PSReDelay + 0.1) seconds Where PSReDelay: Fluid Temp Time -50 4.50 -30 1.80 -24 1.2 -17 0.80 4 0.20 -- --	Failure exists for (2400 * 0.0125) seconds (2500 - 2400) * 0.0125 seconds	Type B Trip 2
			Pass when PCS2PS and PCS2Cmnd are in agreement (Full Feed)	PCS2PS (PSw3) indicates hi hydraulic pressure				
			The warning threshold for Fail Case 1 has been met 5 times in a single key cycle	Fail Case 2: Fail case 1 criteria met for atleast (40 * 0.0125) seconds, more than 5 times in a given key cycle	Same as Fail Case 1.		N/A	
Pressure Control (PC) Solenoid B Stuck ON	P0777	This DTC will determine if Pressure Control Solenoid 2 (B) is stuck in the hydraulically hi position. This DTC has two fail cases. DTC Pass	The pressure switch associated with pressure control solenoid B (PCS2) is indicating that the PCS is in the full feed position when the PCS has been commanded regulating exhaust.	Fail Case 1: PCS2PS (PSw3) indicates hi hydraulic pressure	PCS commanded pressure *** Common Hydraulic Enables	<= 5 kpa for >= (FFDelay + 0.1) seconds Where FFDelay: Temp Time -50 4.50 -30 1.40 -18 0.80 -4 0.30 13 0.19 -- --	Failure exists for (2400 * 0.0125) seconds (2500 - 2400) * 0.0125 seconds	Type B Trip 2
			Pass when PCS2PS and PCS2Cmnd are in agreement (Reg Exhaust) The warning threshold for Fail Case 1 has been met 5 times in a single key cycle	PCS2PS (PSw3) indicates Low hydraulic pressure	Same as Fail Case 1.			N/A
			The warning threshold for Fail Case 1 has been met 5 times in a single key cycle	Fail Case 2: Fail case 1 criteria met for atleast (16 * 0.0125) seconds, more than 5 times in a given key cycle				

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Pressure Control (PC) Solenoid C Stuck Off	P0796	This DTC will determine if Pressure Control Solenoid 3 (C) is stuck in the hydraulically low position. This DTC has two fail cases. DTC Pass	The pressure switch associated with pressure control solenoid C (PCS3) is indicating that the PCS is regulating exhaust when the PCS has been commanded full feed.	Fail Case 1: PCS3PS (PSw1) indicates low hydraulic pressure	PCS commanded pressure *** Common Hydraulic Enables	>= 1800 kpa for >= (PSReDelay + 0.1) seconds Where PSReDelay: Temp Time -50 4.50 -30 1.80 -24 1.2 -17 0.80 4 0.20 40 0.1	Failure exists for (2400 * 0.0125) seconds (2500 - 2400) * 0.0125 seconds	Type B Trip 2
			Pass when PCS3PS and PCS3Cmnd are in agreement (Full Feed) The warning threshold for Fail Case 1 has been met 5 times in a single key cycle	PCS3PS (PSw1) indicates hi hydraulic pressure Fail Case 2: Fail case 1 criteria met for atleast for atleast (40 * 0.0125) seconds, more than 5 times in a given key cycle	Same as Fail Case 1.	N/A		
Pressure Control (PC) Solenoid C Stuck ON	P0797	This DTC will determine if Pressure Control Solenoid 3 (C) is stuck in the hydraulically hi position. This DTC has two fail cases. DTC Pass	The pressure switch associated with pressure control solenoid C (PCS3) is indicating that the PCS is in the full feed position when the PCS has been commanded regulating exhaust.	Fail Case 1: PCS3PS (PSw1) indicates hi hydraulic pressure	PCS commanded pressure <= *** Common Hydraulic Enables	5 kpa for >= (FFDelay + 0.1) seconds Where FFDelay: Trans Fluid Temp Time -50 4.50 -30 1.40 -18 0.80 -4 0.30 13 0.19 40 0.08	Failure exists for (2400 * 0.0125) seconds (2500 - 2400) * 0.0125 seconds	Type B Trip 2
			Pass when PCS3PS and PCS3Cmnd are in agreement (Reg Exhaust) The warning threshold for Fail Case 1 has been met 5 times in a single key cycle	PCS3PS (PSw1) indicates Low hydraulic pressure Fail Case 2: Fail case 1 criteria met for atleast (16 * 0.0125) seconds, more than 5 times in a given key cycle	Same as Fail Case 1.	N/A		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Pressure Control (PC) Solenoid D Stuck Off	P2714	This DTC will determine if Pressure Control Solenoid 4 (D) is stuck in the hydraulically low position. This DTC has two fail cases. DTC Pass	The pressure switch associated with pressure control solenoid C (PCS4) is indicating that the PCS is regulating exhaust when the PCS has been commanded full feed.	Fail Case 1: PCS4PS (PSw4) indicates low hydraulic pressure	PCS commanded pressure >=	1800 kpa for >= (KtHCCD_t_PCS_PSR eDelay + 0.1) seconds	Failure exists for (2400 * 0.0125) seconds	Type B Trip 2
			Pass when PCS4PS and PCS4Cmnd are in agreement (Full Feed)	PCS4PS (PSw4) indicates hi hydraulic pressure	*** Common Hydraulic Enables		(2500 - 2400) * 0.0125 seconds	
			The warning threshold for Fail Case 1 has been met 5 times in a single key cycle	Fail Case 2: Fail case 1 criteria met for atleast (40 * 0.0125) seconds, more than 5 times in a given key cycle	Same as Fail Case 1.		N/A	
Pressure Control (PC) Solenoid D Stuck ON	P2715	This DTC will determine if Pressure Control Solenoid 4 (D) is stuck in the hydraulically hi position. This DTC has two fail cases. DTC Pass	The pressure switch associated with pressure control solenoid D (PCS4) is indicating that the PCS is in the full feed position when the PCS has been commanded regulating exhaust.	Fail Case 1: PCS4PS (PSw4) indicates hi hydraulic pressure	PCS commanded pressure <=	5 kpa for >= (FFDelay + 0.1) seconds	Failure exists for (2400 * 0.0125) seconds	Type B Trip 2
			Pass when PCS4PS and PCS4Cmnd are in agreement (Reg Exhaust)	PCS4PS (PSw4) indicates Low hydraulic pressure	*** Common Hydraulic Enables	Where FFDelay: Trans Fluid Temp Time -50 4.50 -30 1.40 -18 0.80 -4 0.30 13 0.19 40 0.08	(2500 - 2400) * 0.0125 seconds	
			The warning threshold for Fail Case 1 has been met 5 times in a single key cycle	Fail Case 2: Fail case 1 criteria met for atleast (16 * 0.0125) seconds, more than 5 times in a given key cycle	Same as Fail Case 1.		N/A	
Clutch Slip Diagnostics								

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Clutch slip diagnostics P079A, P079B, P079C, P079D share these common secondary parameter enable conditions (Reference Only)	***				LinePressureEstimate	> 350 kpa AND >= 300 kpa FOR > 1 seconds AND > (MinLinePressure - 30) kpa Where MinLinePressure is a lookup table Trans Fluid Temp vs Line Pressure: Temp Kpa -40 1550 -30 1550 -20 1200 -10 800 0 600 10 400		
Clutch 1 Slip	P079A	This DTC sets when excessive slip is observed on C1 while C1 has been commanded on DTC Pass	Clutch 1 Slip Speed Clutch 1 Slip Speed	C1 Slip > 200 RPM C1 Slip < 50 RPM	C1 Pressure Command C1 Torq Estimate C1 Fill detected C1 Pressure Command C1 Torq Estimate C1 Fill detected	> = 1800 kpa > = 200 Nm > = 1800 kpa > = 20 Nm	(240 * 0.0125) seconds 1 (80 * 0.0125) seconds 1	Type A Trip 1
Clutch 2 Slip	P079B	This DTC sets when excessive slip is observed on C2 while C2 has been commanded on DTC Pass	Clutch 2 Slip Speed Clutch 2 Slip Speed	C2 Slip > 200 RPM C2 Slip < 50 RPM	C2 Pressure Command C2 Torq Estimate C2 Fill detected C2 Pressure Command C2 Torq Estimate C2 Fill detected	> = 1800 kpa > = 200 Nm > = 1800 kpa > = 20 Nm	(240 * 0.0125) seconds 1 (80 * 0.0125) seconds 1	Type B Trip 2
Clutch 3 Slip	P079C	This DTC sets when excessive slip is observed on C3 while C3 has been commanded on DTC Pass	Clutch 3 Slip Speed Clutch 2 Slip Speed	C3 Slip > 100 RPM C3 Slip < 20 RPM	C3 Pressure Command C3 Torq Estimate C3 Fill detected C3 Pressure Command C3 Torq Estimate C3 Fill detected	> = 1800 kpa > = 20 Nm > = 1800 kpa > = 20 Nm	(240 * 0.0125) seconds 1 (80 * 0.0125) seconds 1	Type B Trip 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Clutch 4 Slip	P079D	This DTC sets when excessive slip is observed on C4 while C4 has been commanded on	Clutch 4 Slip Speed	C4 Slip > 100 RPM	C4 Pressure Command	> = 1800 kpa	(150 * 0.0125) seconds	Type B Trip 2
		DTC Pass	Clutch 2 Slip Speed	C4 Slip < 20 RPM	C4 Torq Estimate C4 Fill detected C4 Pressure Command C4 Torq Estimate C4 Fill detected	> = 20 Nm > = 1800 kpa > = 20 Nm	1 1	
Pressure Control Solenoid Electrical Diags								
All Pressure Control Solenoid electrical diagnostics P0961, P0962, P0963, P0965, P0966, P0967, P0969, P0970, P0971, P2719, P2720, P2721, P2728, P2729, P2730, P0973, P0974, P0976, P0977 share these common secondary parameter enable conditions. (Reference Only)	***				Ignition voltage Engine Speed Vehicle Speed RunCrankActive	> = 11 Volts && <= 16 Volts >= 0 RPM && <= 7500 RPM for >= 5 seconds <= 200 kph for >= 5 seconds	1	
Pressure Control (PC) Solenoid A System Performance	P0961	This DTC sets when an invalid voltage in PCS1 control circuit has been detected DTC Pass	PCS1 electrical status	HWIO circuitry detects out of range error is present	DTC P0961 *** Common Electrical Enables	Not failed this key on	Failure detected for (320 * 0.0125) seconds out of a (400 * 0.0125) second window	Type B Trip 2
				HWIO circuitry detects an out of range error is not present			(400 - 320) * 0.0125 seconds	
Pressure Control (PC) Solenoid A Control Circuit Low Voltage	P0962	This DTC sets when the PCS1 control circuit has been detected to be shorted to ground DTC Pass	PCS1 electrical status	HWIO circuitry detects an electrical low pressure error is present	DTC P0962 *** Common Electrical Enables	Not failed this key on	Failure detected for (32 * 0.0125) seconds out of a (40 * 0.0125) second window	Type A Trip 1
				HWIO circuitry detects an electrical low pressure error is not present			(40 - 32) * 0.0125 seconds	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Pressure Control (PC) Solenoid A Control Circuit High Voltage	P0963	This DTC sets when PCS1 has been detected to be shorted to power or open circuited. DTC Pass	PCS1 electrical status	HWIO circuitry detects an electrical hi pressure error is present. HWIO circuitry detects an electrical hi pressure error is not present	DTC P0963 *** Common Electrical Enables	Not failed this key on	Failure detected for (32 * 0.0125) seconds out of a (40 * 0.0125) second window (40 - 32) * 0.0125 seconds	Type A Trip 1
Pressure Control (PC) Solenoid B System Performance	P0965	This DTC sets when an invalid voltage in PCS2 control circuit has been detected DTC Pass	PCS2 electrical status	HWIO circuitry detects out of range error is present. HWIO circuitry detects an out of range error is not present	DTC P0965 *** Common Electrical Enables	Not failed this key on	Failure detected for (320 * 0.0125) seconds out of a (400 * 0.0125) second window (400 - 320) * 0.0125 seconds	Type B Trip 2
Pressure Control (PC) Solenoid B Control Circuit Low Voltage	P0966	This DTC sets when the PCS2 control circuit has been detected to be shorted to ground DTC Pass	PCS2 electrical status	HWIO circuitry detects an electrical low pressure error is present. HWIO circuitry detects an electrical low pressure error is not present	DTC P0966 *** Common Electrical Enables	Not failed this key on	Failure detected for (32 * 0.0125) seconds out of a (40 * 0.0125) second window (40 - 32) * 0.0125 seconds	Type A Trip 1
Pressure Control (PC) Solenoid B Control Circuit High Voltage	P0967	This DTC sets when PCS2 has been detected to be shorted to power or open circuited. DTC Pass	PCS2 electrical status	HWIO circuitry detects an electrical hi pressure error is present. HWIO circuitry detects an electrical hi pressure error is not present	DTC P0967 *** Common Electrical Enables	Not failed this key on	Failure detected for (32 * 0.0125) seconds out of a (40 * 0.0125) second window (40 - 32) * 0.0125 seconds	Type A Trip 1
Pressure Control (PC) Solenoid C System Performance	P0969	This DTC sets when an invalid voltage in PCS3 control circuit has been detected	PCS3 electrical status	HWIO circuitry detects out of range error is present.	DTC P0965	Not failed this key on	Failure detected for (320 * 0.0125) seconds out of a (400 * 0.0125) second window	Type B Trip 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		DTC Pass		HWIO circuitry detects an out of range error is not present	*** Common Electrical Enables		(400 - 320) * 0.0125 seconds	
Pressure Control (PC) Solenoid C Control Circuit Low Voltage	P0970	This DTC sets when the PCS3 control circuit has been detected to be shorted to ground	PCS3 electrical status	HWIO circuitry detects an electrical low pressure error is present.	DTC P0966 *** Common Electrical Enables	Not failed this key on	Failure detected for (32 * 0.0125) seconds out of a (40 * 0.0125) second window (40 - 32) * 0.0125 seconds	Type A Trip 1
Pressure Control (PC) Solenoid C Control Circuit High Voltage	P0971	This DTC sets when PCS3 has been detected to be shorted to power or open circuited.	PCS3 electrical status	HWIO circuitry detects an electrical hi pressure error is present.	DTC P0967 *** Common Electrical Enables	Not failed this key on	Failure detected for (32 * 0.0125) seconds out of a (40 * 0.0125) second window (40 - 32) * 0.0125 seconds	Type A Trip 1
Pressure Control (PC) Solenoid D System Performance	P2719	This DTC sets when an invalid voltage in PCS4 control circuit has been detected	PCS4 electrical status	HWIO circuitry detects out of range error is present.	DTC P2719 *** Common Electrical Enables	Not failed this key on	Failure detected for (320 * 0.0125) seconds out of a (400 * 0.0125) second window (400 - 320) * 0.0125 seconds	Type B Trip 2
Pressure Control (PC) Solenoid D Control Circuit Low Voltage	P2720	This DTC sets when the PCS4 control circuit has been detected to be open circuit or shorted to power	PCS4 electrical status	HWIO circuitry detects an electrical low pressure error is present.	DTC P2720 *** Common Electrical Enables	Not failed this key on	Failure detected for (32 * 0.0125) seconds out of a (40 * 0.0125) second window (40 - 32) * 0.0125 seconds	Type A Trip 1
		DTC Pass		HWIO circuitry detects an electrical low pressure error is not present				

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Pressure Control (PC) Solenoid D Control Circuit High Voltage	P2721	This DTC sets when PCS4 has been detected to be shorted to ground DTC Pass	PCS4 electrical status	HWIO circuitry detects an electrical hi pressure error is present. HWIO circuitry detects an electrical hi pressure error is not present	DTC P2721 *** Common Electrical Enables	Not failed this key on	Failure detected for (32 * 0.0125) seconds out of a (40 * 0.0125) second window (40 - 32) * 0.0125 seconds	Type A Trip 1
Pressure Control (PC) Solenoid E System Performance	P2728	This DTC sets when an invalid voltage in PCS5 control circuit has been detected DTC Pass	PCS5 electrical status	HWIO circuitry detects out of range error is present. HWIO circuitry detects an out of range error is not present	DTC P2719 *** Common Electrical Enables	Not failed this key on	Failure detected for (320 * 0.0125) seconds out of a (400 * 0.0125) second window (400 - 320) * 0.0125 seconds	Type B Trip 2
Pressure Control (PC) Solenoid E Control Circuit Low Voltage	P2729	This DTC sets when the PCS5 control circuit has been detected to be open circuit or shorted to power DTC Pass	PCS5 electrical status	HWIO circuitry detects an electrical low pressure error is present. HWIO circuitry detects an electrical low pressure error is not present	DTC P2720 *** Common Electrical Enables	Not failed this key on	Failure detected for (32 * 0.0125) seconds out of a (40) * 0.0125) second window (40 - 32) * 0.0125 seconds	Type A Trip 1
Pressure Control (PC) Solenoid E Control Circuit High Voltage	P2730	This DTC sets when PCS5 has been detected to be shorted to ground DTC Pass	PCS5 electrical status	HWIO circuitry detects an electrical hi pressure error is present. HWIO circuitry detects an electrical hi pressure error is not present	DTC P2721 *** Common Electrical Enables	Not failed this key on	Failure detected for (32 * 0.0125) seconds out of a (40 * 0.0125) second window (40 - 32) * 0.0125 seconds	Type A Trip 1
Shift Solenoid A Control Circuit Low	P0973	This DTC detects a short to power or open circuit in the X valve control circuit.	X Valve Electrical Status	HWIO circuitry detects an open circuit or short to power error is present.	DTC P0973	Not failed this key on	Failure detected for (16 * 0.025) seconds out of a (20 * 0.025) second window	Type A Trip 1

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		DTC Pass		HWIO circuitry detects an open circuit or short to power error is not present.	*** Common Electrical Enables		(20 - 16) * 0.025 seconds	
Shift Solenoid A Control Circuit High	P0974	This DTC detects a short to ground in the X valve control circuit. DTC Pass	X Valve Electrical Status	HWIO circuitry detects short to ground error is present. HWIO circuitry detects short to ground error is not present.	DTC P0974 *** Common Electrical Enables	Not failed this key on	Failure detected for (16 * 0.025) seconds out of a (20 * 0.025) second window (20 - 16) * 0.025 seconds	Type A Trip 1
Shift Solenoid B Control Circuit Low	P0976	This DTC detects a short to power or open circuit in the Y valve control circuit. DTC Pass	Y Valve Electrical Status	HWIO circuitry detects an electrical low pressure error is present. HWIO circuitry detects an open circuit or short to power error is not present.	DTC P0976 *** Common Electrical Enables	Not failed this key on	Failure detected for (16 * 0.025) seconds out of a (20 * 0.025) second window (20 - 16) * 0.025 seconds	Type A Trip 1
Shift Solenoid B Control Circuit High	P0977	This DTC detects a short to ground in the Y valve control circuit. DTC Pass	Y Valve Electrical Status	HWIO circuitry detects an electrical hi pressure error is present. HWIO circuitry detects short to ground error is not present.	DTC P0977 *** Common Electrical Enables	Not failed this key on	Failure detected for (16 * 0.025) seconds out of a (20 * 0.025) second window (20 - 16) * 0.025 seconds	Type A Trip 1
Ignition Switch Run/Start Position Circuit Low	P2534	Detects a run crank relay open circuit DTC Pass	Runk Crank Line voltage Run Crank Line Voltage	Ignition Run Crank line voltage <= 2 Volts Ignition Run Crank line voltage > 2 Volts	CAN Communication ECM run crank active data	enabled available and active	(2400 * 0.025) seconds in a (2600 * 0.025) second window (215 - 200) * 0.025 seconds	Type A Trip 1
Transmission Fluid Thermostat								
Transmission Fluid Overtemperature	P0218	The DTC detects if the transmission fluid temperature is too high.	Transmission Sump Temperature	≥ 135 °C	Transmission Temperature	-50 °C ≤ TFT ≤ 150 °C for 10 seconds	≥ 300 seconds	Type B Trip 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V	Pass Conditions: Transmission Sump Temperature ≤ 135 °C for 130 seconds	
Transmission Substrate (Internal) Temperature Sensor								
Transmission Electro-Hydraulic Control Module Internal Temperature Too High	P0634	The DTC detects the electronic circuitry is at high operating temperature.	Transmission Substrate Temperature	≥ 142 °C	Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V	≥ 5 seconds	Type A Trip 1
			OR Ignition Voltage	≥ 18 V	Transmission Substrate Temperature	-50 °C ≤ Transmission Substrate Temperature ≤ 146 °C for 10 seconds	≥ 2 seconds	
			AND Substrate Temperature	≥ 50 °C			Pass Conditions: Transmission Substrate Temperature ≤ 150 °C and Ignition Voltage is ≤ 16 V for 10 seconds	
						OR Transmission Substrate Temperature ≤ 120 °C and Ignition Voltage is ≥ 16 V for 10 seconds		
Transmission Substrate Temperature Sensor Circuit Range/Performance	P0667	The DTC detects the following failure modes of the transmission substrate temperature sensor: Fail Case 1: A sensor that remains at a constant value at a low start up temperature.						Type B Trip 2
			Transmission Fluid Temperature Delta	< 2 °C	Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V	≥ 100 seconds continuous	
					Engine Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds		
					Vehicle Speed	Vehicle Speed ≤ 200 KPH for 5 seconds		
					P0711, P0712, P0713	NOT Fault Active		
				P0721, P0722, P0723, P077B, P215C	NOT Fault Active OR Failed This Key On			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Transmission Substrate Temperature	-50 °C ≤ Transmission Substrate Temperature ≤ 149 °C		
					Vehicle Speed	≥ 8 KPH for time ≥ 300 seconds cumulative		
					Transmission Substrate Start Up Temperature	-50 °C ≤ Transmission Substrate Start Up Temperature ≤ 21 °C		
					Transmission Fluid Temperature	≥ 70 °C		
					Transmission Fluid Temperature Delta	≥ 55 °C		
					Motor Power Loss	≥ 0.4 kW for time ≥ 200 seconds cumulative		
		Fail Case 2: A sensor that remains at a constant value at a high start up temperature.	Transmission Fluid Temperature Delta	< 2.0 °C	Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V	≥ 100 seconds continuous	
					Engine Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds		
					Vehicle Speed	Vehicle Speed ≤ 200 KPH for 5 seconds		
					P0721, P0722, P0723, P077B, P215C	NOT Fault Active OR Failed This Key On		
					Transmission Substrate Temperature	-50 °C ≤ Transmission Substrate Temperature ≤ 149 °C		
					Vehicle Speed	≥ 8 KPH for time ≥ 300 seconds cumulative		
					Transmission Substrate Start Up Temperature	120 °C ≤ Transmission Substrate Start Up Temperature ≤ 150 °C		
					Transmission Fluid Temperature	≥ 70 °C		
					Transmission Fluid Temperature Delta	≥ 55 °C		
					Motor Power Loss	≥ 0.4 kW for time ≥ 200 seconds cumulative		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 3: A sensor that has erratic jumps in temperature.	Transmission Substrate Temperature Delta	$\geq 20\text{ }^{\circ}\text{C}$	Ignition Voltage	$11 \leq \text{Ignition Voltage} \leq 18\text{ V}$	Delta occurs 14 times over a 7 second sample period.	
					Engine Speed	$0 \leq \text{Engine Speed} \leq 7500\text{ RPM for } 5\text{ seconds}$	Pass Conditions: Transmission Substrate Temperature between -50 and $149\text{ }^{\circ}\text{C}$ and has changed $2\text{ }^{\circ}\text{C}$ for 10 seconds	
					Vehicle Speed	Vehicle Speed $\leq 200\text{ KPH for } 5\text{ seconds}$		
Transmission Substrate (Internal) Temperature Sensor								
Transmission Substrate Temperature Sensor failed at a high temperature (short to power).	P0668	The DTC detects the substrate sensor short to power error.	Transmission Substrate Temperature Sensor	$\geq 160\text{ }^{\circ}\text{C}$	Ignition Voltage	$11 \leq \text{Ignition Voltage} \leq 18\text{ V}$	$\geq 10\text{ seconds}$	Type B Trip 2
					Engine Speed	$0 \leq \text{Engine Speed} \leq 7500\text{ RPM for } 5\text{ seconds}$		
					Vehicle Speed	Vehicle Speed $\leq 200\text{ KPH for } 5\text{ seconds}$	Pass Conditions: Transmission Substrate Temperature $\geq -40\text{ }^{\circ}\text{C}$ for 10 seconds	
Transmission Substrate Temperature Sensor failed at a low temperature (open or short to ground).	P0669	The DTC detects substrate sensor open or short to ground error.	Transmission Substrate Temperature Sensor	$\leq -60\text{ }^{\circ}\text{C}$	Ignition Voltage	$11 \leq \text{Ignition Voltage} \leq 18\text{ V}$	$\geq 10\text{ seconds}$	Type B Trip 2
					Engine Speed	$0 \leq \text{Engine Speed} \leq 7500\text{ RPM for } 5\text{ seconds}$		
					Vehicle Speed	Vehicle Speed $\leq 200\text{ KPH for } 5\text{ seconds}$		
					Transmission Output Speed	Transmission Output Speed $\geq 200\text{ RPM for } 5\text{ seconds cumulative.}$		
					Estimated Motor Power Loss	Estimated Motor Power Loss $\geq 0.4\text{ kW for } 200\text{ seconds cumulative.}$	Pass Conditions: Transmission Substrate Temperature $\leq 150\text{ }^{\circ}\text{C}$ for 10 seconds	
Transmission Fluid Temperature Sensor								

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.		
Transmission Fluid Temperature Sensor Circuit Range/Performance	P0711	The DTC detects the following failure modes of the transmission fluid temperature sensor:						Type B Trip 2		
		Fail Case 1: A sensor that remains at a constant value at a low start up temperature.	Transmission Fluid Temperature (TFT) Delta	< 2.0 °C	TFT at Start Up Falls Between	-50 °C ≤ TFT ≤ +21 °C	≥ 100 seconds continuous			
					P0711	Not Passed this Trip				
					P0721, P0722, P0723, P077B, P215C	NOT Fault Active OR Failed This Key On				
					Vehicle Speed	≥ 8 KPH for time ≥ 300 seconds cumulative				
					Engine Running Time to Capture Start Up Transmission Temperature	≥ 5 seconds				
					Estimated Motor Power Loss	Estimated Motor Power Loss ≥ 0.4 kW for 200 seconds cumulative.				
					Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V				
					Engine Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds				
					Vehicle Speed	Vehicle Speed ≤ 200 KPH for 5 seconds				
					Engine Coolant Temperature	≥ 70.0 °C				
					TCM Internal Temperature	-49 ≤ TCM int temp ≤ 169 °C				
					Engine Coolant Temperature Delta from start up	≥ 55.0 °C				
				Fail Case 2: A sensor that remains at a constant value at a high start up temperature.	Transmission Fluid Temperature (TFT) Delta	< 2.0 °C	TFT at Start Up Falls Between	129 °C ≤ TFT ≤ 170 °C	≥ 100 seconds continuous	
							P0721, P0722, P0723, P077B, P215C	NOT Fault Active OR Failed This Key On		
							Vehicle Speed	≥ 8 KPH for time ≥ 300 seconds cumulative		
							Engine Running Time to Capture Start Up Transmission Temperature	≥ 5 seconds		
							Estimated Motor Power Loss	Estimated Motor Power Loss ≥ 0.4 kW for 200 seconds cumulative.		
							Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Engine Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds		
					Vehicle Speed	Vehicle Speed ≤ 200 KPH for 5 seconds		
					Engine Coolant Temperature	≥ 70.0 °C		
					TCM Internal Temperature	-50 ≤ TCM int temp ≤ 169 °C		
					Engine Coolant Temperature Delta from start up	≥ 55.0 °C		
		Fail Case 3: A sensor that has erratic jumps in temperature.	Transmission Fluid Temperature Delta	≥ 20 °C	Engine Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds	Delta occurs 14 times over a 7 second sample period	
					Vehicle Speed	Vehicle Speed ≤ 200 KPH for 5 seconds		
		Fail Case 4: Transmission fluid temperature remains below 20° C for a calibrated time as a function of startup transmission fluid temperature.			P0721, P0722, P0723, P077B, P215C	NOT Fault Active OR Failed This Key On		
		Fail Case 1, Fail Case 2, Fail Case 3, and Fail Case 4 independently fail.	Transmission Fluid Temperature	≤ 20 °C	Engine Running Time to Capture Start Up Transmission Temperature	≥ 5 seconds	A calibrated amount of time based on a 2D lookup table.	
					Engine Coolant Temperature, Ignition Voltage, Engine Speed	VALID	Pass Conditions: Transmission Sump Temperature has changed 1.5 °C	
					TCM Internal Temperature	-50 ≤ TCM int temp ≤ 169 °C	AND Fail Case 3 counter = 0	
					Vehicle Speed	8 ≤ Vehicle Speed ≤ 100 KPH	AND Transmission Operating Temperature has been met (Fail Case 4) for 10 seconds	
					Engine Speed	500 ≤ Engine Speed ≤ 6500 RPM		
Transmission Substrate Temperature Sensor failed at a low temperature (short to ground).	P0712	The DTC detects transmission fluid sensor short to ground error.	Transmission Substrate Temperature Sensor	≤ -60 °C	P0721, P0722, P0723, P077B, P215C	NOT Fault Active OR Failed This Key On	≥ 12.75 seconds	Type A Trip 1
					Engine Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Vehicle Speed	Vehicle Speed ≤ 200 KPH for 5 seconds		
					Estimated Motor Power Loss	Estimated Motor Power Loss ≥ 0.4 kW for 200 seconds cumulative.		
					Transmission Output Speed	Transmission Output Speed ≥ 200 RPM for 5 seconds cumulative.	Pass Conditions: Transmission Sump Temperature ≥ -40 °C for 10 seconds	
					Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V		
Transmission Substrate Temperature Sensor failed at a low temperature (open or short to power).	P0713	The DTC detects substrate sensor open or short to ground error.	Transmission Substrate Temperature Sensor	≥ 160 °C	P0721, P0722, P0723, P077B, P215C	NOT Fault Active OR Failed This Key On	≥ 25 seconds	Type A Trip 1
					Engine Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds		
					Vehicle Speed	Vehicle Speed ≤ 200 KPH for 5 seconds		
					Estimated Motor Power Loss	Estimated Motor Power Loss ≥ 0.4 kW for 200 seconds cumulative.		
					Transmission Output Speed	Transmission Output Speed ≥ 200 RPM for 5 seconds cumulative.	Pass Conditions: Transmission Substrate Temperature ≤ 149 °C for 10 seconds	
					Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V		
Transmission Output Speed Sensor								
Transmission Output Speed (TOS) Sensor Wrong Direction	P0721	The DTC detects incorrect TOS direction.	TOS Raw Direction	TOS Direction Raw is not Forward or Reverse	TOS Sample Period	≠ 0	≥ 100 counts or 2.5 seconds	Type A Trip 1
							Pass Conditions: TOS Direction Raw = Forward or Reverse for 3.125 seconds (125 counts at 25ms)	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Transmission Output Speed (TOS) Sensor No Activity	P0722	The DTC detects no TOS sensor activity at low vehicle speed. (It compares expected output speed to an estimated output speed based on MtrA and MtrB divided by two.)	Raw Transmission Output Speed	≤ 50 RPM	Motor Estimated Transmission Output Speed	150 ≤ Motor Estimated Transmission Output Speed ≤ 5200 RPM	≥ 1.5 seconds	Type B Trip 2
					Axle Torque	110 ≤ Axle Torque ≤ 5000 Nm	Pass Conditions: TOS ≥ 50 RPM for 1.5 seconds	
Transmission Output Speed (TOS) Sensor Intermittent	P0723	The DTC detects an unrealistically large drop in TOS signal	TOS delta	≥ 1000 RPM	Engine Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds	≥ 6 seconds	Type A Trip 1
					Vehicle Speed	Vehicle Speed ≤ 200 KPH for 5 seconds		
					Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V	Pass Conditions: TOS ≥ 500 RPM and the change in TOS is ≤ 2000 RPM for 2 seconds	
Output Speed Sensor Circuit Direction Error	P077B	The DTC detects if the Transmission Output Speed Sensor Direction is Incorrect by Comparing with Calculated Direction from Motor Speed Sign	Transmission Output Speed Direction Raw	≠ Motor Direction	CAN Communication Lost With Transmission	FALSE	1.25 seconds (50 counts at 25ms)	Type A Trip 1
					P215C	NOT Fault Active		
					TOS Hardware Input Output Transmission	Valid		
					Hybrid Motor Speed based Estimated Output Speed is Valid	Calculated based on M1 or M2 Speed Equation		
					Transmission Output Speed and Motor Output Speed Difference	≤ 50 RPM	Pass Conditions: Same as FAIL for 5 seconds (200 counts at 25ms)	
					Motor Estimated Transmission Output Speed	≥ 50 RPM		
Output Shaft Speed (OSS) - Wheel Speed Correlation	P215C	The DTC Correlates the Transmission Output Speed with the ABS Wheel Speed and Motor Speed to Detect any Failures in the Transmission Output Speed Sensor.	Difference between Transmission Output Speed and the Calculated Average of Output Speed from the Motors and Wheel Speed Sensors	≥ 140 RPM	Output Speed Calculated from Motor Speeds AND Output Speed Calculated from Wheel Speeds Difference	≤ 150 RPM	200 ms (8 counts at 25ms)	Type B Trip 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
				WHEN Output Speed Calculated from Wheel Speeds \geq 150 RPM	OBD Wheel Speed Sensors	TRUE		
				AND Output Speed Calculated from Motor Speeds \geq 150 RPM	Driven Wheel Estimated Vehicle Speed Fault	FALSE	Pass Conditions: Difference between Transmission Output Speed and the Calculated Average of Output Speed from the Motors and Wheel Speed Sensors	
				ELSE \geq 140 RPM	Propulsion System Active	TRUE	\leq 50 RPM for 0.5 seconds (20 counts at 25ms)	
					Hybrid Motor Speed based Estimated Output Speed is Valid	Calculated based on M1 or M2 Speed Equation		
Tap Up/Down Switch								
Tap Up Switch Circuit	P0815	The DTC detects the following failure modes of the tap up switch circuit: AHS2 utilizes D6, 4-1 P, R, N						Special Type C No MIL
		Fail Case 1: Switch stuck on in D1, D2, D3, or D4	Tap Up Switch Request	Request in D1, D2, D3, or D4	P0826	NOT Fault Active OR Failed This Key On	\geq 3 seconds	
					Engine Speed	$0 \leq$ Engine Speed \leq 7500 RPM for 5 seconds		
					Vehicle Speed	Vehicle Speed \leq 200 KPH for 5 seconds		
					Ignition Voltage	$11 \leq$ Ignition Voltage \leq 18 V		
		Fail Case 2: Switch stuck on in D6, N, R, P	Tap Up Switch Request	Request in D6, N, R, P	P0826	NOT Fault Active OR Failed This Key On	\geq 600 seconds	
					Engine Speed	$0 \leq$ Engine Speed \leq 7500 RPM for 5 seconds		
					Vehicle Speed	Vehicle Speed \leq 200 KPH for 5 seconds	Pass Conditions: Tap Up Switch Request not active in NonTap Mode for 3 seconds	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
					Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V			
Tap Down Switch Circuit	P0816	The DTC detects the following failure modes of the tap down switch circuit: Fail Case 1: Switch stuck on in D1, D2, D3, or D4	Tap Down Switch Request	Request in D1, D2, D3, or D4	P0826	NOT Fault Active OR Failed This Key On	≥ 3 seconds	Special Type C No MIL	
					Engine Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds			
					Vehicle Speed	Vehicle Speed ≤ 200 KPH for 5 seconds			
					Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V			
		Fail Case 2: Switch stuck on in D6, N, R, P	Tap Down Switch Request	Request in D6, N, R, P	P0826	NOT Fault Active OR Failed This Key On	≥ 600 seconds		Pass Conditions: Tap Down Switch Request not active in NonTap Mode for 3 seconds
					Engine Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds			
					Vehicle Speed	Vehicle Speed ≤ 200 KPH for 5 seconds			
					Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V			
Tap Up and Down Shift Switch Circuit	P0826	The DTC detects the up/down shift switch circuit is at an illegal voltage.	Tap Up/Down Tap Switch Status	= Illegal Switch Active (Sensor ≤ 9.5V OR Sensor ≥17.5V)	Engine Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds	≥ 8 seconds	Special Type C No MIL	
					Vehicle Speed	Vehicle Speed ≤ 200 KPH for 5 seconds	Pass Conditions: Enable Criteria are met for 1 second		
					Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V			
Tap Up and Down Shift Switch Signal Circuit Rolling Count	P1761	The DTC monitors the total continuous amount of tap up/down switch alive rolling count errors.		= Illegal Switch Active	Engine Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds	≥ 8 seconds	Special Type C No MIL	
					Vehicle Speed	Vehicle Speed ≤ 200 KPH for 5 seconds			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
					Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V	Pass Conditions: No Rolling Count Errors for 0.1 seconds		
Transmission Internal Mode Switch									
Internal Mode Switch P Circuit High Voltage	P1824	The DTC monitors if the IMS P Circuit is shorted to a High Voltage	Transmission Direction State	PARK	Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V	2.5 seconds + 1 count at 6.25ms	Type B Trip	2
			AND PRNDL P Position Sensed	PRNDL P Position Has Not Been Observed Low	P1824	NOT Fault Active OR Failed This Key On			
					Transmission Direction State Fault Active	FALSE	Pass Conditions: PRNDL P Position Has Been Observed Low for 1.5875 seconds		
Internal Mode Switch A Circuit Low Voltage	P182A	The DTC monitors if the IMS A Circuit is shorted to a Low Voltage	PRNDL State	Transitional 1	Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V	8 seconds + 1 count at 6.25ms	Type B Trip	2
			AND Trans Direction State	Trans Direction DRIVE	Automatic Transmission Type	EVT			
					P182A	NOT Fault Active OR Failed This Key On	Pass Conditions: PRNDL A Position Has Been Observed High for 1.5875 seconds		
					PRNDL State AND PRNDL A Position Sensed	PARK AND NOT PRNDL A Position Has Been Observed High for 1 second			
			Trans Direction State Fault Active	FALSE					
Internal Mode Switch B Circuit Low Voltage	P182B	The DTC monitors if the IMS B Circuit is shorted to a Low Voltage	Transmission Direction State	PARK	Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V	2.5 seconds + 1 count at 6.25ms	Type B Trip	2
			AND PRNDL B Position Sensed	PRNDL B Position Has Not Been Observed High	P182B	NOT Fault Active OR Failed This Key On			
					Transmission Direction State Fault Active	FALSE	Pass Conditions: PRNDL B Position Has Been Observed High for 1.5875 seconds		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
Internal Mode Switch B Circuit High Voltage	P182C	The DTC monitors if the IMS B Circuit is shorted to a High Voltage	PRNDL State	Transitional 13	Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V	8 seconds + 1 count at 6.25ms	Type B Trip 2	
			AND Trans Direction State	Trans Direction DRIVE	Automatic Transmission Type	EVT			
					P182C	NOT Fault Active OR Failed This Key On			Pass Conditions: PRNDL B Position Has Been Observed Low for 1.5875 seconds
					PRNDL State	PARK			
					AND PRNDL B Position Sensed	PRNDL B Position Has Been Observed High for 1 second			
			Trans Direction State Fault Active	FALSE					
Internal Mode Switch P Circuit Low Voltage	P182D	The DTC monitors if the IMS P Circuit is shorted to a Low Voltage	PRNDL State	Transitional 8	Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V	8 seconds + 1 count at 6.25ms	Type B Trip 2	
			AND Trans Direction State	Trans Direction DRIVE	Automatic Transmission Type	EVT			
					P182D	NOT Fault Active OR Failed This Key On			Pass Conditions: PRNDL P Position Has Been Observed High for 1.5875 seconds
					PRNDL State	PARK			
					AND PRNDL P Position Sensed	AND PRNDL P Position Has Been Observed Low for 1 second			
			Trans Direction State Fault Active	FALSE					
Internal Mode Switch-Invalid Range	P182E	The DTC monitors if the IMS is in an Invalid Range	PRNDL State	Illegal	Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V	5 seconds	Type B Trip 2	
					Engine Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds			
					Vehicle Speed	Vehicle Speed ≤ 200 KPH for 5 seconds			Pass Conditions: PRNDL State is NOT Illegal for 5 seconds
					P182E	NOT Fault Active OR Failed This Key On			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Internal Mode Switch C Circuit High Voltage	P182F	The DTC monitors if the IMS C Circuit is shorted to a High Voltage	Transmission Direction State	DRIVE	Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V	2.5 seconds + 1 count at 6.25ms	Type B Trip 2
			AND PRNDL C Position Sensed	PRNDL C Position Has Not Been Observed Low	Automatic Transmission Type	EVT		
					P182F	NOT Fault Active OR Failed This Key On	Pass Conditions: PRNDL C Position Has Been Observed Low for 4 seconds + 1 count at 6.25ms	
					Trans Direction State Fault Active	FALSE		
Internal Mode Switch A Circuit High Voltage	P1838	The DTC monitors if the IMS A Circuit is shorted to a High Voltage	Transmission Direction State	PARK	Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V	2.5 seconds + 1 count at 6.25ms	Type B Trip 2
			AND PRNDL A Position Sensed	PRNDL A Position Has Not Been Observed Low	P1838	NOT Fault Active OR Failed This Key On		
					Trans Direction State Fault Active	FALSE	Pass Conditions: PRNDL A Position Has Been Observed Low for 1.5875 seconds	
Internal Mode Switch C Circuit Low Voltage	P1839	The DTC monitors if the IMS C Circuit is shorted to a Low Voltage	Transmission Direction State	PARK	Ignition Voltage	11 ≤ Ignition Voltage ≤ 18 V	2.5 seconds + 1 count at 6.25ms	Type B Trip 2
			AND PRNDL C Position Sensed	PRNDL C Position Has Not Been Observed High	P1839	NOT Fault Active OR Failed This Key On		
					Trans Direction State Fault Active	FALSE	Pass Conditions: PRNDL C Position Has Been Observed Low for 1.5875 seconds	

Controller Diagnostics

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
Control Module Read Only Memory (Rom)	P0601	This DTC will be stored if any software or calibration check sum is incorrect	Calculated Checksum does not match stored checksum		Ignition Status	Run or Crank	1 failure if it occurs during the first ROM test of the ignition cycle, otherwise 5 failures Frequency: Runs continuously in the background	Type A Trip 1	
Control Module Not Programmed	P0602	Indicates that the HCP needs to be programmed	Fails if No Start Calibration is set to true which is only available on a new un-programmed HCP		Ignition Status	Run or Crank	Runs once at power up	Type A Trip 1	
Control Module Long Term Memory Reset	P0603	Non-volatile memory checksum error at controller power-up	Checksum at power-up does not match checksum at power-down		Ignition Status	Run or Crank	1 failure Frequency: Once at powerup	Type A Trip 1	
Control Module Random Access Memory (RAM) Failure	P0604	Indicates that HCP is unable to correctly write and read data to and from RAM	Data read does not match data written		Ignition Status	Run or Crank	Should finish within 30 seconds at all operating conditions	Type A Trip 1	
Bosch T43 TEHCM Security Output Disable/IPT Test	P0606	HWIO executes the IPT (Inhibit Path Test) exactly once at every ignition on to test the ability of the external monitoring module (CG122) to shutoff high-side drivers to the transmission hydraulics and reset the main processor.			Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts		Type A Trip 1	
		Fail Case 1: Abort IPT, because HSD may be short-circuited to ground or to battery voltage	Actuator supply is out of voltage threshold range during more than 40 msec.		IPT test started	end of Initialization	3.125ms loop		
		Fail Case 2: Abort IPT, because HSD may be short-circuited to ground or to battery voltage	Actuator supply is lower than 90% of Batt. voltage or WD(Watch Dog for TCM main processor) error count is greater than 0 during more than 40 msec. AND output stage is not interlocked AND actuator supply is out of voltage threshold range.	or > 5.5 volts		IPT test started	end of Initialization	3.125ms loop	
		Fail Case 3: Abort IPT, because HSD may be short-circuited to ground or to battery voltage	Actuator supply is out of voltage threshold range during more than 40 msec. AND WD error counter is equal or higher than threshold.			IPT test started	end of Initialization	3.125ms loop	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			AND output stage is interlocked	- WD error counter: >=5				
			AND Actuator supply is lower than 90% of Batt. Voltage.					
		Fail Case 4: WD error counter does not reach its desired level (sdi_Ufet = 1)	WD error count is higher than threshold	- WD error count: 0	IPT test started	end of Initialization	3.125ms loop	
		Fail Case 5: WD error counter does not reach its desired level (sdi_Ufet = 4)	WD error count is equal or higher than threshold	- WD error count: 4	IPT test started	end of Initialization	3.125ms loop	
		Fail Case 6: WD error counter does not reach its desired level (sdi_Ufet = 6)	WD error count is higher than threshold	- WD error count: 0	IPT test completed	end of Initialization	3.125ms loop	
		Fail Case 7:HSD(High Side Driver) cannot be switched on at WD error counter <= 4	Actuator supply is lower than 90% of Batt. Voltage or WD error count is higher than threshold during more than 40 msec. AND output stage is not interlocked AND actuator supply voltage is within range	- WD error counter: > 0 - actuator supply voltage: >1.5 volts and <= 5.5 volts	IPT test started	end of Initialization	3.125ms loop	
		Fail Case 8:DReset line = low level, HSD cannot be switched on (fgtr_DReset = True)	Actuator supply is lower than 90% of Batt. Voltage or WD error count is higher than 0 during more than 40 msec. AND output stage is interlocked.		IPT test started	end of Initialization	3.125ms loop	
		Fail Case 9:HSD cannot be switched off at WD error counter >= 5	Actuator supply voltage is out of range or WD error count is lower than threshold during more than 40 msec. AND output stage is interlocked AND actuator supply voltage is equal or higher than 90% of the Batt. Voltage.	- actuator supply voltage: < 1.5 volts or > 5.5 volts -WD error counter:<5	IPT test started	end of Initialization	3.125ms loop	
		Fail Case 10: DReset line = high level, HSD cannot be switched off (fgtr_DReset = False)	Actuator supply voltage is out of threshold range during more than 40 msec. AND WD error count is equal or higher than threshold AND output stage is not interlocked	- actuator supply voltage: < 1.5 volts or > 5.5 volts - WD error count:>= 5	IPT test started	end of Initialization	3.125ms loop	
		Fail Case 11: Run time of IPT function too long	IPT execution time is equal or greater than time threshold.	- time threshold : 300ms	IPT test started	end of Initialization	3.125ms loop	
Control Module Long Term Memory Performance	P062F	Indicates that the NVM Error flag has not been cleared	Last EEPROM write did not complete		Ignition voltage	≥ 5 volts	1 failure	Type A Trip 1
							Frequency:	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
							Once at power-up		
Torque Security Faults									
Internal Control Module A/D Processing Performance	P060B	HWIO executes the A/D converter test. This test checks the Vref voltage at 3 levels.							
		Fail Case 1: AtoD converter test result is failed	0 x Vref is higher than voltage threshold	> approx. 0.01467 Volts	Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6.25ms	Type A Trip	1
		Fail Case 2: AtoD converter test result is failed	0.5 x Vref is out of voltage threshold	< approx. 2.479 Volts or > approx. 2.518 Volts			6.25ms		
Fail Case 3: AtoD converter test result is failed	1.0 x Vref is out of voltage threshold.	< approx. 4.978 Volts or > approx. 5 Volts	6.25ms						
Dual Store Fault	P16F3	Detect the dual store memory fault by comparing the primary value and the dual store value of the Hybrid Range State	Dual store value of the Hybrid Range State is not equal to primary dual store value.		Ignition switch	in crank or run	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	Type A Trip	1
Clutch pressure combination / valve commands do not fit to allowed range state	P16F7	Detects controller faults such that solenoid commands doesn't match with it's expected associated Range State value.							
		Fail Case 1	Transmission is 4 th gear position. AND Range State is 7 AND X Valve Command has been corrupted to 0 AND Y Valve Command is 1 AND PCS2 Command is higher than threshold AND PCS3 Command higher than threshold AND PCS4 Command lower than threshold during more than time threshold	- PCS2 Command > 1800kpa - PCS3 Command > 1800kpa - PCS4 Command < 100kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	Type A Trip	1
		Fail Case 2	Transmission is 4 th Gear position AND Range State is 7 AND X Valve Command is 1 AND Y Valve Command has been corrupted to 0 AND PCS2 Command is higher than threshold AND PCS3 Command higher than threshold AND PCS4 Command lower than threshold during more than time threshold	- PCS2 Command > 1800kpa - PCS3 Command > 1800kpa - PCS4 Command < 100kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms		
Fail Case 3	Transmission is 3 rd Gear position AND Range State is 5 AND X Valve Command is 1 AND Y Valve Command is 0	- PCS2 Command > 1800kpa - PCS4 Command :< 100kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop				

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			AND PCS2 Command is higher than threshold AND PCS3 Command has been corrupted to equal to 0Kpa AND PCS4 Command is lower threshold during more than time threshold				Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 4	Transmission is 2 nd Gear position AND Range State is 5 AND X Valve Command is 1 AND Y Valve Command is 0 AND PCS2 Command has been corrupted to equal 0kpa AND PCS3 Command higher than threshold AND PCS4 Command is lower than threshold during more than time threshold	- PCS3 Command > 1800kpa - PCS4 Command < 100kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 5	Transmission is in 4 th Gear position AND Range State is 7 AND X Valve Command is 1 AND Y Valve Command is 1 AND PCS2 Command is higher than threshold AND PCS3 Command is higher than threshold AND PCS4 Command has been corrupted to equal 2000kpa during more than time threshold	- PCS2 Command > 1800kpa - PCS3 Command > 1800kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 6	Transmission is in 2 nd Gear position AND Range State is 5 AND X Valve Command is 1 AND Y Valve Command has been corrupted to equal 1 AND PCS2 Command is higher than threshold AND PCS3 Command is higher than threshold AND PCS4 Command is lower than threshold during more than time threshold	- PCS2 Command > 1800kpa - PCS3 Command > 1800kpa - PCS4 Command < 100kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 7	Transmission is in 1 st Gear position AND Range State is 4 AND X Valve Command is 1 AND Y Valve Command is 0	-PCS3 Command > 1800kpa - PCS4 Command > 1800kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
			AND PCS2 Command has been corrupted to equal 2000kpa AND PCS3 Command is higher than threshold AND PCS4 Command is higher than threshold during more than time threshold				Executes in a 12.5ms loop Detects in 200ms		
		Fail Case 8	Transmission is in 3 rd Gear position AND Range State is 6 AND X Valve Command is 1 AND Y Valve Command is 1 AND PCS2 Command is higher than threshold AND PCS3 Command has been corrupted to equal 2000kpa AND PCS4 Command is higher than threshold during more than time threshold	- PCS2 Command > 1800kpa -PCS4 Command > 1800kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms		
		Fail Case 9	Transmission is in 3 rd gear position AND Range State is 6 AND X Valve Command is 1 AND Y Valve Command is 1 AND PCS2 Command is higher than threshold AND PCS3 Command is lower than threshold AND PCS4 Command has been corrupted to equal 0kpa during more than time threshold	- PCS2 Command > 1800kpa - PCS3 Command < 100kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms		
	P16F8	Detect when command of all 3 control solenoids to high position during torque phase exceeds time threshold							
		Fail Case 1	Transmission is in 4 th Gear position AND Range State has been corrupted to 19 AND X Valve Command is 1 AND Y Valve Command is 1 AND PCS2 Command is higher than threshold AND PCS3 Command is higher than threshold AND PCS4 Command has been corrupted to equal 2000kpa during more than time threshold	- PCS2 Command > 1800kpa - PCS3 Command > 1800kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	Type A Trip 1	
EVT will shutdown the vehicle if a torque phase									

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
fault occurs		Fail Case 2	Transmission is in 2 nd Gear position AND Range State has been corrupted to 11 AND X Valve Command is 1 AND Y Valve Command is 0 AND PCS2 Command is higher than threshold AND PCS3 Command is higher than threshold AND PCS4 Command has been corrupted to equal 2000kpa during more than time threshold	- PCS2 Command > 1800kpa - PCS3 Command > 1800kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	
Alive Rolling Count / Protection Value fault	P179B	Detect the ARC (Alive Rolling Count) or Protection Value fault by checking the ARC and Protection Value of the Hybrid Range State	Current ARC is not equal to previous ARC + 1 and Primary Value is not equal to protection value		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	Type A Trip 1
Communication								
Control Module Communication Bus A Off	U0073	Detects that a CAN serial data bus shorted condition has occurred to force the CAN device driver to enter a bus-off state.	CAN device driver	= bus-off state.	Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	3 failures out of 5 samples Detects in 450 msec at loop rate of 12.5 msec	Type A
Lost Communication With ECM/PCM on Bus A	U0100	Detects that CAN serial data communication has been lost with the ECM on Bus A	Missed ECM Messages		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	Detects within 500 msec at 6.25 msec loop rate	Type A
Lost Communication With Hybrid Controller	U0293	Detects that CAN serial data communication has been lost with the HCP	Missed HCP Messages		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	Detects within 500 msec at 6.25 msec loop rate	Type A
		P0711: Reference Table						
		Start Up Transmission Temperature °C	Time for Transmission Temperature to Reach 20 °C					
		-50	3200					
		-25	2600					
		-10	2000					
		-5	1800					
		20	300					

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Fuel Rail Pressure (FRP) Sensor Circuit Low Voltage	P0192	This DTC detects if the fuel pressure sensor circuit is shorted to low	FRP sensor voltage	< 0.1 V	Ignition	Run or Crank	72 failures out of 80 samples 1 sample/12.5 ms	Type A 1 trip
Fuel Rail Pressure (FRP) Sensor Circuit High Voltage	P0193	This DTC detects if the fuel pressure sensor circuit is shorted to high	FRP sensor voltage	> 4.9 V	Ignition	Run or Crank	72 failures out of 80 samples 1 sample/12.5 ms	Type A 1 trip
Fuel Pump Control Circuit Low Voltage	P0231	This DTC detects if the fuel pump control circuit is shorted to low	Fuel Pump Current	> 14.48A	Ignition OR HS Comm OR Fuel Pump Control AND Ignition Run/Crank Voltage	Run or Crank enabled enabled 9V < voltage < 18V	72 test failures in 80 test samples if Fuel Pump Current <100A 3 test failures in 15 test samples if Fuel Pump Current >=100A 1 sample/12.5 ms	Type A 1 trip
Fuel Pump Control Circuit High Voltage	P0232	This DTC detects if the fuel pump control circuit is shorted to high	Voltage measured at fuel pump circuit	> 3.86 V	Commanded fuel pump output Fuel pump control enable Time that above conditions are met	0% duty cycle (off) False >=4.0 seconds	36 test failures in 40 test samples; 1 sample/12.5ms Pass/Fail determination made only once per trip	Type A 1 trip
Fuel Pump Control Circuit (Open)	P023F	This DTC detects if the fuel pump control circuit is open	Fuel Pump Current AND Fuel Pump Duty Cycle	<=0.5A □ >20%	Ignition OR HS Comm OR Fuel Pump Control AND Ignition Run/Crank Voltage	Run or Crank enabled enabled 9V < voltage < 18V	72 test failures in 80 test samples; 1 sample/12.5ms	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Fuel System Control Module Enable Control Circuit	P025A	This DTC detects if there is a fault in the fuel pump control enable circuit	PPEI (PPEI (Powertrain Platform Electrical Interface) Fuel System Request (\$1ED)	≠ Fuel Pump Control Module Enable Control Circuit	Ignition AND PPEI Fuel System Request (\$1ED)	Run or Crank valid	72 failures out of 80 samples 1 sample/12.5 ms	Type A 1 trip
Control Module Read Only Memory (ROM)	P0601	This DTC will be stored if any software or calibration check sum is incorrect	Calculated Checksum (CRC16)	≠ stored checksum for any of the parts (boot, software, application calibration, system calibration)	Ignition OR HS Comm OR Fuel Pump Control	Run or Crank enabled enabled	1 failure if it occurs during the first ROM test of the ignition cycle, otherwise 5 failures Frequency: Runs continuously in the background	Type A 1 trip
Control Module Not Programmed	P0602	Indicates that the FSCM needs to be programmed	This DTC is set via calibration, when KeMEMD_b_NoStart Cal	TRUE	Ignition OR HS Comm OR Fuel Pump Control	Run or Crank enabled enabled	Runs once at power up	Type A 1 trip
Control Module Long Term Memory Reset	P0603	Non-volatile memory checksum error at controller power-up	Checksum at power-up	≠ checksum at power-down	Ignition OR HS Comm OR Fuel Pump Control	Run or Crank enabled enabled	1 failure Frequency: Once at power-up	DTC Type A 1 trip
Control Module Random Access Memory (RAM)	P0604	Indicates that control module is unable to correctly write and read data to and from RAM	Data read	≠ Data written	Ignition OR	Run or Crank	1 failure if it occurs during the first RAM test of the ignition cycle, otherwise 5 failures Frequency:	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					HS Comm OR Fuel Pump Control	enabled enabled	Runs continuously in the background.	
Control Module Internal Performance 1. Main Processor Configuration Register Test 2. Processor clock test 3. External watchdog test	P0606	This DTC indicates the FSCM has detected an internal processor fault or external watchdog fault (PID 2032 can tell what causes the fault.)	1. For all I/O configuration register faults: •Register contents 2. For Processor Clock Fault: •EE latch flag in EEPROM. OR • RAM latch flag. 3. For External Watchdog Fault: • Software control of viper chip.	Incorrect value. 0x5A5A 0x5A Control Lost	Ignition OR HS Comm OR Fuel Pump Control 1. For all I/O configuration register faults: •KeMEMD_b_ProcFitCfgrRegEnbl 2. For Processor Clock Fault: •KeMEMD_b_ProcFitCLKDiagEnbl 3. For External Watchdog Fault: •KeFRPD_b_FPExtWDogDiagEnbl 3. For External Watchdog Fault: •Control Module ROM(P0601) 3. For External Watchdog Fault: •Control Module RAM(P0604)	Run or Crank enabled enabled TRUE TRUE TRUE not active not active	Tests 1 and 2 1 failure Frequency: Continuously (12.5ms) Test 3 3 failures out of 15 samples 1 sample/12.5 ms	Type A 1 trip
Control Module Long Term Memory (EEPROM) Performance	P062F	Indicates that the NVM Error flag has not been cleared	Last EEPROM write	Did not complete	Ignition OR HS Comm OR Fuel Pump Control	Run or Crank enabled enabled	1 test failure Once on controller power-up	Type A 1 trip
5 Volt Reference Circuit (Short High/Low)	P0641	Detects a continuous short on the #1 5V sensor reference circuit	Reference voltage AND	>= 0.5V	Ignition	Run or Crank	15 failures out of 20 samples 1 sample/12.5 ms	Type A 1 trip

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Output OR Reference voltage AND Output OR Reference voltage AND Output	inactive >= 5.5V active <= 4.5V active				
5 Volt Reference Circuit (Out of Range)	P06A6	Detects that the #1 5 V sensor reference circuit is out of range	Reference voltage □	> 102.5% nominal (i.e. 5.125V) OR < 97.5% nominal (i.e. 4.875V)	Ignition	Run or Crank	72 failures out of 80 samples 1 sample/12.5 ms	Type A 1 trip
Fuel Pump Control Module - Driver Over-temperature 2	P1255	This DTC detects if an internal fuel pump driver overtemperature condition exists under extreme operating conditions (GM's responsibility)	Module Range of Operation AND Viper Temp	Outside normal range (FSCM is NOT in normal operating range for module voltage versus PWM duty cycle. Linear range from 100% @ 12.5V to 70% @ 18V.) > 190C	Ignition OR HS Comm OR Fuel Pump Control KeFRPD_b_FPOverTempDiagEn bl Ignition Run/Crank	Run or Crank enabled enabled TRUE 9V<voltage<18V	3 failures out of 15 samples 1 sample/12.5 ms	Type B 2 trips
Ignition 1 Switch Circuit Low Voltage	P2534	This DTC detects if the Ignition1 Switch circuit is shorted to low or open	Ignition 1 voltage	<= 6 V	Engine	Running	144 failures out of 160 samples 1 sample/12.5 ms	Type A 1 trip
Fuel Pump Flow Performance	P2635	This DTC detects degradation in the performance of the electronic return-less fuel system	Filtered fuel rail pressure error	<= Low Threshold (function of desired fuel rail pressure and fuel flow rate. Typical values in the range of -28.4 to -193.5 kPa.) OR > High Threshold (function of desired fuel rail pressure and fuel flow rate. Typical values in the range of 19.5 to 166.5 kPa.)	1. FRP Circuit Low DTC (P0192) 2. FRP Circuit High DTC (P0193)	not active not active	Filtered fuel rail pressure error Time Constant = 12.5 seconds Frequency: Continuous 100 ms loop	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					3. Fuel Rail Pressure Sensor Performance DTC (P0191) 4. FuelPump Circuit Low DTC (P0231) 5. FuelPump Circuit High DTC (P0232) 6. FuelPump Circuit Open DTC (P023F) 7. Reference Voltage DTC (P0641) 8. Reference Voltage DTC (P06A6) 9. Fuel Pump Control Module Driver Over-temperature DTC's (P064A, P1255) 10. Control Module Internal Performance DTC (P0606) 11. An ECM fuel control system failure (PPEI \$1ED) 12. The Barometric pressure (PPEI \$4C1) signal 13. Engine run time 14. Emissions fuel level (PPEI \$3FB) 15. Fuel pump control 16. Fuel pump control state 17. Battery Voltage 18. Fuel flow rate 19. Fuel Pressure Control System	not active not active not active not active not active not active not active not active not active has not occurred valid (for absolute fuel pressure sensor) >= 30 seconds not low enabled normal 11V<=voltage<=18V > 0.047 g/s AND <= Max allowed fuel flow rate as a function of desired rail pressure & Vbatt (Typical values in the range of 11 to 30 n/s) Is not responding to an over-pressurization due to pressure build during DFCO or a decreasing desired pressure command.		
Control Module Communication Bus "A" Off	U0073	Detects that a CAN serial data bus shorted condition has occurred to force the CAN device driver to enter a bus-off state	Bus Status	Off	1. Power mode	Run/Crank	5 failures out of 5 samples (5 seconds)	Type B 2 trips
Lost Communication With ECM/PCM "A"	U0100	Detects that CAN serial data communication has been lost with the ECM	Message \$0C9	Undetected	1. Power mode 2. Ignition Run/Crank Voltage 3. U0073	Run/Crank (11 – 18 V) not active	12 failures out of 12 samples (12 seconds)	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Wheel Speed Sensors								
Left Front Wheel Speed Sensor Circuit Low	C1232	The left front wheel speed sensor (WSS) is open.	WSS feedback voltage < Threshold Pass Threshold: > 0.20v	0.20v Nominal range: (0.20v < WSS voltage range < 2.20v)	Sys Voltage Sys Voltage Processing_Enabled No Active DTCs	> 9.0 < 19.5 True (Note 1) C1207	> 100ms	Type B Trips 2
Right Front Wheel Speed Sensor Circuit Low	C1233	The right front wheel speed sensor is open.	WSS feedback voltage < Threshold Pass Threshold: > 0.20v	0.20v Nominal range: (0.20v < WSS voltage range < 2.20v)	Sys Voltage Sys Voltage Processing_Enabled No Active DTCs	> 9.0 < 19.5 True (Note 1) C1208	> 100ms	Type B Trips 2
Left Rear Wheel Speed Sensor Circuit Low	C1234	The left rear wheel speed sensor is open.	WSS feedback voltage < Threshold Pass Threshold: > 0.20v	0.20v Nominal range: (0.20v < WSS voltage range < 2.20v)	Sys Voltage Sys Voltage Processing_Enabled No Active DTCs	> 9.0 < 19.5 True (Note 1) C1209	> 100ms	Type B Trips 2
Right Rear Wheel Speed Sensor Circuit Low	C1235	The right rear wheel speed sensor is open.	WSS feedback voltage < Threshold Pass Threshold: > 0.20v	0.20v Nominal range: (0.20v < WSS voltage range < 2.20v)	Sys Voltage Sys Voltage Processing_Enabled No Active DTCs	> 9.0 < 19.5 True (Note 1) C1210	> 100ms	Type B Trips 2
Left Front Wheel Speed Sensor Circuit High	C1207	The left front wheel speed sensor is shorted.	WSS feedback voltage > Threshold1 OR ORION ASIC detects current > Threshold2 Pass Threshold: < 2.2v	Threshold1 = 2.20v Threshold2 = 35ma Nominal range: (0.20v < WSS voltage range < 2.20v)	Sys Voltage Sys Voltage Processing_Enabled	> 9.0 < 19.5 True (Note 1)	> 100ms	Type B Trips 2
Right Front Wheel Speed Sensor Circuit High	C1208	The right front wheel speed sensor is shorted.	WSS feedback voltage > Threshold1 OR ORION ASIC detects current > Threshold2 Pass Threshold: < 2.2v	Threshold1 = 2.20v Threshold2 = 35ma Nominal range: (0.20v < WSS voltage range < 2.20v)	Sys Voltage Sys Voltage Processing_Enabled	> 9.0 < 19.5 True (Note 1)	> 100ms	Type B Trips 2
Left Rear Wheel Speed Sensor Circuit High	C1209	The left rear wheel speed sensor is shorted.	WSS feedback voltage > Threshold1 OR ORION ASIC detects current > Threshold2 Pass Threshold: < 2.2v	Threshold1 = 2.20v Threshold2 = 35ma Nominal Range: 0.20v < WSS voltage range < 2.20v	Sys Voltage Sys Voltage Processing_Enabled	> 9.0 < 19.5 True (Note 1)	> 100ms	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Right Rear Wheel Speed Sensor Circuit High	C1210	The right rear wheel speed sensor is shorted.	WSS feedback voltage > Threshold1 OR ORION ASIC detects current > Threshold2 Pass Threshold: < 2.2v	Threshold1 = 2.20v Threshold2 = 35ma Nominal range: (0.20v < WSS voltage range < 2.20v)	Sys Voltage Sys Voltage Processing_Enabled	> 9.0 < 19.5 True (Note 1)	> 100ms	Type B 2 Trips
Left Front Wheel Speed Sensor Circuit	C1221	The left front WSS signal has dropped out. It has stopped producing edges.	Number of detected edges = 0	0 edges Nominal Range: (N/A)	Veh Vel System Voltage Processing_Enabled No Active DTCs	> 12.8kph < 19.5 True (Note 1) C1207	20ms	Type B 2 Trips
		Missing signal. The left front wheel speed sensor is no longer being detected.	For Single Missing, TC Active, and Multiple Missing WSS's: Missing Threshold = Larger of: (0.2 x Max)m/s or 1.8m/s Max is the maximum filtered velocity from the other 3 wheels Pass Threshold: WSS signal is detected	See Malfunction Criteria Nominal Range: (0.6kph < WSS vel range < 240kph)	Accel (on all wheels) Veh Vel (largest from all 4 wheels) Processing_Enabled No Active DTCs	< 17.16m/s/s > 12.8kph True (Note 1) C1207	Single: Time > 5s Single TC Active: Time > 60s Multiple: Time > 2minutes / > 15 ms	Type B 2 Trips
Right Front Wheel Speed Sensor Circuit	C1222	The right front WSS signal has dropped out. It has stopped producing edges.	Number of detected edges = 0	0 edges Nominal Range: (N/A)	Veh Vel System Voltage Processing_Enabled No Active DTCs	> 12.8kph < 19.5 True (Note 1) C1208	20ms	Type B 2 Trips
		Missing signal. The right front wheel speed sensor is no longer being detected.	For Single Missing, TC Active, and Multiple Missing WSS's: Missing Threshold = Larger of: (0.2 x Max)m/s or 1.8m/s Max is the maximum filtered velocity from the other 3 wheels Pass Threshold: WSS signal is detected	See Malfunction Criteria Nominal Range: (0.6kph < WSS vel range < 240kph)	Accel (on all wheels) Veh Vel (largest from all 4 wheels) Processing_Enabled No Active DTCs	< 17.16m/s/s > 12.8kph True (Note 1) C1208	Single: Time > 5s Single TC Active: Time > 60s Multiple: Time > 2minutes / > 15 ms	Type B 2 Trips
Left Rear Wheel Speed Sensor Circuit	C1223	The left rear WSS signal has dropped out. It has stopped producing edges.	Number of detected edges = 0	0 edges Nominal Range: (N/A)	Veh Vel System Voltage Processing_Enabled No Active DTCs	> 12.8kph < 19.5 True (Note 1) C1209	20ms	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Missing signal. The left rear wheel speed sensor is no longer being detected.	For Single Missing, TC Active, and Multiple Missing WSS's: Missing Threshold = Larger of: (0.2 x Max)m/s or 1.8m/s Max is the maximum filtered velocity from the other 3 wheels Pass Threshold: WSS signal is detected	See Malfunction Criteria Nominal Range: (0.6kph < WSS vel range < 240kph)	Accel (on all wheels) Veh Vel (largest from all 4 wheels) Processing_Enabled No Active DTCs	< 17.16m/s/s > 12.8kph True (Note 1) C1209	Single: Time > 5s Single TC Active: Time > 60s Multiple: Time > 2minutes / > 15 ms	Type B 2 Trips
Right Rear Wheel Speed Sensor Circuit	C1224	The right rear WSS signal has dropped out. It has stopped producing edges.	Number of detected edges = 0	0 edges Nominal Range: (N/A)	Veh Vel System Voltage Processing_Enabled No Active DTCs	> 12.8kph < 19.5 True (Note 1) C1210	20ms	Type B 2 Trips
		Missing signal. The right rear wheel speed sensor is no longer being detected.	For Single Missing, TC Active, and Multiple Missing WSS's: Missing Threshold = Larger of: (0.2 x Max)m/s or 1.8m/s Max is the maximum filtered velocity from the other 3 wheels Pass Threshold: WSS signal is detected	See Malfunction Criteria Nominal Range: (0.6kph < WSS vel range < 240kph)	Accel (on all wheels) Veh Vel (largest from all 4 wheels) Processing_Enabled No Active DTCs	< 17.16m/s/s > 12.8kph True (Note 1) C1210	Single: Time > 5s Single TC Active: Time > 60s Multiple: Time > 2minutes / > 15ms	Type B 2 Trips
Left Front Wheel Speed Sensor Circuit Range/Performance	C1225	Erratic signal. The left front WSS is exhibiting erratic behavior with a large acceleration.	WSS Accel > Threshold Pass Threshold: < 491m/s/s	491m/s/s Nominal Range: (N/A)	Veh Vel Processing_Enabled No Active DTCs	> 12.8kph True (Note 1) C1207	280ms Pass >30s	Type B 2 Trips
Right Front Wheel Speed Sensor Circuit Range/Performance	C1226	Erratic signal. The right front WSS is exhibiting erratic behavior with a large acceleration.	WSS Accel > Threshold Pass Threshold: < 491m/s/s	491m/s/s Nominal Range: (N/A)	Veh Vel Processing_Enabled No Active DTCs	> 12.8kph True (Note 1) C1208	280ms Pass >30s	Type B 2 Trips
Left Rear Wheel Speed Sensor Circuit Range/Performance	C1227	Erratic signal. The left rear WSS is exhibiting erratic behavior with a large acceleration.	WSS Accel > Threshold Pass Threshold: < 491m/s/s	491m/s/s Nominal Range: (N/A)	Veh Vel Processing_Enabled No Active DTCs	> 12.8kph True (Note 1) C1209	280ms Pass >30s	Type B 2 Trips
Right Rear Wheel Speed Sensor Circuit Range/Performance	C1228	Erratic signal. The right rear WSS is exhibiting erratic behavior with a large acceleration.	WSS Accel > Threshold Pass Threshold: < 491m/s/s	491m/s/s Nominal Range: (N/A)	Veh Vel Processing_Enabled No Active DTCs	> 12.8kph True (Note 1) C1210	280ms Pass >30s	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Tire Size Mismatch	C122E	This detects that there may be mismatched sized tires on the vehicle	WSS (one wheel) – WSS(other 3) / Wheel Vel(other 3) > Threshold	25% Nominal Range: N/A	Vehicle Velocity Cornering Wheel Slip Brake Pedal Apply Detected Processing_Enabled No Active DTCs	>4m/s < 3% (Note 10) Not Detected (Note 10) True (Note 2) True (Note 1) C1207 C1208 C1209 C1210	500ms Pass = 60s	Type B 2 Trips
Input Sensors								
Brake Pedal Position Sensor 3 Circuit Low	C129A	Brake pedal position 3 input signal voltage is low.	Brake Ped Pos 3 Voltage < Threshold Pass Threshold > 5% of sensor supply voltage	5% of sensor supply voltage (0.25v typically) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Sensor Supply Voltage Sensor Supply Voltage Processing_Enabled No Active DTCs	> 4.75v < 5.25 True (Note 1) C120F	75ms	Type B 2 Trips
Brake Pedal Position Sensor 3 Circuit High	C129B	Brake pedal position 3 input signal voltage is high.	Brake Ped Pos 3 Voltage > Threshold Pass Threshold > 95% of sensor supply voltage	95% of sensor supply voltage (4.75v typically) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Sensor Supply Voltage Sensor Supply Voltage Processing_Enabled No Active DTCs	> 4.75v < 5.25 True (Note 1) C120F	75ms	Type B 2 Trips
Brake Pedal Position Sensor 4 Circuit Low	C129D	Brake pedal position 4 input signal voltage is low.	Brake Ped Pos 4 Voltage < Threshold Pass Threshold >5% of sensor voltage	5% of sensor supply voltage (0.25v typically) Nominal Range: (4.75v - 5.25v - Supply 4.5 - 0.5v - Sensor)	Sensor Supply Voltage Sensor Supply Voltage Processing_Enabled No Active DTCs	> 4.75v < 5.25 True (Note 1) C120F	75ms	Type B 2 Trips
Brake Pedal Position Sensor 4 Circuit High	C129E	Brake pedal position 4 input signal voltage is high.	Brake Ped Pos 4 Voltage > Threshold Pass Threshold <95% of sensor supply voltage	95% of sensor supply voltage (4.75v typically) Nominal Range: (4.75v - 5.25v - Supply 4.5 - 0.5v - Sensor)	Sensor Supply Voltage Sensor Supply Voltage Processing_Enabled No Active DTCs	> 4.75v < 5.25 True (Note 1) C120F	75ms	Type B 2 Trips
Brake Pedal Position Sensor 3 Circuit Offset Error	C129C	The brake pedal position 3 input signal offset voltage is out of range	Brake Ped Pos 3 input offset > Threshold Pass Threshold Brake Ped Pos 3 input offset < Threshold	5 mm (>1.07v typical) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Brake Pedal Apply Detected OR Pressure Zeroing Enable AND Processing_Enabled No Active DTCs	True (Note 2) True (Note 3) True (Note 1) C120F C127D C129A C129B C12E5 C12F8	15ms	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Brake Pedal Position Sensor 4 Circuit Offset Error	C129F	The brake pedal position 2 input signal offset voltage is out of range	Brake Ped Pos 4 input offset > Threshold Pass Threshold Brake Ped Pos 4 input offset <Threshold	5 mm (>1.07v typical) Nominal Range: 4.75v - 5.25v - Supply 4.5v - 0.5v - Sensor	Brake Pedal Apply Detected OR Pressure Zeroing Enable AND Processing_Enabled No Active DTCs	True (Note 2) True (Note 3) True (Note 1) C120F C127D C129D C129E C12E5 C120C	15ms	Type B Trips 2
Brake Pedal Position Sensor 3 Plausibility	C12F8	The brake pedal position 3 input signal does not correlate with the brake pedal position 4 signal or with the MC Pressure signal.	ABS{(Brake Ped Pos 3 input + Brake Ped Pos 4 input) - Sensor_Supply_Voltage} < Threshold Brake Ped Pos 3 input outside correlation table with M/C pressure input Pass Threshold conditions within thresholds	0.5v Outside acceptance table (Note 4) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Sensor Supply Voltage Sensor Supply Voltage Processing_Enabled No Active DTCs	> 4.75v < 5.25 True (Note 1) C120F C127D C129A C129B C129C C12E5	30ms (condition 1) 150ms (condition 2)	Type B Trips 2
		The difference of the two travel sensor inputs is greater than a predefined threshold.	 (%Input 3 - %Input 4) >= Threshold	10%	Pedal Supply Voltage Failure Brake Pedal Sensor is enabled Sensor Supply Voltage Sensor Supply Voltage Brake Pedal Position Sensor 1 Input = Valid Brake Pedal Position Sensor 2 Input = Valid	False True > 4.75v < 5.25 True True	30ms	
Brake Pedal Position Sensor 4 Plausibility	C120C	The brake pedal position 4 input signal does not correlate with the brake pedal position 3 signal or with the MC Pressure signal.	ABS{(Brake Ped Pos 3 input + Brake Ped Pos 4 input) - Sensor_Supply_Voltage} < Threshold Brake Ped Pos 4 input outside correlation table with M/C pressure input Pass Threshold conditions within thresholds	0.5v Outside acceptance table (Note 4) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Sensor Supply Voltage Sensor Supply Voltage Processing_Enabled No Active DTCs	> 4.75v < 5.25 True (Note 1) C120F C127D C129D C129E C129F C12E5	30ms (condition 1) 150ms (condition 2)	Type B Trips 2
ABS Master Cylinder Pressure Sensor Circuit Open or Shorted Low	C12B2	Out of range Low The MCP sensor is either open or shorted to ground.	MCP Voltage < Threshold Pass Threshold: > 5%	5% Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	100ms	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
ABS Master Cylinder Pressure Sensor Circuit Shorted High	C12B3	The MCP sensor signal is shorted high.	MCP Voltage > Supply Threshold Pass Threshold: < 95%	95% Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	100ms	Type B 2 Trips
ABS Master Cylinder Pressure Sensor and Brake Pedal Position Sensor Correlation	C12B1	The Master Cylinder Pressure sensor reading does not correlate with the pedal travel sensor readings.	M/C pressure input outside correlation table with Brake Ped Pos x inputs M/C Pressure has not changed by more than Threshold 1 while pedal travel inputs have changed more than Threshold 2	Outside acceptance table (Note 4) Threshold 1 = 50.0 kPa Threshold 2 =2.0 mm (rod)	Processing_Enabled M/C Pressure signal stable No Active DTCs	True (Note 1) True (Note 5) C120C C120F C12B2 C12B3 C12B4 C128B C128E C127D C129A C129B C129C C129D C129E C129F C12E5 C12F8	150ms (condition 1) 100ms (condition 2)	Type B 2 Trips
ABS Master Cylinder Pressure Sensor Performance	C12B4	An MCP erratic condition exist if the ohmic fault status has changed since the last time the ohmic check was performed.	Transitions from Valid to Open/Shorted State Pass Threshold: Transitions do not occur.	Successive Loops Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled No active DTCs:	True (Note 1) C12B2 C12B3	100ms Pass =150ms	Type B 2 Trips
ABS Master Cylinder Pressure Sensor Offset Error	C128B	The MCP sensor's input signal offset is out of range.	MCP Offset > Threshold	800 kPa (0.7v typically) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	(Brake Switch Veh Accel Pump Motor) or Brake Pedal Apply Detected AND Processing_Enabled No active DTCs:	False > 0.4m/s2 Not Active True (Note 2) True (Note 1) C12B2 C12B3 C128E	20ms	Type B 2 Trips
ABS Master Cylinder Pressure Sensor Raw Offset Error	C128E	The MCP sensor's raw offset is out of range.	MCP Raw Offset > Threshold	5000 kPa (1.64v typical) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Brake Control Vehicle Acceleration Vehicle Velocity Accelerator Pedal Position Brake Switch Processing_Enabled No active DTCs:	False (Note 6) > -0.5m/s/s > 2.0m/s < 10% False True (Note 1) C12B2 C12B3 C128E	1s	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Brake Pedal Position Sensor Power Circuit Low	C120F	The supply to the pedal position sensor is shorted to ground.	Pedal supply voltage < Threshold Pass Threshold > 0.5v	0.5v	Processing_Enabled	True (Note 1)	30ms	Type B Trips 2
Brake Pedal Position Sensor Reference Circuit	C12E5	Determines if the voltage supply to the pedal sensor is out of range.	Pedal supply voltage < Threshold Low Pedal supply voltage > Threshold High Pass Threshold 4.75 < Volt <5.25	Low = 4.75v High = 5.25v Nominal Range: (N/A)	Processing_Enabled	True (Note 1)	30ms	Type B Trips 2
Internal Pressure Sensors								
ABS Sensor Reference Output Circuit	C12E4	Determines if the internal 5v voltage supply is out of range.	Internal supply voltage < Threshold Low Internal supply voltage > Threshold High Pass Threshold 4.75 < Volt <5.25	Low = 4.75v High = 5.25v Nominal Range: (N/A)	Processing_Enabled	True (Note 1)	30ms	Type B Trips 2
ABS HPA Pressure Sensor Circuit Open or Shorted Low	C12B6	Out of range low. The HPA pressure sensor is either open or shorted to ground.	HPA Voltage < Threshold Pass Threshold: > 5%	5% Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	100ms	Type B Trips 2
ABS HPA Pressure Sensor Circuit Shorted High	C12B7	The HPA pressure sensor signal is shorted high.	HPA Voltage > Supply Threshold Pass Threshold: < 95%	95% Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	100ms	Type B Trips 2
ABS HPA Pressure Sensor Erratic	C12B8	An HPA pressure sensor erratic condition exist if the ohmic fault status has changed since the last time the ohmic check was performed	Transitions from Valid to Open/Shorted State Pass Threshold: Transitions do not occur.	Successive Loops Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled No active DTCs:	True (Note 1) C12B6 C12B7	100ms Pass = 150ms	Type B Trips 2
ABS Regenerative Axle Pressure Sensor Circuit Open or Shorted Low	C12B9	The regen axle pressure sensor is either open or shorted to ground.	Regen Axle Voltage < Threshold Pass Threshold: > 5%	5% Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	100ms	Type B Trips 2
ABS Regenerative Axle Pressure Sensor Circuit Shorted High	C12BA	The regen axle pressure sensor signal is shorted high.	Regen Axle Voltage > Supply Threshold Pass Threshold: < 95%	95% Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	100ms	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
ABS Regenerative Axle Pressure Sensor Erratic	C12BB	A regen axle pressure sensor erratic condition exist if the ohmic fault status has changed since the last time the ohmic check was performed	Transitions from Valid to Open/Shorted State Pass Threshold: Transitions do not occur.	Successive Loops Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled No active DTCs:	True (Note 1) C12B9 C12BA	100ms Pass = 150ms	Type B 2 Trips
ABS Regenerative Axle Pressure Sensor Raw Offset Error	C128F	The regen axle pressure sensor's raw offset is out of range.	Regen Axle Signal Raw Offset > Threshold	5000 kPa (1.64v typical) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Brake Control Vehicle Acceleration Vehicle Velocity Accelerator Pedal Position Brake Switch Processing_Enabled No active DTCs:	False (Note 6) > -0.5m/s/s > 2.0m/s < 10% False True (Note 1) C12B9 C12BA C12BB	1s	Type B 2 Trips
ABS Regenerative Axle Pressure Sensor Offset Error	C128C	The regen axle pressure sensor's input signal offset is out of range.	Regen Axle Signal Offset > Threshold Pass Threshold: < 800 kPa	800 kPa (0.7v typically) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Brake Switch Vehicle Acceleration Pump Motor Processing_Enabled No active DTCs:	False > 0.4m/s2 Not Active True (Note 1) C12B9 C12BA C12BB	20ms	Type B 2 Trips
ABS Regenerative Axle Pressure Performance	C121A	Determines if the regen axle pressure being commanded is being achieved or not.	ABS(Regen Pres(filtered) – Regen Pressure Command) > Threshold	1000 kPa Nominal Range: (N/A)	Regen is in active mode Processing_Enabled No active DTCs:	True (Note 1) C12B9 C12BA C12BB C128F C128C	250ms	Type B 2 Trips
ABS Boost Pressure Sensor Circuit Open or Shorted Low	C12BC	The boost pressure sensor is either open or shorted to ground.	Boost Voltage < Threshold Pass Threshold: > 5%	5% Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	100ms	Type B 2 Trips
ABS Boost Pressure Sensor Circuit Shorted High	C12BD	The boost pressure sensor signal is shorted high.	Boost Voltage > Supply Threshold Pass Threshold: < 95%	95% Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	100ms	Type B 2 Trips
ABS Boost Pressure Sensor Erratic	C12BE	A boost pressure sensor erratic condition exist if the ohmic fault status has changed since the last time the ohmic check was performed	Transitions from Valid to Open/Shorted State Pass Threshold: Transitions do not occur.	Successive Loops Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled No active DTCs:	True (Note 1) C12BC C12BD	100ms Pass = 150ms	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
ABS Boost Pressure Sensor Raw Offset Error	C128D	The boost pressure sensor's raw offset is out of range.	Boost Signal Raw Offset > Threshold	5000 kPa (1.64v typical) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Brake Control Vehicle Acceleration Vehicle Velocity Accelerator Pedal Position Brake Switch Processing_Enabled No active DTCs:	False (Note 6) > -0.5m/s/s > 2.0m/s < 10% False True (Note 1) C12BC C12BD C12BE	1s	Type B Trips 2
ABS Boost Pressure Sensor Offset Error	C128A	The boost pressure sensor's input signal offset is out of range.	Boost Signal Offset > Threshold Pass Threshold: < 800 kPa	800 kPa (0.7v typically) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Brake Switch Vehicle Acceleration Pump Motor Processing_Enabled No active DTCs:	False > 0.4m/s2 Not Active True (Note 1) C12BC C12BD C12BE	20ms	Type B Trips 2
ABS Boost Pressure Performance	C120A	Determines if the boost pressure being commanded is being achieved or not.	Boost Pres Diff(BPD) = Boost Pres(filtered, zeroed) – test command With VSC or TC or ABS active: BPD > Thrshld1 Without VSC and TC and ABS active: BPD > Thrshld2	Thrshld1 = 3000 kPa Thrshld2 = 1500 kPa Nominal Range: (N/A)	Processing_Enabled No active DTCs:	True (Note 1) C12B6 C12B7 C12B8 C12BC C12BD C12BE C128A C128D C127D C12E4	500ms	Type B Trips 2
ABS Boost Pressure Sensor and Regenerative Axle Pressure Sensor Correlation	C12F7	The regen axle pressure sensor is checked with the boost pressure sensor by equalizing pressure at the two sensors and comparing their difference to a trimmed threshold. The pressures are equalized by controlling the regen axle valves during the test.	(Regen axle pressure – Boost pressure) > Threshold Pass Threshold: < 500 kPa	500 kPa	All Wheel Speeds = 0 Brake Pedal Apply Detected Boost Pressure Processing_Enabled No active DTCs:	> 1s True (Note 2) > 150 kPa True (Note 1) C127D C128A C128C C128D C128F C12B9 C12BA C12BB C12BC C12BD C12BE C12E4 C12F7	100 ms	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
ABS Boost Pressure Loss	C12FE	This allows the boost control function to keep operating amongst conditions that cause the boost pressure to be limited to less than commanded. The boost control continues to apply until the boost pressure available is no greater than the MC pressure the driver is applying.	Boost Pressure Command AND MC Pressure	> Boost Pres + 1500 kPa > Boost Pres - 200 kPa Nominal Range: (N/A)	Boost Pressure PRNDL_State Processing_Enabled No active DTCs:	< 7000 kPa != PARK True (Note 1) C12BC C12BD C12BE C128A C128D C127D C12E4	250ms Pass = 30ms	Type B Trips 2
Hydraulic Control Unit								
ABS Left Front Isolation Solenoid Driver Shorted	C12C2	Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high.	Solenoid feedback voltage < Threshold Pass Threshold: > 30%	30% battery Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms	Type B Trips 2
ABS Right Front Isolation Solenoid Driver Shorted	C12C5	Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high.	Solenoid feedback voltage < Threshold Pass Threshold: > 30%	30% battery Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms	Type B Trips 2
ABS Left Front Dump Solenoid Driver Shorted	C12CC	Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high.	Solenoid feedback voltage < Threshold Pass Threshold: > 30%	30% battery Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms	Type B Trips 2
ABS Right Front Dump Solenoid Driver Shorted	C12CF	Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high.	Solenoid feedback voltage < Threshold Pass Threshold: > 30%	30% battery Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms	Type B Trips 2
ABS Right Rear Dump Solenoid Driver Shorted	C12D5	Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high.	Solenoid feedback voltage < Threshold Pass Threshold >30%	30% battery Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms	Type B Trips 2
ABS Left Rear Dump Solenoid Driver Shorted	C12D2	Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high.	Solenoid feedback voltage < Threshold Pass Threshold: > 30%	30% battery Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
ABS Base Brake Open Solenoid Driver Shorted	C12D8	Whenever the Power Switch Base Brake is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high.	Solenoid feedback voltage < Threshold Pass Threshold >30%	30% battery Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 8) > 8v < 16v Off	30ms	Type B 2 Trips
ABS Base Brake Closed Solenoid Driver Shorted	C12DB	Whenever the Power Switch Base Brake is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high.	Solenoid feedback voltage < Threshold Pass Threshold >30%	30% battery Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 8) > 8v < 16v Off	30ms	Type B 2 Trips
ABS Left Rear Dump Solenoid Circuit Shorted	C12D1	Whenever the Power Switch Slip Control is closed and the driver transistor is turned on (solenoid commanded on) the feedback voltage should be low.	Solenoid feedback voltage > Threshold Pass Threshold: < Threshold	30% of battery (Solenoid in ON/OFF Mode) 85% of batter (Solenoid in PWM Mode) Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v On	15ms (Solenoid in ON/OFF Mode) 20ms (Solenoid in PWM Mode) Pass = 35ms	Type B 2 Trips
ABS Right Rear Dump Solenoid Circuit Shorted	C12D4	Whenever the Power Switch Slip Control is closed and the driver transistor is turned on (solenoid commanded on) the feedback voltage should be low.	Solenoid feedback voltage > Threshold Pass Threshold: < Threshold	30% of battery (Solenoid in ON/OFF Mode) 85% of batter (Solenoid in PWM Mode) Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v On	15ms (Solenoid in ON/OFF Mode) 20ms (Solenoid in PWM Mode) Pass = 35ms	Type B 2 Trips
ABS Base Brake Open Solenoid Circuit Shorted	C12D7	Whenever the Power Switch Base Brake is closed and the driver transistor is turned on (solenoid commanded on) the feedback voltage should be low.	Solenoid feedback voltage > Threshold Pass Threshold: < Threshold	30% of battery (Solenoid in ON/OFF Mode) 85% of batter (Solenoid in PWM Mode) Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v On	15ms (Solenoid in ON/OFF Mode) 20ms (Solenoid in PWM Mode) Pass = 35ms	Type B 2 Trips
ABS Base Brake Closed Solenoid Circuit Shorted	C12DA	Whenever the Power Switch Base Brake is closed and the driver transistor is turned on (solenoid commanded on) the feedback voltage should be low.	Solenoid feedback voltage > Threshold Pass Threshold: < Threshold	30% of battery (Solenoid in ON/OFF Mode) 85% of batter (Solenoid in PWM Mode) Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v On	15ms (Solenoid in ON/OFF Mode) 20ms (Solenoid in PWM Mode) Pass = 35ms	Type B 2 Trips
ABS Left Rear Dump Solenoid Circuit Open	C12D0	Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high.	Solenoid feedback voltage < Threshold Solenoid feedback voltage > Threshold Pass Threshold: > 80% Pass Threshold: < 30%	80% battery 30% battery Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
ABS Right Rear Dump Solenoid Circuit Open	C12D3	Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high.	Solenoid feedback voltage < Threshold Solenoid feedback voltage > Threshold Pass Threshold: > 80% Pass Threshold: < 30%	80% battery 30% battery Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms	Type B 2 Trips
ABS Base Brake Open Solenoid Circuit Open	C12D6	Whenever the Power Switch Base Brake is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high.	Solenoid feedback voltage < Threshold Solenoid feedback voltage > Threshold Pass Threshold >80% Pass Threshold <30%	80% battery 30% battery Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 8) > 8v < 16v Off	30ms	Type B 2 Trips
ABS Base Brake Closed Solenoid Circuit Open	C12D9	Whenever the Power Switch Base Brake is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high.	Solenoid feedback voltage < Threshold Solenoid feedback voltage > Threshold Pass Threshold >80% Pass Threshold <30%	80% battery 30% battery Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 8) > 8v < 16v Off	30ms	Type B 2 Trips
ABS Left Rear Isolation Solenoid Circuit Shorted	C12F2	This failsafe performs the shorted coil detection for HW CLC (Closed Loop Current) coils	Current Feedback > Threshold Pass Threshold: < 150% of requested current	150% of requested current Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	15ms	Type B 2 Trips
ABS Right Rear Isolation Solenoid Circuit Shorted	C12F5	This failsafe performs the shorted coil detection for HW CLC coils	Current Feedback > Threshold Pass Threshold: < 150% of requested current	150% of requested current Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Commanded Current Commanded Current	True (Note 7) > 8v < 16v > 0.25a < 0.35a	15ms	Type B 2 Trips
ABS Boost Valve Solenoid Circuit Shorted	C12DD	This failsafe is for shorted coil detection for HW CLC coils	Current Feedback > Threshold Pass Threshold: < 150% of requested current	150% of requested current Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Commanded Current Commanded Current	True (Note 8) > 8v < 16v > 0.25a < 0.35a	15ms	Type B 2 Trips
ABS Proportioning Valve Solenoid Circuit Shorted	C12DF	This failsafe is for shorted coil detection for HW CLC coils	Current Feedback > Threshold Pass Threshold: < 150% of requested current	150% of requested current Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Commanded Current Commanded Current	True (Note 7) > 8v < 16v > 0.25a < 0.35a	15ms	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
ABS Left Rear Isolation Solenoid Performance	C12F3	The current from the closed loop current controlled valve coil is diagnosed by checking if the difference of the measured current feedback and the commanded current is within a tolerance range.	Coil Feedback Current > Threshold Pass Threshold: < 25% of commanded current	25% of Commanded Current Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Commanded Current Commanded Current	True (Note 7) > 8v < 16v > 0.0a < 2.5a	100ms	Type B 2 Trips
		Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback current should be 0 amps.	Current feedback > Threshold Pass Threshold: < 0.10amp	0.10amp Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms	
ABS Right Rear Isolation Solenoid Performance	C12F6	The current from the closed loop current controlled valve coil is diagnosed by checking if the difference of the measured current feedback and the commanded current is within a tolerance range.	Coil Feedback Current > Threshold Pass Threshold: <25% of Commanded Current	25% of Commanded Current Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Commanded Current Commanded Current	True (Note 7) > 8v < 16v > 0.0a < 2.5a	100ms	Type B 2 Trips
		Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback current should be 0 amps.	Current feedback > Threshold Pass Threshold: < 0.10amp	0.10amp Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms	
ABS Boost Valve Solenoid Circuit Performance	C12A7	The current from the closed loop current controlled valve coil is diagnosed by checking if the difference of the measured current feedback and the commanded current is within a tolerance range.	Coil Feedback Current > Threshold Pass Threshold: < 25% of commanded current	25% of Commanded Current Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Commanded Current Commanded Current	True (Note 8) > 8v < 16v > 0.44a < 1.5a	100ms	Type B 2 Trips
		Whenever the Power Switch Base Brake is closed and the driver transistor is not turned on (solenoid commanded off) the feedback current should be 0 amps.	Current feedback > Threshold Pass Threshold < 0.10amp	0.10amp Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 8) > 8v < 16v Off	30ms	
ABS Proportioning Valve Solenoid Performance	C12F4	The current from the closed loop current controlled valve coil is diagnosed by checking if the difference of the measured current feedback and the commanded current is within a tolerance range.	Coil Feedback Current > Threshold Pass Threshold <25% of Commanded Current	25% of Commanded Current Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Commanded Current Commanded Current	True (Note 7) > 8v < 16v > 0.0a < 2.5a	100ms	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback current should be 0 amps.	Current feedback > Threshold Pass Threshold <0.10amp	0.10amp Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms	
ABS Pump Motor Run On	C12E9	This fault occurs if the Motor is continuously on for greater than 60s for 5 consecutive run times during an ignition cycle.	FSM Run-On Fault counter > Threshold Pass Threshold < 5	5 Nominal Range: (10v > 16v)	Motor_Enabled Motor_ON	True (Note 9) > 60s	15 ms	Type B 2 Trips
ABS Pump Motor Locked	C12E8	This fault is set when the motor control micro communicates to the system micro that the motor is unable or will not rotate.	FS_Motor_No_Edge_Counter < Threshold	50 Nominal Range: (10v > 16v)	Motor_Enabled	True (Note 9)	15 ms	Type B 2 Trips
ABS Pump Motor Performance	C12E0	This fault checks to see if a condition exists in which the accumulator is not charging	Accumulator Pressure < Threshold Pass Threshold > 12000 kPa	11000 kPa Nominal Range: (10v > 16v)	Brake Pedal Apply Detected Motor_Enabled Boost_Pressure < Command + 150 kPa No active DTCs:	True (Note 2) True (Note 9) True C12B6 C12B7 C12B8 C127D C12E4	100ms	Type B 2 Trips
Controller								
EBCM Device Voltage Low	C12E1	System voltage is too low for certain operations.	System voltage < Threshold Pass Threshold Volt >9v	9v Nominal Range: (N/A)	Ignition	!= Crank	100ms	Special Type C NO MIL
EBCM Device Voltage High	C12E2	System voltage is too high for certain operations.	System voltage > Threshold Pass Threshold Volt <16v	16v Nominal Range: (N/A)	Ignition	!= Crank	100ms	Type B 2 Trips
ABS Power Switch Circuit Open	C12E6	When the power switch has been commanded on the voltage level is monitored for proper operation.	Voltage Level (switched battery) < Threshold Pass Threshold > 80% bat volt	80% bat voltage Nominal Range: (N/A)	Power Switch Base Brake Enabled Power Switch Command	True (Note 8) On	50ms	Type B 2 Trips
ABS Power Switch Circuit Shorted	C12E7	The Base Brake Power switch voltage decay is monitored after the power switch is turned off. Voltage too high indicates a shorted switch. Voltage too low indicates a missing filter capacitor.	Power Switch Short Fault: Power switch feedback > Threshold1 Power Switch Short FSM Capacitor Fault: Power switch feedback < Threshold2 Pass Threshold 80% < fdbk <50%	Threshold1 = 80% bat volt Threshold2 = 50% bat volt Nominal Range: (N/A)	Power Switch Command Motor	Off != Running	50ms	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Traction Control Power Switch Circuit Open	C120D	When the power switch has been commanded on the voltage level is monitored for proper operation.	Voltage Level < Threshold Pass Threshold volt > 80% voltage	80% voltage Nominal Range: (N/A)	Power Switch Slip Control Enabled Power Switch Command	True (Note 7) On	50ms	Type B Trips 2
Traction Control Power Switch Circuit Shorted	C120E	When the power switch has been commanded off the voltage level should be at or near zero volts.	Voltage Level > Threshold Pass Threshold volt < 80% voltage	80% voltage Nominal Range: (N/A)	Power Switch Command	Off	50ms	Type B Trips 2
Controller								
EBCM Self Test Failed	C127C	The Built In Self Test (BIST) is responsible for testing the internal functionality of the core within the main microprocessor	Fail Consecutive Times = Threshold	2 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	Type A Trip 1
EBCM Processor Performance	C127B	Normal Operation: The micro sends a watchdog enable command(WEC) via the SPI to the Orion ASIC every schedule loop. If the ASIC does not receive this message, the external watchdog circuit inhibits the power switches. Ignition Self-Test: The external watchdog circuit is tested by not sending the WEC via the SPI to the ASIC so that the external watchdog is off and then commanding the power switch to on.	Power Switch Slip Control Voltage Feedback > Threshold	80% bat volt Nominal Range: (N/A)		Run during Start-up	30ms	Type A Trip 1

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
EBCM Random Access Memory (RAM)	C1255	The following tests are continuously ran: 1. Read/write of the micro's RAM registers. 2. Address check of the RAM address lines. 3. Verify that the RAM location used to store the persistent address line test address (offset) advances to the next address line address. 4. Perform data check on a RAM address that includes a dependency check against another RAM location that is address adjacent to the RAM location being tested. 5. Verify that the RAM location used to store the persistent data test address advances to the next	If any of the tests fail, the system is forced into a reset by writing an invalid watchdog key to the system registers. If the RAM failure is NOT detected by the bootloader static RAM check algorithm then a fault code is set and the exact type of RAM failure is written to NVRAM.	See Malfunction Criteria Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	Type A Trip 1
EBCM Read Only Memory (ROM)	C1256	This check is called from the scheduler each loop. Each ROM section is check-summed by byte. Each byte will be added to the current checksum for a section. If the byte being checked is the last byte of a section, then the section is verified for a correct checksum.	ROM Section's Checksum != Threshold	0 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	Immediate	Type A Trip 1
EBCM Stack Overrun	C126E	To detect underflow and overflow of the system stacks, a word of RAM is reserved at the end of each of the system stacks. A word of RAM is also reserved at the upper-most address of the stack section. The contents of these reserved words will be monitored periodically to determine if they have been modified. To detect cases where the application could be pushing a value onto the stack that matches the test value, the test value that is stored at these reserved addresses will be changed each update.	End of Stack != Threshold	Set value changed every software release Nominal Range: (N/A)		Upon Starting Scheduler in the Application	Immediate	Type A Trip 1

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
EBCM Processor Overrun	C121D	Processor did not perform a proper shutdown. NVRAM blocks written at shutdown do not match expected values upon startup. Processing interrupt occurred.	The contents of the two NVRAM blocks are compared upon start-up with expected values from shutdown process.	Blocks do not compare		Upon Starting Scheduler in the Application	15ms	Type A Trip 1
EBCM Unimplemented Interrupt	C121E	This fault is set if an interrupt occurs that has no explicit interrupt handler defined.	Interrupt Set = Threshold	Not Defined Interrupt Handler Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	Type A Trip 1
EBCM Unexpected Exception	C121F	This fault is set if an exception that is not supported in our system has been generated.	Exception Not Supported = Condition	N/A Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	Type A Trip 1
EBCM A/D Conversion Timeout	C127D	If the Analog to digital converter does not complete its conversion in a set amount of time then this fault is set.	A/D Conversion Counter = Threshold	0 (Counts down from 100) Nominal Range: (N/A)		Upon Starting Scheduler in the Application	100 clock cycles	Type A Trip 1
EBCM Non-Volatile Random Access Memory (NVRAM) / Non-volatile RAM	C12FF	Checksum Error Fault	NVRAM status bit sent out by core software reports a failed NVRAM	NVRAMDiagstat > 0 Fault Counts > 0 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	Type B Trips 2
EBCM Non-Volatile Random Access Memory (NVRAM) / Software Learn ID	C12FF	Software ID held in NVRAM does not match ID hard coded in software	BB NVRAM SW BLOCK ID ~ = Software ID	SwVerIDStat > 0 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	Type B Trips 2
EBCM High End Timer Performance	C127A	Execution of the High End Timer (HET) program is limited to the actual instructions of the HET program. Execution of default instructions indicates program execution error.	Default Instructions = Threshold	Executed Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	Type A Trip 1
EBCM High End Timer Program Overflow	C123B	If the HET program does not complete execution time within one HET loop time, the current HET program is aborted and the next program execution is started and a fault code is set.	HET Program Execution Time > Threshold	HET Loop Time Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	Type A Trip 1

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
EBCM High End Timer (HET) RAM Fault	C123C	The following tests are continuously ran: 1. Read/write of the micro's HET RAM registers. 2. Address check of the HET RAM address lines. 3. Verify that the HET RAM location used to store the persistent address line test address (offset) advances to the next address line address. 4. Perform data check on a HET RAM address that includes a dependency check against another HET RAM location that is address adjacent to the HET RAM location being tested. 5. Verify that the HET RAM location used to store the persistent data test address advances to the next test address.	If any of the tests fail, the system is forced into a reset by writing an invalid watchdog key to the system registers. If the RAM failure is NOT detected by the bootloader static RAM check algorithm then a fault code is set and the exact type of RAM failure is written to NVRAM.	See Malfunction Criteria Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	Type A Trip 1
EBCM High End Timer (HET) Watchdog	C123A	If the HET monitor task is not executed within the allowed time frame, a counter is decremented. When the counter decrements to zero, an interrupt is generated and this fault is set.	Counter = Threshold	0 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	Type A Trip 1
EBCM High End Timer Periodic Interrupt	C123E	This failsafe verifies that a solenoid feedback interrupt generates a high end timer(HET) interrupt every loop cycle.	Solenoid Feedback Interrupt from the HET = Threshold	Calculated based on Solenoid activity Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	Type A Trip 1
EBCM Solenoid Timeout	C123D	Each solenoid in the system should generate a HET interrupt. At the completion of the System Self-Test, the number of valid HET interrupts is expected to be equal to the number of solenoids in the system.	Number of Valid HET Interrupts != Number	12 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	Type A Trip 1
CAN / Communications								


COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
EBCM Internal Communication Error	C121C	<p>The periodic Internal Processor Communication (IPC) packet transmission service checks for previous transmission request completion before the new request is made.</p> <p>If the previous transmission was not completed, then the IPC handler declares an IPC packet transmission overrun failure and disables all IPC communications to introduce the same failure in the other micro. When both nodes are reset then they will re-synchronize.</p> <p>This fault is set when the attempt to recover from an IPC Transmit Overrun failure was not successful.</p>	Secondary micro-processor communication packet does not re-synchronize with expected start-up sequence.	N/A Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15 ms	Type B Trips 2
EBCM Serial Peripheral Interface Performance	C126F	2 data bytes are sent to the Orion ASIC. The Orion sends back the first byte.	Received Data != Sent Data for Threshold # of attempts	3 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	20 ms	Type A Trip 1
EBCM Serial Peripheral Interface Inoperative	C123F	Each time data is sent out from the SPI port, a counter is loaded. The counter is decremented each check that the micro polls the SPI status to see if the data transfer is complete. The counter should never reach zero before the data transfer is complete. If the counter reaches zero, it means that the peripheral, NVRAM, appears to be non-functional.	Counter = Threshold	0 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15 ms	Type A Trip 1

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
EBCM CAN Hardware Initialization	C12E3	The hardware confirmation timeout condition is monitored every time the CAN driver initialization service is called. The CAN driver init service is called after power up, in Bus Off, or in transmit acknowledgement recovery. The number of counts the CAN driver is allowed to wait for hardware confirmation is 11. If the confirmation is not received by this number then the fault is set.	# of initialization attempts > threshold	11		Upon Starting Scheduler in the Application	15 ms	Type B Trips 2
Control Module Communication Bus B Off	U180F	The CAN peripheral monitors CAN bus activity and increments an error counter if the following errors are present: 1) BIT ERROR: If the bit sent does not match what was expected to be sent, increment the counter. 2) STUFF ERROR: This error has to be detected at the bit time of the 6th consecutive equal bit level in a message field that should be coded by the method of bit stuffing. 3) CRC ERROR: This error is detected if the calculated result of the receiver is not the same as that received from the transmitter. 4) FORM ERROR: This error is detected when a fixed-form bit field contains one or more illegal bits. 5) ACKNOWLEDGMENT ERROR: This error is detected by a transmitter whenever it does not monitor a dominant bit during the ACK SLOT. If the transmit error counter or receive error counter reach a value of 256 this fault is set.	CAN Hardware Transmit Error Counter > Threshold	256 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15 ms	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
EBCM Communication Bus "B" RAM Error	C126D	The first CAN device does not pass RAM check on the mailbox area. The CAN mailbox RAM check is executed once after power up or reset of the microprocessor.	RAM Read value != RAM Written value	0 Nominal Range: (N/A)		Executed once upon startup	15 ms	Two Trips Type B
EBCM Communication Bus "B" Performance	C126C	The CAN frame does not receive acknowledgement for predefined amount of time. If this fault is enabled in the node supervisor then transmit confirmation is expected within 200 ms. Transmit request sets the timeout timer and successful transmission resets the timeout timer.	CAN Frame acknowledgement not received	Not Received Nominal Range: (N/A)		Upon Starting Scheduler in the Application	200ms	Type B 2 Trips
Antilock Brake System Control Module Lost Communication With Hybrid Powertrain Control Module on Bus B	U1843	One or more of the Communication messages (3) with the Hybrid Powertrain Control Module are missing.	The specified input packet with consistent data was not received by COMMS for a predefined time. Every periodic input packet is monitored for input deadline timeout. The deadline timeout is reset each time new packet data is received. The deadline timeout is either set in DBC file or during the configuration of the COMMS subsystem.	Nominal Range: (N/A)		Upon Starting Scheduler in the Application	2.5 times the expected message transmit time	Type B 2 Trips
Antilock Brake System Control Module Lost Communication With Engine Control Module on Bus B	U1842	Communication message with the Engine Control Module is missing.	The specified input packet with consistent data was not received by COMMS for a predefined time. Every periodic input packet is monitored for input deadline timeout. The deadline timeout is reset each time new packet data is received. The deadline timeout is either set in DBC file or during the configuration of the COMMS subsystem.			Upon Starting Scheduler in the Application	2.5 times the expected message transmit time	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Antilock Brake System Control Module Lost Communication With Engine Control Module	U186A	Communication message with the Engine Control Module is missing.	The specified input packet with consistent data was not received by COMMS for a predefined time. Every periodic input packet is monitored for input deadline timeout. The deadline timeout is reset each time new packet data is received. The deadline timeout is either set in DBC file or during the configuration of the COMMS subsystem.	Nominal Range: (N/A)		Upon Starting Scheduler in the Application	2.5 times the expected message transmit time	Type B Trips 2
Antilock Brake System Control Module Lost Communication With Transmission Control Module	U186B	Communication message with the Transmission Control Module is missing.	The specified input packet with consistent data was not received by COMMS for a predefined time. Every periodic input packet is monitored for input deadline timeout. The deadline timeout is reset each time new packet data is received. The deadline timeout is either set in DBC file or during the configuration of the COMMS subsystem.	Nominal Range: (N/A)		Upon Starting Scheduler in the Application	2.5 times the expected message transmit time	Type B Trips 2
<p>Note #1 - Processing Enable is set to FALSE when the following DTCs are set to 'Fault': C1255, C1256, C126E, C123C, C127C</p> <p>Note #2 - Brake Pedal Apply Detected is the determination that the driver has applied the brake pedal. It is a combination of indications from the 4 driver inputs: Brake Switch, Master Cylinder Pressure, Brake Pedal Position 3 and Brake</p> <p>Note #3 - Pressure Zeroing Enable. When the vehicle is in a known state that the driver brake pedal should be released, the Pressure Zeroing Enable is set. Typical vehicle conditions are:</p> <p>Note #4 - See Correlation Table below</p> <p>Note #5 - M/C Pressure Sensor stable is a comparison of the raw M/C pressure reading against 2 filtered versions of the reading (0.5 Hz and 5 Hz.) If all 3 values are within a small tolerance (7 kpa) then the driver's input is considered</p> <p>Note #6 - Brake Control is considered 'False' when there is no activity being performed by the hydraulic modulator - no wheel control valves are being commanded and the motor is not being commanded.</p> <p>Note #7 - Power Switch Slip Control Enable is used to open the power control FET in the electronics as a safety mechanism for the brake controller. It is set to FALSE when the following DTCs are set to 'Fault': C12C2, C12C5, C12D2,</p> <p>Note #8 - Power Switch Base Brake Control Enable is used to open the Base Brake power control FET in the electronics as a safety mechanism for the brake controller. It is set to FALSE when the following DTCs are set to 'Fault': C12DB,</p> <p>Note #9 - Motor Enable is used to indicate when the motor is allowed to be commanded on. Motor Enable is set to FALSE when the following DTCs are set to 'Fault': C12B7, C12B6, C12B8, C12D8, C12DB, C12DC, C12E9, C12E8,</p> <p>Note #10 - Cornering determination is a comparison of the 4 wheel speeds to estimate the percentage of road wheel angle of the drive wheels relative to their full amount of articulation. Wheel slip is the calculated ratio of individual wheel</p>								

**Note 4:
Correlation Table**

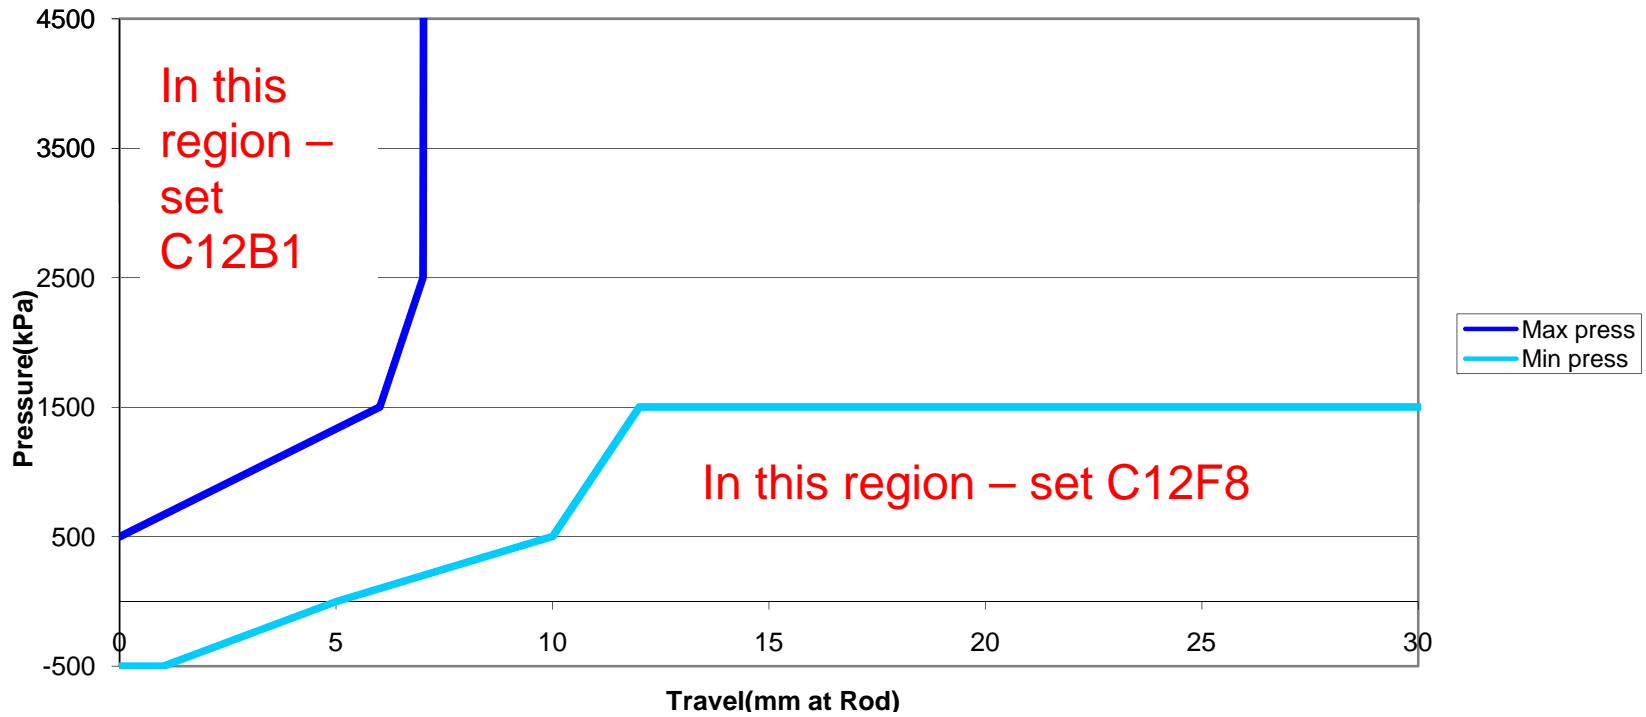

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
CAN Communication:								
CAN Communication Loss – HCP	U1885	Communication Error	No message from HCP (Contactor Command)	> 3.0 s	HS Comm Enable input BPCM Power Mode	= TRUE =RUN	3.0 s	Type B Trips 2
CAN Communication Loss – ECM	U1886	Communication Error	No message from ECM (Vehicle Speed Average)	> 3.0 s	HS Comm Enable input BPCM Power Mode	= TRUE =RUN	3.0 s	Type B Trips 2
CAN Communication Loss – CGM	U1862	Communication Error	No message from CGM (Fan Speed Limit)	> 75ms	HS Comm Enable input BPCM Power Mode	= TRUE =RUN	75ms	Special Type "C"
Block 1 Voltage Sensor Circuit:								
Block 1 Voltage measurement – Out of Range - Low	P0B3D	Out of range low	Block 1	< 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 1 Voltage measurement – Out of Range - High	P0B3E	Out of range high	Block 1	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 1 Voltage measurement – Rationality	P0B3C	Rationality compares block voltage sensor to pack voltage sensor	Block 1 * 20 - Battery Pack Voltage	> 70 V	12V System Voltage Block 1 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B3D P0B3E P0ABC P0ABD P0ABB =RUN > 100ms	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2
Block 2 Voltage Sensor Circuit:								
Block 2 Voltage measurement – Out of Range - Low	P0B42	Out of range low	Block 2 AND Block 3	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 2 Voltage measurement – Out of Range - High	P0B43	Out of range high	Block 2	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 2 Voltage measurement – Rationality	P0B41	Rationality compares block voltage sensor to pack voltage	Block 2 * 20 - Battery Pack Voltage	> 70 V	12V System Voltage	>= 9.0 V <= 18.0 V	16 seconds	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		sensor	AND Block 3 * 20 - Battery Pack Voltage	> 70 V	Block 2 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	= VALID P0A1F P0B42 P0B43 P0ABC P0ABD P0ABB =RUN > 100ms	(160 fail/170 sample; 100 ms frequency)	
Block 3 Voltage Sensor Circuit:								
Block 3 Voltage measurement – Out of Range - Low	P0B47	Out of range low	Block 3 AND Block 4	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 3 Voltage measurement – Out of Range - High	P0B48	Out of range high	Block 3	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 3 Voltage measurement – Rationality	P0B46	Rationality compares block voltage sensor to pack voltage sensor	Block 3 * 20 - Battery Pack Voltage AND Block 4 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 3 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B47 P0B48 P0ABC P0ABD P0ABB =RUN > 100ms	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2
Block 4 Voltage Sensor Circuit:								
Block 4 Voltage measurement – Out of Range - Low	P0B4C	Out of range low	Block 4 AND Block 5	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 4 Voltage measurement – Out of Range - High	P0B4D	Out of range high	Block 4	> 23 V	12V System Voltage	>= 9.0 V <= 18.0 V	1.5 seconds	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
Range - High					No active DTCs: BPCM Power Mode	P0A1F =RUN	(15 fail/20 sample; 100 ms frequency)		
Block 4 Voltage measurement – Rationality	P0B4B	Rationality compares block voltage sensor to pack voltage sensor	Block 4 * 20 - Battery Pack Voltage AND Block 5 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 4 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B4C P0B4D P0ABC P0ABD P0ABB =RUN > 100ms	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2	
Block 5 Voltage Sensor Circuit:									
Block 5 Voltage measurement – Out of Range - Low	P0B51	Out of range low	Block 5 AND Block 6	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2	
Block 5 Voltage measurement – Out of Range - High	P0B52	Out of range high	Block 5	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2	
Block 5 Voltage measurement – Rationality	P0B50	Rationality compares block voltage sensor to pack voltage sensor	Block 5 * 20 - Battery Pack Voltage AND Block 6 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 5 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B51 P0B52 P0ABC P0ABD P0ABB =RUN > 100ms	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2	
Block 6 Voltage Sensor Circuit:									
Block 6 Voltage measurement - Out of Range - Low	P0B56	Out of range low	Block 6 AND	< 2 V	12V System Voltage No active DTCs:	>= 9.0 V <= 18.0 V P0A1F	1.5 seconds	Type B Trips 2	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Block 7	< 2 V	BPCM Power Mode	=RUN	(15 fail/20 sample; 100 ms frequency)	
Block 6 Voltage measurement - Out of Range - High	P0B57	Out of range high	Block 6	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 6 Voltage measurement - Rationality	P0B55	Rationality compares block voltage sensor to pack voltage sensor	Block 6 * 20 - Battery Pack Voltage AND Block 7 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 1 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B56 P0B57 P0ABC P0ABD P0ABB =RUN > 100ms	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2
Block 7 Voltage Sensor Circuit:								
Block 7 Voltage measurement - Out of Range - Low	P0B5B	Out of range low	Block 7 AND Block 8	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 7 Voltage measurement - Out of Range - High	P0B5C	Out of range high	Block 7	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 7 Voltage measurement - Rationality	P0B5A	Rationality compares block voltage sensor to pack voltage sensor	Block 7 * 20 - Battery Pack Voltage AND Block 8 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 7 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B5B P0B5C P0ABC P0ABD P0ABB =RUN > 100ms	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Block 8 Voltage Sensor Circuit:								
Block 8 Voltage measurement - Out of Range - Low	P0B60	Out of range low	Block 8 AND Block 9	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 8 Voltage measurement - Out of Range - High	P0B61	Out of range high	Block 8	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 8 Voltage measurement - Rationality	P0B5F	Rationality compares block voltage sensor to pack voltage sensor	Block 8 * 20 - Battery Pack Voltage AND Block 9 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 8 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B60 P0B61 P0ABC P0ABD P0ABB =RUN > 100ms	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2
Block 9 Voltage Sensor Circuit:								
Block 9 Voltage measurement - Out of Range - Low	P0B65	Out of range low	Block 9 AND Block 10	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 9 Voltage measurement - Out of Range - High	P0B66	Out of range high	Block 9	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 9 Voltage measurement - Rationality	P0B64	Rationality compares block voltage sensor to pack voltage sensor	Block 9 * 20 - Battery Pack Voltage AND Block 10 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 9 Voltage sensor input No active DTCs:	>= 9.0 V <= 18.0 V = VALID P0A1F P0B65 P0B66 P0ABC P0ABD	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					BPCM Power Mode Time since contactors closed	P0ABB =RUN > 100ms		
Block 10 Voltage Sensor Circuit:								
Block 10 Voltage measurement - Out of Range - Low	P0B6A	Out of range low	Block 10 AND Block 11	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 10 Voltage measurement - Out of Range - High	P0B6B	Out of range high	Block 10	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 10 Voltage measurement - Rationality	P0B69	Rationality compares block voltage sensor to pack voltage sensor	Block 10 * 20 - Battery Pack Voltage AND Block 11 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 10 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B6A P0B6B P0ABC P0ABD P0ABB =RUN > 100ms	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2
Block 11 Voltage Sensor Circuit:								
Block 11 Voltage measurement - Out of Range - Low	P0B6F	Out of range low	Block 11 AND Block 12	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 11 Voltage measurement - Out of Range - High	P0B70	Out of range high	Block 11	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 11 Voltage measurement - Rationality	P0B6E	Rationality compares block voltage sensor to pack voltage sensor	Block 11 * 20 - Battery Pack Voltage AND Block 12 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 11 Voltage sensor input No active DTCs:	>= 9.0 V <= 18.0 V = VALID P0A1F P0B6F	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					BPCM Power Mode Time since contactors closed	P0B70 P0ABC P0ABD P0ABB =RUN > 100ms		
Block 12 Voltage Sensor Circuit:								
Block 12 Voltage measurement - Out of Range - Low	P0B74	Out of range low	Block 12 AND Block 13	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 12 Voltage measurement - Out of Range - High	P0B75	Out of range high	Block 12	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 12 Voltage measurement - Rationality	P0B73	Rationality compares block voltage sensor to pack voltage sensor	Block 12 * 20 - Battery Pack Voltage AND Block 13 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 12 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B74 P0B75 P0ABC P0ABD P0ABB =RUN > 100ms	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2
Block 13 Voltage Sensor Circuit:								
Block 13 Voltage measurement - Out of Range - Low	P0B79	Out of range low	Block 13 AND Block 14	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 13 Voltage measurement - Out of Range - High	P0B7A	Out of range high	Block 13	> 23 V	No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 13 Voltage measurement - Rationality	P0B78	Rationality compares block voltage sensor to pack voltage	Block 13 * 20 - Battery Pack Voltage	> 70 V	12V System Voltage	>= 9.0 V <= 18.0 V	16 seconds	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		sensor	AND Block 14 * 20 - Battery Pack Voltage	> 70 V	Block 13 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	= VALID P0A1F P0B79 P0B7A P0ABC P0ABD P0ABB =RUN > 100ms	(160 fail/170 sample; 100 ms frequency)	
Block 14 Voltage Sensor Circuit:								
Block 14 Voltage measurement - Out of Range - Low	P0B7E	Out of range low	Block 14 AND Block 15	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 14 Voltage measurement - Out of Range - High	P0B7F	Out of range high	Block 14	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 14 Voltage measurement - Rationality	P0B7D	Rationality compares block voltage sensor to pack voltage sensor	Block 14 * 20 - Battery Pack Voltage AND Block 15 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 14 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B7E P0B7F P0ABC P0ABD P0ABB =RUN > 100ms	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2
Block 15 Voltage Sensor Circuit:								
Block 15 Voltage measurement - Out of Range - Low	P0B83	Out of range low	Block 15 AND Block 16	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 15 Voltage measurement - Out of Range - High	P0B84	Out of range high	Block 15	> 23 V	12V System Voltage	>= 9.0 V <= 18.0 V	1.5 seconds	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
Range - High					No active DTCs: BPCM Power Mode	P0A1F =RUN	(15 fail/20 sample; 100 ms frequency)		
Block 15 Voltage measurement - Rationality	P0B82	Rationality compares block voltage sensor to pack voltage sensor	Block 15 * 20 - Battery Pack Voltage AND Block 16 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 15 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B83 P0B84 P0ABC P0ABD P0ABB =RUN > 100ms	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2	
Block 16 Voltage Sensor Circuit:									
Block 16 Voltage measurement - Out of Range - Low	P0B88	Out of range low	Block 16 AND Block 17	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2	
Block 16 Voltage measurement - Out of Range - High	P0B89	Out of range high	Block 16	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2	
Block 16 Voltage measurement - Rationality	P0B87	Rationality compares block voltage sensor to pack voltage sensor	Block 16 * 20 - Battery Pack Voltage AND Block 17 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 16 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B88 P0B89 P0ABC P0ABD P0ABB =RUN > 100ms	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2	
Block 17 Voltage Sensor Circuit:									
Block 17 Voltage measurement - Out of Range - Low	P0B8D	Out of range low	Block 17 AND	< 2 V	12V System Voltage No active DTCs:	>= 9.0 V <= 18.0 V P0A1F	1.5 seconds	Type B Trips 2	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Block 18	< 2 V	BPCM Power Mode	=RUN	(15 fail/20 sample; 100 ms frequency)	
Block 17 Voltage measurement - Out of Range - High	P0B8E	Out of range high	Block 17	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 17 Voltage measurement - Rationality	P0B8C	Rationality compares block voltage sensor to pack voltage sensor	Block 17 * 20 - Battery Pack Voltage AND Block 18 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 17 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B8D P0B8E P0ABC P0ABD P0ABB =RUN > 100ms	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2
Block 18 Voltage Sensor Circuit:								
Block 18 Voltage measurement - Out of Range - Low	P0B92	Out of range low	Block 18 AND Block 19	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 18 Voltage measurement - Out of Range - High	P0B93	Out of range high	Block 18	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 18 Voltage measurement - Rationality	P0B91	Rationality compares block voltage sensor to pack voltage sensor	Block 18 * 20 - Battery Pack Voltage AND Block 19 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 18 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B92 P0B93 P0ABC P0ABD P0ABB =RUN > 100ms	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Block 19 Voltage Sensor Circuit:								
Block 19 Voltage measurement - Out of Range - Low	P0B97	Out of range low	Block 19 AND Block 20	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 19 Voltage measurement - Out of Range - High	P0B98	Out of range high	Block 19	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 19 Voltage measurement - Rationality	P0B96	Rationality compares block voltage sensor to pack voltage sensor	Block 19 * 20 - Battery Pack Voltage AND Block 20 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 19 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B97 P0B98 P0ABC P0ABD P0ABB =RUN > 100ms	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2
Block 20 Voltage Sensor Circuit:								
Block 20 Voltage measurement - Out of Range - Low	P0B9C	Out of range low	Block 20	< 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0V <= 18.0V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 20 Voltage measurement - Out of Range - High	P0B9D	Out of range high	Block 20	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0V <= 18.0V P0A1F =RUN	1.5 seconds (15 fail/20 sample; 100 ms frequency)	Type B Trips 2
Block 20 Voltage measurement - Rationality	P0B9B	Rationality compares block voltage sensor to pack voltage sensor	Block 20 * 20 - Battery Pack Voltage	> 70 V	12V System Voltage Block 20 Voltage sensor input No active DTCs:	>= 9.0V <= 18.0V = VALID P0A1F P0B9C P0B9D P0ABC P0ABD	16 seconds (160 fail/170 sample; 100 ms frequency)	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					BPCM Power Mode Time since contactors closed	P0ABB =RUN > 100ms		
Battery Pack Voltage Sensor Circuit:								
Hybrid Battery Pack Voltage Sense Circuit Low	P0ABC	Out of range low	Battery Pack Voltage	< 40 V	12V System Voltage BPCM Power Mode Time since contactors closed No active DTCs:	>= 9.0V <= 18.0V =RUN > 100ms P0A1F	3 seconds (300 fail/400 sample; 10 ms frequency)	Type A Trip 1
Hybrid Battery Pack Voltage Sense Circuit High	P0ABD	Out of range high	Battery Pack Voltage	> 430 V	12V System Voltage BPCM Power Mode Contactor closed timer No active DTCs:	>= 9.0V <= 18.0V =RUN > 100ms P0A1F	3 seconds (300 fail/400 sample; 10 ms frequency)	Type A Trip 1
Hybrid Battery Pack Voltage Sense Circuit Rationality	P0ABB	Rationality compares pack voltage sensor to sum of the block voltages	Sum of battery block voltages - Battery Pack voltage AND BPCM High Voltage Battery Pack Voltage Validity	> 50 V = VALID	12V System Voltage Pack Voltage sensor input BPCM Power Mode Contactor closed timer No active DTCs:	>= 9.0V <= 18.0V = VALID =RUN > 100ms P0A1F P0ABC P0ABD	7 seconds (70 fail/80 sample; 100ms frequency)	Type A Trip 1
Current sensor Circuit:								
Hybrid Battery Pack Current Sensor Circuit Low	P0AC1	Out of range low By convention, battery discharging corresponds to a positive current.	Current Sensed (High range) AND Current Sensed (Mid range) AND Current Sensed (Low range)	> 200 A > 52 A > 22 A	12V System Voltage No active DTCs:	>= 9.0V <= 18.0V P1A07 P0A1F	3 seconds (30fail/40 sample; 100 ms frequency)	Type A Trip 1
Hybrid Battery Pack Current Sensor Circuit High	P0AC2	Out of range high By convention, battery charging corresponds to a negative current.	Current Sensed (High range) AND Current Sensed (Mid range) AND Current Sensed (Low range)	< -200 A < -52 A < -22 A	12V System Voltage No active DTCs:	>= 9.0V <= 18.0V P1A07 P0A1F	3 seconds (30fail/40 sample; 100 ms frequency)	Type A Trip 1
Hybrid Battery Pack Current Sensor Circuit Rationality	P0AC0	Rationality checks sensor offset; rationalizes battery voltage	(Current Sensor Offset (High range)	> 5 A	12V System Voltage	>= 9.0V <= 18.0V	3 seconds	Type A Trip 1

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
					BPCM Power Mode	=RUN	(30 fail/40 sample; 100 ms frequency)		
					No active DTCs:	P0A1F			
Temperature Sensor 1 Circuit Rationality	P0A9C	Rationality compares temperature with the other 3 sensor values read	Temperature Input1 - Temperature Input2 AND Temperature Input1 - Temperature Input3 AND Temperature Input1 - Temperature Input4	> 15 °C > 15 °C > 15 °C	12V System Voltage BPCM Power Mode Temperature Sensor 1 Input No active DTCs:	>= 9.0V <= 18.0V =RUN = VALID P0A1F P0A9D P0A9E	9 seconds (90 fail/100 sample; 100ms frequency)	Type B Trips 2	
Temperature sensor2 Circuit:									
Temperature Sensor 2 Circuit Low	P0AC7	Out of range low	Temperature Input2 AND (Temperature Input1 OR Temperature Input3 OR Temperature Input4)	> 95 °C < 70 °C < 70 °C < 70 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	3 seconds (30 fail/40 sample; 100 ms frequency)	Type B Trips 2	
Temperature Sensor 2 Circuit High	P0AC8	Out of range high	Temperature Input2	< -45 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	3 seconds (30 fail/40 sample; 100 ms frequency)	Type B Trips 2	
Temperature Sensor 2 Circuit Rationality	P0AC6	Rationality compares temperature with the other 3 sensor values read	Temperature Input2 - Temperature Input1 AND Temperature Input2 - Temperature Input3 AND Temperature Input2 - Temperature Input4	> 15 °C > 15 °C > 15 °C	12V System Voltage BPCM Power Mode Temperature Sensor 2 Input No active DTCs:	>= 9.0V <= 18.0V =RUN = VALID P0A1F P0AC7 P0AC8	9 seconds (90 fail/100 sample; 100ms frequency)	Type B Trips 2	
Temperature sensor3 Circuit:									
Temperature Sensor 3 Circuit Low	P0ACC	Out of range low	Temperature Input3 AND	> 95 °C	12V System Voltage BPCM Power Mode	>= 9.0V <= 18.0V =RUN	3 seconds (30 fail/40 sample; 100 ms frequency)	Type B Trips 2	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
			(Temperature Input1 OR Temperature Input2 OR Temperature Input4)	< 70 °C < 70 °C < 70 °C	No active DTCs:	P0A1F			
Temperature Sensor 3 Circuit High	P0ACD	Out of range high	Temperature Input3	< -45 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	3 seconds (30 fail/40 sample; 100 ms frequency)	Type B Trips 2	
Temperature Sensor 3 Circuit Rationality	P0ACB	Rationality compares temperature with the other 3 sensor values read	Temperature Input3 - Temperature Input1 AND Temperature Input3 - Temperature Input2 AND Temperature Input3 - Temperature Input4	> 15 °C > 15 °C > 15 °C	12V System Voltage BPCM Power Mode Temperature Sensor 3 Input No active DTCs:	>= 9.0V <= 18.0V =RUN = VALID P0A1F P0ACC P0ACD	9 seconds (90 fail/100 sample; 100ms frequency)	Type B Trips 2	
Temperature sensor4 Circuit:									
Temperature Sensor 4 Circuit Low	P0AEA	Out of range low	Temperature Input4 AND (Temperature Input1 OR Temperature Input2 OR Temperature Input3)	> 95 °C < 70 °C < 70 °C < 70 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	3 seconds (30 fail/40 sample; 100 ms frequency)	Type B Trips 2	
Temperature Sensor 4 Circuit High	P0AEB	Out of range high	Temperature Input4	< -45 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	3 seconds (30 fail/40 sample; 100 ms frequency)	Type B Trips 2	
Temperature Sensor 4 Circuit Rationality	P0AE9	Rationality compares temperature with the other 3 sensor values read	Temperature Input4 - Temperature Input1 AND Temperature Input4 - Temperature Input2 AND Temperature Input4 - Temperature Input3	> 15 °C > 15 °C > 15 °C	12V System Voltage BPCM Power Mode Temperature Sensor 4 Input No active DTCs:	>= 9.0V <= 18.0V =RUN = VALID P0A1F P0AEA P0AE9	9 seconds (90 fail/100 sample; 100ms frequency)	Type B Trips 2	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Inlet Air Temperature sensor Circuit:								
Inlet Air Temperature Sensor Circuit Low	P0AAE	Out of range low	Temperature Sensor Inlet Air Input	> 95 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	3 seconds (30 fail/40 sample; 100 ms frequency)	Type B Trips 2
Inlet Air Temperature Sensor Circuit High	P0AAF	Out of range high	Temperature Sensor Inlet Air Input	< -45 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	3 seconds (30 fail/40 sample; 100 ms frequency)	Type B Trips 2
Inlet Air Temperature Sensor Circuit Rationality	P0AAD	Rationalizes that inlet air temperature should not be higher than the outlet temperature	Powerup Temperature Sensor Inlet Air Input - Powerup Temperature Sensor Outlet Air Input AND Powerup Temperature Sensor Outlet Air Input - Powerup Battery Max Module Temperature Pass Condition: Powerup Temperature Sensor Inlet Air Input - Powerup Temperature Sensor Outlet Air Input 	> 20 °C > 10 °C ≤ 20 °C	12V System Voltage BPCM Power Mode Fan Command Engine off time Powerup Temperature Sensor Outlet Air Input Battery Max Module Temperature Time since ignition on No active DTCs:	>= 9.0V <= 18.0V =RUN = Valid (less than 3 Module Temperature Sensors have associated circuit faults active) ≥ 15 sec P0AAE P0AAF P0AB2 P0AB3 P0AB4 P0A1F P2610 > 5 km/hr ≤ 10 °C	27 seconds Once at powerup (270 fail/300 sample; 100ms frequency)	Type B Trips 2
Outlet Air Temperature sensor Circuit:								
Outlet Air Temperature Sensor Circuit Low	P0AB3	Out of range low	Temperature Sensor Outlet Air Input AND (Temperature Input1 OR Temperature Input2	> 95 °C < 70 °C OR < 70 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	3 seconds (30 fail/40 sample; 100 ms frequency)	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			OR Temperature Input3 OR Temperature Input4)	< 70 °C < 70 °C				
Outlet Air Temperature Sensor Circuit High	P0AB4	Out of range high	Temperature Sensor Outlet Air Input	< -45 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	3 seconds (30 fail/40 sample; 100 ms frequency)	Type B Trips 2
Outlet Air Temperature Sensor Circuit Rationality	P0AB2	Rationalizes that the outlet air temperature should not be higher than the highest battery pack module temperature	Temperature Sensor Outlet Air Input - BPCM High Voltage Battery Pack Max Module Temperature	> 10 °C	12V System Voltage Fan Command BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V = ON =RUN P0A1F, P0A9C, P0A9D P0A9E, P0AB3, P0AB4 P0AC6, P0AC7, P0AC8 P0ACB, P0ACC, P0ACD P0AE9, P0AEA, P0AEB	9 seconds (90 fail/100 sample; 100ms frequency)	Type B Trips 2
Battery Cooling Fan:								
Fan Relay Welded	P0BC1		Fan control signal monitor voltage	>= 0.9 V	12V System voltage BPCM Power Mode Fan command No active DTCs:	>= 9.0 V <= 18.0 V =RUN = OFF P0A1F	1 sec (10fails / 20samples; 100msec freq.)	Type B Trips 2
Fan Unit Failure	P0A81	Checks Functionality of fan control	Fan control signal monitor voltage AND Fan command AND Fan speed] OR [Fan command AND	>= 2.3 V OR <= 0.5 V = ON >= 35 % for >=3 seconds = OFF	12V System voltage BPCM Power Mode No active DTCs:	>= 9.0 V <= 18.0 V =RUN P0A1F	5 sec (50fails / 50samples; 100msec freq.) 9 sec (90fails / 100samples; 100msec freq.)	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Fan control signal monitor voltage] OR Fan control signal monitor voltage OR Fan speed feedback signal OR [Fan command AND Fan speed feedback signal] OR [Fan command AND Fan speed feedback signal]	> 4.0 V AND < 7.0 V > 7.0 V > 9.0 V = OFF > 4.0 V AND < 7.0 V = ON < 0.15 V			3 sec (30fails / 40samples; 100msec freq.) 9 sec (90fails / 100samples; 100msec freq.) 3 sec (30fails / 40samples; 100msec freq.)	
Battery Cooling System Performance	P0C32		Maximum Battery Module Temperature	> Temperature as defined in table below: Inlet Temp vs. Max Module Temp C C -30 45 -20 45 -10 45 -5 45 0 46 5 48 10 49 15 50 20 52 25 54 30 56 35 58 40 61 45 65 50 70 60 80	12V System voltage	>= 9.0 V <= 18.0 V	120 sec (1200fails / 1200samples; 100msec freq.)	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Battery Max Module Temperature No active DTCs: Fan command	= Valid (less than 3 Module Temperature Sensors have associated circuit faults active) P0AAE, P0AAF, P0A1F = ON		
Current Sensor Voltage Supply:								
Current Sensor Voltage Supply	P1A07	Out of range	Current Sensor Supply Voltage OR Current Sensor Supply Voltage	< 4.8 V > 5.2 V	12V System Voltage No active DTCs:	>= 9.0V <= 18.0V P0A1F	0.8 sec (8 fail/10 sample; 100 ms frequency)	Type A 1 Trip
High Voltage Interlock Circuit:								
High Voltage Interlock Circuit Low	P1AE3	Out of range low	HVIL Current Output AND HVIL Current Output AND HVIL Current Input	> 5 mA < 18 mA < 5 mA	12V System Voltage BPCM Power Mode HVIL State No active DTCs:	>= 9.0V <= 18.0V = RUN = Asserted P0A1F	10 ms (1 fail/1 sample; 10 ms frequency)	Special Type "C" NO MIL
High Voltage Interlock Circuit High	P1AE4	Out of range high	HVIL Current Output AND HVIL Current Input	< 5 mA > 35 mA	12V System Voltage BPCM Power Mode HVIL State No active DTCs:	>= 9.0V <= 18.0V = RUN = Asserted P0A1F	10 ms (1 fail/1 sample; 10 ms frequency)	Special Type "C" NO MIL
High Voltage Interlock Circuit Open	P1AE2	Open	HVIL Current Output AND HVIL Current Input	< 5 mA < 5 mA	12V System Voltage BPCM Power Mode HVIL State No active DTCs:	>= 9.0V <= 18.0V = RUN = Asserted P0A1F	10 ms (1 fail/1 sample; 10 ms frequency)	Special Type "C" NO MIL
Pre-Charge Voltage :								
Pre-Charge too Fast	P0C77	HV bus = Open OR	([BPCM High Voltage pack Voltage AND Precharge Time] AND [BPCM High Voltage pack Voltage - Sum of battery block voltages AND Precharge Time]) OR	< 60V, =0ms =< 23V =<20ms	12V System Voltage BPCM Power Mode No active DTCs:	=> 9.0 V =< 18.0 V = RUN P0A1F	1times	Special Type "C" NO MIL

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Battery Module – Over Voltage	P1A4E	Voltage too high	Sum of battery block voltages OR Any Block Voltage N	> 408 V > 20.4 V	BPCM Power Mode 12V System Voltage Block voltage rationality Any voltages associated with these active DTC's are not used in determination of voltage too high	= RUN ≥ 9.0V ≤ 18.0V = Pass (at least 1block) P0B3D, P0B3E, P0B3C, P0B42, P0B43, P0B41, P0B47, P0B48, P0B46, P0B4C, P0B4D, P0B4B, P0B51, P0B52, P0B50, P0B56, P0B57, P0B55, P0B5B, P0B5C,P0B5A P0B60, P0B61, P0B5F P0B65, P0B66, P0B64 P0B6A, P0B6B, P0B69 P0B6F, P0B70, P0B6E P0B74, P0B75, P0B73 P0B79, P0B7A, P0B78 P0B7E, P0B7F, P0B7D P0B83, P0B84, P0B82 P0B88, P0B89, P0B87 P0B8D, P0B8E, P0B8C P0B92, P0B93, P0B91 P0B97, P0B98, P0B96 P0B9C, P0B9D, P0B9B P0A1F	4 seconds (40 fail/40 sample; 100 ms frequency) OR 2 seconds (20 fail/20 sample; 100 ms frequency)	Special Type "C" NO MIL
Battery Module – Under Voltage	P1A1F	Voltage too low	Sum of battery block voltages OR Any Block Voltage N	< 168 V < 8.4 V	BPCM Power Mode 12V System Voltage	= RUN ≥ 9.0V ≤ 18.0V	4 seconds (40 fail/40 sample; 100 ms frequency)	Special Type "C" NO MIL

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Block voltage rationality Any voltages associated with these active DTC's are not used in determination of voltage too low	= Pass (at least 1block) P0B3D, P0B3E, P0B3C, P0B42, P0B43, P0B4, P0B47, P0B48, P0B46, P0B4C, P0B4D, P0B4B, P0B51, P0B52, P0B50, P0B56, P0B57, P0B55 P0B5B, P0B5C, P0B5A P0B60, P0B61, P0B5F P0B65, P0B66, P0B64 P0B6A, P0B6B, P0B69 P0B6F, P0B70, P0B6E P0B74, P0B75, P0B73 P0B79, P0B7A, P0B78 P0B7E, P0B7F, P0B7D P0B83, P0B84, P0B82 P0B88, P0B89, P0B87 P0B8D, P0B8E, P0B8C P0B92, P0B93, P0B91 P0B97, P0B98, P0B96 P0B9C, P0B9D, P0B9B POA1F	OR 2 seconds (20 fail/20 sample; 100 ms frequency)	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Battery Module – resistance High EOL	P0A80	High Module Resistance	Max Block Resistance – Avg Block Resistance (Same block resistance should be the highest continuously.) OR Avg Block Resistance/3.16	> Resistance threshold as defined in table below; Bat. Temp. Vs Resistance C mOhm -10 141.33 -5 112.05 0 88.90 5 68.67 10 52.92 15 40.10 25 27.00 35 23.55 45 21.22 50 20.00	BPCM Power Mode System Voltage Battery current Charge samples in 60s Discharge samples in 60s <i>n</i> = # of measurements in 60s <i>X</i> = measured current Battery temperature # of calculated block resistances meeting above criteria	= RUN >= 9.0V ≤ 18.0V > -70 A < +100 A ≥ 15 > 64 A ² > -10°C < +50°C >= 5blocks	10 minutes (10 fail/10 sample; 100ms measurement frequency; 1 minute sample frequency)	Type A Trip 1
Battery – Over temperature	P1ABE	Battery temp. too high	Battery Temperature Rise Rate	> alpha[°C/20sec] Note1:- alpha is defined in the following table (e.g. Battery Temp – Inlet Air Temp >= 0°C): Fan mode – alpha _____ [°C/20sec] FS0: _____ 2.00 FS1: _____ 1.80 FS2: _____ 1.60 FS3: _____ 1.40 FS4: _____ 1.40 FS5: _____ 1.20 Note2: FS0: Duty Ratio from vehicle 0%~19% FS1: 20%~34% FS2: 35%~49% FS3: 50%~69% FS4: 70%~85% FS5: 86%~	BPCM Power Mode System Voltage No active DTC's:	= RUN >= 9.0V ≤ 18.0V P0AC1, P0AC2, P0AC0 P0A9D, P0A9E, P0A9C P0AC7, P0AC8, P0AC6 P0ACC, P0ACD, P0ACB P0AEA, P0AEB, C646P0AE9 P0A1F	Rise Rate 60sec (3 fail/3 sample; 20sec measurement frequency)	Special Type "C"

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			If 2 or more Battery temperatures meet the right conditions; If 1 Battery temperature meets the right condition:-	[BPCM High Voltage Battery Pack Max Module Temperature > 65deg.C 70 deg.C < [BPCM High Voltage Battery Pack Max Module Temperature <= 95 deg.C AND Time ≥ 5sec			Over Temp. 5sec (50 fail/50 sample; 100ms measurement frequency) Extreme Over- Temp. 5sec (50 fail/50 sample; 100ms measurement frequency)	
Controller Faults								
Controller – RAM Error	P1A05	Microcomputer detects RAM Failure	Read value does not match write value.	(Conduct a verify check by writing 4bytes pitch from the first digit accordingly. If the read value does not match write value when the test pattern of 0x55555555 and 0xA0000000 are written.)	BPCM Power Mode	= RUN	100ms	Type A Trip 1
Controller – ROM Error	P1A06	Microcomputer detects ROM Failure	Calculated CS of ROM and the already written CS in the GMHeader area is not the same.		BPCM Power Mode	= RUN	100ms	Type A Trip 1
Controller – EEPROM Error	P1A01	Error occur at mirror check during EEPROM downloading	(If any of following failures is detected by verifying check sum during EEPROM read at the BPCM start-up.) a) Calibration area b) Parameter area c) Diag area (status history) d) Diag area (X/Y counter)		BPCM Power Mode	= RUN	100ms	Type A Trip 1
Micro controller failure	P0A1F	Microcomputer detects watchdog timeout. Processor StackOverflow Program Processing Time-out Program Processing Time-out	Watchdog timer interruption occurred and the BPCM is reset. OR Usage of micro processor stack OR Previously activated DMA transmission incomplete OR 10msec transaction time OR	> 80% > 10ms (No waiting time available during 10ms process waiting time.)	BPCM Power Mode	= RUN	100ms 10 ms 10 ms 10 ms	Type A Trip 1

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		A/D Conversion Failure	((AD conversion interrupt does not activate the standard number of times in 10msecs AND AD conversion interrupt is not completed) OR AD conversion interrupt does not activate the standard number of times in 1secs)				10 ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
MCP A Phase Current Diagnostics:								
Drive Motor "A" Phase U-V-W Correlation	P0BFD	To detect electrical failure of phase current sensor.	Sum of 3 phase currents	> 75 A	Main Relay Wakeup Signal	Closed On	X: 7 cts Y: 10 cts R: 0.083 - 0.5 ms T: 0.58 - 3.50 ms	Type A Trip 1
Drive Motor "A" Phase U-V-W Current Sensor Overcurrent	P0C01	Fail Case 1: To detect fast, repeated 3 Phase over currents and to protect IGBT. Sets for fault occurrence rates of 50-100% Fail Case 2: To detect slow, intermittent 3 Phase over current and to protect IGBT. Sets for fault occurrence rates of 10-40%.* Note: Min fault time for slow loop at 40% is 20 fail counts in 47 samples, or 97.9ms. Any faster and fast loop in Case 1 sets first.	U, V, or W Phase current sensor	> 680 600 A	Wakeup Signal	On	X: 6 1 cts Y: 10 cts R: 2.08ms T: 10.4 2.08ms X: 20 4cts Y: 200-50 cts R: 2.08ms T: 97.9-8.32ms min* (see Note)	Type A Trip 1
Drive Motor "A" Phase U-V-W Circuit/Open	P0C05	Drive Motor "A" Missing Motor Current Checks for minimum current in each phase when rotor position is near that peak's phase axis. Each phase is checked individually as rotor turns.	Two Non-Peak Phase Sensors are BOTH AND THEN U, V, or W Phase current sensor Phase Axis Current	< 9 A (9 A) > ABS < ABS (9 A)	Wakeup Signal Inverter State Inverter Voltage Rotor Position Peak Phase Current	On RUN >35V -30 deg < Phase Axis < +30 deg >= 23 A	Z Task1 Loops = 4.2 msX: PLUS 201 cts Y: N/A R: 0.083 - 0.5 ms T: 16.7 - 101 ms 20.8 - 104.7 ms TOTAL	Type A Trip 1
Drive Motor "A" Phase U Current Sensor Circuit Low	P0BE7	Circuit Low monitor to detect the failure of U-phase current sensor circuit below valid range	U Phase current sensor output at highside	< -700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Type B Trips 2
Drive Motor "A" Phase U Current Sensor Circuit High	P0BE8	Circuit High monitor to detect the failure of U-phase current sensor circuit above valid range	U Phase current sensor output at highside	> 700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Type B Trips 2
Drive Motor "A" Phase U Current Sensor Offset Out-of Range	P0BE6	Offset Circuit monitor to detect the failure of U-phase offset current above valid range	U Phase offset current output at highside	>30 A	Wakeup Signal Power Stage P0BE7/P0BE8	On OPEN NOT ACTIVE	X: 100 cts Y: N/A R: 2.08ms T: 208ms	Type B Trips 2
Drive Motor "A" Phase V Current Sensor Circuit Low	P0BEB	Circuit Low monitor to detect the failure of V-phase current sensor circuit below valid range	V Phase current sensor output at highside	< -700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "A" Phase V Current Sensor Circuit High	P0BEC	Circuit High monitor to detect the failure of V-phase current sensor circuit above valid range	V Phase current sensor output current at highside	> 700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Type B Trips 2
Drive Motor "A" Phase V Current Sensor Offset Out-of Range	P0BEA	Offset Circuit monitor to detect the failure of U-phase offset current above valid range	V Phase offset current output at highside	>30 A	Wakeup Signal Power Stage P0BEB/P0BEC	On OPEN NOT ACTIVE	X: 100 cts Y: N/A R: 2.08ms T: 208ms	Type B Trips 2
Drive Motor "A" Phase W Current Sensor Circuit Low	P0BEF	Circuit Low monitor to detect the failure of W-phase current sensor circuit below valid range	W Phase current sensor output at highside	< -700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Type B Trips 2
Drive Motor "A" Phase W Current Sensor Circuit High	P0BF0	Circuit High monitor to detect the failure of W-phase current sensor circuit above valid range	W Phase current sensor output at highside	> 700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Type B Trips 2
Drive Motor "A" Phase W Current Sensor Offset Out-of Range	P0BEE	Offset Circuit monitor to detect the failure of U-phase offset current above valid range	W Phase offset current output at highside	>30 A	Wakeup Signal Power Stage P0BEF/P0BF0	On OPEN NOT ACTIVE	X: 100 cts Y: N/A R: 2.08ms T: 208ms	Type B Trips 2
MCP A IGBT Diagnostics								
Drive Motor "A" Inverter Performance	P0A78	Detects IGBT Desaturation Faults	Phase A, B, or C High or Low Side Devices	OVERDRIVEN (Status Fault Bit)	Wakeup Signal	On	X: 1 ct Y: N/A R: 2.08ms T: 2.08ms	Type A Trip 1
Drive Motor "A" Inverter Power Supply Circuit/Open	P0C0B	Detects IGBT Bias Faults	Phase A, B, or C Power Supply	FAILED (Status Fault Bit)	Inverter State Run/Crank Voltage OR Powertrain Relay Voltage	Initialization Complete > 9.5 Volts OR < 18 Volts	X: 1 ct Y: N/A R: 2.08ms T: 2.08ms	Type A Trip 1
MCP A High Voltage (HV) Diagnostics:								
Drive Motor "A" Hybrid Battery System Voltage High	P1AEE	To detect over voltage and to protect TPIM Vdc Circuit	HV Sensor voltage Average of first and third previous HV-readings	> 475V	WakeUp Signal	On	X: 5 cts Y: N/A R: 0.083 - 0.5 ms T: 0.42 - 2.50 ms	Type A Trip 1
Drive Motor "A" Control Module Hybrid Battery Voltage Sense Circuit Low Voltage	P1AE8	Circuit Low monitor to detect the failure of HV output voltage sensor circuit below valid range	HV Sensor Voltage	<0V	Inverter State	Initialization Complete	X: 50 cts Y: 100 cts R: 2.08ms T: 404-146ms	Type B Trips 2
Drive Motor "A" Control Module Hybrid Battery Voltage Sense Circuit High Voltage	P1AE9	Circuit High monitor to detect the failure of HV output voltage sensor circuit above valid range	HV Sensor Voltage	>564 500V	Inverter State	Initialization Complete	X: 50 cts Y: 100 cts R: 2.08ms T: 104ms	Type B Trips 2
Drive Motor "A" Control Module Hybrid Battery System Voltage	P1AEC	To check correlation of HV_MCP with HV_Midpack and HV_Battery Voltages.	ABS(MCP HV voltage - HV Battery voltage) OR AND	>= 34 V	Valid HV CAN Msg WakeUp Signal	TRUE ON	X: 18 cts Y: 30	Type A Trip 1

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			ABS(MCP HV voltage - MidPack voltage)	>= 90 V			cts R: 10.4ms T: 187ms	
Drive Motor "A" HV Interlock (HVIL) Break Detected	P1B05	To detect interlock circuit open.	HV Interlock Status Discrete Input	TRUE	WakeUp Signal HV CAN Msg Rx BPCM Sourcing MCP HVIL Status	On TRUE TRUE	200 250ms debounce X: 10 cts Y: 14 cts R: 10.4ms T: 104ms= 304-	Special Type C No MIL
Drive Motor "A" Control Module Hybrid Battery Voltage System Isolation Fault	P1AF0	Isolation Lost between Battery Pack and Chassis	Isolation Ratio (MidPack Voltage / HV Battery Voltage)	< 0.27 OR >1.80	No HV Clamp Fault or MidPack Sensor OOR Faults: P1AEE, P1AF4, and P1AF5 HV Sensor Voltage	NOT ACTIVE > 50V	X: 450 cts Y: 500 cts R: 10.4ms T: 4689ms	Special Type C No MIL
Drive Motor "A" Control Module Hybrid Battery Voltage Isolation Sensor Circuit Low	P1AF4	Circuit Low monitor to detect the failure of HV MidPack voltage sensor circuit below valid range	MidPack Voltage	<0V	Inverter State	Initialization Complete	X: 70 cts Y: 100 cts R: 10.4ms T: 729ms	Type B Trips 2
Drive Motor "A" Control Module Hybrid Battery Voltage Isolation Sensor Circuit High	P1AF5	Circuit High monitor to detect the failure of HV MidPack voltage sensor circuit above valid range	MidPack Voltage	>564 500V	Inverter State	Initialization Complete	X: 50 cts Y: 100 cts R: 10.4ms T: 521ms	Type B Trips 2
Motor A Temperature Sensor								
Drive Motor "A" Control Module Temperature Sensor Performance	P0A2B	Motor A Temperature Sensor In-Range Rationality Check	ABS(Motor Temp - PIM Temp Avg)	> 28 deg C	Ignition Off Time PIM Temp Average Motor Temp No PIM or Motor Temp OOR Faults: P0AEF, P0AF0, P0BD3, P0BD4, P0BDD, P0BDE, P0A2C and P0A2D.	>=360 min >=-40 deg C >=-40 deg C NOT ACTIVE	8336ms start delay plus A: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Type B Trips 2
Drive Motor "A" Control Module Temperature Sensor Circuit Out of Range High	P0A2D	To detect temperature sensor Out of Range high (voltage).	Motor Temperature	< -40 deg C (near 5V)	WakeUp Signal When malfunction present at start of trip: Cumulative Motor Warmup Time above Motor Warmup Torque Threshold	On >=1.5min >=ABS(20 Nm)	X: 900 cts Y: 1800cts R: 10.4ms T: 9378ms	Type B Trips 2
Drive Motor "A" Control Module Temperature Sensor Circuit Out of Range Low	P0A2C	To detect temperature sensor Out of Range low (voltage).	Motor Temperature	> 230 degC. (near 0V)	WakeUp Signal	On	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Type B Trips 2
Drive Motor "A" Over Temperature	P0A2F	To detect a sustained motor overtemperature condition	Motor Temperature initially exceeds fault threshold, and does not decrease below reset threshold	> 200 deg C initial fault >135 deg C reset	Motor Temperature No Perf Fault; P0A2B	IN RANGE NOT ACTIVE	X: 300 cts Y: 450 cts R: 10.4ms T: 3125ms	Type B Trips 2
CAN/SPI/SCI Bus Timeout								

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "A" Control Module Lost Communication With SPI Bus	P1AFC	To detect loss of communication on the SPI bus with the HCP module	SPI Receive Timeout flag # Timeout Counts	TRUE 7	Inverter State Run/Crank Voltage OR Powertrain Relav Voltage	Run > 9.5 Volts OR < 18 Volts	X: 97 241cts Y: N/A R:10.42ms T: 4049- 2510ms	Type A Trip 1
Drive Motor "A" Control Module Lost Communication With SCI Bus	P1AFD	To detect loss of communication on the SCI bus with Motor "B" Control Module SCI Diag Timeout	SCI_Rx_Timeout	TRUE	Wakeup Signal	On	X: 200 cts Y: 300 cts R: 10.4ms T: 2083ms	Type B Trips 2
Motor Control Processor Voltage Diagnostics								
Sensor Reference Voltage "A" Circuit Low	P0642	Detects Sensor Voltage (5V) below an acceptable threshold.	Scaled 5V Supply Voltage	< 4.80V	Wakeup Signal Run/Crank Voltage OR Powertrain Relay Voltage	On > 9.5 Volts OR < 18 Volts	X: 70 cts Y: 100 cts R: 10.4ms T: 729ms	Type A Trip 1
Sensor Reference Voltage "A" Circuit High	P0643	Detects Sensor Voltage (5V) above an acceptable threshold.	Scaled 5V Supply Voltage	> 5.20V	Wakeup Signal	On	X: 70 cts Y: 100 cts R: 10.4ms T: 729ms	Type A Trip 1
Sensor Power Supply "A" Circuit Low	P06B1	Detects Sensor Power Supply (15V) below an acceptable threshold.	Scaled 15V Supply Voltage	< 12.0V	Wakeup Signal	On	X: 35 cts Y: 150 cts R: 10.4ms T: 365ms	Type B Trips 2
Sensor Power Supply "A" Circuit High	P06B2	Detects Sensor Power Supply (15V) above an acceptable threshold.	Scaled 15V Supply Voltage	> 18.0V	Wakeup Signal	On	X: 100 cts Y: 150 cts R: 10.4ms T: 1042ms	Type B Trips 2
Control Module Power Supply "A" Circuit Low	P1ADE	Detects Control Module Power Supply (12V) below an acceptable threshold.	Scaled 12V Supply Voltage	< 7.7V	Wakeup Signal	On	X: 35 cts Y: 50 cts R: 10.4ms T: 365ms	Special Type C
MCP A Controller Faults								
Drive Motor "A" Control Module Internal Performance	P0A1B	ALU calculation error, Register Overflow, or Watchdog Timer Fault	ALU HWIO Fault OR Stack Address Overrun OR EEPROM not completely written at Powerdown (Watchdog timer fault)	TRUE TRUE	For all: Wakeup Signal For Watchdog Fault Only: No power-on reset, stack overflow, or low 12V interrupt conditions	On -----	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	Type A Trip 1
Drive Motor "A" Control Module Random Access Memory (RAM)	P1A50	To detect an error in the MCP A RAM write area.	RAM check value	Outside RAM Address Range	Wakeup Signal	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	Type A Trip 1
Drive Motor "A" Control Module Read Only Memory (ROM)	P1A51	To detect an error in the MCP A ROM using a checksum calculation	FlashCellError	TRUE	Wakeup Signal	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	Type A Trip 1

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "A" Control Module EEPROM Error	P1ADC	Detects mismatch between Flash and EEPROM Power Off Levels	EEPromCellStatus	TRUE	Wakeup Signal	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	Type A Trip 1
Drive Motor "A" Control Module Programmable Logic Device Not Programmed	P1AFA	Detects if PLD was not successfully programmed during initialization	PLDFault	TRUE	Wakeup Signal	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	Type A Trip 1
MCP A Not Programmed								
Drive Motor "A" Control Module Not Programmed	P1A4F	Drive Motor "A" Control Module Programmed with Test Code, or Motor B calibration (via Cal ID)	Calibration contains Test code identifier or Motor B Identifier	TRUE		Always	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	Type A Trip 1
Motor A Inverter Temperature Sensors								
Drive Motor Inverter Temperature Sensor A Circuit Range/Performance	P0AEE	Phase U Temperature Sensor In-Range Rationality Check	ABS(PIM Temp A - PIM Temp Avg)	>15 deg C	Ignition Off Time	>=360 min	8336ms start delay plus X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Type B Trips 2
					PIM Temp Average	>=-40 deg C		
					Motor Temp	>=-40 deg C		
Drive Motor Inverter Temperature Sensor A Circuit High	P0AF0	To detect inverter Phase U temperature sensor Out of Range high (voltage).	PIM Temp A Temperature	< -40 deg C (near 5V)	Wakeup Signal	ON	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Type B Trips 2
Drive Motor Inverter Temperature Sensor A Circuit Low	P0AEF	To detect inverter Phase U temperature sensor Out of Range low (voltage).	PIM Temp A Temperature	> 125 degC (near 0V)	WakeUp Signal	On	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Type B Trips 2
Drive Motor Inverter Temperature Sensor C Circuit Range/Performance	P0BD2	Phase V W Temperature Sensor In-Range Rationality Check	ABS(PIM Temp B - PIM Temp Avg)	>15 deg C	Ignition Off Time	>=360 min	8336ms start delay plus X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Type B Trips 2
					PIM Temp Average	>=-40 deg C		
					Motor Temp	>=-40 deg C		
Drive Motor Inverter Temperature Sensor C Circuit High	P0BD4	To detect inverter Phase V W temperature sensor Out of Range high (voltage).	PIM Temp B Temperature	< -40 deg C (near 5V)	Wakeup Signal	ON		Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					When malfunction present at start of trip: Cumulative Inverter Warmup Time above Inverter Warmup Torque Threshold	>=1.5min >=ABS(20 Nm)	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	
Drive Motor Inverter Temperature Sensor C Circuit Low	P0BD3	To detect inverter Phase V temperature sensor Out of Range low (voltage).	PIM Temp B Temperature	> 125 degC (near 0V)	WakeUp Signal	On	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Type B Trips 2
Drive Motor Inverter Temperature Sensor E Circuit Range/Performance	P0BDC	Phase W Temperature Sensor In-Range Rationality Check	ABS(PIM Temp C - PIM Temp Avg)	>15 deg C	Ignition Off Time PIM Temp Average Motor Temp No PIM or Motor Temp OOR Faults; P0AEF, P0AF0, P0BD3, P0BD4, P0BDD, P0BDE, P0A2C and P0A2D.	>=360 min >=-40 deg C >=-40 deg C NOT ACTIVE	8336ms start delay plus X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Type B Trips 2
Drive Motor Inverter Temperature Sensor E Circuit High	P0BDE	To detect inverter Phase W temperature sensor Out of Range high (voltage).	PIM Temp C Temperature	< -40 deg C (near 5V)	WakeUp Signal When malfunction present at start of trip: Cumulative Inverter Warmup Time above Inverter Warmup Torque Threshold	ON >=1.5min >=ABS(20 Nm)	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Type B Trips 2
Drive Motor Inverter Temperature Sensor E Circuit Low	P0BDD	To detect inverter Phase W temperature sensor Out of Range low (voltage).	PIM Temp C Temperature	> 125 degC (near 0V)	WakeUp Signal	On	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Type B Trips 2
Drive Motor "A" Inverter Phase U Over Temperature	P0C11	To detect an in-range overtemperature condition that can potentially damage inverter	PIM A Temperature exceeds initial fault threshold, and does not decrease below reset threshold	> 91 deg C initial fault >85 deg C reset	PIM Temperature No Perf Fault; P0AEE P0BDC	IN RANGE NOT ACTIVE	X: 500 cts Y: 650 cts R: 10.4ms T: 5208ms	Type B Trips 2
Drive Motor "A" Inverter Phase V Over Temperature	P0C12	To detect an in-range overtemperature condition that can potentially damage inverter	PIM B C Temperature exceeds initial fault threshold, and does not decrease below reset threshold	> 91 deg C initial fault >85 deg C reset	PIM Temperature No Perf Fault; P0BD2	IN RANGE NOT ACTIVE	X: 500 cts Y: 650 cts R: 10.4ms T: 5208ms	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "A" Inverter Phase W Over Temperature	P0C13	To detect an in-range overtemperature condition that can potentially damage inverter	PIM C B Temperature exceeds initial fault threshold, and does not decrease below reset threshold	> 91 deg C initial fault >85 deg C reset	PIM Temperature No Perf Fault; P0BDC	IN RANGE NOT ACTIVE	X: 500 cts Y: 650 cts R: 10.4ms T: 5208ms	Type B Trips 2
Motor A Resolver Sensors - Discrete								
Drive Motor "A" Position Sensor Circuit	P0A3F	To detect Loss of Signal or converter error (line open, short) in the Motor Resolver circuit	Sin or Cos Signal	<2.3V	Resolver Initialization Delay Run/Crank Voltage OR Powertrain Relay Voltage	500ms > 9.5 Volts OR < 18 Volts	X: 140 cts Y: 165 cts R: 0.083 - 0.5 ms T: 11.62 - 70.0 ms	Type A Trip 1
Drive Motor "A" Position Sensor Circuit Range/Performance	P0A40	To detect a Degradation of Signal fault in the angle data read by the Motor Resolver circuit.	Sin or Cos Signal	>4.0V	Resolver Initialization Delay	500ms	X: 140 cts Y: 165 cts R: 0.083 - 0.5 ms T: 11.62 - 70.0 ms	Type A Trip 1
Drive Motor "A" Position Sensor Circuit Loss of Tracking	P1B03	To detect a Loss of Tracking fault in the Motor Resolver circuit.	Internal Tracking Error	> 5 deg	Resolver Initialization Delay	500ms	X: 140 cts Y: 165 cts R: 0.083 - 0.5 ms T: 11.62 - 70.0 ms	Type A Trip 1
Drive Motor "A" Position Sensor Circuit Overspeed	P1B0D	To detect when Motor A has exceeded operational maximum speed	ABS(Motor speed) initially AND then ABS(Motor Speed)	>11500 rpm >10000 rpm	Wakeup Signal	On	X: 10 cts Y: 15 cts R: 10.4ms T: 104ms	Type A Trip 1
Drive Motor "A" Position Sensor Not Learned	P0C17	To detect an unvalidated Resolver Offset Learn Value and No Stored Previously Valid Value	Offset Learn DIDN'T complete because: ABS(Motor RPM Speed) OR: Filtered DC Voltage AND OR ALL Phase Curr Max-Min Delta For Time Period OR: Offset Learn Completes AND ABS(Offset Correction Angle)	>50 rpm < 192 V <15 A > 5ms 20% of 0.3s > 25 deg	Key Off Wakeup Signal ABS(Motor RPM Speed) Valid Stored Offset	TRUE ON < 20 rpm FALSE	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	Type B Trips 2
Motor A Resolver Sensors - Circuit								
Drive Motor "A" Position Sensor Circuit "A" Low	P0C52	To detect Resolver Circuit S1/3 Out of Range Low	Resolver S13 Circuit Reference Voltage	< 0.5 v	Wakeup Signal	On	X: 50 cts Y: 80 cts R: 10.4ms T: 521ms	Type A Trip 1
Drive Motor "A" Position Sensor Circuit "A" High	P0C53	To detect Resolver Circuit S1/3 Out of Range High	Resolver S13 Circuit Reference Voltage	> 3.0 v	Wakeup Signal	On	X: 20 cts Y: 30 cts R: 10.4ms T: 208ms	Type A Trip 1
Drive Motor "A" Position Sensor Circuit "B" Low	P0C5C	To detect Resolver Circuit S2/4 Out of Range Low	Resolver S24 Circuit Reference Voltage	< 0.5 v	Wakeup Signal	On	X: 50 cts Y: 80 cts R: 10.4ms T: 521ms	Type A Trip 1

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "A" Position Sensor Circuit "B" High	P0C5D	To detect Resolver Circuit S2/4 Out of Range High	Resolver S24 Circuit Reference Voltage	> 3.0 v	Wakeup Signal	On	X: 20 cts Y: 30 cts R: 10.4ms T: 208ms	Type A Trip 1
Motor A Crank Pulse Faults								
Drive Motor "A" Control Module Crankshaft Position Sensor Circuit	P1AC6	Detects Lack of Response from 58X Crank Sensor	Crank Synchronization	NO ACTIVITY	Wakeup Signal	On	X: 200 cts Y: 300 cts R: 10.4ms T: 2083ms	Type B Trips 2
Drive Motor "A" Control Module Crankshaft Position Sensor Performance	P1AC7	Detects Invalid 58X Crank Sensor Signal	CPC Signal	NOT VALID	Engine Movment Detected OR Edges Seen	> 5rpm > 0	X: 700 cts Y: 800 cts R: 10.4ms T: 7294ms	Type B Trips 2
Torque Security Faults								
Drive Motor A Torque Delivered Performance	P0C19	Fail Case 1: Test of three phase current correlation	The sum of three phase currents is higher than current threshold during more than threshold time	Current threshold: 75 A Threshold time: 100ms	Ignition switch	in crank or run	48 fail counts out of 60 sample counts Executes in a 2.08ms loop Detects in 100ms	Type A Trip 1
		Fail Case 2: Static Variable test	Verify the calculated check sum (CRC) is not equal to previous saved check sum (CRC)		Ignition switch	in crank or run	2.08 ms loop	
		Fail Case 3: Monitor torque command by checking the SPI communication status	SPI rolling count fails to update more than threshold time	Threshold time: 90msec	Ignition switch	in crank or run	45 fail counts out of 50 sample counts Detects in 90ms 2.08 ms loop	
		Fail Case 4: Check the DC current flow direction with respect to torque command/motor speed	DC current fails to show correct sign and magnitude more than threshold time	Current threshold: 10 A to 80 A (function of motor speed.); Time threshold: 200 ms	MCP power stage	Active	96 fail counts out of 120 sample counts Detects in 200ms 2.08 ms loop	
Drive Motor A Torque Delivered Performance	P0C19	Fail Case 5: Check the secured motor torque achieved error with respect to torque command	The absolute error between calculated motor torque achieved and motor torque command is higher than torque threshold during more than threshold time	Torque threshold: 86.18 Nm Time threshold: 200 ms	MCP power stage	Active	96 fail counts out of 120 sample counts Detects in 200ms 2.08 ms loop	Type A Trip 1
		Fail Case 6: Check the Task1 reported motor torque achieved vs. torque command	The absolute error between Task1 reported motor torque achieved and motor torque command is higher than torque threshold during more than threshold time	Torque threshold: 86.18 Nm Time threshold: 200 ms	Ignition switch	in crank or run	96 fail counts out of 120 sample counts Detects in 200ms 2.08 ms loop	
		Fail Case 7: Check the secured	The absolute error between	Torque threshold:	MCP power stage	Motor 3-phase short	96 fail counts out	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		calculated three phase short motor torque vs. the reported task1 motor torque	secured calculated three phase short torque vs. Task1 reported motor torque is higher than torque threshold during more than threshold time	52 Nm Time threshold: 200 ms			of 120 sample counts Detects in 200ms 2.08 ms loop	
Drive Motor A Torque Delivered Performance	P0C19	Fail Case 8: Check the secured calculated three phase open motor torque vs. the reported task1 motor torque	The absolute error between secured calculated three phase open torque vs. Task1 reported motor torque is higher than torque threshold during more than threshold time	Torque threshold: 52 Nm Time threshold: 200 ms	MCP power stage	Motor 3-phase open	96 fail counts out of 120 sample counts Detects in 200ms 2.08 ms loop	Type A Trip 1
Drive Motor A Control Module Programmable Logic Device Security Code	P1AFB	Fail Case 1: Detect the validity of the Seeds sent by PLD	The number of identical seed in consecutive loops sent from PLD is higher than threshold	191 counts	Ignition switch	in crank or run	191 fail counts out of 250 sample counts 0.083 ms to 0.5 ms (function of motor speed.);	Type A Trip 1
		Fail Case 2: Detect the validity of response by PLD when MCP sends repeated bad keys to PLD	The number of bad response from PLD when MCP is sending bad key is higher than threshold	191 counts	Ignition switch	in crank or run	191 fail counts out of 5000 sample counts 0.083 ms to 0.5 ms (function of motor speed.);	
Drive Motor "A" Control Module Shutdown Performance	P1AF8	Detect the duration MCP used to conduct shut down path verification after key-on initialization.	The number of Task 2 loops used in shut down path verification is higher than threshold	40 counts	Initialization	ON	40 fail counts out of 50 sample counts 10 ms loop	Type A Trip 1
Communication								
Lost Communication With Battery Pack Control Module	U1875	Detects that CAN serial data communication has been lost with the BPCM on Bus A	Missed BPCM Messages		Ignition switch	Run	X: 12 cts Y: 12 cts R: 10.4ms plus 1 sec cntdwn timer before each cnt incr= T: 12.17 sec total	Type B Trips 2
Lost Communication With ECM/PCM	U1876	Detects that CAN serial data communication has been lost with the ECM	Missed ECM Messages		Ignition switch	Run	X: 12 cts Y: 12 cts R: 10.4ms plus 1 sec cntdwn timer before each cnt incr= T: 12.17 sec total	Type B Trips 2

APPENDIX

Inverter Temperature Sensor Mapping Grid				SAE
Drive Motor A	Phase U	PIM_A	PIM_0	A
	Phase V	PIM_B C	PIM_2	C E
	Phase W	PIM_C B	PIM_1	E C
Drive Motor B	Phase U	PIM_A B	PIM_1	B D
	Phase V	PIM_B C	PIM_2	D F
	Phase W	PIM_C A	PIM_0	F B

Arithmetic Logic
 ALU= Unit
 Batt Pack Ctrl
 BPCM= Module Hardware
 Input/Output
 HWIO= put insulateu Gate
 Bipolar Transistors
 (Phase Current Controller)
 IGBT= rs)
 Out of
 OOR= Range

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
MCP B Phase Current Diagnostics:								
Drive Motor "B" Phase U-V-W Correlation	P0BFE	To detect electrical failure of phase current sensor.	Sum of 3 phase currents	> 75 A	Main Relay Wakeup Signal	Closed On	X: 7 cts Y: 10 cts R: 0.083 - 0.5 ms	Type A Trip 1
Drive Motor "B" Phase U-V-W Current Sensor Overcurrent	P0C04	Fail Case 1: To detect fast, repeated 3 Phase over currents and to protect IGBT. Sets for fault occurrence rates of 50-100%	U, V, or W Phase current sensor	> 680 680 600A	Wakeup Signal	On	X: 5 1 cts Y: 10 cts R: 2.08ms T: 40- 42 08ms	Type A Trip 1
		Fail Case 2: To detect slow, intermittent 3 Phase over current and to protect IGBT. Sets for fault occurrence rates of 10-40%.* Note: Min fault time for slow loop at 40% is 20 fail counts in 47 samples, or 97.9ms. Any faster and fast loop in Case 1 sets first.					X: 20 4 cts Y: 200 50 cts R: 2.08ms T: 97.9 8.32 ms min* (see Note)	
Drive Motor "B" Phase U-V-W Circuit/Open	P0C08	Drive Motor "B" Missing Motor Current Checks for minimum current in each phase when rotor position is near that peak's phase axis. Each phase is checked individually as rotor turns.	U, V, or W Phase current sensor Two Non-Peak Phase Sensors are BOTH AND THEN	> ABS (9 A)	Wakeup Signal Inverter State Inverter Voltage	On RUN > 35 V	2 Task1 Loops = 4.2 ms PLUS	Type A Trip 1
			Phase Axis Current	< ABS (9 A)	Rotor Position Peak Phase Current	-30 deg < Phase Axis < +30 deg >= 23 A	X: 201 cts Y: N/A R: 0.083 - 0.5 ms T: 16.7 - 101 ms 20.8 - 104.7 ms TOTAL	
Drive Motor "B" Phase U Current Sensor Circuit Low	P0BF3	Circuit Low monitor to detect the failure of U-phase current sensor circuit below valid range	U Phase current sensor output at highside	< -700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Type B Trips 2
Drive Motor "B" Phase U Current Sensor Circuit High	P0BF4	Circuit High monitor to detect the failure of U-phase current sensor circuit above valid range	U Phase current sensor output at highside	> 700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Type B Trips 2
Drive Motor "B" Phase U Current Sensor Offset Out-of Range	P0BF2	Offset Circuit monitor to detect the failure of U-phase offset current above valid range	U Phase offset current output at highside	>30 A	Wakeup Signal Power Stage P0BF3/P0BF4	On OPEN NOT ACTIVE	X: 100 cts Y: N/A R: 2.08ms T: 208ms	Type B Trips 2
Drive Motor "B" Phase V Current Sensor Circuit Low	P0BF7	Circuit Low monitor to detect the failure of V-phase current sensor circuit below valid range	V Phase current sensor output at highside	< -700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "B" Phase V Current Sensor Circuit High	P0BF8	Circuit High monitor to detect the failure of V-phase current sensor circuit above valid range	V Phase current sensor output current at highside	> 700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Type B Trips 2
Drive Motor "B" Phase V Current Sensor Offset Out-of Range	P0BF6	Offset Circuit monitor to detect the failure of U-phase offset current above valid range	U Phase offset current output at highside	>30 A	Wakeup Signal Power Stage P0BF7/P0BF8	On OPEN NOT ACTIVE	X: 100 cts Y: N/A R: 2.08ms T: 208ms	Type B Trips 2
Drive Motor "B" Phase W Current Sensor Circuit Low	P0BFB	Circuit Low monitor to detect the failure of W-phase current sensor circuit below valid range	W Phase current sensor output at highside	< -700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Type B Trips 2
Drive Motor "B" Phase W Current Sensor Circuit High	P0BFC	Circuit High monitor to detect the failure of W-phase current sensor circuit above valid range	W Phase current sensor output at highside	> 700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Type B Trips 2
Drive Motor "B" Phase W Current Sensor Offset Out-of Range	P0BFA	Offset Circuit monitor to detect the failure of U-phase offset current above valid range	U Phase offset current output at highside	>30 A	Wakeup Signal Power Stage P0BFB/P0BFC	On OPEN NOT ACTIVE	X: 100 cts Y: N/A R: 2.08ms T: 208ms	Type B Trips 2
MCP B IGBT Diagnostics								
Drive Motor "B" Inverter Performance	P0A79	Detects IGBT Desaturation Faults	Phase A, B, or C High or Low Side Devices	OVERDRIVEN (Status Fault Bit)	Wakeup Signal	On	X: 1 ct Y: N/A R: 2.08ms T: 2.08ms	Type A Trip 1
Drive Motor "B" Inverter Power Supply Circuit/Open	P0C0E	Detects IGBT Bias Faults	Phase A, B , or C Power Supply	FAILED (Status Fault Bit)	Inverter State Run/Crank Voltage OR Powertrain Relay Voltage	Initialization Complete > 9.5 Volts OR < 18 Volts	X: 1 ct Y: N/A R: 2.08ms T: 2.08ms	Type A Trip 1
MCP B High Voltage (HV) Diagnostics:								
Drive Motor "B" Hybrid Battery System Voltage High	P1AEF	To detect over voltage and to protect TPIM Vdc Circuit	HV Sensor Voltage	> 475V	WakeUp Signal	On	X: 5 cts Y: N/A R: 0.083 - 0.5 ms T: 0.42 - 2.50 ms	Type A Trip 1
Drive Motor "B" Control Module Hybrid Battery Voltage Sense Circuit Low Voltage	P1AEA	Circuit Low monitor to detect the failure of HV output voltage sensor circuit below valid range	HV Sensor Voltage	<0V	Inverter State	Initialization Complete	X: 50 70 cts Y: 100 cts R: 2.08ms T: 404 146 ms	Type B Trips 2
Drive Motor "B" Control Module Hybrid Battery Voltage Sense Circuit High Voltage	P1AEB	Circuit High monitor to detect the failure of HV output voltage sensor circuit above valid range	HV Sensor Voltage	>564 500V	Inverter State	Initialization Complete	X: 50 cts Y: 100 cts R: 2.08ms T: 104ms	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
90	P1AED	To check correlation of HV_MCP with HV_Midpack and HV_Battery Voltages.	ABS(MCP HV voltage - HV Battery voltage) OR AND ABS(MCP HV voltage - MidPack voltage)	>= 34 V >= 90 V	WakeUp signal	ON	X: 18 cts Y: 30 cts R: 10.4ms T: 187ms	Type A 1 Trip
Drive Motor "B" HV Interlock (HVIL) Break Detected	P1B06	To detect interlock circuit open.	HV Interlock Status Discrete Input	TRUE	WakeUp Signal HV CAN Msg Rx BPCM Sourcing MCP HVIL Status	On TRUE TRUE	250ms + X: 10 cts Y: 14 cts R: 10.4ms	Special Type C No Mil
Drive Motor "B" Control Module Hybrid Battery Voltage System Isolation Fault	P1AF2	Isolation Lost between Battery Pack and Chassis	Isolation Ratio (MidPack Voltage / HV Battery Voltage)	< 0.27 OR >1.80	No HV Clamp Fault or MidPack Sensor OOR Faults; P1AEF, P1AF6, and P1AF7 HV Sensor Voltage	NOT ACTIVE > 50V	X: 450 cts Y: 500 cts R: 10.4ms T: 4689ms	Special Type C No Mil
Drive Motor "B" Control Module Hybrid Battery Voltage Isolation Sensor Circuit Low	P1AF6	Circuit Low monitor to detect the failure of HV MidPack voltage sensor circuit below valid range	MidPack Voltage	<0V	Inverter State	Initialization Complete	X: 70 cts Y: 100 cts R: 10.4ms T: 729ms	Type B 2 Trips
Drive Motor "B" Control Module Hybrid Battery Voltage Isolation Sensor Circuit High	P1AF7	Circuit High monitor to detect the failure of HV MidPack voltage sensor circuit above valid range	MidPack Voltage	>564 500V	Inverter State	Initialization Complete	X: 50 cts Y: 100 cts R: 10.4ms T: 521ms	Type B 2 Trips
Motor B Temperature Sensor								
Drive Motor "B" Control Module Temperature Sensor Performance	P0A31	Motor B Temperature Sensor In-Range Rationality Check	ABS(Motor Temp - PIM Temp Avg)	> 28deg C	Ignition Off Time PIM Temp Average Motor Temp No PIM or Motor Temp OOR Faults; P0AF4, P0AF5, P0BD8, P0BD9, P0BE2, P0BE3, P0A32 and P0A33.	>=360 min >=-40 deg C >=-40 deg C NOT ACTIVE	8336ms start delay plus X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Type B 2 Trips
Drive Motor "B" Control Module Temperature Sensor Circuit Out of Range High	P0A33	To detect temperature sensor Out of Range high (voltage).	Motor Temperature	< -40 deg C (near 5V)	WakeUp Signal When malfunction present at start of trip: Cumulative Motor Warmup Time above Motor Warmup Torque Threshold	On >=1.5min >=ABS(20 Nm)	X: 900 cts Y: 1800cts R: 10.4ms T: 9378ms	Type B 2 Trips
Drive Motor "B" Control Module Temperature Sensor Circuit Out of Range Low	P0A32	To detect temperature sensor Out of Range low (voltage).	Motor Temperature	> 230 degC (near 0V)	WakeUp Signal	On	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Type B 2 Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "B" Over Temperature	P0A35	To detect a sustained motor overtemperature condition	Motor Temperature initially exceeds fault threshold, and does not decrease below reset threshold	> 200 deg C initial fault >135 deg C reset	Motor Temperature No Perf Fault; P0A31	IN RANGE NOT ACTIVE	X: 300 cts Y: 450 cts R: 10.4ms T: 3125ms	Type B Trips 2
CAN/SPI /SCI Bus Timeout								
Drive Motor "B" Control Module Lost Communication With SPI Bus	P1B02	To detect loss of communication on the SPI bus with the HCP module	SPI Receive Timeout flag # Timeout Counts	TRUE 7	Inverter State Run/Crank Voltage OR Powertrain Relay Voltage	Run > 9.5 Volts OR < 18 Volts	X: 97 241 cts Y: N/A R: 10.42ms T: 4040 2510ms	Type A Trip 1
Motor Control Processor Voltage Diagnostics								
Sensor Reference Voltage "B" Circuit Low	P0652	Detects Sensor Voltage (5V) below an acceptable threshold.	Scaled 5V Supply Voltage	< 4.80V	Wakeup Signal Run/Crank Voltage OR Powertrain Relay Voltage	On > 9.5 Volts OR < 18 Volts	X: 70 cts Y: 100 cts R: 10.4ms T: 729ms	Type A Trip 1
Sensor Reference Voltage "B" Circuit High	P0653	Detects Sensor Voltage (5V) above an acceptable threshold.	Scaled 5V Supply Voltage	> 5.20V	Wakeup Signal	On	X: 70 cts Y: 100 cts R: 10.4ms T: 729ms	Type A Trip 1
Sensor Power Supply "B" Circuit Low	P06B4	Detects Sensor Power Supply (15V) below an acceptable threshold.	Scaled 15V Supply Voltage	< 12.0V	Wakeup Signal	On	X: 35 cts Y: 150 cts R: 10.4ms T: 365ms	Type B Trips 2
Sensor Power Supply "B" Circuit High	P06B5	Detects Sensor Power Supply (15V) above an acceptable threshold.	Scaled 15V Supply Voltage	> 18.0V	Wakeup Signal	On	X: 100 cts Y: 150 cts R: 10.4ms T: 1042ms	Type B Trips 2
Control Module Power Supply "B" Circuit Low	P1AE0	Detects Control Module Power Supply (12V) below an acceptable threshold.	Scaled 12V Supply Voltage	< 7.7V	Wakeup Signal	On	X: 35 cts Y: 50 cts R: 10.4ms T: 365ms	Special Type C
MCP B Controller Faults								
Drive Motor "A" Control Module Internal Performance	P0A1C	ALU calculation error, Register Overflow, or Watchdog Timer Fault	ALU HWIO Fault OR Stack Address Overrun OR EEPROM not completely written at Powerdown (Watchdog timer fault)	TRUE TRUE	For all: Wakeup Signal For Watchdog Fault Only: No power-on reset, stack overflow, or low 12V interrupt conditions	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	Type A Trip 1
Drive Motor "B" Control Module Random Access Memory (RAM)	P1A53	To detect an error in the MCP B RAM write area.	RAM check value	Outside RAM Address Range	Wakeup Signal	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	Type A Trip 1

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "B" Control Module Read Only Memory (ROM)	P1A54	To detect an error in the MCP B ROM using a checksum calculation	FlashCellError	TRUE	Wakeup Signal	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	Type A 1 Trip
Drive Motor "B" Control Module EEPROM Error	P1ADD	Detects mismatch between Flash and EEPROM Power Off Levels	EEpromCellStatus	TRUE	Wakeup Signal	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	Type A 1 Trip
MCP B Not Programmed								
Drive Motor "B" Control Module Not Programmed	P1A52	Drive Motor "B" Control Module Programmed with Test Code, or Motor A calibration (via Cal ID)	Calibration contains Test code identifier or Motor A Identifier	TRUE		Always	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	Type A 1 Trip
Motor B Inverter Temperature Sensors								
Drive Motor Inverter Temperature Sensor B Circuit Range/Performance	P0AF3	Phase U W Temperature Sensor In-Range Rationality Check	ABS(PIM Temp A - PIM Temp Avg)	>15 deg C	Ignition Off Time	>=360 min	8336ms start delay plus X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Type B 2 Trips
					PIM Temp Average	>=-40 deg C		
					Motor Temp	>=-40 deg C		
					No PIM or Motor Temp OOR Faults; P0AF4, P0AF5, P0BD8, P0BD9, P0BE2, P0BE3, P0A32 and P0A33.	NOT ACTIVE		
Drive Motor Inverter Temperature Sensor B Circuit High	P0AF5	To detect inverter Phase U W temperature sensor Out of Range high (voltage).	PIM Temp A Temperature	< -40 deg C (near 5V)	Wakeup Signal	ON	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Type B 2 Trips
					When malfunction present at start of trip: Cumulative Inverter Warmup Time	>=1.5min		
					above Inverter Warmup Torque Threshold	>=ABS(20 Nm)		
Drive Motor Inverter Temperature Sensor B Circuit Low	P0AF4	To detect inverter Phase U W temperature sensor Out of Range low (voltage).	PIM Temp A Temperature	> 125 degC (near 0V)	WakeUp Signal	On	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Type B 2 Trips
Drive Motor Inverter Temperature Sensor D Circuit Range/Performance	P0BD7	Phase V U Temperature Sensor In-Range Rationality Check	ABS(PIM Temp B - PIM Temp Avg)	>15 deg C	Ignition Off Time	>=360 min	8336ms start delay plus	Type B 2 Trips
					PIM Temp Average	>=-40 deg C		
					Motor Temp	>=-40 deg C		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					No PIM or Motor Temp OOR Faults; P0AF4, P0AF5, P0BD8, P0BD9, P0BE2, P0BD3, P0A32 or P0A33.	NOT ACTIVE	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	
Drive Motor Inverter Temperature Sensor D Circuit High	P0BD9	To detect inverter Phase U temperature sensor Out of Range high (voltage).	PIM Temp B Temperature	< -40 deg C (near 5V)	Wakeup Signal When malfunction present at start of trip: Cumulative Inverter Warmup Time above Inverter Warmup Torque Threshold	ON =>1.5min =>ABS(20 Nm)	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Type B Trips 2
Drive Motor Inverter Temperature Sensor D Circuit Low	P0BD8	To detect inverter Phase U temperature sensor Out of Range low (voltage).	PIM Temp B Temperature	> 125 degC (near 0V)	WakeUp Signal	On	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Type B Trips 2
Drive Motor Inverter Temperature Sensor F Circuit Range/Performance	P0BE1	Phase W Temperature Sensor In-Range Rationality Check	ABS(PIM Temp C - PIM Temp Avg)	>15 deg C	Ignition Off Time PIM Temp Average Motor Temp No PIM or Motor Temp OOR Faults; P0AF4, P0AF5, P0BD8, P0BD9, P0BE2, P0BE3, P0A32 and P0A33.	=>360 min =>-40 deg C =>-40 deg C NOT ACTIVE	8336ms start delay plus X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Type B Trips 2
Drive Motor Inverter Temperature Sensor F Circuit High	P0BE3	To detect inverter Phase W temperature sensor Out of Range high (voltage).	PIM Temp C Temperature	< -40 deg C (near 5V)	Wakeup Signal When malfunction present at start of trip: Cumulative Inverter Warmup Time above Inverter Warmup Torque Threshold	ON =>1.5min =>ABS(20 Nm)	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Type B Trips 2
Drive Motor Inverter Temperature Sensor F Circuit Low	P0BE2	To detect inverter Phase W temperature sensor Out of Range low (voltage).	PIM Temp C Temperature	> 125 degC (near 0V)	WakeUp Signal	On	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Type B Trips 2
Drive Motor "B" Inverter Phase U Over Temperature	P0C14	To detect an in-range overtemperature condition that can potentially damage inverter	PIM A- B Temperature exceeds initial fault threshold, and does not decrease below reset threshold	> 91 deg C initial fault >85 deg C reset	PIM Temperature No Perf Fault; P0BD7	IN RANGE NOT ACTIVE	X: 500 cts Y: 650 cts R: 10.4ms T: 5208ms	Type B Trips 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "B" Inverter Phase V Over Temperature	P0C15	To detect an in-range overtemperature condition that can potentially damage inverter	PIM-B C Temperature exceeds initial fault threshold, and does not decrease below reset threshold	> 91 deg C initial fault >85 deg C reset	PIM Temperature No Perf Fault; P0BE1	IN RANGE NOT ACTIVE	X: 500 cts Y: 650 cts R: 10.4ms T: 5208ms	Type B Trips 2
Drive Motor "B" Inverter Phase W Over Temperature	P0C16	To detect an in-range overtemperature condition that can potentially damage inverter	PIM C A Temperature exceeds initial fault threshold, and does not decrease below reset threshold	> 91 deg C initial fault >85 deg C reset	PIM Temperature No Perf Fault; P0AF3	IN RANGE NOT ACTIVE	X: 500 cts Y: 650 cts R: 10.4ms T: 5208ms	Type B Trips 2
Motor B Resolver Sensors - Discrete								
Drive Motor "B" Position Sensor Circuit	P0A45	To detect Loss of Signal or converter error (line open, short) in the Motor Resolver circuit	Sin or Cos Signal	<2.3V	Resolver Initialization Delay Run/Crank Voltage OR Powertrain Relay Voltage	500ms > 9.5 Volts OR < 18 Volts	X: 140 cts Y: 165 cts R: 0.083 - 0.5 ms T: 11.62 - 70.0 ms	Type A Trip 1
Drive Motor "B" Position Sensor Circuit Range/Performance	P0A46	To detect a Degradation of Signal fault in the angle data read by the Motor Resolver circuit.	Sin or Cos Signal	>4.0V	Resolver Initialization Delay	500ms	X: 140 cts Y: 165 cts R: 0.083 - 0.5 ms T: 11.62 - 70.0 ms	Type A Trip 1
Drive Motor "B" Position Sensor Circuit Loss of Tracking	P1B04	To detect a Loss of Tracking fault in the Motor Resolver circuit.	Internal Tracking Error	> 5 deg	Resolver Initialization Delay	500ms	X: 140 cts Y: 165 cts R: 0.083 - 0.5 ms T: 11.62 - 70.0 ms	Type A Trip 1
Drive Motor "B" Position Sensor Circuit Overspeed	P1B0E	To detect when Motor B has exceeded operational maximum speed	ABS(Motor speed) initially AND then ABS(Motor Speed)	>11500 rpm >10000 rpm	Wakeup Signal	On	X: 10 cts Y: 15 cts R: 10.4ms T: 104ms	Type A Trip 1
Drive Motor "B" Position Sensor Not Learned	P0C18	To detect an unvalidated Resolver Offset Learn Value and No Stored Previously Valid Value	Offset Learn DIDN'T complete because: ABS(Motor RPM Speed) OR: Filtered DC Voltage AND OR ALL Phase Curr Max-Min Delta For Time Period OR: Offset Learn Completes AND ABS(Offset Correction Angle)	>50 rpm < 192 V <15 A >5 ms > 20% of 0.3s learn time (>60ms) > 25 deg	Key Off Wakeup Signal ABS(Motor Speed) Valid Stored Offset	TRUE ON < 20 FALSE	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	Type B Trips 2
Motor B Resolver Sensors - Circuit								
Drive Motor "B" Position Sensor Circuit "A" Low	P0C57	To detect Resolver Circuit S1/3 Out of Range Low	Resolver S13 Circuit Reference Voltage	< 0.5 v	Wakeup Signal	On	X: 50 cts Y: 80 cts R: 10.4ms T: 521ms	Type A Trip 1

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "A" Position Sensor Circuit "A" High	P0C58	To detect Resolver Circuit S1/3 Out of Range High	Resolver S13 Circuit Reference Voltage	> 3.0 v	Wakeup Signal	On	X: 20 cts Y: 30 cts R: 10.4ms T: 208ms	Type A Trip 1
Drive Motor "A" Position Sensor Circuit "B" Low	P0C61	To detect Resolver Circuit S2/4 Out of Range Low	Resolver S24 Circuit Reference Voltage	< 0.5 v	Wakeup Signal	On	X: 50 cts Y: 80 cts R: 10.4ms T: 521ms	Type A Trip 1
Drive Motor "A" Position Sensor Circuit "B" High	P0C62	To detect Resolver Circuit S2/4 Out of Range High	Resolver S24 Circuit Reference Voltage	> 3.0 v	Wakeup Signal	On	X: 20 cts Y: 30 cts R: 10.4ms T: 208ms	Type A Trip 1
Torque Security Faults								
Drive Motor B Torque Delivered Performance	P0C1A	Fail Case 1: Test of three phase current correlation	The sum of three phase currents is higher than current threshold during more than threshold time	Current threshold: 75 A Threshold time: 100ms	Ignition switch	in crank or run	48 fail counts out of 60 sample counts Executes in a 2.08ms loop Detects in 100ms	Type A Trip 1
		Fail Case 2: Static Variable test	Verify the calculated check sum (CRC) is not equal to previous saved check sum (CRC)		Ignition switch	in crank or run	2.08 ms	
		Fail Case 3: Monitor torque command by checking the SPI communication status	SPI rolling count fails to update more than threshold time	Threshold time: 90msec	Ignition switch	in crank or run	45 fail counts out of 50 sample counts Detects in 90ms 2.08 ms loop	
		Fail Case 4: Check the DC current flow direction with respect to torque command/motor speed	DC current fails to show correct sign and magnitude more than current threshold during more than threshold time	Current threshold: 10 A to 80 A (function of motor speed.); Time threshold: 200 ms	MCP power stage	Active	96 fail counts out of 120 sample counts Detects in 200ms 2.08 ms loop	
		Fail Case 5: Check the secured motor torque achieved error with respect to torque command	The absolute error between calculated motor torque achieved and motor torque command is higher than torque threshold during more than threshold time	Torque threshold: 86.18 Nm Time threshold: 200 ms	MCP power stage	Active	96 fail counts out of 120 sample counts Detects in 200ms 2.08 ms loop	
		Fail Case 6: Check the Task1 reported motor torque achieved vs. torque command	The absolute error between Task1 reported motor torque achieved and motor torque command is higher than torque threshold during more than threshold time	Torque threshold: 86.18 Nm Time threshold: 200 ms	Ignition switch	in crank or run	96 fail counts out of 120 sample counts Detects in 200ms 2.08 ms loop	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 7: Check the secured calculated three phase short motor torque vs. the reported task1 motor torque	The absolute error between secured calculated three phase short torque vs. Task1 reported motor torque is higher than torque threshold during more than threshold time	Torque threshold: 52 Nm Time threshold: 200 ms	MCP power stage	Motor 3-phase short	96 fail counts out of 120 sample counts Detects in 200ms 2.08 ms loop	
		Fail Case 8: Check the secured calculated three phase open motor torque vs. the reported task1 motor torque	The absolute error between secured calculated three phase open torque vs. Task1 reported motor torque is higher than torque threshold during more than threshold time	Torque threshold: 52 Nm Time threshold: 200 ms	MCP power stage	Motor 3-phase open	96 fail counts out of 120 sample counts Detects in 200ms 2.08 ms loop	
Drive Motor B Control Module Programmable Logic Device Security Code	P1B01	Fail Case 1: Detect the validity of the Seeds sent by PLD	The number of identical seed in consecutive loops sent from PLD is higher than threshold	191 counts	Ignition switch	in crank or run	191 fail counts out of 250 sample counts 0.083 ms to 0.5 ms (function of motor speed.);	Type A Trip 1
		Fail Case 2: Detect the validity of response by PLD when MCP sends repeated bad keys to PLD	The number of bad response from PLD when MCP is sending bad key is higher than threshold	191 counts	Ignition switch	in crank or run	191 fail counts out of 5000 sample counts 0.083 ms to 0.5 ms (function of motor speed.);	
Drive Motor "B" Control Module Shutdown Performance	P1AFE	Detect the duration MCP used to conduct shut down path verification after key-on initialization.	The number of Task 2 loops used in shut down path verification is higher than threshold	40 counts	Initialization	ON	40 fail counts out of 50 sample counts 10 ms loop	Type A Trip 1
Communication								
Lost Communication With Battery Pack Control Module	U1878	Detects that CAN serial data communication has been lost with the BPCM on Bus A	Missed BPCM Messages		Ignition switch	Run	X: 12 cts Y: 12 cts R: 10.4ms plus 1 sec cntdwn timer before each cnt incr= T: 12.17 sec total	Type B Trips 2
Lost Communication With ECM/PCM	U1879	Detects that CAN serial data communication has been lost with the ECM	Missed ECM Messages		Ignition switch	Run	X: 12 cts Y: 12 cts R: 10.4ms plus 1 sec cntdwn timer before each cnt incr= T: 12.17 sec total	Type B Trips 2

APPENDIX

Inverter Temperature Sensor Mapping Grid				SAE
Drive Motor A	Phase U	PIM_A	PIM_0	A
	Phase V	PIM_B C	PIM_2	C E
	Phase W	PIM_C B	PIM_1	E C
Drive Motor B	Phase U	PIM_A B	PIM_1	B D
	Phase V	PIM_B C	PIM_2	D F
	Phase W	PIM_C A	PIM_0	F B

HWIO= Hardware Input/Output

OOR= Out of Range

IGBT=

Insulated Gate Bipolar Transistors
(Phase Current Controllers)

BPCM= Batt Pack Ctrl Module

ALU= Arithmetic Logic Unit