

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Intake Camshaft Actuator Solenoid Circuit – Bank 1	P0010	Detects a VVT system error by monitoring the circuit for electrical integrity	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		System supply voltage is within limits Output driver is commanded on, Ignition switch is in crank or run position	> 11 Volts, and < 32 Volts	20 failures out of 25 samples 250 ms /sample, continuous	Trips 2 B Type
Intake Camshaft System Performance – Bank 1	P0011	Detects a VVT system error by comparing the desired and actual cam positions when VVT is activated	Camshaft position error [absolute value of (desired position - actual position)] is compared to thresholds to determine if excessive	(Intake cam Bank 1)Cam Position Error > KtPHSD_phi_CamPosErrorLimlc1 Deg (see Supporting Table)	The following DTC's are NOT active: P0010 IntkCMP B1 Circuit P0340, P0341, Intake B1 Cam sensors P0335, P0336, Crank sensors P0016, P0017, P0018, P0019 Cam to crank rationality Engine is running VVT is enabled Desired camshaft position > 0 Power Take Off (PTO) not active	System Voltage > 11 Volts, and System Voltage < 32 Volts Desired cam position cannot vary more than 7.5 Cam Deg for at least KtPHSD_t_StablePositionTimelc1 seconds	200 failures out of 1000 samples 100 ms /sample	Trips 2 B Type
Crankshaft Position (CKP)-Camshaft Position (CMP) Correlation Bank 1 Sensor A	P0016	Detects cam to crank misalignment by monitoring if cam sensor pulse for bank 1 sensor A occurs during the incorrect crank position	2 cam sensor pulses more than - 11 crank degrees before or 11 crank degrees after nominal position in one cam revolution.		Crankshaft and camshaft position signals are synchronized Engine is Spinning Cam phaser is in "parked" position No Active DTCs:	P0335, P0336 P0340, P0341 5VoltReferenceA_FA 5VoltReferenceB_FA	2 failures out of 3 tests. A failed test is 4 failures out of 5 samples. There is a delay after the first failed test to allow the camshaft position to return to the park position. This time is defined by the table "Cam Correlation Oil Temperature Threshold".	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Time since last execution of diagnostic	< 1.0 seconds	One sample per cam rotation	
O2S Heater Control Circuit Bank 1 Sensor 1	P0030	This DTC checks the Heater Output Driver circuit for electrical integrity.	Voltage low during driver open state (indicates short-to-ground or open circuit) or voltage high during driver closed state (indicates short to voltage).		Ign Switch position Ignition Voltage Engine Speed	= Crank or Run position 11.0 volts < Ign Voltage < 32.0 volts > 400 RPM	20 failures out of 25 samples 250 ms /sample Continuous	2 trips Type B
O2S Heater Control Circuit Bank 1 Sensor 2	P0036	This DTC checks the Heater Output Driver circuit for electrical integrity.	Voltage low during driver open state (indicates short-to-ground or open circuit) or voltage high during driver closed state (indicates short to voltage).		Ign Switch position Ignition Voltage Engine Speed	= Crank or Run position 11.0 volts < Ign Voltage < 32.0 volts > 400 RPM	20 failures out of 25 samples 250 ms /sample Continuous	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
O2S Heater Control Circuit Bank 2 Sensor 1	P0050	This DTC checks the Heater Output Driver circuit for electrical integrity.	Voltage low during driver open state (indicates short-to-ground or open circuit) or voltage high during driver closed state (indicates short to voltage).		Ign Switch position Ignition Voltage Engine Speed	= Crank or Run position 11.0 volts < Ign Voltage < 32.0 volts Engine Speed > 400 RPM	20 failures out of 25 samples 250 ms /sample Continuous	2 trips Type B
HO2S Heater Resistance Bank 1 Sensor 1	P0053	Detects an oxygen sensor heater having an incorrect or out of range resistance value.	Learned Heater Resistance.	Calculated Heater Resistance < 2.8 ohms -OR- Calculated Heater Resistance > 9.5 ohms	No Active DTC's Coolant – IAT Engine Soak Time Coolant Temp Ignition Voltage Engine Run time	ECT_Sensor_FA P2610 IAT_SensorFA < 8.0 °C > 28800 seconds -30.0 °C ≤ Coolant ≤ 45.0 °C < 32.0 volts < 3.00 seconds	Once per valid cold start	2 trips Type B
HO2S Heater Resistance Bank 1 Sensor 2	P0054	Detects an oxygen sensor heater having an incorrect or out of range resistance value.	Learned Heater Resistance.	Calculated Heater Resistance < 4.1 ohms -OR- Calculated Heater Resistance > 10.8 ohms	No Active DTC's Coolant – IAT Engine Soak Time Coolant Temp Ignition Voltage Engine Run time	ECT_Sensor_FA P2610 IAT_SensorFA < 8.0 °C > 28800 seconds -30.0 °C ≤ Coolant ≤ 45.0 °C < 32.0 volts < 3.00 seconds	Once per valid cold start	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
O2S Heater Control Circuit Bank 2 Sensor 2	P0056	This DTC checks the Heater Output Driver circuit for electrical integrity.	Voltage low during driver open state (indicates short-to-ground or open circuit) or voltage high during driver closed state (indicates short to voltage).			Ign Switch position = Crank or Run position Ignition Voltage < 11.0 volts Engine Speed > 32.0 volts > 400 RPM	20 failures out of 25 samples 250 ms /sample Continuous	2 trips Type B
HO2S Heater Resistance Bank 2 Sensor 1	P0059	Detects an oxygen sensor heater having an incorrect or out of range resistance value.	Learned Heater Resistance.	Calculated Heater Resistance < 2.8 ohms -OR- Calculated Heater Resistance > 9.5 ohms	No Active DTC's Coolant – IAT Engine Soak Time Coolant Temp Ignition Voltage Engine Run time	ECT_Sensor_FA P2610 IAT_SensorFA < 8.0 °C > 28800 seconds -30.0 °C ≤ Coolant ≤ 45.0 °C < 32.0 volts < 3.00 seconds	Once per valid cold start	2 trips Type B
HO2S Heater Resistance Bank 2 Sensor 2	P0060	Detects an oxygen sensor heater having an incorrect or out of range resistance value.	Learned Heater Resistance.	Calculated Heater Resistance < 4.1 ohms -OR- Calculated Heater Resistance > 10.8 ohms	No Active DTC's Coolant – IAT Engine Soak Time Coolant Temp Ignition Voltage Engine Run time	ECT_Sensor_FA P2610 IAT_SensorFA < 8.0 °C > 28800 seconds -30.0 °C ≤ Coolant ≤ 45.0 °C < 32.0 volts < 3.00 seconds	Once per valid cold start	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
MAP / MAF / Throttle Position Correlation	P0068	Detect when MAP <u>and</u> MAF do not match estimated engine airflow as established by the TPS	1) Difference between measured MAP and estimated MAP exceeds threshold (kPa), or P0651 (5 Volt Ref), or P0107 (MAP circuit low), or P0108 (MAP circuit high) have failed this key cycle, then MAP portion of diagnostic fails	Table, f(TPS). See supporting tables	Engine Speed	> 800 RPM Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	Continuously fail MAP and MAF portions of diagnostic for 0.1875 sec Continuous in primary processor	Trips: 1
			2) Absolute difference between MAF and estimated MAF exceed threshold (grams/sec), or P0102 (MAF circuit low), or P0103 (MAF circuit hi) have failed this key cycle, or maximum MAF versus RPM (Table) is greater than or equal to maximum MAF versus battery voltage, then MAF portion of diagnostic fails	Table, f(TPS). See supporting tables Table, f(RPM). See supporting tables Table, f(Volts). See supporting tables				Type: A MIL: YES

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Model 2/Filtered	> 15.0 kPa	Minimum total weight factor (all factors multiplied together)	>= 0.00 Filtered Throttle Model multiplied by TPS Residual Weight Factor based on RPM Modeled Air Flow multiplied by MAF Residual Weight Factor based on RPM and MAF Residual Weight Factor Based on MAF Estimate MAP Model 2 multiplied by MAP2 Residual Weight Factor based on RPM See table "IFRD Residual Weighting Factors".		
					No Active DTCs:	MAP_SensorCircuitFA EGRValve_FP EGRValvePerformance_FA MAF_SensorCircuitFA		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						CrankSensor_FA ECT_Sensor_FA ECT_Sensor_Ckt_FA IAT_SensorFA IAT_SensorFP CylDeacSystemTFTKO		
Mass Air Flow Sensor Circuit Low Frequency	P0102	Detects a continuous short to low or a open in either the signal circuit or the MAF sensor	MAF Output	≤ 1126 Hertz (~ .52 gm/sec)	Engine Run Time Engine Speed Ignition Voltage Above criteria present for a period of time	> 1.0 seconds ≥ 300 RPM ≥ 9.0 Volts ≥ 1.0 seconds	400 failures out of 500 samples 1 sample every cylinder firing event	Type B 2 trips
Mass Air Flow Sensor Circuit High Frequency	P0103	Detects a high frequency output from the MAF sensor	MAF Output	≥ 14500 Hertz (~ 1065.5 gm/sec)	Engine Run Time Engine Speed Ignition Voltage Above criteria present for a period of time	> 1.0 seconds ≥ 300 RPM ≥ 9.0 Volts ≥ 1.0 seconds	400 failures out of 500 samples 1 sample every cylinder firing event	Type B 2 trips
Manifold Absolute Pressure Sensor Performance	P0106	Determines if the MAP sensor is stuck within the normal operating range	Filtered Throttle Model Error AND ABS(Measured MAP – MAP Model 1) Filtered AND	≤ 150 kPa*(g/s) > 15.0 kPa	Engine Speed Engine Speed Coolant Temp Coolant Temp Intake Air Temp Intake Air Temp	≥ 450 RPM ≤ 5700 RPM > -7 Deg C < 125 Deg C > -20 Deg C	Continuous Calculations are performed every 12.5 msec	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						CrankSensor_FA ECT_sensor_FA ECT_Sensor_FP IAT_SensorFA IAT_SensorCircuitFP CylDeacSystemTFTKO		
Manifold Absolute Pressure Sensor Circuit Low	P0107	Detects a continuous short to low or open in either the signal circuit or the MAP sensor.	MAP Voltage	< 3.0 % of 5 Volt Range (0.2 Volts = 3.5 kPa)	Continuous		320 failures out of 400 samples 1 sample every 12.5 msec	Type B 2 trips
Manifold Absolute Pressure Sensor Circuit High	P0108	Detects an open sensor ground or continuous short to high in either the signal circuit or the MAP sensor.	MAP Voltage	> 90.0 % of 5 Volt Range (4.5 Volts = 115.1 kPa)	Continuous		320 failures out of 400 samples 1 sample every 12.5 msec	Type B 2 trips
Intake Air Temperature Sensor Circuit Low (High Temperature)	P0112	Detects a continuous short to ground in the IAT signal circuit or the IAT sensor	Raw IAT Input	< 45 Ohms (~150 deg C)	Engine Run Time Coolant Temp Vehicle Speed No Active DTCs:	> 0 seconds < 150 deg C >= 0.00 MPH ECT_Sensor_Ckt_FA ECT_Sensor_Ckt_FP VehicleSpeedSensorError	50 failures out of 63 samples 1 sample every 100 msec	Type B 2 trips
Intake Air Temperature Sensor Circuit High (Low Temperature)	P0113	Detects a continuous open circuit in the IAT signal circuit or the IAT sensor	Raw IAT Input	> 420000 Ohms (~-60 deg C)	Engine Run Time Coolant Temp	> 0 seconds > -40 deg C	50 failures out of 63 samples	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Vehicle Speed Engine Air Flow No Active DTCs:	<= 318.00 MPH <= 512 gm/sec ECT_Sensor_Ckt_FA ECT_Sensor_Ckt_FP VehicleSpeedSensorError MAF_SensorFA MAF_SensorFP MAF_SensorTFTKO	1 sample every 100 msec	
Engine Coolant Temperature (ECT) Sensor Performance	P0116	This DTC detects ECT temp sensor stuck in mid range.	A failure will be reported if any of the following occur: 1) ECT at power up > IAT at power up by an IAT based table lookup value after a minimum 28800 second soak (fast fail). 2) ECT at power up > IAT at power up by 15.0 C after a minimum 28800 second soak and a block heater has not been detected. 3) ECT at power up > IAT at power up by 15.0 C after a minimum 28800 seconds soak	See "P0116: Fail if power up ECT exceeds IAT by these values" in the Supporting tables section.	No Active DTC's Non-volatile memory initialization Test complete this trip Test aborted this trip LowFuelCondition Diag	VehicleSpeedSensor_F A IAT_SensorFA ECT_Sensor_Ckt_FA IgnitionOffTimeValid TimeSinceEngineRunningValid = Not occurred = False = False IAT ≥ -7 °C = False Block Heater detection is enabled when either of the following occurs: 1) ECT at power up > IAT at power up by > 15.0 °C	1 failure 500 msec/sample Once per valid cold start	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			and the time spent cranking the engine without starting is greater than 10.0 seconds with the LowFuelConditionDiag		2) Cranking time	< 10.0 Seconds		
				= False	Block Heater is detected and diagnostic is aborted when 1) occurs. Diagnostic is aborted when 2) or 3) occurs:			
					1a) Vehicle drive time 1b) Vehicle speed 1c) IAT drops from power up IAT	> 400 Seconds with > 14.9 MPH ≥ 8.0 °C		
					2) Engine run time with vehicle speed below 1b 3) Minimum IAT during test	> 1800 Seconds ≤ -7 °C		
Engine Coolant Temp Sensor Circuit Low	P0117	This DTC detects a short to ground in the ECT signal circuit or the ECT sensor.	ECT Resistance (@ 150°C)	< 45 Ohms			5 failures out of 6 samples 1 sec/ sample Continuous	2 trips Type B
Engine Coolant Temp Sensor Circuit High	P0118	Circuit Continuity This DTC detects a short to high or open in the ECT signal circuit	ECT Resistance (@ -60°C)	> 450000 Ohms	Engine run time Or	> 10.0 seconds	5 failures out of 6 samples	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		or the ECT sensor.			IAT min	≥ -7.0 °C	1 sec/ sample Continuous	
TPS1 Circuit	P0120	Detects a continuous or intermittent short or open in TPS1 circuit on the secondary processor but sensor is in range on the primary processor	Secondary TPS1 Voltage < or Secondary TPS1 Voltage >	0.325 4.75		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No 5 V reference #2 error No 5 V reference #2 DTC (P0651)	19/39 counts or 14 counts continuous; 12.5 ms/count in the secondary processor	Trips: 1 Type: A MIL: YES
Throttle Position Sensor Performance	P0121	Determines if the Throttle Position Sensor input is stuck within the normal operating range	Filtered Throttle Model Error AND ABS(Measured Flow – Modeled Air Flow) Filtered	> 150 kPa*(g/s) > 10 grams/sec	Engine Speed Engine Speed Coolant Temp Coolant Temp Intake Air Temp Intake Air Temp Minimum total weight factor (all factors multiplied together)	>= 450 RPM <= 5700 RPM > -7 Deg C < 125 Deg C > -20 Deg C < 125 Deg C	Continuous Calculation are performed every 12.5 msec	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						>= 0.00 Filtered Throttle Model multiplied by TPS Residual Weight Factor based on RPM Modeled Air Flow multiplied by MAF Residual Weight Factor based on RPM and MAF Residual Weight Factor Based on MAF Estimate See table "IFRD Residual Weighting Factors". No Active DTCs: MAP_SensorCircuitFA EGRValve_FP EGRValvePerformance_FA MAF_SensorCircuitFA CrankSensor_FA ECT_sensor_FA ECT_Sensor_FP IAT_SensorFA IAT_SensorCircuitFP CylDeacSystemTFTKO		
TPS1 Circuit Low	P0122	Detects a continuous or intermittent short or open in TPS1 circuit on both processors or just	Primary TPS1 Voltage <	0.325		Run/crank voltage or Powertrain relay voltage > 6.00 and	79/159 counts; 57 counts continuous; 3.125 ms /count in	Trips: 1

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		the primary processor				reduced power is false, else the failure will be reported for all conditions	the primary processor	Type: A MIL: YES
			Secondary TPS1 Voltage <	0.325		No 5 V reference #2 error No 5 V reference #2 DTC (P0651)	19/39 counts or 14 counts continuous; 12.5 ms/count in the secondary processor	
TPS1 Circuit High	P0123	Detects a continuous or intermittent short in TPS1 circuit on both processors or just the primary processor	Primary TPS1 Voltage >	4.75		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	79/159 counts; 57 counts continuous; 3.125 ms /count in the primary processor	Trips: 1 Type: A MIL: YES
			Secondary TPS1 Voltage >	4.75		No 5 V reference #2 error No 5 V reference #2 DTC (P0651)	19/39 counts or 14 counts continuous; 12.5 ms/count in the secondary processor	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Engine Coolant Temperature Below Stat Regulating Temperature	P0128	This DTC detects if the engine coolant temperature rises too slowly due to an ECT or Cooling system fault	<p>Actual accumulated airflow is > predicted accumulated airflow before:</p> <p>Range #1 (Primary) ECT reaches 75.0 °C when IAT min is < 52.0°C and ≥ 10.0°C.</p> <p>Range #2 (Alternate) ECT reaches 55.0 °C when IAT min is < 10.0°C and ≥ -7.0°C.</p>	See "P0128: Maximum Accumulated Airflow for IAT and Start-up ECT conditions" in the Supporting tables section	<p>No Active DTC's</p> <p>Engine not run time ≥ 0 seconds Engine run time ≥ 120 seconds Fuel Condition Ethanol ≤ 87%</p> <p>Range #1 (Primary) Test ECT at start run ≤ 70.0 °C Average Airflow ≥ 10.0 gps > 5 mph for at least 1.5 miles Vehicle speed</p> <p>Range #2 (Alternate) Test ECT at start run ≤ 50.0 °C Average Airflow ≥ 10.0 gps > 5 mph for at least 1.5 miles Vehicle speed</p> <p>Accumulated Airflow Adjustments 1) Max. airflow amount added when accumulating airflow is</p>	<p>MAP_SensorFA MAF_SensorFA TPS_Performance_FA TPS_FA TPS_ThrottleAuthority Defaulted IAT_SensorFA ECT_Sensor_Ckt_FA ECT_Sensor_Perf_FA VehicleSpeedSensor_F A</p>	<p>30 failures to set DTC</p> <p>1 sec/ sample</p> <p>Once per ignition key cycle</p>	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					2) Zero Airflow accumulated when airflow is 3) With AFM active Airflow added to accumulated is multiplied by 4) With Decel Fuel Cut Off active, accumulated airflow is reduced by multiplying actual airflow by 5) With Hybrid Engine Off Active accumulated Airflow is reduced by	70.0 gps < 17.0 gps 50.00% 1.00 times 7.00 grams each second		
					Diagnostic will restart (using the lower value) if ECT drops	≥ 3.0°C below previous min ECT		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
O2S Circuit Low Voltage Bank 1 Sensor 1	P0131	This DTC determines if the O2 sensor circuit is shorted to low.	Measure Oxygen Sensor Signal.	Oxygen Sensor signal is < 50 mvolts	No Active DTC's	TPS_ThrottleAuthority Defaulted MAP_SensorFA AIR System FA Ethanol Composition Sensor FA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR intrusive test = Not active Fuel intrusive test = Not active Idle intrusive test = Not active EGR intrusive test = Not active System Voltage EGR Device Control = Not active	380 failures out of 475 samples Frequency: Continuous in 100 milli - second loop	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Idle Device Control = Not active Fuel Device Control = Not active AIR Device Control = Not active Low Fuel Condition Diag = False Equivalence Ratio $0.9922 \leq \text{equiv. ratio} \leq 1.0137$ Air Per Cylinder $100 \leq \text{APC} \leq 800$ mgrams Fuel Control State = Closed Loop Closed Loop Active = TRUE All Fuel Injectors for active Cylinders Enabled (On) Fuel Condition Ethanol $\leq 87\%$ Fuel State DFCO not active <u>All of the above met for</u> Time > 2.0 seconds			
O2S Circuit High Voltage Bank 1 Sensor 1	P0132	This DTC determines if the O2 sensor circuit is shorted to high.	Measure Oxygen Sensor Signal.	Oxygen Sensor signal is > 1050 mvolts	Open Test Criteria No Active DTC's TPS_ThrottleAuthority Defaulted MAF_SensorFA EthanolCompositionSensor_FA		100 failures out of 125 samples Frequency: Continuous in 100 milli - second loop	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					System Voltage AFM Status = All Cylinders active Heater Warm-up delay = Complete Engine Run Time > 10 seconds Engine Run Accum > 300 seconds Fuel Condition <= 87 % Ethanol No Active DTC's	10.0 volts < system voltage < 32.0 volts = All Cylinders active = Complete > 10 seconds > 300 seconds <= 87 % Ethanol		
					MAP_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR System FA Low Fuel Condition Diag = False Fuel Condition <= 87 % Ethanol Equivalence Ratio 0.9922 ≤ equiv. ratio ≤ 1.0137 Air Per Cylinder 100 ≤ APC ≤ 800 mgrams	MAP_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR System FA = False <= 87 % Ethanol 0.9922 ≤ equiv. ratio ≤ 1.0137 100 ≤ APC ≤ 800 mgrams		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Fuel Control State <u>All of the above met for</u> Time > 2 seconds	not = Power Enrichment		
O2S Slow Response Bank 1 Sensor 1	P0133	This DTC determines if the O2 sensor response time is degraded.	The average response time is calculated over the test time, and compared to the threshold. Refer to "P0133 - O2S Slow Response Bank 1 Sensor 1" Pass/Fail Threshold table in the Supporting Tables tab.		No Active DTC's	TPS_ThrottleAuthority Defaulted MAP_SensorFA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault_NA MAF_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR System FA EthanolCompositionSensor_FA EngineMisfireDetected_FA	Sample time is 40 seconds Frequency: Once per trip	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Bank 1 Sensor 1 DTC's not active	= P0131, P0132 or P0134 10.0 volts < system voltage < 32.0 volts		
					System Voltage			
					EGR Device Control	= Not active		
					Idle Device Control	= Not active		
					Fuel Device Control	= Not active		
					AIR Device Control	= Not active		
					Low Fuel Condition Diag	= False		
					Green O2S Condition	= Not Valid, See definition of Green Sensor Delay Criteria (B1S1) in Supporting Tables tab.		
					O2 Heater on for	>= 0 seconds		
					Learned Htr resistance	= Valid		
					Engine Coolant IAT	> 55 °C > -40 °C		
					Engine run Accum	> 140 seconds		
					Time since any AFM status change	> 2.0 seconds		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Time since Purge On to Off change > 1.0 seconds Time since Purge Off to On change > 2.0 seconds Purge duty cycle >= 0 % duty cycle 20 gps <= engine airflow <= 55 gps Engine speed 1000 <= RPM <= 3000 Fuel < 87 % Ethanol Baro > 70 kpa Air Per Cylinder >= 150 mGrams Low Fuel Condition Diag = False Fuel Control State = Closed Loop Closed Loop Active = TRUE LTM fuel cell = Enabled Transient Fuel Mass <= 100.0 mgrams Baro = Not Defaulted not = Power Fuel Control State Enrichment Fuel State DFCO not active Commanded Proportional Gain >= 0.0 % <u>All of the above met for</u> Time > 2.5 seconds			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
O2S Circuit Insufficient Activity Bank 1 Sensor 1	P0134	This DTC determines if the O2 sensor circuit is open.	Measure Oxygen Sensor Signal.	350 mvolts < Oxygen Sensor signal < 550 mvolts	No Active DTC's	TPS_ThrottleAuthority Defaulted MAF_SensorFA EthanolCompositionSensor_FA 10.0 volts < system voltage < 32.0 volts System Voltage AFM Status = All Cylinders active Heater Warm-up delay = Complete Predicted Exhaust Temp (by location) = Warmed Up Engine Run Time > 10 seconds Engine Run Accum Fuel > 300 seconds <= 87 % Ethanol	400 failures out of 500 samples. Frequency: Continuous 100msec loop	2 trips Type B
O2S Heater Performance Bank 1 Sensor 1	P0135	This DTC determines if the O2 sensor heater is functioning properly by monitoring the current through the heater circuit.	Measured Heater Current.	Measured Heater current < 0.3 amps -OR- Measured Heater current > 3.1 amps	No Active DTC's	ECT_Sensor_FA 10.0 volts < system voltage < 32.0 volts System Voltage Heater Warm-up delay = Complete O2S Heater device control B1S1 O2S Heater Duty Cycle = Not active > zero	8 failures out of 10 samples Frequency: 1 tests per trip 5 seconds delay between tests and 1 second execution rate	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					<u>All of the above met for</u>			
						Time > 120 seconds		
O2S Circuit Low Voltage Bank 1 Sensor 2	P0137	This DTC determines if the O2 sensor circuit is shorted to low.	Measure Oxygen Sensor Signal.	Oxygen Sensor signal is < 50 mvolts	No Active DTC's	TPS_ThrottleAuthority Defaulted MAP_SensorFA AIR System FA Ethanol Composition Sensor FA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA	430 failures out of 540 samples Frequency: Continuous in 100 milli - second loop	2 trips Type B
					AIR intrusive test = Not active			
					Fuel intrusive test = Not active			
					Idle intrusive test = Not active			
					EGR intrusive test = Not active			
					10.0 volts < system voltage < 32.0 volts			
					System Voltage			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					EGR Device Control = Not active Idle Device Control = Not active Fuel Device Control = Not active AIR Device Control = Not active Low Fuel Condition Diag = False 0.9922 ≤ equiv. ratio ≤ 1.0137 Equivalence Ratio 100 ≤ APC ≤ 800 Air Per Cylinder mgrams Fuel Control State = Closed Loop Closed Loop Active = TRUE All Fuel Injectors for active Cylinders Enabled (On) Fuel Condition Ethanol ≤ 87% Fuel State DFCO not active <u>All of the above met for</u> Time > 2.0 seconds			
O2S Circuit High Voltage Bank 1 Sensor 2	P0138	This DTC determines if the O2 sensor circuit is shorted to high.	Measure Oxygen Sensor Signal.	Oxygen Sensor signal is > 1050 mvolts	Open Test Criteria No Active DTC's	TPS_ThrottleAuthority Defaulted MAF_SensorFA	100 failures out of 125 samples	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					EthanolCompositionSensor_FA 10.0 volts < system voltage < 32.0 volts System Voltage AFM Status = All Cylinders active Heater Warm-up delay = Complete Engine Run Time > 10 seconds Engine Run Accum > 300 seconds Fuel Condition <= 87 % Ethanol	Frequency: Continuous in 100 milli - second loop		
					No Active DTC's MAP_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR System FA Low Fuel Condition Diag = False Fuel Condition <= 87 % Ethanol 0.9922 ≤ equiv. ratio ≤ 1.0137			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					ICAT MAT Burnoff delay = Not Valid Green O2S Condition = Not Valid, See definition of Green Sensor Delay Criteria (B1S2) in Supporting Tables tab. Low Fuel Condition Diag Post fuel cell = False = enabled DTC's Passed = P2270 (and P2272 (if applicable)) DTC's Passed = P013E (and P014A (if applicable))			
					After above conditions are met: DFCO mode entered (wo driver initiated pedal input).			
O2 Sensor Slow Response Lean to Rich Bank 1 Sensor 2	P013B	This DTC determines if the post catalyst O2 sensor has Slow Response in a predefined Lean to Rich voltages range during Lean to Rich transition. The diagnostic is an intrusive test which increases the delivered A/F ratio to achieve the required rich threshold.	The EWMA of the Post O2 sensor normalized integral value is greater than the threshold. OR The Accumulated mass air flow monitored during the Slow Response Test (between the lower and upper voltage thresholds) is greater than the airflow threshold.	1) B1S2 EWMA normalized integral value > 32.0 units OR 2) Accumulated air flow during slow lean to rich test > 175 grams (lower threshold is 350 mvolts and upper threshold is 650 mvolts)	No Active DTC's	TPS_ThrottleAuthority Defaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA	Frequency: Once per trip Note: if NaPOPD_b_Reset FastRespFunc= FALSE for the given Fuel Bank OR NaPOPD_b_Rapid ResponseActive = TRUE, multiple tests per trip are allowed	1 trips Type A EWMA

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						EngineMisfireDetected_FA EthanolCompositionSensor_FA CatalystTempFA B1S2 Failed this key cycle P013A, P013E, P013F, P2270 or P2271 System Voltage 10.0 volts < system voltage < 32.0 volts Learned heater resistance = Valid ICAT MAT Burnoff delay = Not Valid Green O2S Condition = Not Valid, See definition of Green Sensor Delay Criteria (B1S2) in Supporting Tables tab. Low Fuel Condition Diag Post fuel cell = False = enabled DTC's Passed = P2270 (and P2272 (if applicable)) DTC's Passed = P013E (and P014A (if applicable)) DTC's Passed = P013A (and P013C (if applicable)) DTC's Passed = P2271 (and P2273 (if applicable)) DTC's Passed = P013F (and P014B (if applicable))		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Green O2S Condition Low Fuel Condition Diag Post fuel cell DTC's Passed DTC's Passed	Sensor Delay Criteria (B2S2) in Supporting Tables tab. = False = enabled = P2270 (and P2272 (if applicable)) = P013E (and P014A (if applicable))		
					After above conditions are met: DFCO mode entered (wo driver initiated pedal input).			
O2 Sensor Slow Response Lean to Rich Bank 2 Sensor 2	P013D	This DTC determines if the post catalyst O2 sensor has Slow Response in a predefined Lean to Rich voltages range during Lean to Rich transition. The diagnostic is an intrusive test which increases the delivered A/F ratio to achieve the required rich threshold.	The EWMA of the Post O2 sensor normalized integral value is greater than the threshold. OR The Accumulated mass air flow monitored during the Slow Response Test (between the lower and upper voltage thresholds) is greater than the airflow threshold.	1) B1S2 EWMA normalized integral value > 32.0 units OR 2) Accumulated air flow during slow lean to rich test > 175 grams (lower threshold is 350 mvolts and upper threshold is 650 mvolts)	No Active DTC's B2S2 Failed this key cycle	TPS_ThrottleAuthority Defaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA EthanolCompositionSensor_FA CatalystTempFA P013C, P014A, P014B, P2272 or P2273	Frequency: Once per trip Note: if NaPOPD_b_Reset FastRespFunc= FALSE for the given Fuel Bank OR NaPOPD_b_Rapid ResponseActive = TRUE, multiple tests per trip are allowed	1 trips Type A EWMA

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
					System Voltage Learned heater resistance ICAT MAT Burnoff delay Green O2S Condition Low Fuel Condition Diag Post fuel cell DTC's Passed DTC's Passed DTC's Passed DTC's Passed DTC's Passed DTC's Passed	10.0 volts < system voltage < 32.0 volts = Valid = Not Valid = Not Valid, See definition of Green Sensor Delay Criteria (B2S2) in Supporting Tables tab. = False = enabled = P2270 (and P2272 (if applicable)) = P013E (and P014A (if applicable)) = P013A (and P013C (if applicable)) = P2271 (and P2273 (if applicable)) = P013F (and P014B (if applicable))			
					After above conditions are met: Fuel Enrich mode entered.				
O2 Sensor Delayed Response Rich to Lean Bank 1 Sensor 2	P013E	This DTC determines if the post catalyst O2 sensor has an initial delayed response to an A/F change from Rich to Lean. The diagnostic is an intrusive test which runs in a DFCO mode to	Post O2 sensor cannot go below the threshold voltage. AND The Accumulated mass air flow	1) Post O2S signal > 450 mvolts AND 2) Accumulated air flow during stuck rich test > 50 grams.	No Active DTC's	TPS_ThrottleAuthority Defaulted ECT_Sensor_FA IAT_SensorFA	Frequency: Once per trip Note: if NaPOPD_b_Reset FastRespFunc= FALSE for the	2 trips Type B	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		achieve the required response.	monitored during the Delayed Response Test is greater than the threshold.			MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA EthanolCompositionSensor_FA CatalystTempFA B1S2 Failed this key cycle P013A, P013B, P013F, P2270 or P2271 System Voltage 10.0 volts < system voltage < 32.0 volts Learned heater resistance = Valid ICAT MAT Burnoff delay = Not Valid = Not Valid, See definition of Green Sensor Delay Criteria (B1S2) in Supporting Tables tab. Green O2S Condition Low Fuel Condition Diag = False Post fuel cell = enabled DTC's Passed = P2270 and P2272 (if applicable)	given Fuel Bank OR NaPOPD_b_Rapid ResponseActive = TRUE, multiple tests per trip are allowed	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					After above conditions are met: DFCO mode entered (wo driver initiated pedal input).			
O2 Sensor Delayed Response Lean to Rich Bank 1 Sensor 2	P013F	This DTC determines if the post catalyst O2 sensor has an initial delayed response to an A/F change from Lean to Rich. The diagnostic is an intrusive test which increases the delivered A/F ratio to achieve the required rich threshold.	Post O2 sensor cannot go above the threshold voltage. AND The Accumulated mass air flow monitored during the Delayed Response Test is greater than the threshold.	1) Post O2S signal < 350 mvolts AND 2) Accumulated air flow during lean to rich test > 285 grams.	No Active DTC's B1S2 Failed this key cycle System Voltage Learned heater resistance ICAT MAT Burnoff delay	TPS_ThrottleAuthority Defaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR_System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA EthanolCompositionSensor_FA CatalystTempFA P013A, P013B, P013E, P2270 or P2271 10.0 volts < system voltage < 32.0 volts = Valid = Not Valid = Not Valid, See definition of Green	Frequency: Once per trip Note: if NaPOPD_b_Reset FastRespFunc= FALSE for the given Fuel Bank OR NaPOPD_b_Rapid ResponseActive = TRUE, multiple tests per trip are allowed	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Green O2S Condition Low Fuel Condition Diag Post fuel cell DTC's Passed DTC's Passed DTC's Passed DTC's Passed	Sensor Delay Criteria (B1S2) in Supporting Tables tab. = False = enabled = P2270 (and P2272 (if applicable)) = P013E (and P014A (if applicable)) = P013A (and P013C (if applicable)) = P2271 (and P2273 (if applicable))		
					After above conditions are met: Fuel Enrich mode entered.			
O2S Circuit Insufficient Activity Bank 1 Sensor 2	P0140	This DTC determines if the O2 sensor circuit is open.	Measure Oxygen Sensor Signal.	410 mvolts < Oxygen Sensor signal < 490 mvolts	No Active DTC's System Voltage AFM Status Heater Warm-up delay Predicted Exhaust Temp (by location) Engine Run Time	TPS_ThrottleAuthority Defaulted MAF_SensorFA EthanolCompositionSensor_FA 10.0 volts < system voltage < 32.0 volts = All Cylinders active = Complete = Warmed Up > 10 seconds	590 failures out of 740 samples. Frequency: Continuous 100msec loop	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Engine Run Accum Fuel	> 300 seconds ≤ 87 % Ethanol		
O2S Heater Performance Bank 1 Sensor 2	P0141	This DTC determines if the O2 sensor heater is functioning properly by monitoring the current through the heater circuit.	Measured Heater Current.	Measured Heater current < 0.3 amps -OR- Measured Heater current > 2.9 amps	No Active DTC's System Voltage Heater Warm-up delay O2S Heater device control B1S1 O2S Heater Duty Cycle <u>All of the above met for</u>	ECT_Sensor_FA 10.0 volts < system voltage < 32.0 volts = Complete = Not active > zero Time > 120 seconds	8 failures out of 10 samples Frequency: 1 tests per trip 5 seconds delay between tests and 1 second execution rate	2 trips Type B
O2 Sensor Delayed Response Rich to Lean Bank 2 Sensor 2	P014A	This DTC determines if the post catalyst O2 sensor has an initial delayed response to an A/F change from Rich to Lean. The diagnostic is an intrusive test which runs in a DFCO mode to achieve the required response.	Post O2 sensor cannot go below the threshold voltage. AND The Accumulated mass air flow monitored during the Delayed Response Test is greater than the threshold.	1) Post O2S signal > 450 mvolts AND 2) Accumulated air flow during stuck rich test > 50 grams.	No Active DTC's	TPS_ThrottleAuthority Defaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA	Frequency: Once per trip Note: if NaPOPD_b_Reset FastRespFunc= FALSE for the given Fuel Bank OR NaPOPD_b_Rapid ResponseActive = TRUE, multiple tests per trip are allowed	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					B2S2 Failed this key cycle System Voltage Learned heater resistance ICAT MAT Burnoff delay Green O2S Condition Low Fuel Condition Diag Post fuel cell DTC's Passed	EngineMisfireDetected_FA EthanolCompositionSensor_FA CatalystTempFA P013C, P013D, P014B, P2272 or P2273 10.0 volts < system voltage < 32.0 volts = Valid = Not Valid = Not Valid, See definition of Green Sensor Delay Criteria (B2S2) in Supporting Tables tab. = False = enabled = P2270 and P2272 (if applicable)		
After above conditions are met: DFCO mode entered (wo driver initiated pedal input).								

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
O2 Sensor Delayed Response Lean to Rich Bank 2 Sensor 2	P014B	This DTC determines if the post catalyst O2 sensor has an initial delayed response to an A/F change from Lean to Rich. The diagnostic is an intrusive test which increases the delivered A/F ratio to achieve the required rich threshold.	Post O2 sensor cannot go above the threshold voltage. AND The Accumulated mass air flow monitored during the Delayed Response Test is greater than the threshold.	1) Post O2S signal < 350 mvolts AND 2) Accumulated air flow during lean to rich test > 285 grams.	No Active DTC's B2S2 Failed this key cycle System Voltage Learned heater resistance = Valid ICAT MAT Burnoff delay = Not Valid = Not Valid, See definition of Green Sensor Delay Criteria (B2S2) in Supporting Tables tab. Green O2S Condition	TPS_ThrottleAuthority Defaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA EthanolCompositionSensor_FA CatalystTempFA P013C, P013D, P014A, P2272 or P2273 10.0 volts < system voltage < 32.0 volts	Frequency: Once per trip Note: if NaPOPD_b_Reset FastRespFunc=FALSE for the given Fuel Bank OR NaPOPD_b_RapidResponseActive = TRUE, multiple tests per trip are allowed	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Low Fuel Condition Diag = False Post fuel cell = enabled DTC's Passed = P2270 (and P2272 (if applicable)) DTC's Passed = P013E (and P014A (if applicable)) DTC's Passed = P013A (and P013C (if applicable)) DTC's Passed = P2271 (and P2273 (if applicable))			
					After above conditions are met: Fuel Enrich mode entered.			
O2S Circuit Low Voltage Bank 2 Sensor 1	P0151	This DTC determines if the O2 sensor circuit is shorted to low.	Measure Oxygen Sensor Signal.	Oxygen Sensor signal is < 50 mvolts	No Active DTC's	TPS_ThrottleAuthority Defaulted MAP_SensorFA AIR System FA Ethanol Composition Sensor FA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA	380 failures out of 475 samples Frequency: Continuous in 100 milli - second loop	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						FuellInjectorCircuit_FA AIR intrusive test = Not active Fuel intrusive test = Not active Idle intrusive test = Not active EGR intrusive test = Not active 10.0 volts < system voltage < 32.0 volts System Voltage EGR Device Control = Not active Idle Device Control = Not active Fuel Device Control = Not active AIR Device Control = Not active Low Fuel Condition Diag = False 0.9922 ≤ equiv. ratio ≤ 1.0137 Equivalence Ratio 100 ≤ APC ≤ 800 Air Per Cylinder mgrams Fuel Control State = Closed Loop Closed Loop Active = TRUE All Fuel Injectors for active Cylinders Enabled (On)		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Fuel Condition Fuel State <u>All of the above met for</u> Time	Ethanol <= 87% DFCO not active > 2.0 seconds		
O2S Circuit High Voltage Bank 2 Sensor 1	P0152	This DTC determines if the O2 sensor circuit is shorted to high.	Measure Oxygen Sensor Signal.	Oxygen Sensor signal is > 1050 mvolts	Open Test Criteria No Active DTC's TPS_ThrottleAuthority Defaulted MAF_SensorFA EthanolCompositionSensor_FA 10.0 volts < system voltage < 32.0 volts System Voltage AFM Status = All Cylinders active Heater Warm-up delay = Complete Engine Run Time > 10 seconds Engine Run Accum > 300 seconds Fuel Condition <= 87 % Ethanol No Active DTC's MAP_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA		100 failures out of 125 samples Frequency: Continuous in 100 milli - second loop	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR System FA Low Fuel Condition Diag = False Fuel Condition <= 87 % Ethanol 0.9922 ≤ equiv. ratio ≤ 1.0137 Equivalence Ratio Air Per Cylinder mgrams Fuel Control State not = Power Enrichment <u>All of the above met for</u> Time > 2 seconds		
O2S Slow Response Bank 2 Sensor 1	P0153	This DTC determines if the O2 sensor response time is degraded.	The average response time is calculated over the test time, and compared to the threshold. Refer to "P0153 - O2S Slow Response Bank 2 Sensor 1" Pass/Fail Threshold table in the Supporting Tables tab.		No Active DTC's	TPS_ThrottleAuthority Defaulted MAP_SensorFA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault_NA MAF_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA	Sample time is 40 seconds Frequency: Once per trip	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR System FA EthanolCompositionSensor_FA EngineMisfireDetected_FA = P0151, P0152 or P0154 10.0 volts < system voltage < 32.0 volts System Voltage EGR Device Control = Not active Idle Device Control = Not active Fuel Device Control = Not active AIR Device Control = Not active Low Fuel Condition Diag = False = Not Valid, See definition of Green Sensor Delay Criteria (B2S1) in Supporting Tables tab. Green O2S Condition		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					O2 Heater on for Learned Htr resistance Engine Coolant IAT Engine run Accum Time since any AFM status change Time since Purge On to Off change Time since Purge Off to On change Purge duty cycle Engine airflow Engine speed Fuel Baro Air Per Cylinder Low Fuel Condition Diag Fuel Control State Closed Loop Active LTM fuel cell	>= 0 seconds = Valid > 55 °C > -40 °C > 140 seconds > 2.0 seconds > 1.0 seconds > 2.0 seconds >= 0 % duty cycle 20 gps <= engine airflow <= 55 gps 1000 <= RPM <= 3000 < 87 % Ethanol > 70 kpa >= 150 mGrams = False = Closed Loop = TRUE = Enabled		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Transient Fuel Mass Baro Fuel Control State Fuel State Commanded Proportional Gain <u>All of the above met for</u> Time	<= 100.0 mgrams = Not Defaulted not = Power Enrichment DFCO not active >= 0.0 % > 2.5 seconds		
O2S Circuit Insufficient Activity Bank 2 Sensor 1	P0154	This DTC determines if the O2 sensor circuit is open.	Measure Oxygen Sensor Signal.	350 mvolts < Oxygen Sensor signal < 550 mvolts	No Active DTC's System Voltage AFM Status Heater Warm-up delay Predicted Exhaust Temp (by location) Engine Run Time Engine Run Accum Fuel	TPS_ThrottleAuthority Defaulted MAF_SensorFA EthanolCompositionSensor_FA 10.0 volts < system voltage < 32.0 volts = All Cylinders active = Complete = Warmed Up > 10 seconds > 300 seconds <= 87 % Ethanol	400 failures out of 500 samples. Frequency: Continuous 100msec loop	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
O2S Heater Performance Bank 2 Sensor 1	P0155	This DTC determines if the O2 sensor heater is functioning properly by monitoring the current through the heater circuit.	Measured Heater Current.	Measured Heater current < 0.3 amps -OR- Measured Heater current > 3.1 amps	No Active DTC's System Voltage Heater Warm-up delay O2S Heater device control B1S1 O2S Heater Duty Cycle <u>All of the above met for</u>	ECT_Sensor_FA 10.0 volts < system voltage < 32.0 volts = Complete = Not active > zero Time > 120 seconds	8 failures out of 10 samples Frequency: 1 tests per trip 5 seconds delay between tests and 1 second execution rate	2 trips Type B
O2S Circuit Low Voltage Bank 2 Sensor 2	P0157	This DTC determines if the O2 sensor circuit is shorted to low.	Measure Oxygen Sensor Signal.	Oxygen Sensor signal is < 50 mvolts	No Active DTC's	TPS_ThrottleAuthority Defaulted MAP_SensorFA AIR System FA Ethanol Composition Sensor FA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA	430 failures out of 540 samples Frequency: Continuous in 100 milli - second loop	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						FuelInjectorCircuit_FA AIR intrusive test = Not active Fuel intrusive test = Not active Idle intrusive test = Not active EGR intrusive test = Not active System Voltage 10.0 volts < system voltage < 32.0 volts EGR Device Control = Not active Idle Device Control = Not active Fuel Device Control = Not active AIR Device Control = Not active Low Fuel Condition Diag = False Equivalence Ratio $0.9922 \leq \text{equiv. ratio} \leq 1.0137$ Air Per Cylinder $100 \leq \text{APC} \leq 800$ Fuel Control State = Closed Loop Closed Loop Active = TRUE All Fuel Injectors for active Cylinders Enabled (On) Fuel Condition Ethanol <= 87% Fuel State DFCO not active <u>All of the above met for</u> Time > 2.0 seconds		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
O2S Circuit High Voltage Bank 2 Sensor 2	P0158	This DTC determines if the O2 sensor circuit is shorted to high.	Measure Oxygen Sensor Signal.	Oxygen Sensor signal is > 1050 mvolts	Open Test Criteria		100 failures out of 125 samples Frequency: Continuous in 100 milli - second loop	2 trips Type B
					No Active DTC's TPS_ThrottleAuthority Defaulted MAF_SensorFA EthanolCompositionSensor_FA 10.0 volts < system voltage < 32.0 volts System Voltage AFM Status = All Cylinders active Heater Warm-up delay = Complete Engine Run Time > 10 seconds Engine Run Accum > 300 seconds Fuel Condition <= 87 % Ethanol	No Active DTC's MAP_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR System FA		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Low Fuel Condition Diag = False Fuel Condition <= 87 % Ethanol Equivalence Ratio $0.9922 \leq \text{equiv. ratio} \leq 1.0137$ Air Per Cylinder $100 \leq \text{APC} \leq 800$ mgrams Fuel Control State not = Power Enrichment <u>All of the above met for</u> Time > 2 seconds			
O2S Circuit Insufficient Activity Bank 2 Sensor 2	P0160	This DTC determines if the O2 sensor circuit is open.	Measure Oxygen Sensor Signal.	410 mvolts < Oxygen Sensor signal < 490 mvolts	No Active DTC's TPS_ThrottleAuthority Defaulted MAF_SensorFA EthanolCompositionSensor_FA System Voltage 10.0 volts < system voltage < 32.0 volts AFM Status = All Cylinders active Heater Warm-up delay = Complete Predicted Exhaust Temp (by location) = Warmed Up Engine Run Time > 10 seconds Engine Run Accum Fuel > 300 seconds <= 87 % Ethanol	TPS_ThrottleAuthority Defaulted MAF_SensorFA EthanolCompositionSensor_FA 10.0 volts < system voltage < 32.0 volts AFM Status = All Cylinders active Heater Warm-up delay = Complete Predicted Exhaust Temp (by location) = Warmed Up Engine Run Time > 10 seconds Engine Run Accum Fuel > 300 seconds <= 87 % Ethanol	590 failures out of 740 samples. Frequency: Continuous 100msec loop	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
O2S Heater Performance Bank 2 Sensor 2	P0161	This DTC determines if the O2 sensor heater is functioning properly by monitoring the current through the heater circuit.	Measured Heater Current.	Measured Heater current < 0.3 amps -OR- Measured Heater current > 2.9 amps	No Active DTC's System Voltage Heater Warm-up delay O2S Heater device control B1S1 O2S Heater Duty Cycle <u>All of the above met for</u>	ECT_Sensor_FA 10.0 volts < system voltage < 32.0 volts = Complete = Not active > zero Time > 120 seconds	8 failures out of 10 samples Frequency: 1 tests per trip 5 seconds delay between tests and 1 second execution rate	2 trips Type B
Fuel System Too Lean Bank 1	P0171	Determines if the fuel control system is in a lean condition, based on the filtered long-term fuel trim.	The filtered long-term fuel trim metric	>= Long Term Trim Lean Table	Engine speed BARO Coolant Temp MAP Inlet Air Temp MAF Fuel Level Long Term Fuel Trim data accumulation:	375 <rpm< 7000 > 70 kPa -40 <°C< 150 10 <kPa< 255 -20 <°C< 150 1.0 <g/s< 510.0 > 10 % or if fuel sender is faulty > 30.0 seconds of data must accumulate on each trip, with at least 20.0 seconds of data in the current fuel trim cell before a pass or fail decision can be made.	Frequency: 100 ms Continuous Loop Development data indicates that the Fuel Adjustment System Diagnostic (FASD) is typically enabled during 97% of the EPAIII drive cycle. This is also typical of real-world driving, however values will vary (higher or lower) based on the actual conditions present during the drive cycle.	2 Trip(s) Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.				
					fuel trim diagnosed during decels? Yes Long-Term Fuel Trim Cell Usage Sometimes, certain Long-Term Fuel Trim Cells are not utilized for control or diagnosis. Please see "Supporting Tables" Tab for a list of cells utilized for diagnosis.							
					Fuel Control Status <table border="1" data-bbox="1257 898 1745 1193"> <tr> <td>Closed Loop</td> <td>Enabled</td> </tr> <tr> <td>Long Term FT</td> <td>Enabled</td> </tr> </table> Please see "Closed Loop Enable Criteria" and "Long Term FT Enable Criteria" in Supporting Tables.		Closed Loop	Enabled	Long Term FT	Enabled		
Closed Loop	Enabled											
Long Term FT	Enabled											
					EGR Flow Diag. Intrusive Test Not Active Catalyst Monitor Intrusive Test Not Active Post O2 Diag. Intrusive Test Not Active Device Control Not Active EVAP Diag. "tank pull down" Not Active							
					No active DTCs: IAC_SystemRPM_FA MAP_SensorFA							

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					MAF_SensorFA MAF_SensorTFTKO AIR System FA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSensorCircuit_FA Ethanol Composition Sensor FA FuelInjectorCircuit_FA EngineMisfireDetected_FA EGRValvePerformance_FA EGRValveCircuit_FA MAP_EngineVacuumStatus AmbientAirDefault_NA O2S_Bank_1_Sensor_1_FA			
Fuel System Too Rich Bank 1	P0172	Determines if the fuel control system is in a rich condition, based on the filtered long-term fuel trim metric. There are two methods to determine a Rich fault. They are Passive and Intrusive. The Intrusive test is described below:	Passive Test:			Secondary Parameters and Enable Conditions are identical to those for P0171, with the exception that fuel level is not considered.	Frequency: 100 ms Continuous Loop	2 Trip(s) Type B
			The filtered Non-Purge Long Term Fuel Trim metric (a Passive Test decision cannot be made when Purge is enabled)	<= Non Purge Rich Limit Table				
			Intrusive Test:					
			The filtered Purge Long Term Fuel Trim metric	<= Purge Rich Limit Table			Development data indicates that the Fuel Adjustment System Diagnostic (FASD) is typically enabled during 97 % of the EPAIII drive cycle. This is also typical of real-world driving, however values	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			AND					
			The filtered Non-Purge Long Term Fuel Trim metric	<= Non Purge Rich Limit Table				will vary (higher or lower) based on the actual conditions present during the drive cycle.
				for 3 out of 5 intrusive segments				
		<p>Intrusive Test:</p> <p>When the filtered Purge Long Term fuel trim metric is <= Purge Rich Limit Table, purge is ramped off to determine if excess purge vapor is the cause of the rich condition.</p> <p>If the filtered Purge-on Long Term fuel trim > Purge Rich Limit Table the test passes without checking the filtered Non-Purge Long Term fuel trim metric.</p> <p>Performing intrusive tests too frequently may also affect EVAP and EPAIII emissions, and the execution frequency of other diagnostics.</p>	<p>Segment Def'n:</p> <p>Segments can last up to 30 seconds and are separated by the lesser of 20 seconds of purge-on time or enough time to purge 16 grams of vapor.</p> <p>A maximum of 5 completed segments or 20 attempts are allowed for each intrusive test.</p> <p>After an intrusive test report is completed, another intrusive test cannot occur for 300 seconds to allow sufficient time to purge excess vapors from the canister. During this period, fuel trim will pass if the filtered Purge-on Long Term fuel trim > Purge Rich Limit Table for at least 200 seconds, indicating that the canister has been purged.</p>					
Fuel System Too Lean Bank 2	P0174	Determines if the fuel control system is in a lean condition, based on the filtered long-term fuel trim.	The filtered long-term fuel trim metric	>= Long Term Trim Lean Table	Engine speed < 375 rpm BARO > 70 kPa Coolant Temp > -40 °C < 150 MAP > 10 kPa < 255 Inlet Air Temp > -20 °C < 150 MAF > 1.0 g/s < 510.0 Fuel Level > 10 % or if fuel sender is faulty	Frequency: 100 ms Continuous Loop Development data indicates that the Fuel Adjustment System Diagnostic (FASD) is	2 Trip(s) Type B	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Long Term Fuel Trim data accumulation:	> 30.0 seconds of data must accumulate on each trip, with at least 20.0 seconds of data in the current fuel trim cell before a pass or fail decision can be made.	typically enabled during 97 % of the EPAIII drive cycle. This is also typical of real-world driving, however values will vary (higher or lower) based on the actual conditions present during the drive cycle.	
					fuel trim diagnosed during decels? Yes			
					Long-Term Fuel Trim Cell Usage			
					Sometimes, certain Long-Term Fuel Trim Cells are not utilized for control or diagnosis. Please see "Supporting Tables" Tab for a list of cells utilized for diagnosis.			
					Fuel Control Status			
					Closed Loop	Enabled		
					Long Term FT	Enabled		
						Please see "Closed Loop Enable Criteria" and "Long Term FT Enable Criteria" in Supporting Tables.		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					EGR Flow Diag. Intrusive Test Not Active Catalyst Monitor Intrusive Test Not Active Post O2 Diag. Intrusive Test Not Active Device Control Not Active EVAP Diag. "tank pull down" Not Active <hr/> No active DTCs: IAC_SystemRPM_FA MAP_SensorFA MAF_SensorFA MAF_SensorTFTKO AIR System FA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSensorCircuit_FA Ethanol Composition Sensor FA FuelInjectorCircuit_FA EngineMisfireDetected_FA EGRValvePerformance_FA EGRValveCircuit_FA MAP_EngineVacuumStatus AmbientAirDefault_NA O2S_Bank_2_Sensor_1_FA			
Fuel System Too Rich Bank 2	P0175	Determines if the fuel control system is in a rich condition, based on the filtered long-term fuel trim metric. There are two methods to determine a Rich fault. They are Passive and Intrusive. The Intrusive test is described below:	Passive Test: The filtered Non-Purge Long Term Fuel Trim metric (a Passive Test decision cannot be made when Purge is enabled)	<= Non Purge Rich Limit Table		Secondary Parameters and Enable Conditions are identical to those for P0174, with the exception that fuel level is not considered.	Frequency: 100 ms Continuous Loop	2 Trip(s) Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Intrusive Test:					
			The filtered Purge Long Term Fuel Trim metric	<= Purge Rich Limit Table				
			AND					
			The filtered Non-Purge Long Term Fuel Trim metric	<= Non Purge Rich Limit Table				
				for 3 out of 5 intrusive segments				
		<p>Intrusive Test: When the filtered Purge Long Term fuel trim metric is <= Purge Rich Limit Table, purge is ramped off to determine if excess purge vapor is the cause of the rich condition.</p> <p>If the filtered Purge-on Long Term fuel trim > Purge Rich Limit Table the test passes without checking the filtered Non-Purge Long Term fuel trim metric.</p> <p>Performing intrusive tests too frequently may also affect EVAP and EPAIII emissions, and the execution frequency of other diagnostics.</p>	<p>Segment Defn: Segments can last up to 30 seconds and are separated by the lesser of 20 seconds of purge-on time or enough time to purge 16 grams of vapor.</p> <p>A maximum of 5 completed segments or 20 attempts are allowed for each intrusive test.</p>					Development data indicates that the Fuel Adjustment System Diagnostic (FASD) is typically enabled during 97 % of the EPAIII drive cycle. This is also typical of real-world driving, however values will vary (higher or lower) based on the actual conditions present during the drive cycle.

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
			After an intrusive test report is completed, another intrusive test cannot occur for 300 seconds to allow sufficient time to purge excess vapors from the canister. During this period, fuel trim will pass if the filtered Purge-on Long Term fuel trim > Purge Rich Limit Table for at least 200 seconds, indicating that the canister has been purged.						
Engine Oil Temperature Sensor Performance	P0196	Determines if the engine oil temperature (EOT) sensor is stuck or biased in range. Three independent tests can be used. 1) <u>Cold Start Test</u> Compares EOT to ECT and IAT at powerup after a long soak (Fast and regular tests) 2) <u>Warm Up Test</u> Compares EOT to a target EOT after a large enough accumulated airflow has occurred	Fast Cold Start Test Pass		All three tests (Cold/Warm/Continuous)			Cold Start (Fast/Regular) and Warm up Tests - one failure out of one sample - test performed once per second	0 trip(s) Type X
			Absolute value of Powerup EOT - Powerup ECT	<= 16 Deg C	EOT Diagnostic main enable Engine Running	Disabled = True			
			Absolute value of Powerup EOT - IAT	<= 16 Deg C	Cold Start EOT Test				
			Regular Cold Start Test Pass		Use Cold Start Diagnostic Engine Off Time	Disabled > 540 Seconds			
			Vehicle speed for	> 15 KPH > 400 seconds	Warm Up EOT Test				
			Note:		Use Warm Up EOT Diagnostic	Disabled			
			Vehicle speed for resets above timer	< 15 KPH > 20 seconds	Power up ECT	> -7 Deg C			
			AND		Power up ECT	<= 90 Deg C			
			Absolute value of Powerup EOT - Powerup ECT	<= 16 Deg C	Continuous EOT Test				
			Absolute value of power up EOT - min. observed IAT	<= 16 Deg C	Use Continuous Diagnostic Power up ECT	Disabled >= -7 and <= 120 Deg C			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.																																				
		<p>3) <u>Continuous Test</u> Compares the measured EOT to modeled EOT on a continuous basis on a warm engine</p>	<p style="text-align: center;">OR</p> <table border="1" data-bbox="684 391 972 509"> <tr> <td>Absolute value of Powerup EOT - Powerup ECT</td> <td>> 16 Deg C</td> </tr> </table> <p style="text-align: center;">AND</p> <table border="1" data-bbox="684 509 972 548"> <tr> <td>IAT minimum observed</td> <td><= 10 Deg C</td> </tr> </table> <p style="text-align: center;">OR</p> <table border="1" data-bbox="684 548 972 667"> <tr> <td>IAT minimum observed</td> <td><= 10 Deg C</td> </tr> </table> <p style="text-align: center;">AND</p> <table border="1" data-bbox="684 667 972 786"> <tr> <td>Absolute value of power up IAT - min. observed IAT</td> <td>> 5 Deg C</td> </tr> </table> <p style="text-align: center;">Warm Up Test Pass</p> <table border="1" data-bbox="684 786 972 927"> <tr> <td>Total accumulated engine flow</td> <td>>= TotalAccumulatedFlow - See details on Supporting Tables Tab (P0196 Section)</td> </tr> </table> <p style="text-align: center;">Continuous Test Pass</p> <table border="1" data-bbox="684 927 972 974"> <tr> <td>EOT Sensed - EOT Model</td> <td></td> </tr> </table>	Absolute value of Powerup EOT - Powerup ECT	> 16 Deg C	IAT minimum observed	<= 10 Deg C	IAT minimum observed	<= 10 Deg C	Absolute value of power up IAT - min. observed IAT	> 5 Deg C	Total accumulated engine flow	>= TotalAccumulatedFlow - See details on Supporting Tables Tab (P0196 Section)	EOT Sensed - EOT Model		<p style="text-align: center;">OR</p> <table border="1" data-bbox="972 391 1257 509"> <tr> <td>EOT</td> <td>>= 40 and <= 120 Deg C</td> </tr> </table> <p style="text-align: center;">All of three criteria above AND</p> <table border="1" data-bbox="972 509 1257 548"> <tr> <td>EOT Model</td> <td>>= 93 Deg C</td> </tr> </table> <p style="text-align: center;">OR</p> <table border="1" data-bbox="972 548 1257 667"> <tr> <td>Use quick transition to equilibrium state</td> <td>Enabled</td> </tr> </table> <p style="text-align: center;">OR</p> <table border="1" data-bbox="972 667 1257 786"> <tr> <td>EOT</td> <td>>= ECT from 5 sec previous</td> </tr> </table> <p style="text-align: center;">DISABLE CONDITIONS (for all three tests)</p> <table border="1" data-bbox="972 786 1257 927"> <tr> <td>No active DTC's</td> <td></td> </tr> </table> <p style="text-align: center;">Warm Up Test Pass</p> <table border="1" data-bbox="972 927 1257 974"> <tr> <td>EOT</td> <td>>= 90 Deg C</td> </tr> </table>	EOT	>= 40 and <= 120 Deg C	EOT Model	>= 93 Deg C	Use quick transition to equilibrium state	Enabled	EOT	>= ECT from 5 sec previous	No active DTC's		EOT	>= 90 Deg C	<p style="text-align: center;">OR</p> <table border="1" data-bbox="1257 391 1543 509"> <tr> <td>EOT</td> <td>>= 40 and <= 120 Deg C</td> </tr> </table> <p style="text-align: center;">All of three criteria above AND</p> <table border="1" data-bbox="1257 509 1543 548"> <tr> <td>EOT Model</td> <td>>= 93 Deg C</td> </tr> </table> <p style="text-align: center;">OR</p> <table border="1" data-bbox="1257 548 1543 667"> <tr> <td>Use quick transition to equilibrium state</td> <td>Enabled</td> </tr> </table> <p style="text-align: center;">OR</p> <table border="1" data-bbox="1257 667 1543 786"> <tr> <td>EOT</td> <td>>= ECT from 5 sec previous</td> </tr> </table> <p style="text-align: center;">DISABLE CONDITIONS (for all three tests)</p> <table border="1" data-bbox="1257 786 1543 927"> <tr> <td>No active DTC's</td> <td></td> </tr> </table> <p style="text-align: center;">Warm Up Test Pass</p> <table border="1" data-bbox="1257 927 1543 974"> <tr> <td>EOT</td> <td>>= 90 Deg C</td> </tr> </table>	EOT	>= 40 and <= 120 Deg C	EOT Model	>= 93 Deg C	Use quick transition to equilibrium state	Enabled	EOT	>= ECT from 5 sec previous	No active DTC's		EOT	>= 90 Deg C	<p>>= 40 and <= 120 Deg C</p> <p>>= 93 Deg C</p> <p>Enabled</p> <p>>= ECT from 5 sec previous</p> <p>DISABLE CONDITIONS (for all three tests)</p> <p>Fault bundles:</p> <p>IAT_SensorFA</p> <p>ECT_Sensor_Ckt_FA</p> <p>MAF_SensorFA</p> <p>EngOilTempSensorCircuitFA</p>	<p>Continuous Test - 70 failures out of 100 samples performed once per second</p>	
Absolute value of Powerup EOT - Powerup ECT	> 16 Deg C																																											
IAT minimum observed	<= 10 Deg C																																											
IAT minimum observed	<= 10 Deg C																																											
Absolute value of power up IAT - min. observed IAT	> 5 Deg C																																											
Total accumulated engine flow	>= TotalAccumulatedFlow - See details on Supporting Tables Tab (P0196 Section)																																											
EOT Sensed - EOT Model																																												
EOT	>= 40 and <= 120 Deg C																																											
EOT Model	>= 93 Deg C																																											
Use quick transition to equilibrium state	Enabled																																											
EOT	>= ECT from 5 sec previous																																											
No active DTC's																																												
EOT	>= 90 Deg C																																											
EOT	>= 40 and <= 120 Deg C																																											
EOT Model	>= 93 Deg C																																											
Use quick transition to equilibrium state	Enabled																																											
EOT	>= ECT from 5 sec previous																																											
No active DTC's																																												
EOT	>= 90 Deg C																																											

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			<p style="text-align: center;">>= 0 Deg C and <= 16 Deg C</p> <p style="text-align: center;">OR</p> <p>EOT Sensed - EOT Model</p> <p style="text-align: center;">< 0 Deg C</p> <p>Absolute value of EOT Sensed - EOT Model</p> <p style="text-align: center;"><= 16 Deg C</p>					
			<p style="text-align: center;">Fast Cold Start Test Fail</p> <p>Absolute value of Powerup EOT - Powerup ECT</p> <p style="text-align: center;">> FastFailTempDiff See details on Supporting Tables Tab (P0196 Section)</p> <p>Absolute value of power up ECT - IAT</p> <p style="text-align: center;"><= 16 Deg C</p>					
			<p style="text-align: center;">Regular Cold Start Test Fail</p> <p>Vehicle speed for</p> <p style="text-align: center;">> 15 KPH</p> <p style="text-align: center;">> 400 seconds</p> <hr style="border-top: 1px dashed black;"/> <p style="text-align: center;">Note:</p> <p>Vehicle speed for resets above timer</p> <p style="text-align: center;">< 15 KPH</p> <p style="text-align: center;">> 20 seconds</p>					
			<p style="text-align: center;">AND</p> <p>Absolute value of Powerup EOT - Powerup ECT</p> <p style="text-align: center;">> 16 Deg C</p> <p>IAT minimum observed</p> <p style="text-align: center;">> 10 Deg C</p>					

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			AND					
			IAT minimum observed	> 10 Deg C				
			OR					
			Power up IAT - minimum observed IAT	<= 5 Deg C				
			AND					
			Absolute value of Power up EOT - Power up IAT	> 16 Deg C				
			OR					
			Absolute value of Power up EOT - Min. observed IAT	> 16 Deg C				
			AND					
			Absolute value of Power up ECT - Power up IAT	> 16 Deg C				
			OR					
			Absolute value of Power up ECT - Min. observed IAT	> 16 Deg C				
			Warm Up Test Fail					
			Total accumulated engine flow					
				>= TotalAccumulatedFlow - See details on Supporting Tables Tab (P0196 Section)				
			EOT	< 90 Deg C				

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Continuous Test Fail EOT Sensed - EOT Model $< 0 \text{ Deg C or } > 16 \text{ Deg C}$ AND EOT Sensed - EOT Model $\geq 0 \text{ Deg C}$ OR Absolute value of EOT Sensed - EOT Model $\leq 16 \text{ Deg C}$					
Engine Oil Temperature (EOT) Circuit Low	P0197	Detects a short to ground in the Engine Oil Temperature (EOT) Sensor signal	Engine Oil Temperature Sensor (EOT) Circuit Resistance	< 50 ohms	Diagnostic enabled / disabled Engine Run Time OR ECT Sensor Circuit Resistance	Disabled > 10.0 seconds ≤ 50 Ohms	8 failures out of 10 samples Sampled every 1 second	0 trip(s) Type X
Engine Oil Temperature (EOT) Circuit High	P0198	Detects an open circuit or continuous short to high in the Engine Oil Temperature (EOT) Sensor signal	Engine Oil Temperature Sensor (EOT) Circuit Resistance	> 200000 ohms	Diagnostic enabled / disabled Engine Run Time OR ECT Sensor Circuit Resistance	Disabled > 60.0 seconds ≥ 450000 Ohms	8 failures out of 10 samples Sampled every 1 second	0 trip(s) Type X
Injector 1	P0201	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 32 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Injector 2	P0202	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 32 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	2 trips Type B
Injector 3	P0203	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 32 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	2 trips Type B
Injector 4	P0204	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 32 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	2 trips Type B
Injector 5	P0205	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 32 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	2 trips Type B
Injector 6	P0206	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 32 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	2 trips Type B
Injector 7	P0207	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 32 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	2 trips Type B
Injector 8	P0208	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match		Powertrain Relay Voltage within range and stable according to Enable Conditions Engine Running	11 volts ≤ Voltage ≤ 32 volts greater than 1 seconds	8 failures out of 10 samples 250 ms /sample Continuous	2 trips Type B
TPS2 Circuit	P0220	Detects a continuous or intermittent short or open in TPS2 circuit on the secondary processor but sensor is in range on the primary processor	Secondary TPS2 Voltage < 0.25 or Secondary TPS2 Voltage > 4.59			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	19/39 counts or 14 counts continuous; 12.5 ms/count in the secondary processor	Trips: 1 Type: A MIL: YES

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						No 5 V reference #2 error No 5 V reference #2 DTC (P0651)		
TPS2 Circuit Low	P0222	Detects a continuous or intermittent short or open in TPS2 circuit on both processors or just the primary processor	Primary TPS2 Voltage <	0.25		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No 5 V reference #2 error No 5 V reference #2 DTC (P0651)	79/159 counts; 57 counts continuous; 3.125 ms /count in the primary processor	Trips: 1
			Secondary TPS2 Voltage <	0.25			19/39 counts or 14 counts continuous; 12.5 ms/count in the secondary processor	Type: A MIL: YES
TPS2 Circuit High	P0223	Detects a continuous or intermittent short in TPS1 circuit on both processors or just the primary processor	Primary TPS2 Voltage >	4.59		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No 5 V reference #2 error No 5 V reference #2 DTC (P0651)	79/159 counts; 57 counts continuous; 3.125 ms /count in the primary processor	Trips: 1
			Secondary TPS2 Voltage >	4.59			19/39 counts or 14 counts continuous; 12.5 ms/count in the secondary processor	Type: A MIL: YES

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
Fuel Pump Primary Circuit (ODM)	P0230	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Run/Crank Voltage Engine Speed	11 volts ≤ Voltage ≤ 32 volts ≥ 0 RPM	8 failures out of 10 samples 250 ms /sample Continuous	2 trips Type B	
Random Misfire Detected	P0300	These DTC's will determine if a random or a cylinder specific misfire is occurring by monitoring crankshaft velocity	Deceleration index vs. Engine Speed Vs Engine load Deceleration index calculation is tailored to specific veh. Tables used are 1st tables encountered that are not max of range. Undetectable region at a given speed/load point is where all tables are max of range point. see Algorithm Description Document for additional details.	(>Idle SCD AND > Idle SCD ddt Tables) OR (>SCD Delta AND > SCD Delta ddt Tables) OR (>Idle Cyl Mode AND > Idle Cyl Mode ddt Tables) OR (>Cyl Mode AND > Cyl Mode ddt Tables) OR (>Rev Mode Table) OR (> AFM Table in Cyl Deact mode)	Engine Run Time	> 2 crankshaft revolutions	Emission Exceedence = any (5) failed 200 rev blocks out of (16) 200 rev block tests	2 Trips Type B (Mil Flashes with Catalyst Damaging Misfire)	
Cylinder 1 Misfire Detected	P0301				ECT	If ECT at startup	-7 °C < ECT < 130 °C		200 rev block tests
Cylinder 2 Misfire Detected	P0302				ECT		21 °C < ECT < 130 °C		Failure reported for (1) Exceedence in 1st (16) 200 rev block tests, or (4) Exceedences thereafter.
Cylinder 3 Misfire Detected	P0303				System Voltage		9.00 <volts < 32.00		
Cylinder 4 Misfire Detected	P0304				+ Throttle delta		< 75.00 % per 25 ms		
Cylinder 5 Misfire Detected	P0305				- Throttle delta		< 75.00 % per 25 ms		
Cylinder 6 Misfire Detected	P0306								any Catalyst Exceedence = (1) 200 rev block as data supports for catalyst damage.
Cylinder 7 Misfire Detected	P0307								Failure reported with (1 or 3) Exceedences in FTP, or (1) Exceedence outside FTP.
Cylinder 8 Misfire Detected	P0308								
			Misfire Percent Emission Failure Threshold	≥ 1.24 % P0300 ≥ 1.56 % emission					

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Misfire Percent Catalyst Damage	>"Catalyst Damaging Misfire Percentage" Table whenever secondary conditions are met.	Engine Speed Engine Load Misfire counts (at low speed/loads, one cylinder may not cause cat damage)	> 1200 rpm AND > 20 % load AND < 180 counts on one cylinder		
			When engine speed and load are less than the FTP calcs (3) catalyst damage exceedences are allowed.	≤ 0 FTP rpm AND ≤ 0 FTP % load	Engine Speed	375 < rpm < 6000 - 400 Engine speed limit is a function of inputs like Gear and temperature typical Engine Speed Limit = 6000 rpm	Continuous 4 cycle delay	
				disable conditions:	No active DTCs:	TPS_FA EnginePowerLimited MAF_SensorTFTKO MAP_SensorTFTKO IAT_SensorTFTKO ECT_Sensor_Ckt_TFTKO 5VoltReferenceB_FA CrankSensorTestFailedTKO CrankSensorFaultActive CrankIntakeCamCorrelationFA	4 cycle delay	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						CrankExhaustCamCorrelationFA CrankCamCorrelationTFTKO AnyCamPhaser_FA AnyCamPhaser_TFTKO If Monitor Rough Road=1 and RoughRoadSource="TOSS" TOSS_Fault (Auto Trans only) Clutch Sensor FA (Manual Trans only) Trans_Gear_Defaulted (Auto Trans only)		
					P0315 & engine speed	> 1000 rpm		
					Fuel Level Low	LowFuelConditionDiagnostic	500 cycle delay	
					Cam and Crank Sensors	in sync with each other	4 cycle delay	
					Misfire requests TCC unlock	Not honored because Transmission in hot mode	4 cycle delay	
					Fuel System Status Active Fuel Management	≠ Fuel Cut Transition in progress	4 cycle delay 7 cycle delay	
					Undetectable engine speed and engine load region	invalid speed load range in decel index tables	4 cycle delay	
					Abusive Engine Over Speed	> 8192 rpm	0 cycle delay	
					Below zero torque (except CARB approved 3000 rpm to redline triangle.)	<" Zero torque engine load" in Supporting Tables tab	4 cycle delay	
					Below zero torque: TPS (area)	≤ 0%	4 cycle delay	
					Veh Speed	> 48 KPH		
					EGR Intrusive test	Active	0 cycle delay	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					IF Rough Road is monitored, then ONE of the following Rough Road Sources will be used: Rough Road Source = "TOSS" Rough Road detected Rough Road Source = "WheelSpeedInECM" ABS/TCS system RoughRoad active VSES detected active Rough Road Source = "FromABS" ABS/TCS system RoughRoad active VSES detected active			
Crankshaft Position System Variation Not Learned	P0315	Monitor for valid crankshaft error compensation factors	Sum of Compensation factors	≥ 4.0040 OR ≤ 3.9960	OBDD Manufacturer Enable Counter	0	0.50 seconds Frequency Continuous 100 msec	1 Trips Type A
Knock Sensor (KS) Module Performance	P0324	This diagnostic will detect a failed internal ECM component associated with knock control	Any Cylinder's Avg Gain Signal		Diagnostic Enabled (1 = Enabled) Engine Speed	= 1 ≥ 400 RPM	50 Failures out of 63 Samples 100 msec rate	Type: A MIL: YES Trips: 1

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
				> 4.50 Volts	Cylinder Air Mass	> 60 milligrams		
			or					
			All Cylinder's Raw Signals	≤ 0.20 Volts	Engine Speed Cylinder Air Mass	≥ 400 RPM > 60 milligrams		
					Power Take Off	= Not Active		
Knock Sensor (KS) Circuit Bank 1	P0325	This diagnostic checks for an open in the knock sensor circuit	Gated Low Pass Filter Voltage	> 4.0 Volts or < 1.24 Volts	Diagnostic Enabled (1 = Enabled) Engine Speed ECT Enginer Run Time Power Take Off	= 1 ≥ 400 RPM ≥ -40 deg. C ≥ 2 seconds = Not Active	50 Failures out of 63 Samples 100 msec rate	Type: B MIL: YES Trips: 2
Knock Sensor (KS) Performance Bank 1	P0326	This diagnostic checks for an overactive knock sensor caused by excessive knock or noisy engine components	Knock Fast Retard (spark degrees)	> (FastRtdMax + 6.0 - 2.0) degrees spark See Supporting Tables for FastRtdMax	Diagnostic Enabled (1 = Enabled) Knock Detection Enabled	= 1 > 0 Knock Detection Enabled is calculated by multiplying the following three factors: FastAttackRate FastAttackCoolGain FastAttackBaroGain (see Supporting Tables)	31 Failures out of 63 Samples 100 msec rate	Type: B MIL: YES Trips: 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Engine Speed MAP No Active DTC's Power Take Off	≥ 500 RPM ≥ 10 kPa TPS_ThrottleAuthority Defaulted = Not Active		
Knock Sensor (KS) Circuit Low Bank 1	P0327	This diagnostic checks for an out of range low knock sensor signal			Diagnostic Enabled (1 = Enabled)	= 1	50 Failures out of 63 Samples 100 msec rate	Type: B MIL: YES Trips: 2
			Sensor Input Signal Line	> 2.86 Volts	ECT	≥ -40 deg. C		
			or		Engine Run Time	≥ 2 seconds		
			Sensor Return Signal Line	< 1.48 Volts	Valid Oil Temp Required? (1= Yes, 0 = No)	= 0		
					If Yes: Engine Oil Temp and ValidOilTemp Model or No OilTemp Sensor DTC's If No:	< 256 deg. C EngOilModeledTemp Valid EngOilTempSensor CircuitFA		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					No Eng Oil Temp enable criteria			
Knock Sensor (KS) Circuit High Bank 1	P0328	This diagnostic checks for an out of range high knock sensor signal			Diagnostic Enabled (1 = Enabled)	= 1	50 Failures out of 63 Samples 100 msec rate	Type: B MIL: YES Trips: 2
			Sensor Input Signal Line	< 2.02 Volts	ECT Enginer Run Time	≥ -40 deg. C ≥ 2 seconds		
			or Sensor Return Signal Line	> 3.76 Volts	Valid Oil Temp Required? (1= Yes, 0 = No)	= 0		
					If Yes: Engine Oil Temp and ValidOilTemp Model or No OilTempSensor DTC's If No: No Eng Oil Temp enable criteria	< 256 deg. C EngOilModeledTemp Valid EngOilTempSensor CircuitFA		
Knock Sensor (KS) Circuit Bank 2	P0330	This diagnostic checks for an open in the knock sensor circuit	Gated Low Pass Filter Voltage	> 4.0 Volts or < 1.24 Volts	Diagnostic Enabled (1 = Enabled)	= 1	50 Failures out of 63 Samples 100 msec rate	Type: B MIL: YES Trips: 2
					Engine Speed ECT Enginer Run Time	≥ 400 RPM ≥ -40 deg. C ≥ 2 seconds		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Power Take Off	= Not Active		
Knock Sensor (KS) Circuit Low Bank 2	P0332	This diagnostic checks for an out of range low knock sensor signal			Diagnostic Enabled (1 = Enabled)	= 1	50 Failures out of 63 Samples 100 msec rate	Type: B MIL: YES Trips: 2
					ECT	≥ -40 deg. C		
			Sensor Input Signal Line	> 2.86 Volts	Enginer Run Time	≥ 2 seconds		
			or					
			Sensor Return Signal Line	< 1.48 Volts	Valid Oil Temp Required? (1= Yes, 0 = No)	= 0		
					If Yes: Engine Oil Temp and ValidOilTemp Model	< 256 deg. C EngOilModeledTemp Valid		
					or No OilTempSensor DTC's	EngOilTempSensor CircuitFA		
					If No: No Eng Oil Temp enable criteria			
Knock Sensor (KS) Circuit High Bank 2	P0333	This diagnostic checks for an out of range high knock sensor signal			Diagnostic Enabled (1 = Enabled)	= 1	50 Failures out of 63 Samples 100 msec rate	Type: B MIL: YES Trips: 2
					ECT	≥ -40 deg. C		
			Sensor Input Signal Line	< 2.02 Volts	Engine Run Time	≥ 2 seconds		
			or					
			Sensor Return Signal Line	> 3.76 Volts	Valid Oil Temp Required? (1= Yes, 0 = No)	= 0		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					<p><u>If Yes:</u> Engine Oil Temp and ValidOilTemp Model or No OilTempSensor DTC's</p> <p><u>If No:</u> No Eng Oil Temp enable criteria</p>	<p>< 256 deg. C EngOilModeledTemp Valid EngOilTempSensor CircuitFA</p>		
Crankshaft Position (CKP) Sensor A Circuit	P0335	Determines if a fault exists with the crank position sensor signal	<u>Engine-Cranking Crankshaft Test:</u> Time since last crankshaft position sensor pulse received	>= 4.0 seconds	<p><u>Engine-Cranking Crankshaft Test:</u> Starter engaged AND (cam pulses being received OR (DTC P0101 AND DTC P0102 AND DTC P0103 AND Engine Air Flow</p>	<p>= FALSE = FALSE = FALSE > 3.0 grams/second))</p>	<p><u>Engine-Cranking Crankshaft Test:</u> Continuous every 100 msec</p>	Type A 1 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			<u>Time-Based Crankshaft Test:</u> No crankshaft pulses received <u>Event-Based Crankshaft Test:</u> No crankshaft pulses received	>= 0.1 seconds	<u>Time-Based Crankshaft Test:</u> Engine is Running Starter is not engaged No DTC Active: <u>Event-Based Crankshaft Test:</u> Engine is Running OR Starter is engaged No DTC Active:	5VoltReferenceB_FA 5VoltReferenceA_FA 5VoltReferenceB_FA P0340 P0341	<u>Time-Based Crankshaft Test:</u> Continuous every 12.5 msec <u>Event-Based Crankshaft Test:</u> 2 failures out of 10 samples One sample per engine revolution	
Crankshaft Position (CKP) Sensor A Performance	P0336	Determines if a performance fault exists with the crank position sensor signal	<u>Crank Re-synchronization Test:</u> Time in which 25 or more crank re-synchronizations occur	< 20.0 seconds	<u>Crank Re-synchronization Test:</u> Engine Air Flow Cam-based engine speed No DTC Active:	>= 3.0 grams/second > 450 RPM 5VoltReferenceB_FA P0335	<u>Crank Re-synchronization Test:</u> Continuous every 250 msec	Type A 1 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			<u>Time-Based Crankshaft Test:</u> No crankshaft synchronization gap found	>= 0.4 seconds	<u>Time-Based Crankshaft Test:</u> Engine is Running Starter is not engaged No DTC Active:	5VoltReferenceB_FA	<u>Time-Based Crankshaft Test:</u> Continuous every 12.5 msec	
			<u>Engine Start Test during Crank:</u> Time since starter engaged without detecting crankshaft synchronization gap	>= 1.5 seconds	<u>Engine Start Test during Crank:</u> Starter engaged AND (cam pulses being received OR (DTC P0101 AND DTC P0102 AND DTC P0103 AND Engine Air Flow	= FALSE = FALSE = FALSE > 3.0 grams/second))	<u>Engine Start Test during Crank:</u> Continuous every 100 msec	
			<u>Event-Based Crankshaft Test:</u>		<u>Event-Based Crankshaft Test:</u>		<u>Event-Based Crankshaft Test:</u>	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Crank Pulses received in one engine revolution OR Crank Pulses received in one engine revolution	< 53 > 63	Engine is Running OR Starter is engaged No DTC Active:	5VoltReferenceA_FA 5VoltReferenceB_FA P0340 P0341	8 failures out of 10 samples One sample per engine revolution	
Camshaft Position (CMP) Sensor Circuit Bank 1 Sensor A	P0340	Determines if a fault exists with the cam position bank 1 sensor A signal	<u>Engine Cranking Camshaft Test:</u> Time since last camshaft position sensor pulse received OR Time that starter has been engaged without a camshaft sensor pulse <u>Time-Based Camshaft Test:</u>	>= 5.5 seconds >= 4.0 seconds	<u>Engine Cranking Camshaft Test:</u> Starter engaged AND (cam pulses being received OR (DTC P0101 AND DTC P0102 AND DTC P0103 AND Engine Air Flow	= FALSE = FALSE = FALSE > 3.0 grams/second))	<u>Engine Cranking Camshaft Test:</u> Continuous every 100 msec <u>Time-Based Camshaft Test:</u>	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			<p>Fewer than 4 camshaft pulses received in a time</p> <p><u>Fast Event-Based Camshaft Test:</u></p> <p>No camshaft pulses received during first 24 MEDRES events</p> <p>(There are 24 MEDRES events per engine cycle)</p> <p><u>Slow Event-Based Camshaft Test:</u></p> <p>The number of camshaft pulses received during 100 engine cycles</p>	<p>> 3.0 seconds</p>	<p>Engine is Running</p> <p>Starter is not engaged</p> <p>No DTC Active:</p> <p><u>Fast Event-Based Camshaft Test:</u></p> <p>Crankshaft is synchronized</p> <p>Starter must be engaged to enable the diagnostic, but the diagnostic will not disable when the starter is disengaged</p> <p>No DTC Active:</p> <p><u>Slow Event-Based Camshaft Test:</u></p> <p>Crankshaft is synchronized</p>	<p>GetVLTR_b_V5A_FA</p> <p><u>Fast Event-Based Camshaft Test:</u></p> <p>Continuous every MEDRES event</p> <p>5VoltReferenceA_FA</p> <p>5VoltReferenceB_FA</p> <p>CrankSensor_FA</p> <p><u>Slow Event-Based Camshaft Test:</u></p>	<p>Continuous every 100 msec</p> <p><u>Fast Event-Based Camshaft Test:</u></p> <p>Continuous every MEDRES event</p> <p><u>Slow Event-Based Camshaft Test:</u></p> <p>8 failures out of 10 samples</p>	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
				= 0	No DTC Active:	5VoltReferenceA_FA 5VoltReferenceB_FA CrankSensor_FA	Continuous every engine cycle	
Camshaft Position (CMP) Sensor Performance Bank 1 Sensor A	P0341	Determines if a performance fault exists with the cam position bank 1 sensor A signal	<p><u>Fast Event-Based Camshaft Test:</u></p> <p>The number of camshaft pulses received during first 24 MEDRES events is less than 2 or greater than 8</p> <p>(There are 24 MEDRES events per engine cycle)</p> <p><u>Slow Event-Based Camshaft Test:</u></p> <p>The number of camshaft pulses received during 100 engine cycles</p>		<p><u>Fast Event-Based Camshaft Test:</u></p> <p>Crankshaft is synchronized</p> <p>Starter must be engaged to enable the diagnostic, but the diagnostic will not disable when the starter is disengaged</p> <p>No DTC Active:</p> <p><u>Slow Event-Based Camshaft Test:</u></p> <p>Crankshaft is synchronized</p>	<p>5VoltReferenceA_FA 5VoltReferenceB_FA CrankSensor_FA</p> <p>5VoltReferenceA_FA 5VoltReferenceB_FA CrankSensor_FA</p>	<p><u>Fast Event-Based Camshaft Test:</u></p> <p>Continuous every MEDRES event</p> <p><u>Slow Event-Based Camshaft Test:</u></p> <p>8 failures out of 10 samples</p>	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			OR	< 398 > 402	No DTC Active:	5VoltReferenceA_FA 5VoltReferenceB_FA CrankSensor_FA Crank circuit	Continuous every engine cycle	
IGNITION CONTROL #1 CIRCUIT	P0351	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for Cylinder 1 (Cylinders 1 and 4 for V6 with waste spark)	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type: B MIL: YES Trips: 2
IGNITION CONTROL #2 CIRCUIT	P0352	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for Cylinder 2 (Cylinders 2 and 5 for V6 with waste spark)	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type: B MIL: YES Trips: 2
IGNITION CONTROL #3 CIRCUIT	P0353	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for Cylinder 3 (Cylinders 3 and 6 for V6 with waste spark)	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type: B MIL: YES Trips: 2
IGNITION CONTROL #4 CIRCUIT	P0354	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for Cylinder 4 (if applicable)	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type: B MIL: YES Trips: 2
IGNITION CONTROL #5 CIRCUIT	P0355	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for Cylinder 5 (if applicable)	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type: B MIL: YES Trips: 2
IGNITION CONTROL #6 CIRCUIT	P0356	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for Cylinder 6 (if applicable)	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type: B MIL: YES Trips: 2

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
IGNITION CONTROL #7 CIRCUIT	P0357	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for Cylinder 7 (if applicable)	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type: B MIL: YES Trips: 2
IGNITION CONTROL #8 CIRCUIT	P0358	This diagnostic checks the circuit for electrical integrity during operation. Monitors EST for Cylinder 8 (if applicable)	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Engine running Ignition Voltage	> 6.00 Volts	50 Failures out of 63 Samples 100 msec rate	Type: B MIL: YES Trips: 2
Catalyst System Low Efficiency Bank 1	P0420	Oxygen Storage (Stored Oxygen Release Monitor or STORM)	OSC Mass EWMA (EWMA filtered)	<= 2.400 grams air		<u>Diagnostic Enable Conditions</u>	Minimum of 1 test per trip Maximum of 10 tests per trip Frequency: 12.5 ms continuous	Type A 1 Trip(s)
		The catalyst washcoat contains Cerium Oxide. Cerium Oxide reacts with NO and O2 during lean A/F excursions to store the excess oxygen (I.e. Cerium Oxidation). During rich A/F excursions, Cerium Oxide reacts with CO and H2 to release this stored oxygen (I.e. Cerium Reduction). This is referred to as the Oxygen Storage Capacity, or OSC. The catalyst diagnostic's strategy is to essentially measure this through a forced Rich A/F excursion following a decel fuel cutoff event. OSC Period = HO2S2 Resp Time – HO2S1 Resp Time – Inert Catalyst Transport Delay. OSC Mass = Integrate{ MAF(Bank,t) * [EquivalenceRatio(t)/FuelTrim LT – 1]} @ t, t=0 to OSC Period.	Test Completion: HO2S1 ≥ 600 mV and HO2S2 ≥ 200 mV OR HO2S2 Response Time - HO2S1 Response Time > 1.10 seconds	This diagnostic has the ability to run as a stand alone diagnostic or following the Post O2 Performance Diagnostic (POPD) depending on the calibration value below: Stand Alone Diagnostic: 0 (a value of 1 means the diagnostic is running in the stand alone state and a value of 0 means the diagnostic is running following POPD's completion of the rich to lean portion of the diagnostic). If calibrated to run stand alone then the catalyst diagnostic must not have completed for trip. If calibrated to run following POPD's completion of the rich to lean portion of the diagnostic (i.e. Stand Alone Diagnostic = 0) then POPD must make the request for decel fuel cutoff through the catalyst diagnostic.				

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		The Catalyst Monitoring Test is done during a deceleration. Several conditions must be met in order to execute this test. These conditions and their related values are listed in the secondary parameters area of this document.			Predicted Catalyst Temperature	≥ 525 degC for > 80 seconds		
					Engine speed and Vehicle Speed	≥ 900 RPM and > 26.72 MPH respectively for a minimum of 20 seconds		
					Predicted Catalyst Temperature	≥ 525 degC and ≤ 800 degC		
					Tests attempted this trip	< 255		
					The catalyst diagnostic has not yet completed for the current trip.			
					Device control is Disabled			
					Green Converter Delay	Not Active		
					Induction Air	-20 ≤ °C ≤ 100		
					Fuel Level	≥ 10 percent (if there is no fuel level fault present) or ≥ 0 percent if there is a fuel level fault active		
					RunCrank Voltage	≥ 11.00 Volts		
					Minimum Learn Enable Time to ensure stable BLM and PLM values	≥ 100 seconds or ≥ 100 seconds if the fuel tank level increases by ≥ 10 percent or following a code clearing event		
					ECT	73 ≤ °C ≤ 128		
					Barometric Pressure	≥ 70 KPA		
					Rapid Step Response (RSR) feature will initiate multiple tests:			
					If the difference between current EWMA value and the current OSC Normalized Mass value is > 1.570 and the current Normalized OSC Mass value is < 2.203			
					Maximum of 24 RSR tests to detect failure when RSR is enabled.			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.												
					<p align="center">Green Converter Delay Criteria</p> <p>This is part of the check for the Diagnostic Enable Conditions section</p> <p>The diagnostic will not be enabled until the following has been met:</p> <p>Predicted catalyst temperature > 550 ° C for 3600 seconds non-continuously.</p> <p>Note: this feature is only enabled when the vehicle is new and <u>cannot be enabled in service</u> To allow a DFCO Event</p> <p>This is checked once a decel fuel cutoff event is detected but prior to the catalyst diagnostic moving into the state used to saturate the converters lean (prior to making a measurement). This is to ensure driver's foot is off of the throttle.</p> <table border="1" data-bbox="1262 972 1745 1008"> <tr> <td>Percent Throttle</td> <td>≤ 1.00 %</td> </tr> </table> <p align="center">Valid DFCO Period Criteria</p> <p>Prior Enable Criteria Met</p> <table border="1" data-bbox="1262 1084 1745 1252"> <tr> <td>Decel Fuel Cutoff Time</td> <td>≥ 2.35 seconds</td> </tr> <tr> <td>HO2S1 (pre-O2 sensor)</td> <td>≤ 300.000 mV prior to DFCO exit</td> </tr> <tr> <td>HO2S2 (post-O2 sensor)</td> <td>≤ 101 mV for 2.50 seconds prior to DFCO exit</td> </tr> </table> <p align="center">Valid DFCO Exit Criteria</p> <table border="1" data-bbox="1262 1287 1745 1360"> <tr> <td>Cumulative Throttle Movement</td> <td>< 20.00 percent</td> </tr> <tr> <td>Equivalence Ratio</td> <td>≥ 1.00</td> </tr> </table> <p align="center">General Enable</p> <p align="center">DTC's Not Set</p> <p align="center">MAF_SensorFA</p> <p align="center">MAF_SensorTFTKO</p>		Percent Throttle	≤ 1.00 %	Decel Fuel Cutoff Time	≥ 2.35 seconds	HO2S1 (pre-O2 sensor)	≤ 300.000 mV prior to DFCO exit	HO2S2 (post-O2 sensor)	≤ 101 mV for 2.50 seconds prior to DFCO exit	Cumulative Throttle Movement	< 20.00 percent	Equivalence Ratio	≥ 1.00		
Percent Throttle	≤ 1.00 %																			
Decel Fuel Cutoff Time	≥ 2.35 seconds																			
HO2S1 (pre-O2 sensor)	≤ 300.000 mV prior to DFCO exit																			
HO2S2 (post-O2 sensor)	≤ 101 mV for 2.50 seconds prior to DFCO exit																			
Cumulative Throttle Movement	< 20.00 percent																			
Equivalence Ratio	≥ 1.00																			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					AmbPresDfItDStatus IAT_SensorCircuitFA IAT_SensorCircuitTFTKO ECT_Sensor_FA O2S_Bank_1_Sensor_1_FA O2S_Bank_1_Sensor_2_FA O2S_Bank_2_Sensor_1_FA O2S_Bank_2_Sensor_2_FA FuelTrimSystemB1_FA FuelTrimSystemB1_TFTKO FuelTrimSystemB2_FA FuelTrimSystemB2_TFTKO EngineMisfireDetected_FA EvapPurgeSolenoidCircuit_FA IAC_SystemRPM_FA EGRValvePerformance_FA EGRValveCircuit_FA CamSensorAnyLocationFA CrankSensor_FA TPS_Performance_FA EnginePowerLimited VehicleSpeedSensor_FA			
Catalyst System Low Efficiency Bank 2	P0430	Oxygen Storage (Stored Oxygen Release Monitor or STORM)	OSC Mass EWMA (EWMA filtered)	<= 2.400 grams air		<u>Diagnostic Enable Conditions</u>	Minimum of 1 test per trip Maximum of 10 tests per trip Frequency: 12.5 ms continuous	Type A 1 Trip(s)
		The catalyst washcoat contains Cerium Oxide. Cerium Oxide reacts with NO and O2 during lean A/F excursions to store the excess oxygen (i.e. Cerium Oxidation). During rich A/F excursions, Cerium Oxide reacts with CO and H2 to release this stored oxygen (i.e. Cerium Reduction). This is referred to as the Oxygen Storage		Test Completion: HO2S1 ≥ 600 mV and HO2S2 ≥ 200 mV	This diagnostic has the ability to run as a stand alone diagnostic or following the Post O2 Performance Diagnostic (POPD) depending on the calibration value below:			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Capacity, or OSC. The catalyst diagnostic's strategy is to essentially measure this through a forced Rich A/F excursion following a decel fuel cutoff event. OSC Period = HO2S2 Resp Time – HO2S1 Resp Time – Inert Catalyst Transport Delay. OSC Mass = Integrate{ MAF(Bank,t) * [EquivalenceRatio(t)/FuelTrim LT – 1]} @ t, t=0 to OSC Period.	OR HO2S2 Response Time - HO2S1 Response Time > 1.10 seconds		Stand Alone Diagnostic: 0 (a value of 1 means the diagnostic is running in the stand alone state and a value of 0 means the diagnostic is running following POPD's completion of the rich to lean portion of the diagnostic). If calibrated to run stand alone then the catalyst diagnostic must not have completed for trip. If calibrated to run following POPD's completion of the rich to lean portion of the diagnostic (i.e. Stand Alone Diagnostic = 0) then POPD must make the request for decel fuel cutoff through the catalyst diagnostic.			
		The Catalyst Monitoring Test is done during a deceleration. Several conditions must be met in order to execute this test. These conditions and their related values are listed in the secondary parameters area of this document.			Predicted Catalyst Temperature ≥ 525 degC for > 80 seconds			
					Engine speed and Vehicle Speed ≥ 900 RPM and > 26.72 MPH respectively for a minimum of 20 seconds			
					Predicted Catalyst Temperature ≥ 525 degC and ≤ 800 degC			
					Tests attempted this trip < 255			
					The catalyst diagnostic has not yet completed for the current trip.			
					Device control is Disabled			
					Green Converter Delay Not Active			
					Induction Air -20 ≤ °C ≤ 100			
					Fuel Level ≥ 10 percent (if there is no fuel level fault present) or ≥ 0 percent if there is a fuel level fault active			
					RunCrank Voltage ≥ 11.00 Volts			
					Minimum Learn Enable Time to ensure stable BLM and PLM values ≥ 100 seconds or ≥ 100 seconds if the fuel tank level increases by ≥ 10 percent or following a code clearing event			
					ECT 73 ≤ °C ≤ 128			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					<p>Barometric Pressure ≥ 70 KPA</p> <p>Rapid Step Response (RSR) feature will initiate multiple tests:</p> <p>If the difference between current EWMA value and the current OSC Normalized Mass value is > 1.730 and the current Normalized OSC Mass value is < 2.117</p> <p>Maximum of 24 RSR tests to detect failure when RSR is enabled.</p> <p>Green Converter Delay Criteria</p> <p>This is part of the check for the Diagnostic Enable Conditions section</p> <p>The diagnostic will not be enabled until the following has been met:</p> <p>Predicted catalyst temperature $> 550^{\circ}$ C for 3600 seconds non-continuously.</p> <p>Note: this feature is only enabled when the vehicle is new and cannot be enabled in service</p> <p>To allow a DFCO Event</p> <p>This is checked once a decel fuel cutoff event is detected but prior to the catalyst diagnostic moving into the state used to saturate the converters lean (prior to making a measurement). This is to ensure driver's foot is off of the throttle.</p> <p>Percent Throttle ≤ 1.00 %</p> <p>Valid DFCO Period Criteria</p> <p>Prior Enable Criteria Met</p>			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Decel Fuel Cutoff Time	≥ 2.35 seconds		
					HO2S1 (pre-O2 sensor)	≤ 300.000 mV prior to DFCO exit		
					HO2S2 (post-O2 sensor)	≤ 101 mV for 2.50 seconds prior to DFCO exit		
					Valid DFCO Exit Criteria			
					Cumulative Throttle Movement	< 20.00 percent		
					Equivalence Ratio	≥ 1.00		
					General Enable			
					DTC's Not Set			
					MAF_SensorFA			
					MAF_SensorTFTKO			
					AmbPresDfItDStatus			
					IAT_SensorCircuitFA			
					IAT_SensorCircuitTFTKO			
					ECT_Sensor_FA			
					O2S_Bank_1_Sensor_1_FA			
					O2S_Bank_1_Sensor_2_FA			
					O2S_Bank_2_Sensor_1_FA			
					O2S_Bank_2_Sensor_2_FA			
					FuelTrimSystemB1_FA			
					FuelTrimSystemB1_TFTKO			
					FuelTrimSystemB2_FA			
					FuelTrimSystemB2_TFTKO			
					EngineMisfireDetected_FA			
					EvapPurgeSolenoidCircuit_FA			
					IAC_SystemRPM_FA			
					EGRValvePerformance_FA			
					EGRValveCircuit_FA			
					CamSensorAnyLocationFA			
					CrankSensor_FA			
					TPS_Performance_FA			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					EnginePowerLimited			
					VehicleSpeedSensor_FA			
Evaporative Emission (EVAP) System Small Leak Detected	P0442	This DTC will detect a small leak ($\geq 0.020''$) in the EVAP system between the fuel fill cap and the purge solenoid. The engine off natural vacuum method (EONV) is used. EONV is an evaporative system leak detection diagnostic that runs when the vehicle is shut off when enable conditions are met. Prior to sealing the system and performing the diagnostic, the fuel volatility is analyzed. In an open system (Canister Vent Solenoid [CVS] open) high volatility fuel creates enough flow to generate a measurable pressure differential relative to atmospheric.	The total delta from peak pressure to peak vacuum during the test is normalized against a calibration pressure threshold table that is based upon fuel level and ambient temperature. (See P0442: EONV Pressure Threshold Table on Supporting Tables Tab). The normalized value is calculated by the following equation: $1 - (\text{peak pressure} - \text{peak vacuum}) / \text{pressure threshold}$. The normalized value is entered into EWMA (with 0= perfect pass and 1= perfect fail).		Fuel Level Drive Time Drive length ECT Baro Odometer Engine not run time before key off must be Time since last complete test if normalized result and EWMA is passing OR Time since last complete test if normalized result or EWMA is failing Estimated ambient temperature at end of drive	$10\% \leq \text{Percent} \leq 90\%$ ≥ 600 seconds ≥ 3.1 miles ≥ 70 °C ≥ 70 kPa ≥ 10.0 miles \leq refer to "P0442: Engine Off Time Before Vehicle Off Maximum as a Function of Estimated Ambient Temperature table" in Supporting Tables. ≥ 17 hours ≥ 10 hours	Once per trip, during hot soak (up to 2400 sec.). No more than 2 unsuccessful attempts between completed tests.	1 trip Type A EWMA Average run length is 6 under normal conditions Run length is 3 to 6 trips after code clear or non-volatile reset

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
					<p>AND</p> <p>Must expire Estimate of Ambient Temperature Valid Conditioning Time. "P0442: Estimate of Ambient Temperature Valid Conditioning Time" in Supporting Tables Tab.</p> <p>OR</p> <p>4. Not a Cold Start and greater than a Short Soak</p> <p>Previous time since engine off</p> <p>AND</p> <p>Must expire maximum value in Estimate of Ambient Temperature Valid Conditioning Time. Please see "P0442: Estimate of Ambient Temperature Valid Conditioning Time" in Supporting Tables Tab.</p>	<p>Vehicle Speed ≥ 24.2 mph</p> <p>AND</p> <p>Mass Air Flow ≥ 10 g/sec</p> <p>> 7200 seconds</p> <p>Vehicle Speed ≥ 24.2 mph</p> <p>AND</p> <p>Mass Air Flow ≥ 10 g/sec</p>			
				<p>Abort Conditions:</p>	<p>1. High Fuel Volatility</p> <p>During the volatility phase, pressure in the fuel tank is integrated vs. time. If the integrated pressure is</p> <p>then test aborts and unsuccessful attempts is incremented.</p>	<p>< -5</p>			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					<p>OR</p> <p>2. Vacuum Refueling Detected</p> <p>See P0454 Fault Code for information on vacuum refueling algorithm.</p> <p>OR</p> <p>3. Fuel Level Refueling Detected</p> <p>See P0464 Fault Code for information on fuel level refueling.</p> <p>OR</p> <p>4. Vacuum Out of Range and No Refueling</p> <p>See P0451 Fault Code for information on vacuum sensor out of range and P0464 Fault Code for information on fuel level refueling.</p> <p>OR</p> <p>5. Vacuum Out of Range and Refueling Detected</p> <p>See P0451 Fault Code for information on vacuum sensor out of range and P0464 Fault Code for information on fuel level refueling.</p>			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Evaporative Emission (EVAP) Vent Solenoid Control Circuit (ODM)	P0449	This DTC checks the circuit for electrical integrity during operation. If the P0449 is active, an intrusive test is performed with the vent solenoid commanded closed for 15 seconds.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Run/Crank Voltage Run/Crank voltage goes to 0 volts at key off	11 volts ≤ Voltage ≤ 32 volts	20 failures out of 25 samples 250 ms / sample Continuous with solenoid operation	2 trips Type B
Fuel Tank Pressure (FTP) Sensor Circuit Performance	P0451	The DTC will be set if the fuel tank vacuum sensor is out of range when it tries to re-zero prior to the phase-1 or phase-2 portions of the engine-off natural vacuum small leak test.	The tank vacuum sensor voltage is compared to a window about the nominal sensor voltage offset (~1.5 volts) Upper voltage threshold (voltage addition above the nominal voltage) Lower voltage threshold (voltage subtraction below the nominal voltage)	0.2 volts 0.2 volts	This test will execute whenever the engine-off natural vacuum small leak test (P0442) executes		This test is executed during an engine-off natural vacuum small leak test. The number of times that it executes can range from zero to two per engine-off period.	1 trip Type A EWMA Average run length: 6 Run length is 2 trips after code clear or non-volatile reset

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			<p>The difference between tank vacuum sensor voltage and the nominal offset voltage is then normalized against the appropriate threshold listed above to produce a ratio between 0.0 and 1.0. This normalized re-zero ratio is then filtered with a EWMA (with 0= perfect pass and 1=perfect fail).</p> <p>When EWMA is</p> <p>, the DTC light is illuminated.</p> <p>The DTC light can be turned off if the EWMA is</p> <p>and stays below the EWMA fail threshold for 2 additional consecutive trips.</p>	<p>> 0.73 (EWMA Fail Threshold)</p> <p>≤ 0.40 (EWMA Re-Pass Threshold)</p>			<p>The length of the test is determined by the refueling rationality test, which can take up to 600 seconds to complete.</p>	
Fuel Tank Pressure (FTP) Sensor Circuit Low Voltage	P0452	This DTC will detect a fuel tank pressure sensor signal that is too low out of range.	<p>Fuel tank pressure sensor signal</p> <p>The normal operating range of the fuel tank pressure sensor is 0.5 volts (~1245 Pa) to 4.5 volts (~ -3736 Pa).</p>	< 0.15 volts (3 % of Vref or ~ 1681 Pa)	<p>Time delay after sensor power up for sensor warm-up</p> <p>ECM State ≠ crank</p>	is 0.10 seconds	<p>80 failures out of 100 samples</p> <p>100 ms / sample</p>	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Stops 6.0 seconds after key-off		Continuous	
Fuel Tank Pressure (FTP) Sensor Circuit High Voltage	P0453	This DTC will detect a fuel tank pressure sensor signal that is too high out of range.	Fuel tank pressure sensor signal The normal operating range of the fuel tank pressure sensor is 0.5 volts (~1245 Pa) to 4.5 volts (~ -3736 Pa).	> 4.85 volts (97% of Vref or ~ -4172 Pa)	Time delay after sensor power up for sensor warm-up ECM State ≠ crank Stops 6.0 seconds after key-off	is 0.10 seconds	80 failures out of 100 samples 100 ms / sample Continuous	2 trips Type B
Fuel Tank Pressure (FTP) Sensor Circuit Intermittent	P0454	This DTC will detect intermittent tank vacuum sensor signals that would have caused the engine-off natural vacuum small leak test to abort due to an apparent re-fueling event.	If an abrupt change in tank vacuum is detected the engine-off natural vacuum test is aborted due to an apparent refueling event. Subsequent to the abort, a refueling rationality test is executed to confirm that a refueling event occurred. If a refueling is confirmed, then the test sample is considered passing. Otherwise, the sample is considered failing indicating an intermittent signal problem.		This test will execute whenever the engine-off natural vacuum small leak test (P0442) executes		This test is executed during an engine-off natural vacuum small leak test. The test can only execute up to once per engine-off period. The length of the test is determined by the refueling rationality test, which can take up to 600 seconds to complete.	1 trips Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			<p>An abrupt change is defined as a change in vacuum:</p> <p>in the span of 1.0 seconds.</p> <p>But in 12.5 msec.</p> <p>A refueling event is confirmed if the fuel level has a persistent change</p> <p>for 30 seconds.</p>	<p>>112 Pa</p> <p>< 249 Pa</p> <p>of 10 %</p>			<p>The test will report a failure if 2 out of 3 samples are failures.</p> <p>12.5 ms / sample</p> <p>Continuous when vent solenoid is closed.</p>	
Evaporative Emission (EVAP) System Large Leak Detected	P0455	<p>This DTC will detect a weak vacuum condition (large leak or purge blockage) in the EVAP system.</p> <p>Purge valve is controlled (to allow purge flow) and vent valve is commanded closed.</p>	<p>Purge volume</p> <p>while</p> <p>Tank vacuum</p> <p>After setting the DTC for the first time, 2 liters of fuel must be consumed before setting the DTC for the second time.</p>	<p>> 17 liters</p> <p>≤ 2740 Pa</p>	<p>Fuel Level</p> <p>System Voltage</p> <p>BARO</p> <p>Purge Flow</p> <p>No active DTCs:</p>	<p>10% ≤ Percent ≤ 90%</p> <p>11 volts ≤ Voltage ≤ 32 volts</p> <p>≥ 70 kPa</p> <p>≥ 3.75 %</p> <p>MAP_SensorFA</p> <p>TPS_FA</p> <p>VehicleSpeedSensor_FA</p> <p>IAT_SensorCircuitFA</p> <p>ECT_Sensor_FA</p> <p>AmbientAirDefault</p> <p>EnginePowerLimited</p>	<p>Once per cold start</p> <p>Time is dependent on driving conditions</p> <p>Maximum time before test abort is 1000 seconds</p>	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			<p><u>Weak Vacuum Follow-up Test</u> (fuel cap replacement test) Weak Vacuum Test failed.</p> <p>Passes if tank vacuum</p> <p>Note: Weak Vacuum Follow-up Test can only report a pass.</p>	<p>≥ 2740 Pa</p>	<p><u>Cold Start Test</u></p> <p>If ECT > IAT, Startup temperature delta (ECT-IAT):</p> <p>Cold Test Timer</p> <p>Startup IAT</p> <p>Startup ECT</p> <p><u>Weak Vacuum Follow-up Test</u></p> <p>This test can run following a weak vacuum failure or on a hot restart.</p>	<p>P0443</p> <p>P0449</p> <p>P0452</p> <p>P0453</p> <p>P0454</p> <p>≤ 8 °C</p> <p>≤ 1000 seconds</p> <p>4 °C ≤ Temperature ≤ 30 °C</p> <p>≤ 35 °C</p>	<p><u>Weak Vacuum Follow-up Test</u></p> <p>With large leak detected, the follow-up test is limited to 1300 seconds. Once the MIL is on, the follow-up test runs indefinitely.</p>	
Fuel Level Sensor 1 Performance (For use on vehicles	P0461	This DTC will detect a fuel sender stuck in range in the primary fuel tank.	Delta Fuel Volume change	< 3 liters	Engine Running No active DTCs:		250 ms / sample	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
with a single fuel tank)			over an accumulated 150 miles.			VehicleSpeedSensor_F A	Continuous	
Fuel Level Sensor 1 Circuit Low Voltage	P0462	This DTC will detect a fuel sender stuck out of range low in the primary fuel tank.	Fuel level Sender % of 5V range	< 10 %	Run/Crank Voltage Run/Crank voltage goes to 0 volts at key off	11 volts ≤ Voltage ≤ 32 volts	100 failures out of 125 samples 100 ms / sample Continuous	2 trips Type B
Fuel Level Sensor 1 Circuit High Voltage	P0463	This DTC will detect a fuel sender stuck out of range high in the primary fuel tank.	Fuel level Sender % of 5V range	> 60 %	Run/Crank Voltage Run/Crank voltage goes to 0 volts at key off	11 volts ≤ Voltage ≤ 32 volts	100 failures out of 125 samples 100 ms / sample Continuous	2 trips Type B
Fuel Level Sensor 1 Circuit Intermittent	P0464	This DTC will detect intermittent fuel level sensor signals that would have caused the engine-off natural vacuum small leak test to abort due to an apparent re-fueling event.	If a change in fuel level is detected, the engine-off natural vacuum test is aborted due to an apparent refueling event. Subsequent to the abort, a refueling rationality test is executed to confirm that an actual refueling event occurred. If a refueling event is confirmed, then the test sample is considered passing. Otherwise, the sample is considered failing indicating an intermittent signal problem.		This test will execute whenever the engine-off natural vacuum small leak test (P0442) executes		This test is executed during an engine-off natural vacuum small leak test. The test can only execute up to once per engine-off period.	1 trips Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			<p>An intermittent change in fuel level is defined as:</p> <p>The fuel level changes</p> <p>and does not remain</p> <p>for 30 seconds during a 600 second refueling rationality test.</p>	<p>by 10 %</p> <p>> 10 %</p>			<p>The length of the test is determined by the refueling rationality test, which can take up to 600 seconds to complete.</p> <p>The test will report a failure if 2 out of 3 samples are failures.</p> <p>100 ms / sample</p>	
Cooling Fan 1 Relay Control Circuit (ODM)	P0480	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		<p>Run/Crank Voltage</p> <p>Engine Speed</p>	<p>11 volts ≤ Voltage ≤ 32 volts</p> <p>≥ 0 RPM</p>	<p>20 failures out of 25 samples</p> <p>250 ms / sample</p> <p>Continuous with fan operation</p>	<p>2 trips Type B</p> <p>Not used on systems with Mechanical Fan)</p>

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Cooling Fan 2 Relay Control Circuit (ODM)	P0481	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Run/Crank Voltage Engine Speed	11 volts ≤ Voltage ≤ 32 volts ≥ 0 RPM	20 failures out of 25 samples 250 ms / sample Continuous with fan operation	2 trips Type B Not used on systems with Mechanical Fan)
Cooling Fan 3 Relay Control Circuit (ODM)	P0482	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Run/Crank Voltage Engine Speed	11 volts ≤ Voltage ≤ 32 volts ≥ 0 RPM	20 failures out of 25 samples 250 ms / sample Continuous with fan operation	2 trips Type B Not used on systems with Mechanical Fan)
Evaporative Emission (EVAP) System Flow During Non-Purge	P0496	This DTC will determine if the purge solenoid is leaking to engine manifold vacuum. This test will run with the purge valve closed and the vent valve closed.	Tank Vacuum for 5 seconds BEFORE Test time	> 2491 Pa ≥ refer to "P0496: Purge Valve Leak Test Engine Vacuum Test Time (Cold Start) as a Function of Fuel Level table" in Supporting Tables Tab.	Fuel Level System Voltage BARO Startup IAT Startup ECT Engine Off Time No active DTCs:	10% ≤ Percent ≤ 90% 11 volts ≤ Voltage ≤ 32 volts ≥ 70 kPa 4 °C ≤ Temperature ≤ 30 °C ≤ 35 °C ≥ 28800.0 seconds	Once per cold start Cold start: max time is 1000 seconds	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						MAP_SensorFA TPS_FA VehicleSpeedSensor_FA IAT_SensorCircuitFA ECT_Sensor_FA AmbientAirDefault EnginePowerLimited P0443 P0449 P0452 P0453 P0454		
Engine Oil Pressure (EOP) Switch	P0520	When criteria are met that assure no oil pressure should be present, read state of oil pressure switch circuit	State of Engine Oil Pressure (EOP) switch circuit	Detecting.open.circuit.will.set.a.fault	Run/Crank powermode active Engine movement detected Key in crank position Power down engine coolant Powertrain relay voltage Run/Crank Ignition voltage	= True = False = False > 80 Deg C >= 11 and <= 32 Volts >= 11 and <= 32 Volts	Fail detected for >= 5.0 Sec.	0 trip(s) Type X
					AND			
					Time since engine last running	> 7200 Seconds		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Timer for time since engine last running validity = True OR < (Power down engine coolant) minus 10 Deg C Engine coolant at power up		250 msec loop Continuous	
					Diagnostic enabled / disabled No active DTC's	Disabled Fault bundles: ECT_Sensor_Ckt_FA		
Engine Oil Pressure (EOP) Sensor Performance	P0521	Determines if the Engine Oil Pressure (EOP) Sensor is stuck or biased in range	<p>To fail a currently passing test:</p> The filtered, weighted difference between measured EOP and predicted EOP (a function of engine speed and engine oil temp.):	< -50.0 kPa OR > 50.0 kPa	Diagnostic enabled / disabled Oil Pressure Sensor In Use	Enabled Present	Performed every 100 msec	2 trip(s) Type B
			<p>To pass a currently failing test:</p> The filtered, weighted difference between measured EOP and predicted EOP (a function of engine speed and engine oil temp.):		Filtered engine oil pressure test weighting (function of engine speed, engine oil temperature, predicted oil pressure, and engine load stability). Details on Supporting Tables Tab (P0521 Section)			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
				> -47.0 kPa AND < 47.0 kPa	No active DTC's	>= 0.30 weighting Fault bundles: CrankSensorFA ECT_Sensor_FA MAF_SensorFA IAT_SensorFA EOPCircuit_FA		
Engine Oil Pressure (EOP) Sensor Circuit Low Voltage	P0522	Determines if the Engine Oil Pressure (EOP) Sensor circuit voltage is too low	(Engine Oil Pressure Sensor Circuit Voltage) / 5 Volts	< 5 percent	Engine Running Ignition Voltage Sensor Present Diagnostic enabled / disabled	= True <= 32.0 V and >= 11.0 V Yes Enabled	50 failures out of 63 samples Performed every 100 msec	2 trip(s) Type B
Engine Oil Pressure (EOP) Sensor Circuit High Voltage	P0523	Determines if the Engine Oil Pressure (EOP) Sensor circuit voltage is too high	(Engine Oil Pressure Sensor Circuit Voltage) / 5	> 95 percent	Engine Running Ignition Voltage Sensor Present Diagnostic enabled / disabled	= True <= 32.0 V and >= 11.0 V Yes Enabled	204 failures out of 255 samples Performed every 100 msec	2 trip(s) Type B
Cruise Control Multifunction Switch Circuit	P0564	Detect when cruise control multifunction switch circuit (analog) voltage is in an illegal range	Cruise Control analog circuit voltage must be in an "illegal range" for greater than a calibratable period of time for cruise switch states that are received over serial data		CAN cruise switch diagnostic enable in FCM	TRUE -1	fail continuously for greater than 0.700 seconds	Type: C MIL: NO

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
								Trips: 1
Cruise Control Resume Circuit	P0567	Detects a failure of the cruise resume switch in a continuously applied state	Cruise Control Resume switch remains applied for greater than a calibratable period of time for architecture where cruise switch states are received over serial data		CAN cruise switch diagnostic enable in ECM	TRUE -1	fail continuously for greater than 90.000 seconds	Type: C MIL: NO Trips: 1
Cruise Control Set Circuit	P0568	Detects a failure of the cruise set switch in a continuously applied state	Cruise Control Set switch remains applied for greater than a calibratable period of time for architecture where cruise switch states are received over serial data		CAN cruise switch diagnostic enable in ECM	TRUE -1	fail continuously for greater than 90.000 seconds	Type: C MIL: NO Trips: 1
Cruise Control Input Circuit	P0575	Detects rolling count or protection value errors in Cruise Control Switch Status serial data signal	If x of y rolling count / protection value faults occur, disable cruise for duration of fault		Cruise Control Switch Serial Data Error Diagnostic Enable	TRUE -1	10 out of 16 counts	Type: C MIL: NO Trips:

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
								1	
Control Module Read Only Memory (ROM)	P0601	This DTC will be stored if the calibration check sum is incorrect	Output state invalid			PCM State = crank or run	Diagnostic runs continuously in the background	Type A 1 trips	
									Diagnostic reports a fault if 1 failure occurs on the first pass.
									Diagnostic reports a fault if 5 failures occur after the first pass is complete.
Control Module Not Programmed	P0602	This DTC will be stored if the PCM is a service PCM that has not been programmed.	Output state invalid			PCM State = crank or run	Diagnostic runs at powerup	Type A 1 trips	
									PCM is identified through calibration as a Service PCM
Control Module Long Term Memory Reset	P0603	Non-volatile memory checksum error at controller power-up	Checksum at power-up does not match checksum at power-down				Diagnostic runs at powerup	Type A 1 trips	
									Diagnostic reports a fault if 1 failure occurs
ECM RAM Failure	P0604	Indicates that the ECM is unable to correctly read data from or write data to RAM	Primary processor data pattern written doesn't match the pattern read for a count >	1 count if found on first memory scan. 5 counts if found on subsequent scans.			Will finish first memory scan within 30 seconds at all engine conditions - diagnostic runs continuously	Trips: 1	
								Type: A	
								MIL: YES	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Secondary processor battery backed RAM failed checksum twice for original values at power up and the defaulted values				Completion at initialization, <500 ms	
			Secondary processor copy of calibration area to RAM failed for a count >	2 counts			Completion at initialization, <500 ms	
			Secondary Processor data pattern written doesn't match the pattern read consecutive times				Will finish within 30 seconds at all engine conditions.	
			Secondary Processor TPS or APPS minimum learned values fail compliment check continuously				0.0625 sec continuous	
ECM Processor	P0606	Indicates that the ECM has detected an internal processor integrity fault	Returned values from Seed & Key algorithm different than expected			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No errors exist in intercommunication between primary and secondary processors	3/4 counts; 50.0 ms/count	Trips: 1
								Type: A
								MIL: YES
			Software tasks on the Primary Processor in the 12.5 ms loop were not executed or were not executed in the correct order.	0.0625 sec continuous		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	0.0625 sec continuous	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Software tasks on the Primary Processor in the 25 ms loop were not executed or were not executed in the correct order.	0.1250 sec continuous		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	0.1250 sec continuous	
			Software tasks on the Primary Processor in the 50 ms loop were not executed or were not executed in the correct order.	0.2500 sec continuous		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	0.2500 sec continuous	
			Software tasks on the Primary Processor in the 100 ms loop were not executed or were not executed in the correct order.	0.5000 sec continuous		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	0.5000 sec continuous	
			The first completion of the RAM diagnostic on the Primary Processor was completed > the amount of time	360.0000 sec continuous		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	360.0000 sec continuous	
			The first completion of the ROM diagnostic on the Primary Processor was completed > the amount of time	360.0000 sec continuous		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	360.0000 sec continuous	
			Software tasks on the Secondary Processor were not executed or were not executed in the correct	Two Consecutive Loops (12.5ms * 2) 25ms		Run/crank voltage or Powertrain relay voltage > 6.00 and	25 ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			order.			reduced power is false, else the failure will be reported for all conditions		
			Loss or invalid message of SPI communication from the Secondary Processor at initialization detected by the Primary Processor or loss or invalid message of SPI communication from the Secondary Processor after a valid message was recieved by the Primary Processor			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	In the primary processor, 159/400 counts intermittent or 15 counts continuous; 39 counts continuous @ initialization	
			Loss or invalid message of SPI communication from the Primary Processor at initialization detected by the Secondary Processor or loss or invalid message of SPI communication from the Primary Processor after a valid message was recieved by the Secondary Processor			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	In the secondary processor 0.4750 sec at initialization, 0.1750 sec continuous or 20/200 intermittent.	
			Primary processor check of the secondary processor by verifying the hardware line toggle between the two processors toggles within the threshold values	9.3750 ms and 15.6250 ms		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	9 counts continuous at initialization or 9 counts continuous; 12.5 ms /count in the primary processor	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Primary Processor TPS or APP minimum learned values fail compliment check			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	0.1000 sec continuous	
			The oscillator failed for the Primary processor where the clock is outside the threshold	27.85 kHz and 37.68 kHz		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	100 ms continuous	
			The secondary check of the ALU failed to compute the expected result			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	12.5 ms continuous	
			Secondary processor failed configuration check of the registers.			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	12.5 ms continuous	
			Secondary processor checks stack beginning and end point for pattern written at initialization.			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	12.5ms continuous	
			Secondary processor check that the Primary processor hasn't set a select combination of internal			Run/crank voltage or Powertrain relay voltage > 6.00 and	12.5ms continuous	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			processor faults			reduced power is false, else the failure will be reported for all conditions		
			The primary processor check of the ALU failed to compute the expected result	Two Consecutive Times		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	12.5ms continuous	
			Primary processor failed configuration check of the registers.			Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	12.5ms continuous	
Main & MHC state of health fault	P0607		Primary state of health (SOH) discrete line is not toggling between the two processors for a time >	0.4875 sec		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	0.4875 sec continuous	Trips: 1 Type: C MIL: NO
Control Module Accelerator Pedal Position (APP) System Performance	P060D	Verify that the indicated accelerator pedal position calculation is correct	PPS sensor switch fault - When the APP sensor 2 is shorted to ground, the sensor value is >	41		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions Engine Running	Consecutive checks within 200ms or 2/2 counts; 175 ms/count	Trips: 1 Type: A MIL: YES

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						TPS minimum learn is not active No Pedal related errors or diagnostic faults. Diagnostic is enabled (Only applicable for Legacy accelerator pedals)		
			Difference between primary processor indicated accelerator pedal position and secondary indicated accelerator pedal position is >	5		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions Primary processor Pedal Sync Error is FALSE	44/40 counts or 39 counts continuous; 12.5 ms/count in the secondary processor	
Control Module EEPROM Error	P062F	Indicates that the NVM Error flag has not been cleared	Last EEPROM write did not complete		Ignition State	= unlock/accessory, run, or crank	1 test failure Diagnostic runs once at powerup	Type A 1 trins
5 Volt Reference #1 Circuit	P0641	Detects a continuous or intermittent short on th 5 volt reference circuit #1	Primary Processor Vref1 <	4.875		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	19/39 counts or 0.1875 continuous; 12.5 ms/count in primary processor	Trips: 1
			or Primary Processor Vref1 >	5.125				Type: A
			Secondary Processor Vref1 <	4.875			19/39 counts or 15 counts continuous; 12.5 ms/count in secondary processor	MIL: YES
			or Secondary Processor Vref1 >	5.125				

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Malfunction Indicator Lamp (MIL) Control Circuit (ODM)	P0650	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Run/Crank Voltage Remote Vehicle Start is not active	11 volts ≤ Voltage ≤ 32 volts	20 failures out of 25 samples 250 ms / sample	2 trip Type B NO MIL
5 Volt Reference #2 Circuit	P0651	Detects a continuous or intermittent short on th 5 volt reference circuit #2	Primary Processor Vref2 <	4.875		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	19/39 counts or 0.1875 sec continuous; 12.5 ms/count in primary processor	Trips: 1
			or Primary Processor Vref2 >	5.125				Type: A
			Secondary Processor Vref2 <	4.875			19/39 counts or 15 counts continuous; 12.5 ms/count in secondary processor	MIL: YES
			or Secondary Processor Vref2 >	5.125				
Powertrain Relay Control (ODM)	P0685	This DTC checks the circuit for electrical integrity during operation.	The ECM detects that the commanded state of the driver and the actual state of the control circuit do not match.		Run/Crank Voltage	11 volts ≤ Voltage ≤ 32 volts	8 failures out of 10 samples 250 ms / sample Continuous	2 trips Type B
Powertrain Relay Feedback Circuit High	P0690	This DTC is a check to determine if the Powertrain relay is functioning properly.	PT Relay feedback voltage is	≥ 18 volts	Powertrain relay commanded "ON"		5 failures out of 6 samples	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Stuck Test: PT Relay feedback voltage is when commanded 'OFF'	> 2 volts	No active DTCs:	PowertrainRelayStateOn_FA	1 second / sample Stuck Test: 100 ms/ sample Continuous failures ≥ 2 seconds	
Fuel Pump Control Module (FPCM) Requested MIL Illumination	P069E	Monitors the FPCM MIL request line to determine when the FPCM has detected a MIL illuminating fault.	Fuel Pump Control Module Emissions-Related DTC set			Time since power-up > 3 seconds	Continuous	1 trips Type A (No MIL)
Transmission Control Module (TCM) Requested MIL Illumination	P0700	Monitors the TCM MIL request line to determine when the TCM has detected a MIL illuminating fault.	Transmission Control Module Emissions-Related DTC set			Time since power-up > 3 seconds	Continuous	1 trips Type A (No MIL)
Traction Control Torque Request Circuit	P0856	Determines if torque request from the EBTCM is valid	Serial Communication 2's complement message - (\$140 for PPEI2 or \$1C9 for PPEI3, \$1CA for Hybrid)	Message <> 2's complement of message	Serial communication to EBTCM (U0108) Power Mode Propulsion System	No loss of communication = Run	<u>All except Class2 PWM:</u> Count of 2's complement values not equal >= 10 Performed every 25 msec	1 trip(s) Special Type C

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			<p>Serial Communication message (\$140 for PPEI2 or \$1C7 or \$1C9 for PPEI3, \$1CA for Hybrid) rolling count value</p> <p>Message rolling count value <> previous message rolling count value plus one</p> <p>OR</p> <p>Too many minimum limit torque request transitions occur from TRUE to FALSE to TRUE within a time period</p> <p>Requested torque intervention type toggles from not increasing request to increasing request</p>		Status of traction in GMLAN message (\$4E9)	<p>= Active</p> <p>= Traction Present</p>	<p>6 rolling count failures out of 10 samples Performed every 25 msec</p> <p>>= 3 multi-transitions out of 5 samples Performed every 200 msec</p>	
Motor Electronics Coolant Temperature Sensor Circuit Range/Performance	P0A01	Range/Performance	<p>Cold Start Fail: Delta between powerup PECL temp and coolant temp & Delta between powerup ECT and IAT</p> <p>Cold Start Pass: Delta between powerup PECL temp and coolant temp & Delta between powerup ECT and IAT</p>	<p>> 30.0° C</p> <p><= 15.75° C</p> <p><= 15.75° C</p> <p><= 15.75° C</p>	<p>Engine off time</p> <p>No active DTC's:</p>	<p>> 28800.0 seconds</p> <p>IAT_SensorFA ECT_Sensor_Ckt_FA MAF_SensorFA P0A01 P0A02</p>		Type B 2 Trip(s)

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Motor Electronics Coolant Temperature Sensor Circuit Low	P0A02	Out of range low	Motor Electronics Coolant Temperature	≤ 162.1°C	Minimum IAT Propulsion active time No active DTC's:	< 70.0°C > 10.0 seconds P0112 P0113	(30.0 fail/50.0 sample; 100 ms frequency)	Type B 2 Trip(s)
Motor Electronics Coolant Temperature Sensor Circuit Hi	P0A03	Out of range high	Motor Electronics Coolant Temperature	≤ -59.1°C	Minimum IAT Propulsion active time No active DTC's:	< 200000.0°C > 10.0 seconds P0112 P0113	(30.0 fail/50.0 sample; 100 ms frequency)	Type B 2 Trip(s)
Hybrid Prowtrain Control Module	P0A1D	Indicates that the MCPA has detected an HCP Status Failure fault	ECM criteria to look for MCPA message			Run/Crank High for at least 2.5000 sec All other parameters and enable conditions are controlled by the PLD and MCPA processors in the HCP.	3/4 counts; 12.5ms /count	Trips: 2 Type: B MIL: YES
Hybrid Prowertrain Control Module Request MIL Illumination	P0AC4	Monitor Hybrid Control Module (HCP) MIL Request to determine when the HCP has detected a MIL illuminating fault.	HCP Emissions-Related DTC set			Time since power-up > 3 seconds Time Since Code Clear > 2 seconds Diagnostic System not Disabled for Service Run Crank Active	Continuous 100 msec	1 trips Type A (No MIL)

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Inlet Airflow System Performance (naturally aspirated applications)	P1101	Determines if there are multiple air induction problems affecting airflow and/or manifold pressure.	Filtered Throttle Model Error AND (ABS(Measured Flow – Modeled Air Flow) Filtered OR ABS(Measured MAP – MAP Model 1) Filtered AND ABS(Measured MAP – MAP Model 2) Filtered	$\leq 150 \text{ kPa} \cdot (\text{g/s})$ $> 10 \text{ grams/sec}$ $> 15.0 \text{ kPa}$ $> 15.0 \text{ kPa}$	Engine Speed Engine Speed Coolant Temp Coolant Temp Intake Air Temp Intake Air Temp Minimum total weight factor (all factors multiplied together)	$\geq 450 \text{ RPM}$ $\leq 5700 \text{ RPM}$ $> -7 \text{ Deg C}$ $< 125 \text{ Deg C}$ $> -20 \text{ Deg C}$ $< 125 \text{ Deg C}$ ≥ 0.00 Filtered Throttle Model multiplied by TPS Residual Weight Factor based on RPM Modeled Air Flow multiplied by MAF Residual Weight Factor based on RPM and MAF Residual Weight Factor Based on MAF Estimate MAP Model 1 multiplied by MAP1 Residual Weight Factor based on RPM	Continuous Calculation are performed every 12.5 msec	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					No Active DTCs:	MAP Model 2 multiplied by MAP2 Residual Weight Factor based on RPM See table "IFRD Residual Weighting Factors". MAP_SensorCircuitFA EGRValve_FP EGRValvePerformance_FA MAF_SensorCircuitFA CrankSensor_FA ECT_sensor_FA ECT_Sensor_FP IAT_SensorFA IAT_SensorCircuitFP CylDeacSystemTFTKO		
O2S Insufficient Switching Bank 1 Sensor 1	P1133	This DTC determines if the O2 sensor is no longer sufficiently switching.	Fault condition present if Half Cycle L/R or R/L Switches are below the threshold. OR If Slope Time L/R or R/L Switches are below the threshold.	H/C L/R switches < Threshold, or H/C R/L switches < Threshold, (refer to table named "P1133 - O2S HC L to R Switches Limit Bank 1 Sensor 1" Pass/Fail Threshold table & "P1133 - O2S HC R to L Switches Limit Bank 1 Sensor 1" Pass/Fail Threshold table in Supporting tables tab) OR S/T L/R switches < 3, or S/T R/L switches < 3	No Active DTC's	TPS_ThrottleAuthority Defaulted MAP_SensorFA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault_NA MAF_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnsr Ckt_FA	Sample time is 40 seconds Frequency: Once per trip	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						FuelInjectorCircuit_FA AIR System FA EthanolCompositionSensor_FA EngineMisfireDetected_FA = P0131, P0132 or P0134 Bank 1 Sensor 1 DTC's not active System Voltage > 10.0 volts < system voltage < 32.0 volts EGR Device Control = Not active Idle Device Control = Not active Fuel Device Control = Not active AIR Device Control = Not active Low Fuel Condition Diag = False = Not Valid, See definition of Green Sensor Delay Criteria (B1S1) in Supporting Tables tab. Green O2S Condition O2 Heater on for >= 0 seconds Learned Htr resistance = Valid Engine Coolant IAT > 55 °C IAT > -40 °C Engine run Accum > 140 seconds Time since any AFM status change > 2.0 seconds Time since Purge On to Off change > 1.0 seconds Time since Purge Off to On change > 2.0 seconds Purge duty cycle >= 0 % duty cycle 20 gps <= engine airflow <= 55 gps Engine speed 1000 <= RPM <= 3000 Fuel < 87 % Ethanol Baro > 70 kpa Air Per Cylinder >= 150 mGrams		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Low Fuel Condition Diag = False Fuel Control State = Closed Loop Closed Loop Active = TRUE LTM fuel cell = Enabled Transient Fuel Mass <= 100.0 mgrams Baro = Not Defaulted not = Power Fuel Control State Enrichment Fuel State DFCO not active Commanded Proportional Gain >= 0.0 % <u>All of the above met for</u> Time > 2.5 seconds			
O2S Insufficient Switching Bank 2 Sensor 1	P1153	This DTC determines if the O2 sensor is no longer sufficiently switching.	Fault condition present if Half Cycle L/R or R/L Switches are below the threshold. OR If Slope Time L/R or R/L Switches are below the threshold.	H/C L/R switches < Threshold, or H/C R/L switches < Threshold, (refer to table named "P1153 - O2S HC L to R Switches Limit Bank 2 Sensor 1" Pass/Fail Threshold table & "P1153 - O2S HC R to L Switches Limit Bank 2 Sensor 1" Pass/Fail Threshold table in Supporting tables tab) OR S/T L/R switches < 3, or S/T R/L switches < 3	No Active DTC's Bank 2 Sensor 1 DTC's not active System Voltage	TPS_ThrottleAuthority Defaulted MAP_SensorFA IAT_SensorFA ECT_Sensor_FA AmbientAirDefault_NA MAF_SensorFA EvapPurgeSolenoidCircuit_FA EvapFlowDuringNonPurge_FA EvapVentSolenoidCircuit_FA EvapSmallLeak_FA EvapEmissionSystem_FA FuelTankPressureSnrCkt_FA FuelInjectorCircuit_FA AIR System FA EthanolCompositionSensor_FA EngineMisfireDetected_FA = P0151, P0152 or P0154 10.0 volts < system voltage < 32.0 volts	Sample time is 40 seconds Frequency: Once per trip	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					EGR Device Control = Not active Idle Device Control = Not active Fuel Device Control = Not active AIR Device Control = Not active Low Fuel Condition Diag = False = Not Valid, See definition of Green Sensor Delay Criteria (B2S1) in Supporting Tables tab. Green O2S Condition O2 Heater on for >= 0 seconds Learned Htr resistance = Valid Engine Coolant > 55 °C IAT > -40 °C Engine run Accum > 140 seconds Time since any AFM status change > 2.0 seconds Time since Purge On to Off change > 1.0 seconds Time since Purge Off to On change > 2.0 seconds Purge duty cycle >= 0 % duty cycle 20 gps <= engine Engine airflow airflow <= 55 gps Engine speed 1000 <= RPM <= 3000 Fuel < 87 % Ethanol Baro > 70 kpa Air Per Cylinder >= 150 mGrams Low Fuel Condition Diag = False Fuel Control State = Closed Loop Closed Loop Active = TRUE LTM fuel cell = Enabled Transient Fuel Mass <= 100.0 mgrams Baro = Not Defaulted Fuel Control State not = Power Enrichment Fuel State DFCO not active Commanded Proportional Gain >= 0.0 %			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					<p>The Cold Start Emission Reduction strategy will exit when the catalyst temp is >= 600.00 degC and the engine run time is >= 10.00 seconds. The cold start emission reduction strategy may also exit if the engine run time is >= 90.00 seconds.</p>			
					<p>Vehicle Speed < 1.24 mph</p>			
					<p>Driver must be off the accel pedal. This checks that the final accel pedal position (comprehending deadband and hysteresis) is essentially zero.</p>			
					<p>A change in throttle position (tip-in/tip-out) will initiate a delay in the calculation of the average qualified residual value. When the delay timer > 5.00 seconds the diagnostic will continue the calculation.</p>			
					<p>Idle Speed Control System is Active (always TRUE in Hybrid vehicle).</p>			
					<p>General Enable</p>			
					<p>DTC's Not Set</p>			
					<p>AcceleratorPedalFailure</p>			
					<p>ECT_Sensor_FA</p>			
					<p>IAT_SensorCircuitFA</p>			
					<p>IAT2_SensorCircuitFA</p>			
					<p>CrankSensorFaultActive</p>			
					<p>FuelInjectorCircuit_FA</p>			
					<p>MAF_SensorFA</p>			
					<p>MAP_SensorFA</p>			
					<p>EngineMisfireDetected_FA</p>			
					<p>Clutch Sensor FA</p>			
					<p>IAC_SystemRPM_FA</p>			
					<p>IgnitionOutputDriver_FA</p>			
					<p>TPS_FA</p>			
					<p>VehicleSpeedSensor_FA</p>			
					<p>5VoltReferenceMAP_OOR_Fit</p>			
					<p>TransmissionEngagedState_FA</p>			
					<p>EngineTorqueEstInaccurate</p>			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Throttle Actuator Control - Position Performance	P1516	Detect a throttle positioning error	The throttle model and actual Throttle position differ by >	7.196%.	Engine Running or Ignition Voltage >	Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	0.1875 sec in the secondary processor	Trips: 1
			or The actual Throttle position and throttle model differ by >	7.196%.				Type: A
					and Ignition Voltage >	11		MIL: YES
					and Throttle is being Controlled	5.4		
					and Communication Fault (SPI is not set)			
					and TPS minimum learn is not active			
					Ignition voltage failure is false (P1682)			
		Detect throttle control is driving the throttle in the incorrect direction	Thottle Position >	39.761	(Throttle is being Controlled and TPS minimum learn is active) or	Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	0.1375 sec continuous	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Reduce Engine Power is Active			
		Degraded Motor	Desired throttle position is stable within 0.25% for 4.0000 sec and the delta between Indicated throttle position and desired throttle position in greater than 2.00%		Engine Running or Ignition Voltage > and Ignition Voltage > and Throttle is being Controlled and Communication Fault (SPI is not set) and TPS minimum learn is not active Ignition voltage failure is false (P1682)	Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions 11 5.4	0.4875 sec continuous on secondary processor	
Hybrid Control Torque Request Circuit	P15F2	Determines if torque request from the HCP is valid	1. Serial Communication 2's complement not equal for		Secondary High Speed Bus is Present			1 trip(s)

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Complement not equal for message \$0A9 OR 2. Serial Communication rolling count value shall be + 1 from previous \$0A9 message	Message <> 2's complement of message Message rolling count value <> previous message rolling count value plus one	Present No Serial communication loss to HCP (U1817) Run Crank Active	>= 0.50 Sec	>= 10 Password Protect errors out of 16 samples OR >= 10 Rolling count errors out of 16 samples Performed every 12.5 msec	Type A
Remote Vehicle Speed Limiting Signal Circuit	P162B	Determines if the speed request from OnStar is valid	Password Protect error - Serial Communication message - (\$3ED) Message <> two's complement of message OR Rolling count error - Serial Communication message (\$3ED) rolling count value	Message <> previous message rolling count value + one	Vehicle Requested Speed Limit	< 217 Kph	>= 10 Password Protect errors out of 10 samples >= 10 Rolling count errors out of 10 samples Performed every 25 msec	1 trip(s) Type C
Ignition Voltage	P1682	Detect a continuous or intermittent out of correlation between the	Run/Crank – ETC Run/Crank >				240/480 counts or n 1750 sec	Trips:

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.				
Correlation		Out of correlation between the Run/Crank Ignition Voltage & the Powertrain Relay Ignition Voltage		3.00 Volts	Powertrain commanded on and	Table, f(IAT). See supporting tables	0.1750 sec continuous; 12.5 msec/count in main processor	1				
					Run/crank voltage >			Type: A				
					or ETC Run/crank voltage >			MIL: YES				
					and Run/crank voltage >							
Internal Control Module Redundant Memory Performance	P16F3	Detect Processor Calculation faults due to RAM corruptions, ALU failures and ROM failures						Trips: 1				
								Type: A				
								MIL: YES				
								Desired engine torque request greater than redundant calculation plus threshold	61.77 Nm	Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
								Cylinders active greater than commanded	1 cylinder	Engine speed greater than 0rpm and less than 3200 rpm	11/12 counts; each cylinder firing event/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Engine min capacity above threshold	61.77 Nm		Ignition in unlock/accessory, run or crank	3/4 counts; 12.5 ms/count	
			No fast unmanaged retarded spark above the applied spark plus the threshold	Table, f(Erpm). See supporting tables		LoRes if engine rpm < 4500/4700 rpm (hysteresis pair) 6.25ms if engine rpm >= 4500/4700 rpm (hysteresis pair)	6/8 counts; each cylinder firing event/count	
			Absolute difference of adjustment factor based on temperature and its dual store above threshold	3.99 m/s		Ignition in unlock/accessory, run or crank	2/4 counts; 100.0 ms/count	
			1) Absolute difference of redundant calculated engine speed above threshold 2)Time between lores events and its dual store do not equal	1) Table, f(Erpm). See supporting tables		Engine speed greater than 0 rpm	6/8 counts; each cylinder firing event/count	
			After throttle blade pressure and its dual store do not match	N/A		Ignition in unlock/accessory, run or crank	8/16 counts; 12.5 ms/count	
			Engine oil temperature and its dual store do not equal	N/A		Ignition in unlock/accessory, run or crank	3/4 counts; 50.0 ms/count	
			Desired throttle position greater than redundant calculation plus threshold	7.20 %.		Ignition in unlock/accessory, run or crank	8/16 counts; 12.5 ms/count	
			Absolute difference of the rate limited pre-throttle pressure and its redundant calculation greater than threshold	0.72 kpa/sec		Ignition in unlock/accessory, run or crank	8/16 counts; 12.5 ms/count	
			Throttle desired torque above desired torque plus threshold	0.00 Nm		Ignition in unlock/accessory, run	4/8 counts; 25.0 ms/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			desired torque plus threshold			unlock/accessory, run or crank	ms/count	
			Desired filtered throttle torque exceeds the threshold plus the higher of desired throttle torque or modeled throttle torque	62.77 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Torque feedback proportional term is out of allowable range or its dual store copy does not match	High Threshold 31.39 Nm Low Threshold -31.39 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Torque feedback integral term magnitude or rate of change is out of allowable range or its dual store copy does not match	High Threshold 62.77 Nm Low Threshold -62.77 Nm Rate of change threshold 7.85Nm/loop		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Difference of Final Torque feedback proportional plus integral term and its redundant calculation is out of bounds given by threshold range	High Threshold 0.00 Nm Low Threshold 0.00 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Difference of torque desired throttle area and its redundant calculation is out of bounds given by threshold range	High Threshold 0.50% Low Threshold -0.50%		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Difference of torque model coefficients and its redundant calculation is out of bounds given by threshold range	High Threshold 0.00 Low Threshold 0.00		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Difference of base friction torque and its redundant calculation is out of bounds given by threshold range	High Threshold 1.00 Nm Low Threshold 1.00 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Accessory drive friction torque is out of bounds given by threshold	High Threshold 62.77 Nm		Ignition in unlock/accessory, run	4/8 counts; 25.0 ms/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			out of bounds given by threshold range	62.77 Nm Low Threshold 0.00 Nm		unlock/accessory, run or crank	ms/count	
			AC friction torque is out of bounds given by threshold range	High Threshold 62.77 Nm Low Threshold 0.00 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Difference of Oil temperature delta friction torque and its redundant calculation is out of bounds given by threshold range	High Threshold 1.00 Nm Low Threshold 1.00 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Generator friction torque is out of bounds given by threshold range	High Threshold 62.77 Nm Low Threshold 0.00 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Supercharger friction torque is out of bounds given by threshold range	High Threshold 62.77 Nm Low Threshold 0.00 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Filtered Torque error magnitude or its increase rate of change is out of allowable range or its dual store copy does not match	High Threshold 62.77 Nm Low Threshold -62.77 Nm Rate of change threshold 7.85 Nm/loop		Engine speed >0rpm MAF, MAP and Baro DTCs are false	4/8 counts; 25.0 ms/count	
			Torque error compensation is out of bounds given by threshold range	High Threshold 62.77 Nm Low Threshold 0.00 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Delta Torque Baro compensation is out of bounds given by threshold range	High Threshold 16.70 Nm Low Threshold -12.68 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			1) Difference of reserve torque value and its redundant	1) 61.77 Nm 2) N/A		1&2) Torque reserve (condition when spark	4/8 counts; 25.0 ms/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			1) Reserve torque and its redundant calculation exceed threshold 2) Reserve request does not agree with operating conditions 2) Difference of final predicted torque and its redundant calculation exceed threshold 3) Rate of change of reserve torque exceeds threshold, increasing direction only 4) Reserve engine torque above allowable capacity by the threshold	2) N/A 3) 61.77 Nm 4) 61.77 Nm		(condition when spark control greater than optimum to allow fast transitions for torque disturbances) > 62.77 Nm 3&4) Ignition in unlock/accessory, run or crank	ms/count	
			Absolute difference of the calculated spark offset for equivalence ratio and its redundant calculation greater than threshold	3.17 degrees		Engine speed >0rpm	6/8 counts; if engine rpm < 2900.00 rpm, each cylinder firing event/count or if engine rpm >= 2900.00 rpm, 12.5 ms/count	
			Engine Vacuum and its dual store do not match	N/A		Ignition in unlock/accessory, run or crank	8/16 counts; 12.5 ms/count	
			Absolute difference of the calculated Intake Manifold Pressure during engine event versus during time event is greater than threshold	Table, f(Engine Torque). See supporting tables		Engine speed >0rpm	6/8 counts; each cylinder firing event/count	
			Min. Axle Torque Capacity is greater than threshold	1946.19 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Predicted torque for zero pedal determination is greater than threshold	62.77 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Commanded Predicted Axle Torque and its dual store do not	1 Nm		Ignition in unlock/accessory, run	4/8 counts; 25.0 ms/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Torque and its dual store do not match			unlock/accessory, run or crank	ms/count	
			Steady State Estimated Engine Torque and its dual store are not equal	N/A		DoD not changing from Active to Inactive and preload torque not changing and one loop after React command Engine speed >0rpm	4/8 counts; 25.0 ms/count	
			Difference of Weighting factor for number of cylinders fueled and its redundant calculation is above threshold		0.26	Engine run flag = TRUE > 1.00 s	6/8 counts; 25.0 ms/count	
			Difference of minimum spark advance limit and its redundant calculation is out of bounds given by threshold range	3.17 degrees		Ignition in unlock/accessory, run or crank	6/8 counts; if engine rpm < 4500 rpm, 12.5msec/count or if engine rpm >= 4500 rpm, 50 ms/count	
			Difference of commanded spark advance and adjusted delivered is out of bounds given by threshold range	3.17 degrees		Engine speed >0rpm	6/8 counts; if engine rpm < 4500/4700 rpm (hysteresis pair), each cylinder firing event/count or if engine rpm >= 4500/4700 rpm (hysteresis pair), 6.25 ms/count	
			Estimated Engine Torque and its dual store are not match	62.77 Nm		Engine speed >0rpm	4/8 counts; 25.0 ms/count	
			Estimated Engine Torque without reductions due to torque control and its dual store are not match	62.77 Nm		Engine speed >0rpm	4/8 counts; 25.0 ms/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Commanded Engine Torque from Hybrid control module and its dual store are not equal	N/A		Ignition in unlock/accessory, run or crank	10/16 counts; 12.5 ms/count	
			Difference of desired spark advance for managed torque and its redundant calculation is out of bounds given by threshold range	3.17 degrees		Torque reserve (condition when spark control greater than optimum to allow fast transitions for torque disturbances) > 62.77 Nm	6/8 counts; if engine rpm < 4500/4700 rpm (hysteresis pair), each cylinder firing event/count or if engine rpm >= 4500/4700 rpm (hysteresis pair), 6.25 ms/count	
			Absolute difference of Engine Capacity Minimum Running Immediate Brake Torque Excluding Cylinder Sensitivity and its redundant calculation is out of bounds given by threshold range	62.77 Nm		Engine speed >0rpm	4/8 counts; 25.0 ms/count	
			One step ahead calculation of air-per-cylinder and its dual store do not match	41.00 g/s		Engine speed >0rpm	6/8 counts; each cylinder firing event/count	
			One step ahead calculation of air-per-cylinder greater than two step ahead calculation by threshold for time	Threshold: Dynamically calculated based on current engine conditions Fault Pending Threshold: 100 ms Fault Active Threshold: 175 ms		Engine speed > 500 rpm	175.0000 ms continuous	
			Rate limited cruise axle torque request and its dual store do not match	243.27 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			1) Absolute difference of Calculated accelerator pedal position compensated for carpet learn and error conditions and its redundant calculation is out of	1) 1.00 % 2) NA 3) NA		Ignition in unlock/accessory, run or crank	8/16 counts; 12.5 ms/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Redundant calculation is out of bounds given by threshold range 2) Absolute difference of Calculated accelerator pedal position compensated for carpet learn and error conditions and its dual store do not equal 3) Absolute difference of Calculated accelerator pedal position and its dual store do not equal					
			Commanded axle torque is greater than its redundant calculation by threshold	1946.00 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Commanded axle torque is less than its redundant calculation by threshold	-1460.00 Nm		Ignition in unlock/accessory, run or crank Redundant commanded axle torque < -1460.00 Nm	4/8 counts; 25.0 ms/count	
			Preload Throttle Area is greater than its redundant calculation by threshold	0.10 %.		Engine speed >0rpm	6/8 counts; each cylinder firing event/count	
			Preload timer and its redundant calculation do not equal	NA		Ignition in unlock/accessory, run or crank	6/8 counts; each cylinder firing event/count	
			Preload Throttle Area and its dual store do not equal	NA		Ignition in unlock/accessory, run or crank	6/8 counts; each cylinder firing event/count	
			Commanded engine torque due to fast actuators and its dual store do not equal	NA		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Commanded engine torque due to slow actuators and its dual store do not equal	NA		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Signed filtered defaulted output speed calculated from TOS and its dual store do not equal	NA		Hybrid control module only Ignition in unlock/accessory, run or crank	5/15 counts; 25.0 ms/count	
			Arbitrated Air-Per-Cylinder filter coefficient is out of bounds given by threshold range	High Threshold 1.000 Low Threshold 0.200		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Shaped driver axle torque is out of bounds given by threshold range	High Threshold 1946.00 Nm Low Threshold -2920.00 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Launch spark is active but the launch spark redundant path indicates it should not be active	NA		Engine speed < 4500.00 or 4700.00 rpm (hysteresis pair)	6/8 counts; 12.5 ms/count	
			Rate limited vehicle speed and its dual store do not equal	NA		Time since first CAN message with vehicle speed >= 0.500 sec	4/8 counts; 25.0 ms/count	
			transfer case neutral and its dual store do not equal	NA		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Throttle progression mode and its dual store do not equal	NA		Ignition in unlock/accessory, run or crank	8/16 counts; 12.5 ms/count	
			TOS to wheel speed conversion factor is out of bounds given by	High Threshold 1.10 T/C Range Hi		Ignition in unlock/accessory, run	255/6 counts; 25.0 ms/count	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			factor is out of bounds given by threshold range	1.10 T/C Range Hi 0.10 T/C Range Lo Low Threshold 1.10 T/C Range Hi 0.10 T/C Range Lo		unlock/accessory, run or crank	ms/count	
			TOS to wheel speed conversion factor and its dual store do not equal	NA		Ignition in unlock/accessory, run or crank	5/15 counts; 25.0 ms/count	
			Cylinders active greater than commanded	2 cylinders		Engine run flag = TRUE > 2.00 s Number of cylinder events since engine run > 24 No fuel injector faults active	12/16 counts; each cylinder firing event/count	
			Absolute difference of Friction torque and its redundant calculation is out of bounds given by threshold range	62.77 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Absolute difference of Accessory torque and its redundant calculation is out of bounds given by threshold range	62.77 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Absolute difference of Filtered Air-per-cylinder and its redundant calculation is out of bounds given by threshold range	41.00 mg		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Absolute difference between the previous Final Advance and the current Final Advance not Adjusted for Equivalence Ratio is out of bounds given by threshold range	3.17 degrees			6/8 counts; if engine rpm < 4500/4700 rpm (hysteresis pair), each cylinder firing event/count or if engine rpm >= 4500/4700 rpm	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							1000/1000 rpm (hysteresis pair), 6.25 ms/count	
			Equivalence Ratio torque compensation exceeds threshold	-62.77 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Absolute difference between Equivalence Ratio torque compensation and its dual store out of bounds given bt threshold	62.77 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Zero pedal axle torque is out of bounds given by threshold range	High Threshold 1946.00 Nm Low Threshold -1500.00 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
			Creep Coast Axle Torque is out of bounds given by threshold range	High Threshold 1946.00 Nm Low Threshold -1500.00 Nm		Ignition in unlock/accessory, run or crank	4/8 counts; 25.0 ms/count	
Throttle Actuator Control - Position Performance	P2101	Detect a throttle positioning error	The throttle model and actual Throttle position differ by > or The actual Throttle position and throttle model differ by >	7.196 %. 7.196 %.	Engine Running or Ignition Voltage > and Ignition Voltage > and Throttle is being Controlled	Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions 11 5.5	15/15 counts; 12.5 ms/count in the primary processor	Trips: 1 Type: A MIL: YES

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					and Communication Fault (SPI is not set) and TPS minimum learn is not active Ignition voltage failure is false (P1682)			
		Detect throttle control is driving the throttle in the incorrect direction or exceed the reduced power limit	Thottle Position >	39.26 %.	TPS minimum learn is active	Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	11 counts; 12.5 ms/count in the primary processor	
			Thottle Position >	39.06 %.	Reduce Engine Power is Active			
Throttle return to default	P2119	Throttle unable to return to default throttle position after de-energizing ETC motor.	TPS1 Voltage >	1.689		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	0.4969 sec continuous	Trips: 1 Type: C MIL: NO
TPS1 Circuit	P2120	Detects a continuous or intermittent short or open in APP1 circuit on the secondary processor but sensor is in range on the primary processor	Secondary APP1 Voltage < or Secondary APP1 Voltage >	0.463 4.75		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	19/39 counts or 14 counts continuous; 12.5 ms/count in the secondary processor	Trips: 1 Type: A MIL: YES

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						No 5 V reference #2 error No 5 V reference #2 DTC (P0651)		
TPS1 Circuit Low	P2122	Detects a continuous or intermittent short or open in APP1 circuit on both processors or just the primary processor	Primary APP1 Voltage <	0.463		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	19/39 counts or 14 counts continuous; 12.5 ms/count in the primary processor	Trips: 1 Type: A MIL: YES
			Secondary APP1 Voltage <	0.463		No 5 V reference #2 error No 5 V reference #2 DTC (P0651)	19/39 counts or 14 counts continuous; 12.5 ms/count in the secondary processor	
TPS1 Circuit Low	P2123	Detects a continuous or intermittent short in APP1 circuit on both processors or just the primary processor	Primary APP1 Voltage >	4.75		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	19/39 counts or 14 counts continuous; 12.5 ms/count in the primary processor	Trips: 1 Type: A MIL: YES

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Secondary APP1 Voltage >	4.75		No 5 V reference #2 error No 5 V reference #2 DTC (P0651)	19/39 counts or 14 counts continuous; 12.5 ms/count in the secondary processor	
TPS1 Circuit	P2125	Detects a continuous or intermittent short or open in APP2 circuit on the secondary processor but sensor is in range on the primary processor	Secondary APP2 Voltage < or Secondary APP2 Voltage >	0.325 2.6		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No 5 V reference #1 error No 5 V reference #1 DTC (P0641)	19/39 counts or 14 counts continuous; 12.5 ms/count in the secondary processor	Trips: 1 Type: A MIL: YES
TPS1 Circuit Low	P2127	Detects a continuous or intermittent short or open in APP2 circuit on both processors or just the primary processor	Primary APP2 Voltage < Secondary APP2 Voltage <	0.325 0.325		Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No 5 V reference #1 error No 5 V reference #1 DTC (P0641)	19/39 counts or 14 counts continuous; 12.5 ms/count in the primary processor 19/39 counts or 14 counts continuous; 12.5 ms/count in the secondary processor	Trips: 1 Type: A MIL: YES
TPS1 Circuit Low	P2128	Detects a continuous or intermittent short in APP2 circuit	Primary APP2 Voltage >			Run/crank voltage or Powertrain relay	19/39 counts or 14 counts continuous;	Trips:

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		intermittent short in APP1-2 circuit on both processors or just the primary processor		2.6		Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	counts continuous, 12.5 ms/count in the primary processor	1 Type: A MIL: YES
			Secondary APP2 Voltage >	2.6		No 5 V reference #1 error No 5 V reference #1 DTC (P0641)	19/39 counts or 14 counts continuous; 12.5 ms/count in the secondary processor	
Throttle Position (TP) Sensor 1-2 Correlation	P2135	Detects a continuous or intermittent correlation fault between TPS sensors #1 and #2 on primary or secondary processor	Difference between TPS1 displaced and TPS2 displaced >	6.999 % offset at min. throttle position with a linear threshold to 9.699 % at max. throttle position		Run/Crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No TPS sensor faults (P0120, P0122, P0123, P0220, P0222, P0223) No 5V reference error or fault for # 2 5V reference circuit (P0651)	79/159 counts or 58 counts continuous; 3.125 ms/count in the primary processor	Trips: 1 Type: A MIL: YES
			Difference between (normalized min TPS1) and (normalized min TPS2) >	5.000 % Vref				
Throttle Position (TP)			Difference between TPS1 displaced and TPS2 displaced >	6.998 % offset at min. throttle position with a linear threshold to		Run/Crank voltage or Powertrain relay	19/39 counts or 15 counts continuous	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Sensor 1-2 Correlation			displaced and TPS2 displaced > Difference between (normalized min TPS1) and (normalized min TPS2) >	position with a linear threshold to 9.698 % at max. throttle position 5.000 % Vref		Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No TPS sensor faults (P0120, P0122, P0123, P0220, P0222, P0223) No 5V reference error or fault for # 2 5V reference circuit (P0651)	counts continuous, 12.5 ms/count in the secondary processor	
Throttle Position (TP) Sensor 1-2 Correlation	P2138	Detects a continuous or intermittent correlation fault between APP sensors #1 and #2 on primary or secondary processor	Difference between APP1 displaced and APP2 displaced > Difference between (normalized min APP1) and (normalized min APP2) >	9.509 % offset at min. pedal position with a linear threshold to 10.009 % at max. pedal position 5.000 % Vref		Run/Crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No APP sensor faults (P2120, P2122, P2123, P2125, P2127, P2128) No 5V reference error or fault for #1 or # 2 5V reference circuits (P0641, P0651)	19/39 counts or 15 counts continuous; 12.5 ms/count in the primary processor	Trips: 1 Type: A MIL: YES
Throttle Position (TP)			Difference between APP1 displaced and APP2 displaced >	9.509 % offset at min. pedal position with a linear threshold to		Run/Crank voltage or Powertrain relay	19/39 counts or 15 counts continuous;	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Sensor 1-2 Correlation			Displaced and APP 2 displaced > 10.009 % at max. pedal position Difference between (normalized min APP1) and (normalized min APP2) >	10.009 % 5.000 % Vref		Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions No APP sensor faults (P2120, P2122, P2123, P2125, P2127, P2128) No 5V reference error or fault for #1 or # 2 5V reference circuits (P0641, P0651)	Counts continuous, 12.5 ms/count in the secondary processor	
Vehicle Speed – Output Shaft Speed Correlation	P215B	Detect invalid vehicle speed source.	The absolute difference between wheel speed vehicle speed and TOS vehicle speed greater than >	6 MPH	Vehicle speed correlation diagnostic enabled	Enabled	400/800 counts for wheel speed correlation or 400/800 counts for TOS correlation or 1600/800 for Motor correlation	1 Trip(s)
			Secure vehicle speed source is unavailable		CAN timer	> 1 seconds	Performed every 25 msec	Type A
						Secure vehicle speed source is TOS, wheel speed or Motor Speed		
						Trans engaged state is engaged.		
Transfer Case Speed Sensor Output (TCSS)	P2160	No activity in the TCSS Signal circuit	TCSS Raw Speed	<= 50 RPM	Wheel Speed RPM High Wheel Speed RPM Low Input Speed Transmission Range ≠ Park or Neutral	<= 3000.0 N-M >= 100.0 N-M >= 1000 RPM	>= 5.0 Fail Time (sec)	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Not in Reverse Inhibit state Not garage shifting Disables on these DTCs:	CrankSensorFA		
Transfer Case Speed Sensor Output (TCSS)	P2161	TCSS Circuit Signal Intermittent	Output Speed signal is increasing TCSS Loop-to-Loop change Or Output Speed signal is decreasing TCSS Loop-to-Loop change	>= 475 RPM >= 225 RPM	Engine Speed Lo Transmission Range ≠ Park or Neutral Not in Reverse Inhibit state Not garage shifting Disables on these DTCs:	>= 1000 RPM CrankSensorFA P2160	>= 4.0 Enable Time (sec)	Type B 2 trips
Minimum Throttle Position Not Learned	P2176	TP sensors were not in the minimum learn window after multiple attempts to learn the minimum.	During TPS min learn on the Primary processor, TPS Voltage > or During TPS min learn on the Secondary processor, TPS Voltage >	18.700 % 18.700 %	No TPS circuit errors No TPS circuit faults P1682 is not active	Run/crank voltage or Powertrain relay voltage > 6.00 and reduced power is false, else the failure will be reported for all conditions	2.0 secs continuous	Trips: 1 Type: A MIL: YES

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			and Number of learn attempts > AND TPS2 Voltage > On the Primary processor OR TPS1 Voltage > AND TPS2 Voltage > On the Secondary processor	10 counts 1.789 1.689 1.789	Minimum TPS learn active Throttle de-energized No TPS circuit faults PT Relay Voltage >	5.5		
Air Fuel Imbalance Bank 1	P219A	Determines if the air-fuel delivery system is imbalanced by monitoring the pre and post catalyst O2 sensor voltage characteristics. To improve S/N, pre-catalyst O2 voltages between 1000 and 0 millivolts are ignored. This feature is enabled at Air Per Cylinder values <= 0 mg/cylinder. Note: If the first voltage value is	Bank 1 Filtered Length Ratio variable	> 0.85	System Voltage	10 <= V <= 32 for >= 4 seconds	Frequency: Continuous Monitoring of O2 voltage signal in 12.5ms loop The AFIM Filtered Length Ratio variable is updated after every 2.50 seconds of valid data.	2 Trip(s) Type B
					ECT	> -20 oC		
					Engine speed	425 <= rpm <= 6000		
				OR	Mass Airflow	0.5 <= g/s <= 510.0		
			Bank 1 AFM (DoD) Filtered Length Ratio variable (AFM applications only)	> 0.85	Air Per Cylinder	0 <= mg/cylinder <= 2000		
					% Ethanol	<= 87 %		
					Positive (rising) Delta O2 voltage during previous 12.5ms is OR Negative (falling) Delta O2 voltage during previous 12.5ms is	> 5.0 millivolts		
Bank 1 Filtered Post catalyst O2 voltage is NOT between Note: If the first voltage value is >= the second voltage value, this is an indication that the post			1000 and 0 millivolts	OR				

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		>= the second voltage value, AND/OR the Air Per Cylinder value is equal to zero, the feature is not used on this application and the full pre-catalyst O2 voltage range is utilized.	is an indication that the post catalyst O2 data is not used for diagnosis on this application.		Negative (falling) Delta O2 voltage during previous 12.5ms is	< -5.0 millivolts	The first report is delayed for 30 seconds to allow time for the AFIM Filtered Length Ratio variable to saturate. This minimizes the possibility of reporting a pass before a potential failure could be detected.	
						For AFM (Cylinder Deactivation) vehicles only		
					O2 sensor switches	>= 1 times during current 2.50 second sample period		
					Quality Factor	>= 0.80 in the current operating region		
					No EngineMisfireDetected_FA			
					No MAP_SensorFA			
					No MAF_SensorFA			
					No ECT_Sensor_FA			
					No Ethanol Composition Sensor FA			
					No TPS_ThrottleAuthorityDefaulted			
					No FuelInjectorCircuit_FA			
					No AIR System FA			
					No O2S_Bank_1_Sensor_1_FA			
					No O2S_Bank_2_Sensor_1_FA			
					No EvapPurgeSolenoidCircuit_FA			
					No EvapFlowDuringNonPurge_FA			
					No EvapVentSolenoidCircuit_FA			
					No EvapSmallLeak_FA			
					No EvapEmissionSystem_FA			
					No FuelTankPressureSensorCircuit_FA			
					Device Control Not Active			
		Monitor Strategy Notes: The AFIM Filtered Length Ratio is derived from the pre-O2 sensor voltage metric known as String Length. String Length is simply the curve length of the O2 sensor voltage over a fixed time period of 2.50 seconds. The reason we use String Length is because it	The AFIM Filtered Length Ratio is the difference between the measured String Length and a 17x17 table lookup value, divided by the same lookup value, and finally multiplied by a Quality Factor (the latter ranges between 0 and 1, based on robustness to false diagnosis in the current	The Quality Factor (QF) calibrations are located in a 17x17 lookup table versus engine speed and load (see Supporting Tables). A QF of "1" is an indication that we were able to achieve at least 4sigma/2sigma robustness in that speed/load region. QF values less than "1" indicate that we don't				

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		<p>comprehends both O2 signal frequency and amplitude in one metric. The busier the O2 voltage (an indication of imbalance), the longer the String Length will be.</p>	<p>operating region). The reason we use a ratio of the String Lengths is so that we can normalize the failure metric over various engine speed and load regions since engine speed and load directly impact pre-O2 String Length, especially when AFIM failures are present. In order to filter out signal noise (to avoid false failures), the Length Ratio is filtered using a common first-order lag filter. The result is the AFIM Filtered Length Ratio.</p>	<p>have 4sigma/2sigma robustness in that region. The quality of the data is determined via statistical analysis of String Length data. QF values less than 0.80 identify regions where diagnosis is not possible.</p>	<p>Intrusive Diagnostics Not Active</p> <p>Engine OverSpeed Protection Not Active</p> <p>Reduced Power Mode (ETC DTC) Not Active</p> <p>PTO Not Active</p> <p>Traction Control Not Active</p> <p></p> <p style="text-align: center;">Fuel Control Status</p> <p>Closed Loop</p> <p>Long Term FT</p> <p>Cumulative (absolute) delta MAF during the current 2.50 second sample period is</p> <p>Note: This protects against false diagnosis during severe transient maneuvers.</p> <p>Data collection is suspended under the following circumstances:</p>	<p>for >= 2.0 seconds, and</p> <p>Enabled</p> <p>Please see "Closed Loop Enable Criteria" and "Long Term FT Enable Criteria" in Supporting Tables.</p> <p>< 150 g/s</p> <p><i>Note: This protects against false diagnosis during severe transient maneuvers.</i></p> <p>- for 1.0 seconds after AFM transitions - for 1.0 seconds after Closed Loop transitions from Off to On - for 1.0 seconds after purge transitions from Off to On or On to Off - for 1.0 seconds after the AFIM diagnostic transitions from Disabled to Enabled</p>		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.		
Air Fuel Imbalance Bank 2	P219B	<p>Determines if the air-fuel delivery system is imbalanced by monitoring the pre and post catalyst O2 sensor voltage characteristics.</p> <p>To improve S/N, pre-catalyst O2 voltages between 1000 and 0 millivolts are ignored. This feature is enabled at Air Per Cylinder values ≤ 0 mg/cylinder.</p> <p>Note: If the first voltage value is \geq the second voltage value, AND/OR the Air Per Cylinder value is equal to zero, the feature is not used on this application and the full pre-catalyst O2 voltage range is utilized.</p>	Bank 2 Filtered Length Ratio variable	> 0.50	System Voltage	$10 \leq V \leq 32$ for ≥ 4 seconds	<p>Frequency: Continuous Monitoring of O2 voltage signal in 12.5ms loop</p> <p>The AFIM Filtered Length Ratio variable is updated after every 2.50 seconds of valid data.</p> <p>The first report is delayed for 30 seconds to allow time for the AFIM Filtered Length Ratio variable to saturate. This minimizes the possibility of reporting a pass before a potential failure could be detected.</p>	2 Trip(s) Type B		
					ECT	> -20 oC				
					Engine speed	$425 \leq rpm \leq 6000$				
					Mass Airflow	$0.5 \leq g/s \leq 510.0$				
			OR		Bank 2 AFM (DoD) Filtered Length Ratio variable (AFM applications only)	> 0.50			Air Per Cylinder	$0 \leq mg/cylinder \leq 2000$
					% Ethanol	$\leq 87\%$			Positive (rising) Delta O2 voltage during previous 12.5ms is OR Negative (falling) Delta O2 voltage during previous 12.5ms is	> 5.0 millivolts
			AND		Bank 2 Filtered Post catalyst O2 voltage is NOT between	1000 and 0 millivolts				
			OR						Negative (falling) Delta O2 voltage during previous 12.5ms is	< -5.0 millivolts
									For AFM (Cylinder Deactivation) vehicles only	No AFM state change during current 2.50 second sample period.
									O2 sensor switches	≥ 1 times during current 2.50 second sample period
									Quality Factor	≥ 0.80 in the current operating region
									No EngineMisfireDetected_FA	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					No MAP_SensorFA No MAF_SensorFA No ECT_Sensor_FA No Ethanol Composition Sensor FA No TPS_ThrottleAuthorityDefaulted No FuelInjectorCircuit_FA No AIR System FA No O2S_Bank_1_Sensor_1_FA No O2S_Bank_2_Sensor_1_FA No EvapPurgeSolenoidCircuit_FA			
		Monitor Strategy Notes: The AFIM Filtered Length Ratio is derived from the pre-O2 sensor voltage metric known as String Length. String Length is simply the curve length of the O2 sensor voltage over a fixed time period of 2.50 seconds. The reason we use String Length is because it comprehends both O2 signal frequency and amplitude in one metric. The busier the O2 voltage (an indication of imbalance), the longer the String Length will be.	The AFIM Filtered Length Ratio is the difference between the measured String Length and a 17x17 table lookup value, divided by the same lookup value, and finally multiplied by a Quality Factor (the latter ranges between 0 and 1, based on robustness to false diagnosis in the current operating region). The reason we use a ratio of the String Lengths is so that we can normalize the failure metric over various engine speed and load regions since engine speed and load directly impact pre-O2 String Length, especially when AFIM failures are present. In order to filter out signal noise (to avoid false failures), the Length Ratio is filtered using a common first-order lag filter. The result is the AFIM Filtered Length Ratio.	The Quality Factor (QF) calibrations are located in a 17x17 lookup table versus engine speed and load (see Supporting Tables). A QF of "1" is an indication that we were able to achieve at least 4sigma/2sigma robustness in that speed/load region. QF values less than "1" indicate that we don't have 4sigma/2sigma robustness in that region. The quality of the data is determined via statistical analysis of String Length data. QF values less than 0.80 identify regions where diagnosis is not possible.	No EvapFlowDuringNonPurge_FA No EvapVentSolenoidCircuit_FA No EvapSmallLeak_FA No EvapEmissionSystem_FA No FuelTankPressureSensorCircuit_FA Device Control Not Active Intrusive Diagnostics Not Active Engine OverSpeed Protection Not Active Reduced Power Mode (ETC DTC) Not Active PTO Not Active Traction Control Not Active	Closed Loop Long Term FT	for >= 2.0 seconds, and Enabled Please see "Closed Loop Enable Criteria" and "Long Term FT Enable Criteria" in Supporting Tables.	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					<p>Cumulative (absolute) delta MAF during the current 2.50 second sample period is</p> <p>Note: This protects against false diagnosis during severe transient maneuvers.</p>	<p>< 150 g/s</p> <p>Note: This protects against false diagnosis during severe transient maneuvers.</p>		
					<p>Data collection is suspended under the following circumstances:</p>	<p>- for 1.0 seconds after AFM transitions</p> <p>- for 1.0 seconds after Closed Loop transitions from Off to On</p> <p>- for 1.0 seconds after purge transitions from Off to On or On to Off</p> <p>- for 1.0 seconds after the AFIM diagnostic transitions from Disabled to Enabled</p>		
Barometric Pressure (BARO) Sensor Performance	P2227	Detects noisy or erratic barometric pressure input	Difference between the current Baro sensor reading and the previous Baro sensor reading	> 10.0 kPa	<p>Ignition has been on</p> <p>Vehicle Speed</p> <p>Engine Run Time</p> <p>No Active DTCs:</p>	<p>> 10.0 seconds</p> <p>< 100 KPH</p> <p>> 30.00 seconds</p> <p>AmbientAirPressCktFA</p> <p>ECT_Sensor_FA</p> <p>IAT_SensorFA</p> <p>MAF_SensorFA</p> <p>AfterThrottlePressure_NA or</p> <p>AfterThrottlePressure_SC</p> <p>TPS_FA</p>	<p>5 failures out of 25 samples</p> <p>1 sample every 250 msec</p>	Type B 2 trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						TPS_Performance_FA VehicleSpeedSensorError		
Barometric Pressure (BARO) Sensor Circuit Low	P2228	Detects a continuous short to low or open in either the signal circuit or the BARO sensor.	BARO Voltage	< 40.0 % of 5 Volt Range (2.0 Volts = 50.9 kPa)	Engine Run Time	> 30.00 seconds	20 failures out of 25 samples 1 sample every 12.5 msec	Type B 2 trips
Barometric Pressure (BARO) Sensor Circuit High	P2229	Detects an open sensor ground or continuous short to high in either the signal circuit or the BARO sensor.	BARO Voltage	> 90.0 % of 5 Volt Range (4.5 Volts = 115.0 kPa)	Engine Run Time	> 30.00 seconds	20 failures out of 25 samples 1 sample every 12.5 msec	Type B 2 trips
O2 Sensor Signal Stuck Lean Bank 1 Sensor 2	P2270	This DTC determines if the post catalyst O2 sensor is stuck in a normal lean voltage range and thereby can no longer be used for post oxygen sensor fuel control or for catalyst monitoring. The diagnostic is an intrusive test (during coast) which increases the delivered fuel to achieve the required rich threshold.	Post O2 sensor cannot achieve the rich threshold voltage. AND The Accumulated mass air flow monitored during the Stuck Lean Voltage Test is greater than the threshold before the above voltage threshold is met.	1) Post O2S signal < 791 mvolts AND 2) Accumulated air flow during stuck lean test > 160 grams.	No Active DTC's	TPS_ThrottleAuthorityDefaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA EthanolCompositionSe	Frequency: Once per trip Note: if NaPOPD_b_ResetFastRespFunc=FALSE for the given Fuel Bank OR NaPOPD_b_RapidResponseActive = TRUE, multiple tests per trip are allowed.	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					B1S2 Failed this key cycle System Voltage Learned heater resistance ICAT MAT Burnoff delay Green O2S Condition Low Fuel Condition Diag Engine Speed to enable test Engine Airflow Vehicle Speed to enable test Closed loop integral Closed Loop Active Evap Ethanol Post fuel cell	Ethanol composition sensor_FA CatalystTempFA P013A, P013B, P013E, P013F, P2270 or P2271 10.0 volts < system voltage < 32.0 volts = Valid = Not Valid = Not Valid, See definition of Green Sensor Delay Criteria (B1S2) in Supporting Tables tab. = False 900 <= RPM <= 2500 3 gps <= Airflow <= 20 gps 43.5 mph <= Veh Speed <= 80.8 mph 0.90 <= C/L Int <= 1.06 = TRUE not in control of purge not in estimate mode = enabled		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					EGR Intrusive diagnostic = not active All post sensor heater delays = not active O2S Heater on Time Predicted Catalyst temp >= 100.0 sec 550 °C <= Cat Temp <= 900 °C Fuel State = DFCO possible			
					All of the above met for at least 1.0 seconds, and then the Force Cat Rich intrusive stage is requested.			
O2 Sensor Signal Stuck Rich Bank 1 Sensor 2	P2271	This DTC determines if the post catalyst O2 sensor is stuck in a normal rich voltage range and thereby can no longer be used for post oxygen sensor fuel control or for catalyst monitoring. The diagnostic is an intrusive test which requests the DFCO mode to achieve the required lean threshold.	Post O2 sensor cannot achieve the lean threshold voltage. AND The Accumulated mass air flow monitored during the Stuck Rich Voltage Test is greater than the threshold before the above voltage threshold is met.	1) Post O2S signal > 100 mvolts AND 2) Accumulated air flow during stuck rich test > 90 grams.	No Active DTC's B1S2 Failed this key cycle System Voltage Learned heater resistance ICAT MAT Burnoff delay	TPS_ThrottleAuthority Defaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA EthanolCompositionSensor_FA CatalystTempFA P013A, P013B, P013E, P013F or P2270 10.0 volts < system voltage < 32.0 volts = Valid = Not Valid	Frequency: Once per trip Note: if NaPOPD_b_Reset FastRespFunc= FALSE for the given Fuel Bank OR NaPOPD_b_Rapid ResponseActive = TRUE, multiple tests per trip are allowed.	2 trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
					= Not Valid, See definition of Green Sensor Delay Criteria (B1S2) in Supporting Tables tab. Green O2S Condition Low Fuel Condition Diag = False Engine Speed 900 <= RPM <= 2500 Engine Airflow 3 gps <= Airflow <= 20 gps Vehicle Speed 43.5 mph <= Veh Speed <= 80.8 mph Closed loop integral 0.90 <= C/L Int <= 1.06 Closed Loop Active = TRUE Evap not in control of purge Ethanol not in estimate mode Post fuel cell = enabled Power Take Off = not active EGR Intrusive diagnostic = not active All post sensor heater delays = not active O2S Heater on Time >= 100.0 sec Predicted Catalyst temp 550 °C <= Cat Temp <= 900 °C Fuel State = DFCO possible DTC's Passed = P2270 (and P2272 (if applicable)) DTC's Passed = P013E (and P014A (if applicable)) DTC's Passed = P013A (and P013C (if applicable))				
					After above conditions are met: DFCO mode entered (wo driver initiated pedal input).				
O2 Sensor Signal Stuck Lean Bank 2 Sensor 2	P2272	This DTC determines if the post catalyst O2 sensor is stuck in a normal lean voltage range and thereby can no longer be used for post oxygen sensor fuel control	Post O2 sensor cannot achieve the rich threshold voltage. AND	1) Post O2S signal < 791 mvolts AND 2) Accumulated air flow during	No Active DTC's	TPS_ThrottleAuthority Defaulted ECT_Sensor_FA	Frequency: Once per trip Note: if NaPOPD_b_Reset FastRespFunc=	2 trips Type B	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		for catalyst monitoring. The diagnostic is an intrusive test (during coast) which increases the delivered fuel to achieve the required rich threshold.	The Accumulated mass air flow monitored during the Stuck Lean Voltage Test is greater than the threshold before the above voltage threshold is met.	stuck lean test > 160 grams.	<p>B2S2 Failed this key cycle</p> <p>System Voltage</p> <p>Learned heater resistance</p> <p>ICAT MAT Burnoff delay</p> <p>Green O2S Condition</p> <p>Low Fuel Condition Diag Engine Speed to enable test</p> <p>Engine Airflow</p>	<p>IAT_SensorFA</p> <p>MAF_SensorFA</p> <p>MAP_SensorFA</p> <p>AIR System FA</p> <p>FuelInjectorCircuit_FA</p> <p>FuelTrimSystemB1_FA</p> <p>FuelTrimSystemB2_FA</p> <p>EngineMisfireDetected_FA</p> <p>EthanolCompositionSensor_FA</p> <p>CatalystTempFA</p> <p>P013C, P013D, P014A, P014B, P2272 or P2273</p> <p>10.0 volts < system voltage < 32.0 volts</p> <p>= Valid</p> <p>= Not Valid</p> <p>= Not Valid, See definition of Green Sensor Delay Criteria (B2S2) in Supporting Tables tab.</p> <p>= False</p> <p>900 <= RPM <= 2500</p> <p>3 gps <= Airflow <= 20 gps</p>	FALSE for the given Fuel Bank OR NaPOPD_b_Rapid ResponseActive = TRUE, multiple tests per trip are allowed.	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
					Vehicle Speed to enable test Closed loop integral Closed Loop Active Evap Ethanol Post fuel cell EGR Intrusive diagnostic All post sensor heater delays O2S Heater on Time Predicted Catalyst temp Fuel State	43.5 mph <= Veh Speed <= 80.8 mph 0.90 <= C/L Int <= 1.06 = TRUE not in control of purge not in estimate mode = enabled = not active = not active >= 100.0 sec 550 °C <= Cat Temp <= 900 °C = DFCO possible			
					All of the above met for at least 1.0 seconds, and then the Force Cat Rich intrusive stage is requested.				
O2 Sensor Signal Stuck Rich Bank 2 Sensor 2	P2273	This DTC determines if the post catalyst O2 sensor is stuck in a normal rich voltage range and thereby can no longer be used for post oxygen sensor fuel control or for catalyst monitoring. The diagnostic is an intrusive test which requests the DFCO mode to achieve the required lean threshold.	Post O2 sensor cannot achieve the lean threshold voltage. AND The Accumulated mass air flow monitored during the Stuck Rich Voltage Test is greater than the threshold before the above voltage threshold is met.	1) Post O2S signal > 100 mvolts AND 2) Accumulated air flow during stuck rich test > 90 grams.	No Active DTC's	TPS_ThrottleAuthority Defaulted ECT_Sensor_FA IAT_SensorFA MAF_SensorFA MAP_SensorFA AIR System FA FuelInjectorCircuit_FA FuelTrimSystemB1_FA FuelTrimSystemB2_FA EngineMisfireDetected_FA	Frequency: Once per trip Note: if NaPOPD_b_Reset FastRespFunc= FALSE for the given Fuel Bank OR NaPOPD_b_Rapid ResponseActive = TRUE, multiple tests per trip are allowed.	2 trips Type B	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
					B2S2 Failed this key cycle System Voltage Learned heater resistance ICAT MAT Burnoff delay Green O2S Condition Low Fuel Condition Diag Engine Speed Engine Airflow Vehicle Speed Closed loop integral Closed Loop Active Evap Ethanol Post fuel cell Power Take Off EGR Intrusive diagnostic All post sensor heater delays O2S Heater on Time Predicted Catalyst temp Fuel State DTC's Passed DTC's Passed DTC's Passed	EthanolCompositionSensor_FA CatalystTempFA P013C, P013D, P014A, P014B or P2272 10.0 volts < system voltage < 32.0 volts = Valid = Not Valid = Not Valid, See definition of Green Sensor Delay Criteria (B2S2) in Supporting Tables tab. = False 900 <= RPM <= 2500 3 gps <= Airflow <= 20 gps 43.5 mph <= Veh Speed <= 80.8 mph 0.90 <= C/L Int <= 1.06 = TRUE not in control of purge not in estimate mode = enabled = not active = not active = not active >= 100.0 sec 550 °C <= Cat Temp <= 900 °C = DFCO possible = P2270 (and P2272 (if applicable)) = P013E (and P014A (if applicable)) = P013A (and P013C (if applicable))			
After above conditions are met:									

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					DFCO mode entered (wo driver initiated pedal input).			
Engine Hood Switch Circuit	P254F	Circuit Performance	Hood Switch 1 State ≠ Hood Switch 2 State		Run/crank voltage is in range	≤ 32.0 V and ≥ 11.0 V	0.5 seconds	2 Trip(s)
					Hood switch diagnostic enabled	Enabled	Performed every 25 msec	Type B
ECM/PCM Internal Engine Off Timer Performance	P2610	This DTC determines if the engine off timer does not initialize or count properly. Clock rate test: Checks the accuracy of the 1 second timer by comparing it with the 12.5 ms timer	Initial value test: Initial ignition off timer value	< 0 seconds	ECM is powered down IAT Temperature	-40 °C ≤ Temperature ≤ 125 °C	Initial value test: 3 failures	2 trips Type B DTC sets on next key cycle if failure detected
			OR Initial ignition off timer value	> 10 seconds			1.375 sec / sample	
			Clock rate test: Time between ignition off timer increments	< 0.8 seconds			Clock rate test: 8 failures out of 10 samples	
			Time between ignition off timer increments	> 1.2 seconds			1 second / sample	
			Time since last ignition off timer increment	≥ 1.375 seconds			test runs once each key-off	
			Current ignition off time < old ignition off time					
			Current ignition off timer minus old ignition off timer	≠ 1				
Four Wheel Drive	P279A	Transfer Case Mode in GMLAN frame \$2D1 = HIGH range	Transfer Case Measured Ratio		Engine Speed	≥ 200 and ≤ 7500 rpm for 5 seconds	32 failures out of 400 samples	Type C 1 Trip(s)

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
(4WD) High Range Performance		frame \$2D1 = HIGH range AND Transfer Case ≠ HIGH range	NOTE: Ratio constrained to 0 – 8 Please see "See HIGH Ratio Margin " in Supporting Tables Tab	$\geq (1.000 - \text{Ratio Margin})$ $\leq (1.000 + \text{Ratio Margin})$	Vehicle Speed	rpm for 5 seconds $\leq 200 \text{ km/hr for } \geq 5 \text{ sec}$	400 samples 12.5 msec loop, continuous	1 Trip(s) 4 Wheel Drive Only
Four Wheel Drive (4WD) Low Range Performance	P279B	Transfer Case Mode in GMLAN frame \$2D1 = LOW range AND Transfer Case ≠ Low range	Transfer Case Measured Ratio NOTE: Ratio constrained to 0 – 8 Please see "See LOW Ratio Margin " in Supporting Tables Tab	$\geq (2.700 - \text{Ratio Margin})$ $\leq (2.790 + \text{Ratio Margin})$	Engine Speed Vehicle Speed	$\geq 200 \text{ and } \leq 7500 \text{ rpm for } 5 \text{ seconds}$ $\leq 200 \text{ km/hr for } \geq 5 \text{ sec}$	32 failures out of 400 samples 12.5 msec loop, continuous	Type C 1 Trip(s) 4 Wheel Drive Only
Four Wheel Drive (4WD) u Range Performance	P279C	Transfer Case Mode in GMLAN frame \$2D1 = NEUTRAL	Transfer Case Measured Ratio ≠ High Range AND ≠ Low Range Please see "See NETURAL ratio margin" in Supporting Tables Tab		Engine Speed Vehicle Speed	$\geq 200 \text{ and } \leq 7500 \text{ rpm for } 5 \text{ seconds}$ $\leq 200 \text{ km/hr for } \geq 5 \text{ sec}$	32 failures out of 400 samples 12.5 msec loop, continuous	Type C 1 Trip(s) 4 Wheel Drive Only

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Ignition voltage	>= 11.0 and <= 32.0 Volts		
					Brake booster vacuum	>= 0.0 kPa		
					Engine oil temp	>= 20 and <= 128 Deg C		
					Trans Gear	HalfCylDisabledTransGear and HafCylDisabledTransGearDeviceControl (when in device control)- See details on Supporting Tables Tab (P3400 Section)		
					Percent throttle area	< 28 Percent		
					Vehicle speed	>= 28 KPH		
					FCO not active for	>= 3.0 Seconds		
					Time since last cylinder deactivation mode event	>= 3.0 Seconds		
					Gear Shift	Not currently in progress		
					AC Clutch transition	Not currently in progress		
					Stored Oxygen Retrieval Monitor Diagnostic	Not active		
					Tip In Bump	Not active		
					Engine oil pressure	>= 187 and <= 455 kPa		
					Filtered engine vacuum	> AllowToHalfCylVacuum		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					<p>PRNDL state</p> <p>Oil aeration present</p> <p>After exiting deac mode due to max time in half cylinder mode, must be in all cylinder mode for</p> <p>DFCO mode</p> <p>Fuel shut off mode other than DFCO</p> <p>ETC Power management mode</p> <p>Heater Perf.</p>	<p>AirCylOrHalfCylVacuum - See details on Supporting Tables Tab (P3400 Section) for 0.00 sec.</p> <p>HalfCylDisabledPRNDL and HalfCylDisabledPRNDL DeviceControl tables (when in device control) - See details on Supporting Tables Tab (P3400 Section)</p> <p>Aeration enabled by engine RPM > 3100 for 10 seconds, disabled by engine RPM < 3000 for 50 seconds</p> <p>>= 60 seconds</p> <p>Not currently in DFCO</p> <p>Not currently in fuel shut-off</p> <p>Not active</p> <p>Not in Heater</p>		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					POSD Intrusive	Not in heater Performance Mode POSD diagnostic not active		
					POPD Intrusive	POPD diagnostic not active		
					Low range 4WD AFM is disabled at high percent ethanol	Not in Low Range 4WD		
					If feature is enabled, AFM is allowed only when percent ethanol learn is not in progress	Ethanol concentration > 95 % disables AFM. Once disabled, ethanol concentration must be < 85 % to re-enable Feature is Disabled		
					Catalyst warm-up mode	Not in Catalyst warm-up mode		
					Green engine enrichment mode	Not in Green engine enrichment mode		
					2-Mode Hybrid vehicles	Hybrid module not requesting AFM disable		

IF DEACTIVATED, ANY OF THE CONDITIONS BELOW

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					<p>IF DEACTIVATED, ANY OF THE CONDITIONS BELOW WILL FORCE CYLINDER REACTIVATION</p> <p>If deactivation mode is active for >= 300 seconds</p> <p>then reactivation will occur if:</p> <hr/> <p>Deac mode active >= 300 seconds</p> <p>OR</p> <p>Delta vacuum > 5 kPa or < -5 kPa</p> <p>Delta calculated using 1st order vacuum lag filter 0.30 1st order lag filter value</p> <hr/> <p>Engine RPM > EngSpeedLwrLimitDi sableTable AND < EngSpeedUprLimitDi sableTable - Details on Supporting Tables Tab (P3400 Section)</p> <p>Active</p> <p>Engine Power Limited Mode Active</p> <p>Piston protection Engine Oil Temperature < 18 Deg C or > 130 Deg C</p> <p>Engine Oil Pressure < 172 kPa or > 470 kPa</p> <p>Oil aeration present</p>			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Engine Metal Overtemp Protection In device control only, when in Park or Neutral, vehicle speed Trans Gear PRNDL state Ignition voltage Engine Coolant Vehicle speed Brake booster vacuum	Aeration enabled by engine RPM > 3100 for 10 seconds, disabled by engine RPM < 3000 for 50 seconds Active <= 8.0 KPH HalfCylDisabledTransG r and HafCylDisabledTransG rDeviceControl (when in device control)- See details on Supporting Tables Tab (P3400 Section) HalfCylDisabledPRNDL and HalfCylDisabledPRNDL DeviceControl tables (when in device control) - See details on Supporting Tables Tab (P3400 Section) < 11.0 or > 32.0 Volts < 36 or > 132 Deg C < 22.0 KPH		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Filtered engine vacuum ETC Power management mode Pct Throttle Area Converter overtemp protect Piston protection Hot Coolant Mode Engine running Engine overspeed protection Engine Metal Overtemp Protect Cat. Temp Low POSD Intrusive FWD Engine Misfire Heater Performance POPD Intrusive	< 0.0 kPa > HalfCylToAllCylVacuum - See details on Supporting Tables Tab (P3400 Section) for 0.00 sec. Active > 30 Percent Active Active Active = False Active Active Active Active In low range Detected Active Active		
					No active DTC's	Fault bundles: Map_SensorFA VehicleSpeedSensorError ECT_Sensor_FA		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						EOP_Sensor_FA PowertrainRelayFault BrakeBoosterSensorFA CrankSensorFA CamSensorFA IAT_SensorFA CyLinderDeacDriverTFT KO FourWheelDriveLowSt ateInvalid EngineTorqueEstInacc urate TransmissionGearDefa ulted EnginePowerLimited		
Cylinder 1 Deactivation Solenoid Control Circuit	P3401	Checks the Solenoid Control Circuit electrical integrity for cylinder #1	The ECM detects that commanded state of driver and actual state of the control circuit do not match. (Short to ground, short to voltage, open circuit)		Engine RPM Ignition Voltage Diagnostic enabled/ disabled	>= 400.0 RPM <= 32.0 and >= 11.0 Volts Enabled	20 failures out of 25 samples Performed every 250 msec	2 trip(s) Type B
Cylinder 2 Deactivation Solenoid Control Circuit	P3409	Checks the Solenoid Control Circuit electrical integrity for cylinder #2	The ECM detects that commanded state of driver and actual state of the control circuit do not match. (Short to ground, short to voltage, open circuit)		Engine RPM Ignition Voltage Diagnostic enabled/ disabled	>= 400.0 RPM <= 32.0 and >= 11.0 Volts Enabled	20 failures out of 25 samples Performed every 250 msec	0 trip(s) Type X
Cylinder 3	P3417	Checks the Solenoid Control Circuit electrical integrity for	The ECM detects that commanded state of driver and		Engine RPM	>= 400.0 RPM	20 failures out of 25 samples	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Deactivation Solenoid Control Circuit		Circuit electrical integrity for cylinder #3	Commanded state of driver and actual state of the control circuit do not match. (Short to ground, short to voltage, open circuit)		Ignition Voltage Diagnostic enabled/ disabled	<= 32.0 and >= 11.0 Volts Enabled	25 samples Performed every 250 msec	0 trip(s) Type X
Cylinder 4 Deactivation Solenoid Control Circuit	P3425	Checks the Solenoid Control Circuit electrical integrity for cylinder #4	The ECM detects that commanded state of driver and actual state of the control circuit do not match. (Short to ground, short to voltage, open circuit)		Engine RPM Ignition Voltage Diagnostic enabled/ disabled	>= 400.0 RPM <= 32.0 and >= 11.0 Volts Enabled	20 failures out of 25 samples Performed every 250 msec	2 trip(s) Type B
Cylinder 5 Deactivation Solenoid Control Circuit	P3433	Checks the Solenoid Control Circuit electrical integrity for cylinder #5	The ECM detects that commanded state of driver and actual state of the control circuit do not match. (Short to ground, short to voltage, open circuit)		Engine RPM Ignition Voltage Diagnostic enabled/ disabled	>= 400.0 RPM <= 32.0 and >= 11.0 Volts Enabled	20 failures out of 25 samples Performed every 250 msec	0 trip(s) Type X
Cylinder 6 Deactivation Solenoid Control Circuit	P3441	Checks the Solenoid Control Circuit electrical integrity for cylinder #6	The ECM detects that commanded state of driver and actual state of the control circuit do not match. (Short to ground, short to voltage, open circuit)		Engine RPM Ignition Voltage Diagnostic enabled/ disabled	>= 400.0 RPM <= 32.0 and >= 11.0 Volts Enabled	20 failures out of 25 samples Performed every 250 msec	2 trip(s) Type B
Cylinder 7 Deactivation Solenoid Control Circuit	P3449	Checks the Solenoid Control Circuit electrical integrity for cylinder #7	The ECM detects that commanded state of driver and actual state of the control circuit do not match. (Short to ground, short to voltage, open circuit)		Engine RPM	>= 400.0 RPM	20 failures out of 25 samples	0 trip(s)

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Deactivation Solenoid Control Circuit		Circuit electrical integrity for cylinder #7	Commanded state of driver and actual state of the control circuit do not match. (Short to ground, short to voltage, open circuit)		Ignition Voltage Diagnostic enabled/ disabled	<= 32.0 and >= 11.0 Volts Enabled	25 samples Performed every 250 msec	2 trip(s) Type B
Cylinder 8 Deactivation Solenoid Control Circuit	P3457	Checks the Solenoid Control Circuit electrical integrity for cylinder #8	The ECM detects that commanded state of driver and actual state of the control circuit do not match. (Short to ground, short to voltage, open circuit)		Engine RPM Ignition Voltage Diagnostic enabled/ disabled	>= 400.0 RPM <= 32.0 and >= 11.0 Volts Enabled	20 failures out of 25 samples Performed every 250 msec	0 trip(s) Type X
Control Module Communication Bus A Off	U0073	This DTC monitors for a BUS A off condition	Bus off failures	≥ 4 counts	CAN hardware is bus OFF for	> 0.1125 seconds	Diagnostic runs in 12.5 ms loop	1 Trip(s)
			out of these samples	≥ 5 counts	Diagnostic enable timer	> 3.0000 seconds		Type A
Control Module Communication Bus B Off	U0074	This DTC monitors for a BUS B off condition	Bus off failures	≥ 4 counts	CAN hardware is bus OFF for	> 0.1125 seconds	Diagnostic runs in 12.5 ms loop	1 Trip(s)
			out of these samples	≥ 5 counts	Diagnostic enable timer	> 3.0000 seconds		Type A
					Run/Crank Voltage	11 volts ≤ Voltage ≤ 32 volts		
Lost Communication With TCM	U0101	This DTC monitors for a loss of communication with the transmission control module	Message is not received from controller for this amount of time.	Type B time = 10s Type C time = 12s Torque Security Ucode = varied and possibly much shorter time.	Run/Crank Voltage	11 volts ≤ Voltage ≤ 32 volts	The fail diagnostic runs in the 6.25 ms loop with pass conditions reported to the DFIR in the 1000ms loop.	1 Trip(s)
					Power mode is RUN			Type A
					Communication bus is not OFF			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					or is typed as a C code			
					Normal Communication is enabled			
					Normal Transmit capability is TRUE			
					The diagnostic system is not disabled			
					The bus has been on for	> 3.0000 seconds		
					A message has been selected to monitor.			
Lost Communication with Transfer Case Control Module	U0102	This DTC monitors for a loss of communication with the transfer case control module	Message is not received from controller for this amount of time.	Type B time = 10s Type C time = 12s Torque Security Ucode = varied and possibly much shorter time.	Run/Crank Voltage	11 volts ≤ Voltage ≤ 32 volts	The fail diagnostic runs in the 6.25 ms loop with pass conditions reported to the DFIR in the 1000ms loop.	2 Trip(s)
					Power mode is RUN			Type B
					Communication bus is not OFF			
					or is typed as a C code			
					Normal Communication is enabled			
					Normal Transmit capability is TRUE			
					The diagnostic system is not disabled			
					The bus has been on for	> 3.0000 seconds		
					A message has been selected to monitor.			
Lost Communication With Fuel Pump Control Module	U0109	This DTC monitors for a loss of communication with the fuel pump control module	Message is not received from controller for this amount of time.	Type B time = 10s Type C time = 12s Torque Security Ucode = varied and possibly much shorter time.	Run/Crank Voltage	11 volts ≤ Voltage ≤ 32 volts	The fail diagnostic runs in the 6.25 ms loop with pass conditions reported to the DFIR in the 1000ms loop.	2 Trip(s)
					Power mode is RUN			Type B
					Communication bus is not OFF			
					or is typed as a C code			
					Normal Communication is enabled			

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.			
					Normal Transmit capability is TRUE						
					The diagnostic system is not disabled						
					The bus has been on for	> 3.0000 seconds					
					A message has been selected to monitor.						
Lost Communication With Brake System Control Module	U0129	This DTC monitors for a loss of communication with the Brake System Control Module.	Message is not received from controller for this amount of time.	Type B time = 10s Type C time = 12s Torque Security Ucode = varied and possibly much shorter time.	Run/Crank Voltage	11 volts ≤ Voltage ≤ 32 volts	The fail diagnostic runs in the 6.25 ms loop with pass conditions reported to the DFIR in the 1000ms loop.	2 Trip(s)			
						Power mode is RUN				Type B	
						Communication bus is not OFF					
						or is typed as a C code					
						Normal Communication is enabled					
						Normal Transmit capability is TRUE					
						The diagnostic system is not disabled					
						The bus has been on for			> 3.0000 seconds		
						A message has been selected to monitor.					
Lost Communication With Body Control Module	U0140	This DTC monitors for a loss of communication with the Body Control Module.	Message is not received from controller for this amount of time.	Type B time = 10s Type C time = 12s Torque Security Ucode = varied and possibly much shorter time.	Run/Crank Voltage	11 volts ≤ Voltage ≤ 32 volts	The fail diagnostic runs in the 6.25 ms loop with pass conditions reported to the DFIR in the 1000ms loop.	1 Trip(s)			
						Power mode is RUN				Type C	
						Communication bus is not OFF				Special Type C	
						or is typed as a C code					
						Normal Communication is enabled					
						Normal Transmit capability is TRUE					
	The diagnostic system is not disabled										

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
					The bus has been on for	> 3.0000 seconds			
					A message has been selected to monitor.				
Lost Communication With Hybrid Powertrain Control Module	U0293	This DTC monitors for a loss of communication with the Hybrid Powertrain Control Module.	Message is not received from controller for this amount of time.	Type B time = 10s Type C time = 12s Torque Security Ucode = varied and possibly much shorter time.	Run/Crank Voltage	11 volts ≤ Voltage ≤ 32 volts	The fail diagnostic runs in the 6.25 ms loop with pass conditions reported to the DFIR in the 1000ms loop.	1 Trip(s)	
					Power mode is RUN				Type A
					Communication bus is not OFF or is typed as a C code				
					Normal Communication is enabled				
					Normal Transmit capability is TRUE				
					The diagnostic system is not disabled				
					The bus has been on for	> 3.0000 seconds			
					A message has been selected to monitor.				
Lost Communication With MCP A on Bus B	U1815	This DTC monitors for a loss of communication with the MCP A Module on Bus B.	Message is not received from controller for this amount of time.	Type B time = 10s Type C time = 12s Torque Security Ucode = varied and possibly much shorter time.	Run/Crank Voltage	11 volts ≤ Voltage ≤ 32 volts	The fail diagnostic runs in the 6.25 ms loop with pass conditions reported to the DFIR in the 1000ms loop.	2 Trip(s)	
					Secondary CAN BUS is enabled	Enabled			Type B
					Power mode is RUN				
					Communication bus is not OFF or is typed as a C code				
					Normal Communication is enabled				
					Normal Transmit capability is TRUE				
					The diagnostic system is not disabled				
					The bus has been on for	> 3.0000 seconds			
A message has been selected to monitor.									

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Lost Communication With Hybrid Powertrain Control Module on Bus B	U1817	This DTC monitors for a loss of communication with the Hybrid Powertrain Control Module on Bus B.	Message is not received from controller for this amount of time.	Type B time = 10s Type C time = 12s Torque Security Ucode = varied and possibly much shorter time.	Run/Crank Voltage	11 volts ≤ Voltage ≤ 32 volts	The fail diagnostic runs in the 6.25 ms loop with pass conditions reported to the DFIR in the 1000ms loop.	1 Trip(s)
					Secondary CAN BUS is enabled	Enabled		Type A
					Power mode is RUN			
					Communication bus is not OFF			
					or is typed as a C code			
					Normal Communication is enabled			
					Normal Transmit capability is TRUE			
					The diagnostic system is not disabled			
					The bus has been on for	> 3.0000 seconds		
A message has been selected to monitor.								
Lost Communication With Brake System Control Module on Bus B	U1820	This DTC monitors for a loss of communication with the Brake System Control Module on Bus B.	Message is not received from controller for this amount of time.	Type B time = 10s Type C time = 12s Torque Security Ucode = varied and possibly much shorter time.	Run/Crank Voltage	11 volts ≤ Voltage ≤ 32 volts	The fail diagnostic runs in the 6.25 ms loop with pass conditions reported to the DFIR in the 1000ms loop.	2 Trip(s)
					Secondary CAN BUS is enabled	Enabled		Type B
					Power mode is RUN			
					Communication bus is not OFF			
					or is typed as a C code			
					Normal Communication is enabled			
					Normal Transmit capability is TRUE			
					The diagnostic system is not disabled			
					The bus has been on for	> 3.0000 seconds		
A message has been selected to monitor.								

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Idle Speed Diagnostics								
Idle Diagnostics P0506, P0507 have the following common enable criteria	***				Motor A speed faults: P0A3F, P1B03, P0A40, P0C52, P0C53, P0C5C, P0C5D Motor B speed faults: P0A45, P1B04, P0A46, P0C57, P0C58, P0C61, P0C62 Vehicle Speed/TOS sensor faults: P0722, P077B, P215C Accelerator pedal position Accel Pedal position Engine State Vehicle speed Commanded RPM Delta IdleConditons present	Not active Not active Not active Not Defaulted <= 1 % Running (not starting or stopping states) <= 1 kph < 25 RPM for >= 5 seconds		
Idle Air Control (IAC) System - RPM Too Low	P0506	This DTC sets when the idle speed is lower than the targeted idle speed	Idle speed		** Common Enables		1 loop execution at 100 ms rate	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
				Filtered input speed error (desired - actual) is greater than fail threshold 95 RPM. Filter coefficient for engine speed = 0.00375				
		DTC Pass	Idle speed		** Common Enables		Pass condition met for 15 seconds	
		DTC RePass after failure	Idle Speed		Hi idle diagnostic ** Common Enables	Fault Active	Pass condition met for 15 seconds	
				Filtered input speed error (desired - actual), is less than fail threshold 50. Filter coefficient for engine speed = 0.00375				
Idle Air Control (IAC) System - RPM Too High	P0507		Idle speed		** Common Enables		1 loop execution at 100 ms rate	Two Trips, Type B
		This DTC sets when the idle speed is higher than the targeted idle speed		Filtered input speed error (desired - actual) is less than fail threshold -190 RPM. Filter coefficient for engine speed = 0.00375				
		DTC Pass	Idle speed		** Common Enables		Pass condition met for 15 seconds	
		DTC RePass after failure	Idle Speed		Low idle diagnostic ** Common Enables	Fault Active	Pass condition met for 15 seconds	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
				Filtered input speed error (desired - actual), is greater than fail threshold -140. Filter coefficient for engine speed = 0.00375				
Power Moding Diagnostics								
System Voltage Low	P0562	Sets when the low voltage system voltage is below a threshold	Ignition Voltage	Ignition Voltage <= 10 Volts	Ignition Key Status	RUN/CRANK	5 seconds in a 6 second window	Special Type C
			DTC Pass	Ignition Voltage > 10 Volts	Engine Speed	>= 0 RPM		
System Voltage Hi	P0563	Sets when the low voltage system voltage is above a threshold	Ignition Voltage	Ignition Voltage >= 18 Volts	Ignition Key Status	RUN/CRANK	5 seconds in a 6 second window	Special Type C
			DTC Pass	Ignition Voltage < 18 Volts				
Ignition Switch Run/Start Position Circuit Low	P2534	Detects a run crank relay open circuit	Runk Crank Line voltage	Ignition Run Crank line voltage <= 2 Volts	CAN Communication	enabled	60 seconds (2400 * 0.025) in a 65 second window (2600 * 0.025)	One Trip, Type A
			DTC Pass	Run Crank Line Voltage	Ignition Run Crank line voltage > 2 Volts	ECM run crank active data		
							5 seconds (200 * 0.025)	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Stuck Clutch Diagnostics					
Common Stuck Clutch diagnostic secondary enables for codes P07A3, P07A5, P07A7, P07A9	***				Input speed - Input speed profile	> 200 Rpm		
Transmission Friction Element A Stuck On	P07A3	Detects a stuck C1 clutch	C1 Slip speed	C1 slip speed <= 80 RPM	Range State C1 slip acceleration Excess torque on C1 *** Common Enables	Mode 2 <= 30 RPM/s > 320 Nm FOR 0.25 seconds (10 * 0.025)	4.5 seconds ((60 + 120) * 0.025)	Two Trips, Type B
		DTC Pass	C1 Slip Speed	C1 Slip Speed > 45 RPM	Operating Mode	Neutral, Mode 2, Gear 3, Gear 4	0.375 seconds (15 * 0.025)	
Transmission Friction Element B Stuck On	P07A5	Detects a stuck C2 clutch	C2 Slip speed	C2 slip speed <= 50 RPM	Range State C2 slip acceleration Excess torque on C2	Mode 1 <= 10000 RPM/s > 320 Nm FOR 0.125 seconds (5 * 0.025)	3.2 seconds ((8 + 120) * 0.025)	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					*** Common Enables			
		DTC Pass	C2 Slip Speed	C2 Slip Speed > 70 RPM	Operating Mode	Neutral, Mode 1, Gear 1	0.25 seconds (10 * 0.025)	
Transmission Friction Element C Stuck On	P07A7	Detects a stuck C3 clutch	C3 Slip speed	C3 slip speed <= 80 RPM	Range State	Mode 2	4.5 seconds ((60 + 120) * 0.025)	Two Trips, Type B
					C3 slip acceleration	<= 30 RPM/s		
		DTC Pass	C3 Slip Speed	C3 Slip Speed > 45 RPM	Operating Mode	Neutral, Mode 1, Mode 2, Gear 1, Gear 2, Gear 3	0.375 seconds (15 * 0.025)	
Transmission Friction Element D Stuck On	P07A9	Detects a stuck C4 clutch	C4 Slip speed	Fail Case 1: C4 slip speed <= 30 PRM	Range State	Mode 1	3.2 seconds ((8 + 120) * 0.025)	Two Trips, Type B
					C4 slip acceleration	<= -1900 RPM/s		
				Fail Case 2: C4 slip speed <= 80 RPM	Range State	Mode 2	4.5 seconds ((60 + 120) * 0.025)	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					C4 slip acceleration Excess torque on C4 *** Common Enables	<= 50 RPM/s > 180 Nm FOR 0.25 seconds (10 * 0.025)		
		DTC Pass	C4 Slip Speed	C4 Slip Speed > 75 RPM	Operating Mode	Neutral, Mode 1, Mode 2, Gear 2, Gear 4	0.25 seconds (10 * 0.025)	

Transm'n Auxiliary Oil Pump Diagnostics								
Transmission Auxiliary Oil Pump (TAOP) Feedback Signal out of Bound	P0C2B	This DTC sets when the TAOP controller is not communicating with the HCP	Incomplete or no fault message communication with TAOP controller.	A complete fault status message must be received every 1.5 seconds	RunCrankActive	= 1 for more than 0.2 seconds	9.75 seconds	Two Trips, Type B
		DTC Pass	Complete communication with TAOP controller	A complete fault status message must be received every 1.5 seconds			1.75 seconds	
Auxiliary Transmission Fluid Pump Performance	P2797	This diagnostic monitors the aux pump performance based on aux pump filtered desired and actual speed values	Aux pump speed	Aux pump speed - Commanded Aux pump Speed > 650 RPM for >.7s	Speed Command Filter Coefficient Aux Pump Speed Command	0.1 >= 650 RPM FOR 0.5 seconds	Fail Condition met for 0.75 seconds (30 * 0.025) in a 1.25 second (50 * 0.025) window	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					RunCrankActive	= 1 for more than 0.2 seconds	Total Fail Time 3*(0.75 seconds out of 1.seconds) + 240 seconds (Fail Condition met for 3 Fault Pendencies with a Re-Try delay of 120 seconds between Fault Pendencies)	
		DTC Pass	Aux pump speed	Aux pump speed - Commanded Aux pump Speed <= 650 RPM		Fault Pending Condition Met > 3 times	Pass met for 0.5 seconds ((165-160) * 0.025)	
System Speed Rationality								
Internal Control Module Drive Motor/Generator - Engine Speed Sensor Performance	P0C2F	The DTC Monitors the Calculated Input Speed and Compares this with the Sensed Engine Speed	SPI Sensed Engine Speed and Input Speed CAN Sensed Engine Speed and Input Speed	Sensed SPI Engine Speed Above 1500 RPM a difference ≥ 250 RPM else ≥ 1500 RPM Sensed CAN Engine Speed Above 1500 RPM a difference ≥ 250 RPM else ≥ 1500 RPM	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	160 failure counts out of 320 sample @12.5 ms loop Pass Conditions Sensed SPI Engine Speed Above 500 RPM a difference ≤ 250 RPM else ≤ 1500 RPM Pass Conditions Sensed CAN Engine Speed Above 500 RPM a difference ≤ 250 RPM else ≤ 1500 RPM for 500ms	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Transm'n Output Speed Sensor					
Output Speed Sensor Circuit Direction Error	P077B	The DTC detects if the Transmission Output Speed Sensor Direction is Incorrect by Comparing with Calculated Direction from Motor Speed Sign	Transmission Output Speed Direction Raw	≠ Motor Direction	Transmission Output Speed Hybrid Motor Speed based Estimated Output Speed is Valid Transmission Output Speed and Motor Output Speed Difference Motor Estimated Transmission Output Speed	Not FAULT ACTIVE Calculated based on M1 or M2 Speed Equation ≤ 50 RPM ≥ 50 RPM	0.325 seconds (13 counts at 25ms) Pass Conditions Opposite of FAIL for 5 seconds (200 counts at 25ms)	One Trip, Type A
			Internal Mode Switch 2					
Internal Mode Switch 2 R1 Circuit Low Voltage	P181C	The DTC Monitors if the IMS R1 Circuit is Shorted to a Low Voltage	Converted Directional IMS AND Directional IMS R1	Transitional 17 R1 Circuit Has Not Been Observed High	Ignition Voltage Converted Directional IMS AND Directional IMS R1	≥ 6.0 V for 2 consecutive samples Transitional 2 R1 Circuit NOT High for 5 seconds	2.7 seconds (108 counts at 25ms) Pass Conditions IMS R1 Circuit Has Been Observed High for 3.125 seconds (125 counts at 25ms)	Two Trips, Type B
Internal Mode Switch 2 R1 Circuit High Voltage	P181D	The DTC Monitors if the IMS R1 Circuit is Shorted to a High Voltage	Converted Directional IMS AND Directional IMS R1	Transitional 30 R1 Circuit Has Not Been Observed Low	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds (108 counts at 25ms)	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
				Observed Low			Pass Conditions IMS R1 Circuit Has Been Observed Low for 3.125 seconds (125 counts at 25ms)	
Internal Mode Switch 2 R2 Circuit Low Voltage	P181E	The DTC Monitors if the IMS R2 Circuit is Shorted to a Low Voltage	Converted Directional IMS AND Directional IMS R2	DRIVE R2 Circuit Has Not Been Observed High	Ignition Voltage Converted Directional IMS AND Directional IMS R2 Directional IMS R2	≥ 6.0 V for 2 consecutive samples PARK R2 Circuit Low for 5 seconds	2.7 seconds (108 counts at 25ms) Pass Conditions IMS R2 Circuit Has Been Observed High for 3.125 seconds (125 counts at 25ms)	Two Trips, Type B
Internal Mode Switch 2 R2 Circuit High Voltage	P181F	The DTC Monitors if the IMS R2 Circuit is Shorted to a High Voltage	Converted Directional IMS AND Directional IMS R2	Transitional 14 OR Transitional 29 R2 Circuit Has Not Been Observed Low	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds (108 counts at 25ms) Pass Conditions IMS R2 Circuit Has Been Observed Low for 3.125 seconds (125 counts at 25ms)	Two Trips, Type B
Internal Mode Switch 2 D1 Circuit Low Voltage	P183A	The DTC Monitors if the IMS D1 Circuit is Shorted to a Low Voltage	Converted Directional IMS AND	Transitional 8 OR Transitional 20	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds (108 counts at 25ms)	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Directional IMS D1	D1 Circuit Has Not Been Observed High			Pass Conditions IMS D1 Circuit Has Been Observed High for 3.125 seconds (125 counts at 25ms)	
Internal Mode Switch 2 D1 Circuit High Voltage	P183B	The DTC Monitors if the IMS D1 Circuit is Shorted to a High Voltage	Converted Directional IMS AND Directional IMS D1	Transitional 27 D1 Circuit Has Not Been Observed Low	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds (108 counts at 25ms) Pass Conditions IMS D1 Circuit Has Been Observed Low for 3.125 seconds (125 counts at 25ms)	Two Trips, Type B
Internal Mode Switch 2 D2 Circuit Low Voltage	P183C	The DTC Monitors if the IMS D2 Circuit is Shorted to a Low Voltage	Converted Directional IMS AND Directional IMS D1	Transitional 24 D2 Circuit Has Not Been Observed High	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds (108 counts at 25ms) Pass Conditions IMS D2 Circuit Has Been Observed High for 3.125 seconds (125 counts at 25ms)	Two Trips, Type B
Internal Mode Switch 2 D2 Circuit High Voltage	P183D	The DTC Monitors if the IMS D2 Circuit is Shorted to a High Voltage	Converted Directional IMS AND Directional IMS D2	Transitional 11 AND Transitional 23 D2 Circuit Has Not Been Observed Low	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds (108 counts at 25ms)	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
				Observed Low			Pass Conditions IMS D2 Circuit Has Been Observed Low for 3.125 seconds (125 counts at 25ms)	
Internal Mode Switch 2-Invalid Range	P183E	The DTC Monitors if the IMS is in an Invalid Range	Converted Directional IMS	Illegal (All Circuits Open)	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds (108 counts at 25ms)	Two Trips, Type B
							Pass Conditions Opposite of Fail for 3.125 seconds (125 counts at 25ms)	
Internal Mode Switch 1-2 Correlation	P183F	The DTC Monitors if the IMS Direction and Range Correlation is Invalid	Converted Directional IMS	Correlation Fault Neutral (With No IMS Faults the Direction IMS and Range IMS Indicate Different Detent Postions)	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	1.25 seconds (50 counts at 25ms)	One Trip, Type A
							Pass Conditions Opposite of Fail for 1.7 seconds (68 counts at 25ms)	
Internal Mode Switch 2 S Circuit Low Voltage	P184A	The DTC Monitors if the IMS S Circuit is Shorted to a Low Voltage	Converted Directional IMS AND Directional IMS S	Transitional 9 S Circuit Has Not Been Observed High	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds (108 counts at 25ms)	Two Trips, Type B
							Pass Conditions IMS S Circuit Has Been Observed High for 3.125 seconds (125 counts at 25ms)	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Internal Mode Switch 2 S Circuit High Voltage	P184B	The DTC Monitors if the IMS S Circuit is Shorted to a High Voltage	Converted Directional IMS AND Directional IMS S AND Directional IMS R1	Transitional 26 AND DRIVE S Circuit Has Not Been Observed Low R1 Has Been Observed Low	Ignition Voltage	≥ 6.0 V for 2 consecutive samples	2.7 seconds (108 counts at 25ms)	Two Trips, Type B Pass Conditions IMS S Circuit Has Been Observed Low for 3.125 seconds (125 counts at 25ms)

			Transm'n Output Speed Sensor					
Vehicle Speed Output Shaft Speed Correlation	P215B	The DTC Monitors if the Difference between the Transmission Output Speed and Output Speed Calculated from the Wheel Speed Sensors	Transmission Output Speed and Output Speed Calculated from the Wheel Speed Sensors Difference	20 kph	Number of Secured Vehicle Speed Sources Secured Vehicle Speed Use Transmission Output Speed Secured Vehicle Speed Use Wheel Speed	2 TRUE TRUE	10 seconds (400 counts at 25ms)	Two Trips, Type B Pass Conditions Opposite of Fail for 20 seconds (800 counts at 25ms)

			Controller Diagnostics					
Control Module Read Only Memory (ROM)	P0601	This DTC will be stored if any software or calibration check sum is incorrect	Calculated Checksum does not match stored checksum		Ignition Status	Run or Crank	1 failure if it occurs during the first ROM test of the ignition cycle, otherwise 5 failures Frequency: Runs continuously in the background	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Control Module Not Programmed	P0602	Indicates that the HCP needs to be programmed	Fails if No Start Calibration is set to true which is only available on a new un-programmed HCP		Ignition Status	Run or Crank	Runs once at power up	One Trip, Type A
Control Module Long Term Memory Reset	P0603	Non-volatile memory checksum error at controller power-up	Checksum at power-up does not match checksum at power-down		Ignition Status	Run or Crank	1 failure Frequency: Once at powerup	One Trip, Type A
Control Module Random Access Memory (RAM) Failure	P0604	Indicates that HCP is unable to correctly write and read data to and from RAM	Data read does not match data written		Ignition Status	Run or Crank	Should finish within 30 seconds at all operating conditions	One Trip, Type A
PCM Processor Performance/Integrity Check 1. Main processor Arithmetic Logic Unit (ALU) fault 2. Main configuration register fault 3. Software timed loop execution 4. Communication (SPI bus) between main and secondary processors	P0606	Indicates that the HCP has detected an internal processor integrity fault	1. ALU not reporting as expected 2. Configuration register not reporting as expected 3. Software tasks loops > schedule tasks loop 4. Loss of SPI communication between main and secondary processors		Ignition Status Run/Crank Voltage OR Powertrain Relay Voltage	Accessory, Run, Crank > 9.5 Volts OR < 18 Volts	1. Main (ALU) Failure: 2 times in a row @ 50ms 2. Main (config) Failure: 2 times in a row @ 50ms 3. N/A 4. SPI Failure: MCP 10 fail counts out of 30 sample counts Executes: 6.25ms loop PLD 3 fail counts out of 10 sample Executes:	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							50ms loop	
Control Module Long Term Memory Performance	P062F	Indicates that the NVM Error flag has not been cleared	Last EEPROM write did not complete		Ignition voltage	≥ 5 volts	1 failure Frequency: Once at power-up	One Trip, Type A

Torque Security Diagnostics								
Internal Control Module Torque Performance	P061A	The regenerative braking ring compares the primary path torque calculations to the value created by a redundant secondary calculation. The values should be equal.						One Trip, Type A
		Fail Case 1: The regenerative braking ring compares the primary path output torque calculations to the value created by a redundant secondary calculation. The values should be equal.	The primary path calculation of regen output torque differs from the redundant calculation	>678 Nm	Regenerative Braking Torque	> 0 Nm	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 2: The regenerative braking ring compares the primary path axle torque calculations to the value created by a redundant secondary calculation. The values should be equal.	The primary path calculation of regen axle torque differs from the redundant calculation	>2088 Nm	Regenerative Braking Torque	> 0 Nm	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
Internal Control Module Torque Calculation Performance	P061B	The system torque monitor compares the primary path torque calculations to limits created by a redundant secondary calculation.						One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 1: Exceeds upper torque limit	When the redundant calculation of the system torque exceeds the upper limit created by the primary torque calculation (0.2g = 458Nm offset) for greater than 200ms	678Nm (equivalent to .2g)		Runs continuously when a torque source is present	14 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 2: Exceeds lower torque limit	When the redundant calculation of the system torque exceeds the lower limit created by the primary torque calculation (0.15g = 343Nm offset) for greater than 200ms	508Nm (equivalent to .15g)		Runs continuously when a torque source is present	14 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 3: Transmission output torque rationality check violated	Axle torque request is converted to transmission output torque. When this converted output torque violates the rationality check comparison by 1 Nm for greater than 200ms a failure is flagged.	1Nm		Runs continuously when a torque source is present	14 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 4: Brake torque request rationality check violated	Brake torque request is converted to transmission output torque. When this converted output torque violates the rationality check comparison by 1 Nm for greater than 200ms a failure is flagged.	1Nm		Runs continuously when a torque source is present	14 fail counts out of 16 sample counts Executes in a 12.5ms loop	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							Detects in 200ms	
		Fail Case 5: Output torque negative when driver request is positive	When the PRNDL equals drive and the driver requested torque is positive while the commanded output torque is negative and below a -0.1g (-229Nm) threshold for greater than 200ms.	-339Nm (equivalent to -0.1g)		Enabled at low speed (7mph or less) or a TOSS sensor fault is active or vehicle speed sensor fault is active	14 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 6: Output torque positive when driver request is negative	When the PRNDL equals reverse and driver requested torque is negative while the commanded output torque is positive and greater than a 0.1g (229Nm) threshold for greater than 200ms.	339Nm (equivalent to 0.1g)		Enabled at low speed (7mph or less) or a TOSS sensor fault is active or vehicle speed sensor fault is active	14 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 7: Input Torque correction rationality check violated	When the difference between the primary and the redundantly calculated input torque correction exceeds 1Nm for greater than 200ms a failure is flagged	1Nm		Runs continuously when a torque source is present	14 fail counts out of 16 sample counts Executes in a 12.5ms loop	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							Detects in 200ms	
Torque Management System – Forced Engine Shutdown	P06AF	The main processor monitor ring compares the ECM 2nd pattern (nibble pattern) to known good pattern to determine ECM state of health.	The nibble pattern is incorrect	The pattern does not match (F, 5, B, D, A, 6, 3, 0)	Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	8 fail counts out of 12 sample counts Executes in a 12.5 ms Loop Detects in 200ms	One Trip, Type A
Alive Rolling Count / Protection Value fault for the Regenerative Braking Axle Torque	P1B15	Detect the ARC (Alive Rolling Count) or Protection Value fault by checking the ARC and Protection Value of the Regenerative Braking Axle Torque	The current alive rolling count value does not equal the previous alive rolling count value incremented by 1 OR The primary signal value does not equal the protection value	Current ARC ≠ Previous ARC +1 Primary Value ≠ Protection Value	Ignition Key Status	Run/Crank for > 0.5 seconds	20 fail counts out of 30 sample counts Executes in a 6.25 ms Loop Detects in 200ms	One Trip, Type A
Alive Rolling Count / Protection Value fault for the Engine Actual Torque Steady State	P15F0	Detect the ARC (Alive Rolling Count) or Protection Value fault by checking the ARC and Protection Value of the Engine Actual Torque Steady State	The current alive rolling count value does not equal the previous alive rolling count value incremented by 1	Current ARC ≠ Previous ARC +1	Ignition Key Status	Run/Crank for > 0.5 seconds	10 fail counts out of 16 sample counts	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			OR The primary signal value does not equal the protection value	Primary Value ≠ Protection Value			Executes in a 12.5 ms Loop Detects in 200ms	
Alive Rolling Count / Protection Value fault for the commanded predicted axle torque	P15F1	Detect the ARC (Alive Rolling Count) or Protection Value fault by checking the ARC and Protection Value of the commanded predicted axle torque	The current alive rolling count value does not equal the previous alive rolling count value incremented by 1 OR The primary signal value does not equal the protection value	Current ARC ≠ Previous ARC +1 Primary Value ≠ Protection Value	Ignition Key Status	Run/Crank for > 0.5 seconds	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	One Trip, Type A
Internal Control Module Transmission Direction Range Switch	P16F2	Detect transmission direction errors by reading the states of the Direction IMS switches as well as determining a transmission direction and comparing it to the transmission direction from the primary controls path.						One Trip, Type A
		Fail Case 1: No direction match with no IMS failures	Read the Direction IMS switches and determine that they represent a valid transmission direction (P,R,N,D) but it does not match the transmission direction determined by the primary controls path.		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts Executes in a 12.5ms loop	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							Detects in 200ms	
		Fail Case 2: Multiple transmission directions with no IMS failures	Read the Direction IMS switches and determine that they represent more than one valid transmission direction (P,R,N,D).		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 3: No direction match with one IMS failure	Read the Direction IMS switches and determine that one switch has failed and calculate a transmission direction, but it does not match the transmission direction determined by the primary controls path.		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 4: Multiple transmission directions with one IMS failure	Read the Direction IMS switches and determine that one switch has failed and calculate a transmission direction and determine that they represent more than one valid transmission direction (P,R,N,D).		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts Executes in a 12.5ms loop	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							Detects in 200ms	
		Fail Case 5: Unable to determine transmission direction	Reads the Direction IMS switches and determine that more than one switch has failed and cannot calculate a transmission direction.		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts Executes in a 12.5ms loop Detects in 200ms	
Dual Store Fault	P16F3	Detect the dual store memory fault by comparing the primary value and the dual store value of the individual variables						One Trip, Type A
		Fail Case 1: Detect the dual store memory fault by comparing the primary value and the dual store value of the commanded predicted axle torque	The primary value and the dual store value of the commanded predicted axle torque are not equal (AXLR)			Runs continuously	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 2: Detect the dual store memory fault by comparing the primary value and the dual store value of the Engine Actual Steady State	The primary value and the dual store value of the Engine Actual Torque Steady State are not equal (ETQR)			Runs continuously	10 fail counts out of 16 sample counts	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Steady State					Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 3: Detect the dual store memory fault by comparing the primary value and the dual store value of the range state	The primary value and the dual store value of the range state are not equal. (HSER)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 4: Detect the dual store memory fault by comparing the primary value and the dual store value of the Motor A torque command	The primary value and the dual store value of the Motor A torque command are not equal. (HTDR)			Runs continuously	20 fail counts out of 30 sample counts Executes in a 6.25 ms Loop Detects in 200ms	
		Fail Case 5: Detect the dual store memory fault by comparing the primary value and the dual store value of the Motor B torque command	The primary value and the dual store value of the Motor B torque command are not equal (HTDR)			Runs continuously	20 fail counts out of 30 sample counts	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Command					Executes in a 6.25 ms Loop Detects in 200ms	
		Fail Case 6: Detect the dual store memory fault by comparing the primary value and the dual store value of the Motor A torque achieved	The primary value and the dual store value of the Motor A torque achieved are not equal (MTQR)			Runs continuously	20 fail counts out of 30 sample counts Executes in a 6.25 ms Loop Detects in 200ms	
		Fail Case 7: Detect the dual store memory fault by comparing the primary value and the dual store value of the Motor B torque achieved	The primary value and the dual store value of the Motor B torque achieved are not equal (MTQR)			Runs continuously	20 fail counts out of 30 sample counts Executes in a 6.25 ms Loop Detects in 200ms	
		Fail Case 8: Detect the dual store memory fault by comparing the primary value and the dual store value of the Regenerative Braking Axle Torque Request	The primary value and the dual store value of the Regenerative Braking Axle Torque Request are not equal (RGNR)			Runs continuously	20 fail counts out of 30 sample counts Executes in a 6.25 ms Loop	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							Detects in 200ms	
		Fail Case 9: Detect the dual store memory fault by comparing the primary value and the dual store value of the Estimated Regenerative Braking Axle torque	The primary value and the dual store value of the Estimated Regenerative Braking Axle torque are not equal. (RGNR)			Runs continuously	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 10: Detect the dual store memory fault by comparing the primary value and the dual store value of the Hybrid Commanded Engine Torque	The primary value and the dual store value of the Hybrid Commanded Engine Torque Predicted are not equal (TRAR)			Runs continuously	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 11: Detect the dual store memory fault by comparing the primary value and the dual store value of the Validated Trans Range State	The primary value and the dual store value of the Validated Trans Range State are not equal (TRGR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 12: Detect the dual store memory fault by comparing the primary value and the dual store value of the Trans Direction State Fault Active	The primary value and the dual store value of the Trans Direction State Fault Active are not equal (TRGR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	
		Fail Case 13: Detect the dual store memory fault by comparing the primary value and the dual store value of the Transmission Direction State.	The primary value and the dual store value of the Transmission Direction Positive Indication state are not equal (TRGR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	
		Fail Case 14: Detect the dual store memory fault by comparing the primary value and the dual store value of the Direction IMS Failure Active status	The primary value and the dual store value of the Direction IMS Failure Active status are not equal (TRGR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 15: Detect the dual store memory fault by comparing the primary value and the dual store value of the Trans input speed	The primary value and the dual store value of the Trans input speed are not equal (TISR)			Runs continuously	20 fail counts out of 30 sample counts Executes in a 6.25ms loop Detects in 200ms	
		Fail Case 16: Detect the dual store memory fault by comparing the primary value and the dual store value of the selected range equation	The primary value and the dual store value of the selected range equation are not equal (HSER)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	
		Fail Case 17: Detect the dual store memory fault by comparing the primary value and the dual store value of the Signed, Filtered, Default Output speed	The primary value and the dual store value of the Signed, Filtered, Default Output speed are not equal (TOSR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 18: Detect the dual store memory fault by comparing the primary value and the dual store value of the Trans Output Acceleration	The primary value and the dual store value of the Trans Output Acceleration are not equal (TOSR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	
		Fail Case 19: Detect the dual store memory fault by comparing the primary value and the dual store value of the rate limited secure vehicle speed	The primary value and the dual store value of the rate limited secure vehicle speed are not equal (VSPR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	
		Fail Case 20: Detect the dual store memory fault by comparing the primary value and the dual store value of the transfer case range (4wd) variables	The primary value and the dual store value of the transfer case range (4wd) are not equal (FWDR)			Runs continuously	5 fail counts out of 16 sample counts Executes in a 25ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 21: Detect the dual store memory fault by comparing the primary value and the dual store value of the conversion factor for TOS	The primary value and the dual store value of the conversion factor for TOS are not equal (VSPR)			Runs continuously	5 fail counts out of 8 sample counts Executes in a 25ms loop Detects in 200ms	
		Fail Case 22: Detect the dual store memory fault by comparing the primary value and the dual store value of the Estimated Regenerative Braking Output Torque	The primary value and the dual store value of the Estimated Regenerative Braking Output Torque are not equal (RGNR)			Runs continuously	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 23: Detect the dual store memory fault by comparing the primary value and the dual store value of the brake torque request output	The primary value and the dual store value of the brake torque request output are not equal (ATTR)			Runs continuously	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		<p>Fail Case 24: Detect the dual store memory fault by comparing the primary value and the dual store value of the immediate output torque request</p>	<p>The primary value and the dual store value of the immediate output torque request are not equal (ATTR)</p>			<p>Runs continuously</p>	<p>10 fail counts out of 16 sample counts</p> <p>Executes in a 12.5ms loop</p> <p>Detects in 200ms</p>	
		<p>Fail Case 25: Detect the dual store memory fault by comparing the primary value and the dual store value of the Motor A correction torque</p>	<p>The primary value and the dual store value of the Motor A correction torque are not equal (HTDR)</p>			<p>Runs continuously</p>	<p>20 fail counts out of 30 sample counts</p> <p>Executes in a 6.25ms loop</p> <p>Detects in 200ms</p>	
		<p>Fail Case 26: Detect the dual store memory fault by comparing the primary value and the dual store value of the Motor B correction torque</p>	<p>The primary value and the dual store value of the Motor B correction torque are not equal (HTDR)</p>			<p>Runs continuously</p>	<p>20 fail counts out of 30 sample counts</p> <p>Executes in a 6.25ms loop</p>	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							Detects in 200ms	
		Fail Case 27: Detect the dual store memory fault by comparing the primary value and the dual store value for the HV voltage	The primary value and the dual store value of the HV voltage are not equal (HVTR)			Runs continuously	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 28: Detect the dual store memory fault by comparing the primary value and the dual store value of the maximum operating voltage	The primary value and the dual store value of the maximum operating voltage are not equal (HVTR)			Runs continuously	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 29: Detect the dual store memory fault by comparing the primary value and the dual store value of the maximum control voltage	The primary value and the dual store value of the maximum control voltage are not equal (HVTR)			Runs continuously	10 fail counts out of 16 sample counts Executes in a 12.5ms loop	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							<p>Detects in 200ms</p>	
		<p>Fail Case 30: Detect the dual store memory fault by comparing the primary value and the dual store value of the minimum control voltage</p>	<p>The primary value and the dual store value of the minimum control voltage are not equal (HVTR)</p>			<p>Runs continuously</p>	<p>10 fail counts out of 16 sample counts</p> <p>Executes in a 12.5ms loop</p> <p>Detects in 200ms</p>	
		<p>Fail Case 31: Detect the dual store memory fault by comparing the primary value and the dual store value of the HV Voltage Lid</p>	<p>The primary value and the dual store value of the HV Voltage Lid are not equal (BPCR)</p>			<p>Runs continuously</p>	<p>5 fail counts out of 16 sample counts</p> <p>Executes in a 25ms loop</p> <p>Detects in 200ms</p>	
		<p>Fail Case 32: Detect the dual store memory fault by comparing the primary value and the dual store value of the Maximum Battery Module Temperature</p>	<p>The primary value and the dual store value of the Maximum Battery Module Temperature are not equal (VITR)</p>			<p>Runs continuously</p>	<p>5 fail counts out of 16 sample counts</p> <p>Executes in a 25ms loop</p>	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							Detects in 200ms	
		<p>Fail Case 33: Detect the dual store memory fault by comparing the primary value and the dual store value of the Minimum Battery Module Temperature</p>	<p>The primary value and the dual store value of the Minimum Battery Module Temperature are not equal (VITR)</p>			<p>Runs continuously</p>	<p>5 fail counts out of 16 sample counts</p> <p>Executes in a 25ms loop</p> <p>Detects in 200ms</p>	
		<p>Fail Case 34: Detect the dual store memory fault by comparing the primary value and the dual store value of the Battery Module Temperature</p>	<p>The primary value and the dual store value of the Battery Module Temperature are not equal (VITR)</p>			<p>Runs continuously</p>	<p>5 fail counts out of 16 sample counts</p> <p>Executes in a 25ms loop</p> <p>Detects in 200ms</p>	
		<p>Fail Case 35: Detect the dual store memory fault by comparing the primary value and the dual store value of the Battery Charge Current</p>	<p>The primary value and the dual store value of the Battery Charge Current are not equal (VITR)</p>			<p>Runs continuously</p>	<p>5 fail counts out of 16 sample counts</p> <p>Executes in a 25ms loop</p>	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							Detects in 200ms	
Internal Control Module Transmission Range Control Performance	P16F4	Detect transmission range errors by comparing the Direction IMS switches with the Range IMS information from the TCM.						One Trip, Type A
		Fail Case 1: Positive transmission ranges that do not match	The Range IMS and Direction IMS from the primary controls path and both have valid transmission positions (P, R, N, D) but the two do not match.		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 2: Error corrected Direction IMS does not match	The Range IMS has a valid transmission position and the Direction IMS from the primary controls path has an error corrected transmission position, but the two do not match.		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 3: Range IMS is between valid transmission positions and Direction IMS is error corrected	The Range IMS indicates a transitional PRNDL position and the Direction IMS has an error corrected transmission position.		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 4: Range IMS is invalid and Direction IMS is error corrected	The Range IMS is invalid due to a fault or a problem with the TCM, and the Direction IMS has an error corrected transmission position.		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 5: Range IMS is between valid transmission positions and Direction IMS is invalid	The Range IMS indicates a transitional PRNDL position and the Direction IMS is invalid due to a fault or a problem with the HCP		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 6: Range IMS and Direction IMS are both invalid	The Range IMS is invalid due to a fault or a problem with the TCM, and the Direction IMS is invalid due to a fault or a problem with the HCP		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6 fail counts out of 8 sample counts	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
							Executes in a 12.5ms loop Detects in 200ms		
Internal Control Module Programmable Logic Device	P16F5	The main processor monitor rings tests the capability of the PLD to detect any incorrect keys.	The hardwired signal that is from the PLD indicates receipt of a correct key when the main processor monitor deliberately sends bad keys			Does not run during shutdown test (see P16F9)	4 fail counts out of 6 sample counts	One Trip, Type A	
						Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts		Executes in a 12.5 ms Loop Detects in 200ms
Internal Control Module Commanded Range State	P16F6	The Transmission Range State monitor verifies that there are no mismatches in system equations, the transmission range state being executed is valid, and the transmission range state has not performed an invalid transition							One Trip, Type A
			Fail Case 1: Invalid Transmission Range State				Runs continuously	1 failure Detected within 25ms of failure	
			Fail Case 2: Invalid Transmission Range State Group	The current Transmission Range State being used by the system is detected to be an invalid value within the current Transmission Range State Group.				Runs continuously	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 3: Invalid Transmission Range State transition	The current Transmission Range State has changed, and the change in value is not one of the supported transitions from the previous Transmission Range State.			Runs continuously	1 failure Detected within 25ms of failure	
		Fail Case 4: Range Equation mismatches current Transmission Range State	The Range Equation can not be rationalized against the current Transmission Range State.			Runs continuously	1 failure Detected within 25ms of failure	
		Fail Case 5: Torque Determination State mismatches current Transmission Range State	The Torque Determination State can not be rationalized against the current Transmission Range State.			Runs continuously	1 failure Detected within 25ms of failure	
		Fail Case 6: Input Torque Optimization State mismatches current Transmission Range State	The Input Torque Optimization State can not be rationalized against the current Transmission Range State			Runs continuously	1 failure Detected within 25ms of failure	
Internal Control Module Shutdown Performance	P16F9	The main processor monitor ring is testing the ability of the PLD to detect a seed/key error and take necessary action						Two Trips, Type B
		Fail Case 1: Monitor MCPA for shutdown path test passed	The CAN signal that is from MCPA indicates test status equals failed	A value of 1 at test startup or a value of 0 at the end of test would fail	1. Ignition Key Status	OFF OPEN	Executes in a 12.5 ms Loop	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					High Voltage Contactor Status 2. Ignition Key Status AND P16F9 Status	Run/Crank Test Failed on Previous Key Cycle	Detects in 350ms	
		Fail Case 2: Monitor MCPB for shutdown path test passed	The SPI signal that is from MCPB indicates test status equals failed	A value of 1 at test startup or a value of 0 at the end of test would fail	1. Ignition Key Status High Voltage Contactor Status 2. Ignition Key Status AND P16F9 Status	OFF OPEN Run/Crank Test Failed on Previous Key Cycle	Executes in a 12.5 ms Loop Detects in 350ms	

Battery Pack Diagnostics								
Hybrid Battery System Discharge Time Too Long	P0C76	High voltage bus discharge time too long	High Voltage Inverter Rationalized Voltage	> 60V	Vehicle Power Mode PECM State Machine State Discharge Time	"= RUN" "= Bus Discharge" ≥ 1000ms	2 Failures out of 2 Samples Frequency: Runs Once per Key-Cycle, 1000ms	Special Type C

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Hybrid Battery Contactor Control Sequence Incorrect	P1A21	Contactor control functionality	Contactors closed this key on AND Shutdown in process AND Battery contactor state	= TRUE = FALSE ≠ CLOSED			50 ms	One Trip, Type A
Hybrid Battery Pack Overtemperature	P0A7E	High voltage battery overtemperature	Battery temperature	> 61°C			3000 Failures out of 3600 Samples Frequency: 100ms	One Trip, Type A

Autostart Diagnostics								
Hybrid System Performance	P0AB9	This diagnostic indicates an autostart or autostop attempt failed.	A problem during the autostart/stop process causes the engine to stall.				12.5 ms	One Trip, Type A

Communication Diagnostics								
Control Module Communication Bus A Off	U0073	Detects that a CAN serial data bus shorted condition has occurred to force the CAN device driver to enter a bus-off state.	CAN device driver	= bus-off state.	Run/Crank Voltage OR Powertrain Relay Voltage HV_ManageVN_Actv	> 9.5 Volts =FALSE	3 failures out of 5 samples Detects in 450 msec at loop rate of 12.5 msec	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					PowerMode BusOffFaultActive NormalCommEnabled NormalMsgTransmission DiagSystemDsbl DiagEnblTmr	=RUN =FALSE =TRUE =TRUE =FALSE >=3 sec		
Control Module Communication Bus B Off	U0074	Detects that a CAN serial data bus shorted condition has occurred to force the CAN device driver to enter a bus-off state.	CAN device driver	= bus-off state.	Run/Crank Voltage OR Powertrain Relay Voltage HV_ManageVN_Actv PowerMode BusOffFaultActive NormalCommEnabled	> 9.5 Volts =FALSE =RUN =FALSE =TRUE	3 failures out of 5 samples Detects in 450 msec at loop rate of 12.5 msec	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					NormalMsgTransmission	=TRUE		
					DiagSystemDsbl	=FALSE		
					DiagEnblTmr	>=3 sec		
Lost Communication With ECM/PCM on Bus A	U0100	Detects that CAN serial data communication has been lost with the ECM on Bus A	Missed ECM Messages		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts	Detects within 500 msec at 6.25 msec loop rate	One Trip, Type A
					HV_ManageVN_Actv	=FALSE		
					PowerMode	=RUN		
					BusOffFaultActive	=FALSE		
					NormalCommEnabled	=TRUE		
					NormalMsgTransmission	=TRUE		
					DiagSystemDsbl	=FALSE		
					DiagEnblTmr	>=3 sec		
Lost Communication With TCM	U0101	Detects that CAN serial data communication has been lost with the ECM on Bus A	Missed TCM Messages		Run/Crank Voltage OR	> 9.5 Volts	Detects within 500 msec at 6.25 msec loop rate	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Powertrain Relay Voltage HV_ManageVN_Actv PowerMode BusOffFaultActive NormalCommEnabled NormalMsgTransmission DiagSystemDsbl DiagEnblTmr	=FALSE =RUN =FALSE =TRUE =TRUE =FALSE >=3 sec		
Lost Communication With Brake System Control Module	U0129	Detects that CAN serial data communication has been lost with the EBCM on Bus A	Missed EBCM Messages		Run/Crank Voltage OR Powertrain Relay Voltage HV_ManageVN_Actv PowerMode BusOffFaultActive	> 9.5 Volts =FALSE =RUN =FALSE	Detects within 500 msec at 6.25 msec loop rate	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					NormalCommEnabled	=TRUE		
					NormalMsgTransmission	=TRUE		
					DiagSystemDsbl	=FALSE		
					DiagEnblTmr	>=3 sec		
Lost Communication With Motor Control Processor on Bus B	U1815	Detects that CAN serial data communication has been lost with the MCPA on Bus B	Missed MCPA Messages		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts	Detects within 500 msec at 6.25 msec loop rate	Two Trips, Type B
					HV_ManageVN_Actv	=FALSE		
					PowerMode	=RUN		
					BusOffFaultActive	=FALSE		
					NormalCommEnabled	=TRUE		
					NormalMsgTransmission	=TRUE		
					DiagSystemDsbl	=FALSE		
					DiagEnblTmr	>=3 sec		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Lost Communication With ECM/PCM on Bus B	U1818	Detects that CAN serial data communication has been lost with the ECM on Bus B	Missed ECM Messages		Run/Crank Voltage OR Powertrain Relay Voltage HV_ManageVN_Actv PowerMode BusOffFaultActive NormalCommEnabled NormalMsgTransmission DiagSystemDsbl DiagEnblTmr	> 9.5 Volts =FALSE =RUN =FALSE =TRUE =TRUE =FALSE >=3 sec	Detects within 500 msec at 6.25 msec loop rate	One Trip, Type A
Lost Communication With LostCommGateway_A_BusB	U1829	Detects that CAN serial data communication has been lost with the ECM on Bus B	Missed CGM Messages		Run/Crank Voltage OR Powertrain Relay Voltage HV_ManageVN_Actv PowerMode	> 9.5 Volts =FALSE =RUN	Detects within 500 msec at 6.25 msec loop rate	Special Type C

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					BusOffFaultActive	=FALSE		
					NormalCommEnabled	=TRUE		
					NormalMsgTransmission	=TRUE		
					DiagSystemDsbl	=FALSE		
					DiagEnblTmr	>=3 sec		
Lost Communication With DMCM_B_LostCommunication_BECEM	U1878	Drive Motor B Control Module Lost Communication With Battery Energy Control Module	Missed BECEM Messages		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts	Detects within 500 msec at 6.25 msec loop rate	Two Trips, Type B
					HV_ManageVN_Actv	=FALSE		
					PowerMode	=RUN		
					BusOffFaultActive	=FALSE		
					NormalCommEnabled	=TRUE		
					NormalMsgTransmission	=TRUE		
					DiagSystemDsbl	=FALSE		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					DiagEnblTmr	>=3 sec		
Lost Communication With DMCM_B_LostComm_ECM	U1879	Drive Motor B Control Module Lost Communication With Engine Control Module (ECM)/Powertrain Control Module (PCM)	Missed BCM Messages		Run/Crank Voltage OR Powertrain Relay Voltage HV_ManageVN_Actv PowerMode BusOffFaultActive NormalCommEnabled NormalMsgTransmission DiagSystemDsbl DiagEnblTmr	> 9.5 Volts =FALSE =RUN =FALSE =TRUE =TRUE =FALSE	Detects within 500 msec at 6.25 msec loop rate	Two Trips, Type B
Lost Communication With Battery Pack Control Module	U1888	Detects that CAN serial data communication has been lost with the BPCM	Missed BPCM Messages		Run/Crank Voltage OR Powertrain Relay Voltage HV_ManageVN_Actv	> 9.5 Volts =FALSE	Detects within 500 msec at 6.25 msec loop rate	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					PowerMode	=RUN		
					BusOffFaultActive	=FALSE		
					NormalCommEnabled	=TRUE		
					NormalMsgTransmission	=TRUE		
					DiagSystemDsbl	=FALSE		
					DiagEnblTmr	>=3 sec		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Power Moding								
System Voltage Low	P0562	Sets when the low voltage system voltage is below a threshold DTC Pass	Ignition Voltage	Ignition Voltage <= 10 Volts Ignition Voltage > 10 Volts	RunCrankActive Engine Speed	= 1 >= 0 RPM	5 seconds in a 6 second window 1 second	Special Type C
System Voltage Hi	P0563	Sets when the low voltage system voltage is above a threshold DTC Pass	Ignition Voltage	Ignition Voltage >= 18 Volts Ignition Voltage < 18 Volts	RunCrankActive	= 1	5 seconds in a 6 second window 1 second	Special Type C
Shift Solenoid Hydraulic Diagnostics								
Shift Solenoid Hydraulic Diagnostics P0751, P0752, P0756, P0757 have the following common enable criteria	***				LinePressureEstimate Propulsion System Active	> 350 kpa AND >= 300 kpa FOR > 1 seconds AND > (Minimum Line Pressure - 30) kpa Where MinLinePressure is a lookup table Trans Fluid Temp vs Line Pressure: Temp Kpa -40 1400 -30 1400 -20 1000 -10 700 0 500 10 250		
Shift Solenoid Valve A Stuck Off	P0751	This DTC will indicate when Shift Solenoid Valve A (X Valve) is stuck in the hydraulically low position	X valve is determined to be in a hydraulically Low state when it has been commanded hydraulically High.	X Commanded Hi for > XvalveTurnOnTime + 1 seconds	X Command X Position	=1 =0	Fail Conditions met for 3 seconds	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		This detection only occurs during an X valve transition		Where XValveTurnOnTime: Trans Fluid Temp Time -40 0.40 -30 0.25 -20 0.10 -10 0.04 20 0.03 140 0.02				
		DTC Pass	X valve completes Low to High transition without failure		X Command X Position	=1 =1	1 loop execution at 0.0125 seconds	
Shift Solenoid Valve A Stuck On	P0752	This DTC will indicate when Shift Solenoid Valve A (X Valve) is stuck in the hydraulically hi position This DTC is linked to both a steady state and transitional test.	X valve is determined to be in a hydraulically high state when it has been commanded to a low state.	Transition Case: X commanded Low for > (XvalveTurnOffTm + 1) seconds Where XValveTurnOffTime: Trans Fluid Temp Time -40 .5 -30 .4 -20 .12 -10 0.08 20 0.03 140 0.0325	X Command X Position	0 1	Fail Conditions met for 3 seconds	Two Trips Type B
		DTC Pass (Transitional Pass)	X valve completes High to Low transition without failure		X Command X position PCS2 and PCS4 Monitors	0 0 No Fault Pending	5 seconds	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		DTC Pass (Steady State Pass)	X valve completes High to Low transition without failure	Steady State Case: Simultaneous failures occur on both PCS2 and PCS4 monitors	XY state	EVT Lo OR EVT Hi	Fail Conditions met for 2 seconds	
					PCS2 and PCS4 faults	Occur Simultaneously within (VlvXStckHiSteadyStWindow + 0.1) seconds Where VlvXStckHiSteadyStWindow: Trans Fluid Temp Time -50 0.50 -32 0.50 -24 0.50 -5 0.50 4 0.50 40 0.50		
					X Command X position PCS2 and PCS4 Monitors	0 0 No Fault Pending	5 seconds	
				Stuck In Bore Case: X stuck in bore detection is indeterminant for an extended period of time	PCS4 hydraulic stuck high failure detected upon key up	TRUE	Fail conditions met for > 1800 seconds	
					XY state X commanded high this key cycle	EVT Lo FALSE		
Shift Solenoid Valve B Stuck Off	P0756	This DTC will indicate when Shift Solenoid Valve B (Y Valve) is stuck in the hydraulically low position This detection only occurs during an Y valve transition	The Y valve is determined to be in a hydraulically Low state when it has been commanded hydraulically High.	Y Commanded Hi for > (Yvalve_TurnOnTm + 1 seconds Where Yvalve_TurnOnTm: Trans Fluid Temp Time	Y Command Y Position	1 0	Fail Conditions met for 4.5 seconds	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		DTC Pass	Y valve completes Low to High transition without failure	-40 .9 -30 .6 -20 0.28 -10 0.20 20 0.05 140 0.035	Y command Y Position	1 1 (as indicated by YPSw showing 0 value)	Pass conditions met for 2 seconds	
Shift Solenoid Valve B Stuck On	P0757	This DTC will indicate when Shift Solenoid Valve B (Y Valve) is stuck in the hydraulically hi position This detection only occurs during an Y valve transition	The Y valve is determined to be in a hydraulically Hi state when it has been commanded hydraulically Lo	Y Commanded Lo for > (Yvalve_TurnOffTm + 1) seconds Where Yvalve_TurnOffTm: Trans Fluid Temp Time -40 2.17 -30 1.35 -20 .54 -10 0.2 20 0.064 140 0.05	Y Command Y Position	0 1	Fail Conditions met for 4.5 seconds	One Trip, Type A
		DTC Pass	Y valve completes High to Low transition without failure		Y Command Y Position	0 0 (as indicated by YPSw showing 1 value)	Pass conditions met for 2 seconds	

Pressure Control Solenoid Hydraulic Diagnostics								
Pressure Control Solenoid hydraulic diagnostics P0776, P0777, P0796, P0797 P2714, P2715, share these common secondary parameter enable conditions	***				Engine speed Xvalve transition	(> 550 RPM FOR > 1.25 seconds (100 * .0125)) OR (<= 50 RPM FOR 1.375 seconds (110 * 0.0125)) X valve is not in a transition, and hasn't transitioned in the last 0.275 seconds (0.025 +		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					X Valve Stuck Hi Detection LinePressureEstimate Propulsion System Active	.25) No fault pending > 350 kpa AND >= 300 kpa FOR > 1 seconds AND > (MinLinePressure - 30) kpa Where MinLinePressure is a lookup table TransTemp vs Line Pressure: Temp Kpa -40 1400 -30 1400 -20 1000 -10 700 0 500 10 250 =1		
Pressure Control (PC) Solenoid B Stuck Off	P0776	This DTC will determine if Pressure Control Solenoid 2 (B) is stuck in the hydraulically low position. This DTC has two fail cases.	The pressure switch associated with pressure control solenoid B (PCS2) is indicating that the PCS is regulating exhaust when the PCS has been commanded full feed.	Fail Case 1: PCS2PS (PSw3) indicates low hydraulic pressure	PCS commanded pressure *** Common Hydraulic Enables	>= 1800 kpa for >= (PSReDelay + 0.1) seconds Where PSReDelay: Fluid Temp Time -50 4.50 -30 1.80 -24 1.2 -17 0.80 4 0.20 40 0.1	Failure exists for 30 seconds (2400 * 0.0125)	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		DTC Pass	Pass when PCS2PS and PCS2Cmnd are in agreement (Full Feed)	PCS2PS (PSw3) indicates hi hydraulic pressure			1.25 seconds ((2500 - 2400) * 0.0125)	
			The warning threshold for Fail Case 1 has been met 5 times in a single key cycle	Fail Case 2: Fail case 1 criteria met for at least 0.5 seconds (40 * 0.0125), more than 5 times in a given key cycle	Same as Fail Case 1.		N/A	
Pressure Control (PC) Solenoid B Stuck ON	P0777	This DTC will determine if Pressure Control Solenoid 2 (B) is stuck in the hydraulically hi position. This DTC has two fail cases. DTC Pass	The pressure switch associated with pressure control solenoid B (PCS2) is indicating that the PCS is in the full feed position when the PCS has been commanded regulating exhaust.	Fail Case 1: PCS2PS (PSw3) indicates hi hydraulic pressure	PCS commanded pressure *** Common Hydraulic Enables	<= 5 kpa for >= (FFDelay + 0.1) seconds Where FFDelay: Temp Time -50 4.50 -30 1.40 -18 0.80 -4 0.30 13 0.19 40 0.08	Failure exists for 30 seconds (2400 * 0.0125)	Two Trips, Type B
			Pass when PCS2PS and PCS2Cmnd are in agreement (Reg Exhaust)	PCS2PS (PSw3) indicates Low hydraulic pressure			1.25 seconds ((2500 - 2400) * 0.0125)	
			The warning threshold for Fail Case 1 has been met 5 times in a single key cycle	Fail Case 2: Fail case 1 criteria met for at least 0.2 seconds (16 * 0.0125), more than 5 times in a given key cycle	Same as Fail Case 1.		N/A	
Pressure Control (PC) Solenoid C Stuck Off	P0796	This DTC will determine if Pressure Control Solenoid 3 (C) is stuck in the hydraulically low position. This DTC has two fail cases.	The pressure switch associated with pressure control solenoid C (PCS3) is indicating that the PCS is regulating exhaust when the PCS has been commanded full feed.	Fail Case 1: PCS3PS (PSw1) indicates low hydraulic pressure	PCS commanded pressure *** Common Hydraulic Enables	>= 1800 kpa for >= (PSReDelay + 0.1) seconds Where PSReDelay: Temp Time	Failure exists for 30 seconds (2400 * 0.0125)	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		DTC Pass	Pass when PCS3PS and PCS3Cmnd are in agreement (Full Feed)	PCS3PS (PSw1) indicates hi hydraulic pressure		-50 4.50 -30 1.80 -24 1.2 -17 0.80 4 0.20 40 0.1	1.25 seconds ((2500 - 2400) * 0.0125)	
			The warning threshold for Fail Case 1 has been met 5 times in a single key cycle	Fail Case 2: Fail case 1 criteria met for at least 0.5 seconds (40 * 0.0125), more than 5 times in a given key cycle	Same as Fail Case 1.		N/A	
Pressure Control (PC) Solenoid C Stuck ON	P0797	This DTC will determine if Pressure Control Solenoid 3 (C) is stuck in the hydraulically hi position. This DTC has two fail cases.	The pressure switch associated with pressure control solenoid C (PCS3) is indicating that the PCS is in the full feed position when the PCS has been commanded regulating exhaust.	Fail Case 1: PCS3PS (PSw1) indicates hi hydraulic pressure	PCS commanded pressure *** Common Hydraulic Enables	<=5 kpa for >= (FFDelay + 0.1) seconds Where FFDelay: Trans Fluid Temp Time -50 4.50 -30 1.40 -18 0.80 -4 0.30 13 0.19 40 0.08	Failure exists for 30 seconds (2400 * 0.0125)	Two Trips, Type B
		DTC Pass	Pass when PCS3PS and PCS3Cmnd are in agreement (Reg Exhaust)	PCS3PS (PSw1) indicates Low hydraulic pressure			1.25 seconds ((2500 - 2400) * 0.0125)	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			The warning threshold for Fail Case 1 has been met 5 times in a single key cycle	Fail Case 2: Fail case 1 criteria met for at least 0.2 seconds (16 * 0.0125), more than 5 times in a given key cycle	Same as Fail Case 1.		N/A	
Pressure Control (PC) Solenoid D Stuck Off	P2714	This DTC will determine if Pressure Control Solenoid 4 (D) is stuck in the hydraulically low position. This DTC has two fail cases. DTC Pass	The pressure switch associated with pressure control solenoid C (PCS4) is indicating that the PCS is regulating exhaust when the PCS has been commanded full feed.	Fail Case 1: PCS4PS (PSw4) indicates low hydraulic pressure	PCS commanded pressure *** Common Hydraulic Enables	>=1800 kpa for >= (KtHCCD_t_PCS_PSR eDelay + 0.1) seconds	Failure exists for 30 seconds (2400 * 0.0125)	Two Trips, Type B
			Pass when PCS4PS and PCS4Cmnd are in agreement (Full Feed)	PCS4PS (PSw4) indicates hi hydraulic pressure			1.25 seconds ((2500 - 2400) * 0.0125)	
			The warning threshold for Fail Case 1 has been met 5 times in a single key cycle	Fail Case 2: Fail case 1 criteria met for at least 0.5 seconds (40 * 0.0125), more than 5 times in a given key cycle	Same as Fail Case 1.		N/A	
Pressure Control (PC) Solenoid D Stuck ON	P2715	This DTC will determine if Pressure Control Solenoid 4 (D) is stuck in the hydraulically hi position. This DTC has two fail cases.	The pressure switch associated with pressure control solenoid D (PCS4) is indicating that the PCS is in the full feed position when the PCS has been commanded regulating exhaust.	Fail Case 1: PCS4PS (PSw4) indicates hi hydraulic pressure	PCS commanded pressure *** Common Hydraulic Enables	<= 5 kpa for >= (FFDelay + 0.1) seconds Where FFDelay:	Failure exists for 30 seconds (2400 * 0.0125)	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		DTC Pass	Pass when PCS4PS and PCS4Cmnd are in agreement (Reg Exhaust)	PCS4PS (PSw4) indicates Low hydraulic pressure		Trans Fluid Temp Time -50 4.50 -30 1.40 -18 0.80 -4 0.30 13 0.19 40 0.08	1.25 seconds ((2500 - 2400) * 0.0125)	
			The warning threshold for Fail Case 1 has been met 5 times in a single key cycle	Fail Case 2: Fail case 1 criteria met for at least 0.2 seconds (16 * 0.0125), more than 5 times in a given key cycle	Same as Fail Case 1.		N/A	
Clutch Slip Diagnostics								
Clutch slip diagnostics P079A, P079B, P079C, P079D share these common secondary parameter enable conditions	***				LinePressureEstimate	> 350 kpa AND >= 300 kpa FOR > 1 seconds AND > (MinLinePressure - 30) kpa Where MinLinePressure is a lookup table Trans Fluid Temp vs Line Pressure: Temp Kpa -40 1400 -30 1400 -20 1000 -10 700 0 500 10 250		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Clutch 1 Slip	P079A	This DTC sets when excessive slip is observed on C1 while C1 has been commanded on DTC Pass	Clutch 1 Slip Speed	C1 Slip > 200 RPM	C1 Pressure Command C1 Torq Estimate C1 Fill detected	> = 1800 kpa > = 200 Nm =1	3 seconds (240 * 0.0125)	One Trip, Type A
			Clutch 1 Slip Speed	C1 Slip < 50 RPM	C1 Pressure Command C1 Torq Estimate C1 Fill detected	> = 1800 kpa > = 20 Nm =1	0.125 seconds (10 * 0.0125)	
Clutch 2 Slip	P079B	This DTC sets when excessive slip is observed on C2 while C2 has been commanded on DTC Pass	Clutch 2 Slip Speed	C2 Slip > 200 RPM	C2 Pressure Command C2 Torq Estimate C2 Fill detected	> = 1800 kpa > = 200 Nm =1	1 second (80 * 0.0125)	Two Trips, Type B
			Clutch 2 Slip Speed	C2 Slip < 50 RPM	C2 Pressure Command C2 Torq Estimate C2 Fill detected	> = 1800 kpa > = 20 Nm =1	0.125 seconds (10 * 0.0125)	
Clutch 3 Slip	P079C	This DTC sets when excessive slip is observed on C3 while C3 has been commanded on DTC Pass	Clutch 3 Slip Speed	C3 Slip > 100 RPM	C3 Pressure Command C3 Torq Estimate C3 Fill detected	> = 1800 kpa > = 20 Nm =1	0.625 seconds (50 * 0.0125)	Two Trips, Type B
			Clutch 3 Slip Speed	C3 Slip < 20 RPM	C3 Pressure Command C3 Torq Estimate C3 Fill detected	> = 1800 kpa > = 20 Nm =1	0.125 seconds (10 * 0.0125)	
Clutch 4 Slip	P079D	This DTC sets when excessive slip is observed on C4 while C4 has been commanded on	Clutch 4 Slip Speed	C4 Slip > 100 RPM	C4 Pressure Command C4 Torq Estimate C4 Fill detected	> = 1800 kpa > = 20 Nm =1	0.3125 seconds (25 * 0.0125)	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		DTC Pass	Clutch 4 Slip Speed	C4 Slip < 10 RPM	C4 Pressure Command C4 Torq Estimate C4 Fill detected	> = 1800 kpa > = 20 Nm =1	0.125 seconds (10 * 0.0125)	

Pressure Control Solenoid Electrical Diagnostics								
All Pressure Control Solenoid electrical diagnostics P0961, P0962, P0963, P0965, P0966, P0967, P0969, P0970, P0971, P2719, P2720, P2721, P2728, P2729, P2730, P0973, P0974, P0976, P0977 share these common secondary parameter enable conditions	***				Ignition voltage Engine Speed Vehicle Speed RunCrankActive	> = 11 Volts && <= 16 Volts >= 0 RPM && <= 7500 RPM for >= 5 seconds <= 200 kph for >= 5 seconds =1		
Pressure Control (PC) Solenoid A System Performance	P0961	This DTC sets when an invalid voltage in PCS1 control circuit has been detected	PCS1 electrical status	HWIO circuitry detects out of range error is present	DTC P0961 *** Common Electrical Enables	Not failed this key on	Failure detected for 4 seconds (320 * 0.0125) out of a 5 second (400 * 0.0125) window	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		DTC Pass		HWIO circuitry detects an out of range error is not present			1 second ((400 - 320) * 0.0125)	
Pressure Control (PC) Solenoid A Control Circuit Low Voltage	P0962	This DTC sets when the PCS1 control circuit has been detected to be shorted to ground	PCS1 electrical status	HWIO circuitry detects an electrical low pressure error is present	DTC P0962 *** Common Electrical Enables	Not failed this key on	Failure detected for 0.4 seconds (32 * 0.0125) out of a 0.5 second (40 * 0.0125) window 0.1 seconds ((40 - 32) * 0.0125)	One Trip, Type A
Pressure Control (PC) Solenoid A Control Circuit High Voltage	P0963	This DTC sets when PCS1 has been detected to be shorted to power or open circuited.	PCS1 electrical status	HWIO circuitry detects an electrical hi pressure error is present.	DTC P0963 *** Common Electrical Enables	Not failed this key on	Failure detected for 0.4 seconds (32 * 0.0125) out of a 0.5 second (40 * 0.0125) window 0.1 seconds ((40 - 32) * 0.0125)	One Trip, Type A
Pressure Control (PC) Solenoid B System Performance	P0965	This DTC sets when an invalid voltage in PCS2 control circuit has been detected	PCS2 electrical status	HWIO circuitry detects out of range error is present.	DTC P0965 *** Common Electrical Enables	Not failed this key on	Failure detected for 4 seconds (320 * 0.0125) out of a 5 second (400 * 0.0125) window 1 second	Two Trips, Type B
		DTC Pass		HWIO circuitry detects an out of				

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
				range error is not present			((400 - 320) * 0.0125)	
Pressure Control (PC) Solenoid B Control Circuit Low Voltage	P0966	This DTC sets when the PCS2 control circuit has been detected to be shorted to ground DTC Pass	PCS2 electrical status	HWIO circuitry detects an electrical low pressure error is present. HWIO circuitry detects an electrical low pressure error is not present	DTC P0966 *** Common Electrical Enables	Not failed this key on	Failure detected for 0.4 seconds (32 * 0.0125) out of a 0.5 second (40 * 0.0125) window 0.1 seconds ((40 - 32) * 0.0125)	One Trip, Type A
Pressure Control (PC) Solenoid B Control Circuit High Voltage	P0967	This DTC sets when PCS2 has been detected to be shorted to power or open circuited. DTC Pass	PCS2 electrical status	HWIO circuitry detects an electrical hi pressure error is present. HWIO circuitry detects an electrical hi pressure error is not present	DTC P0967 *** Common Electrical Enables	Not failed this key on	Failure detected for 0.4 seconds (32 * 0.0125) out of a 0.5 second (40 * 0.0125) window 0.1 seconds ((40 - 32) * 0.0125)	One Trip, Type A
Pressure Control (PC) Solenoid C System Performance	P0969	This DTC sets when an invalid voltage in PCS3 control circuit has been detected	PCS3 electrical status	HWIO circuitry detects out of range error is present. HWIO circuitry detects an out of range error is not present	DTC P0965 *** Common Electrical Enables	Not failed this key on	Failure detected for 4 seconds (320 * 0.0125) out of a 5 second (400 * 0.0125) window 1 second ((400 - 320) * 0.0125)	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Pressure Control (PC) Solenoid C Control Circuit Low Voltage	P0970	This DTC sets when the PCS3 control circuit has been detected to be shorted to ground DTC Pass	PCS3 electrical status	HWIO circuitry detects an electrical low pressure error is present. HWIO circuitry detects an electrical low pressure error is not present	DTC P0966 *** Common Electrical Enables	Not failed this key on	Failure detected for 0.4 seconds (32 * 0.0125) out of a 0.5 second (40 * 0.0125) window 0.1 seconds ((40 - 32) * 0.0125)	One Trip, Type A
Pressure Control (PC) Solenoid C Control Circuit High Voltage	P0971	This DTC sets when PCS3 has been detected to be shorted to power or open circuited. DTC Pass	PCS3 electrical status	HWIO circuitry detects an electrical hi pressure error is present. HWIO circuitry detects an electrical hi pressure error is not present	DTC P0967 *** Common Electrical Enables	Not failed this key on	Failure detected for 0.4 seconds (32 * 0.0125) out of a 0.5 second (40 * 0.0125) window 0.1 seconds ((40 - 32) * 0.0125)	One Trip, Type A
Pressure Control (PC) Solenoid D System Performance	P2719	This DTC sets when an invalid voltage in PCS4 control circuit has been detected DTC Pass	PCS4 electrical status	HWIO circuitry detects out of range error is present. HWIO circuitry detects an out of range error is not present	DTC P2719 *** Common Electrical Enables	Not failed this key on	Failure detected for 4 seconds (320 * 0.0125) out of a 5 second (400 * 0.0125) window 1 second ((400 - 320) * 0.0125)	Two Trips, Type B
Pressure Control (PC) Solenoid D Control Circuit Low Voltage	P2720	This DTC sets when the PCS4 control circuit has been detected to be open circuit or shorted to power	PCS4 electrical status	HWIO circuitry detects an electrical low pressure error is present.	DTC P2720 *** Common Electrical Enables	Not failed this key on	Failure detected for 0.4 seconds (32 * 0.0125) out of a 0.5 second (40 * 0.0125)	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		DTC Pass		HWIO circuitry detects an electrical low pressure error is not present			window 0.1 seconds ((40 - 32) * 0.0125)	
Pressure Control (PC) Solenoid D Control Circuit High Voltage	P2721	This DTC sets when PCS4 has been detected to be shorted to ground DTC Pass	PCS4 electrical status	HWIO circuitry detects an electrical hi pressure error is present. HWIO circuitry detects an electrical hi pressure error is not present	DTC P2721 *** Common Electrical Enables	Not failed this key on	Failure detected for 0.4 seconds (32 * 0.0125) out of a 0.5 second (40 * 0.0125) window 0.1 seconds ((40 - 32) * 0.0125)	One Trip, Type A
Pressure Control (PC) Solenoid E System Performance	P2728	This DTC sets when an invalid voltage in PCS5 control circuit has been detected DTC Pass	PCS5 electrical status	HWIO circuitry detects out of range error is present. HWIO circuitry detects an out of range error is not present	DTC P2719 *** Common Electrical Enables	Not failed this key on	Failure detected for 4 seconds (320 * 0.0125) out of a 5 second (400 * 0.0125) window 1 second ((400 - 320) * 0.0125)	Two Trips, Type B
Pressure Control (PC) Solenoid E Control Circuit Low Voltage	P2729	This DTC sets when the PCS5 control circuit has been detected to be open circuit or shorted to power	PCS5 electrical status	HWIO circuitry detects an electrical low pressure error is present.	DTC P2720 *** Common Electrical Enables	Not failed this key on	Failure detected for 0.4 seconds (32 * 0.0125) out of a 0.5 second (40 * 0.0125) window	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		DTC Pass		HWIO circuitry detects an electrical low pressure error is not present			0.1 seconds ((40 - 32) * 0.0125)	
Pressure Control (PC) Solenoid E Control Circuit High Voltage	P2730	This DTC sets when PCS5 has been detected to be shorted to ground DTC Pass	PCS5 electrical status	HWIO circuitry detects an electrical hi pressure error is present. HWIO circuitry detects an electrical hi pressure error is not present	DTC P2721 *** Common Electrical Enables	Not failed this key on	Failure detected for 0.4 seconds (32 * 0.0125) out of a 0.5 second (40 * 0.0125) window 0.1 seconds ((40 - 32) * 0.0125)	One Trip, Type A
Shift Solenoid A Control Circuit Low	P0973	This DTC detects a short to power or open circuit in the X valve control circuit. DTC Pass	X Valve Electrical Status	HWIO circuitry detects an open circuit or short to power error is present. HWIO circuitry detects an open circuit or short to power error is not present.	DTC P0973 *** Common Electrical Enables	Not failed this key on	Failure detected for 0.4 seconds (16 * 0.025) out of a 0.5 second (20 * 0.025) window 0.1 seconds ((20 - 16) * 0.025)	One Trip, Type A
Shift Solenoid A Control Circuit High	P0974	This DTC detects a short to ground in the X valve control circuit. DTC Pass	X Valve Electrical Status	HWIO circuitry detects short to ground error is present. HWIO circuitry detects short to ground error is not present.	DTC P0974 *** Common Electrical Enables	Not failed this key on	Failure detected for 0.4 seconds (16 * 0.025) out of a 0.5 second (20 * 0.025) window 0.1 seconds ((20 - 16) * 0.025)	One Trip, Type A
Shift Solenoid B	P0976	This DTC detects a short to power	Y Valve Electrical Status	HWIO circuitry detects an	DTC P0976	Not failed this key on	Failure detected	One Trip, Type

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Control Circuit Low		or open circuit in the Y valve control circuit. DTC Pass		electrical low pressure error is present. HWIO circuitry detects an open circuit or short to power error is not present.	*** Common Electrical Enables		for 0.4 seconds (16 * 0.025) out of a 0.5 second (20 * 0.025) window 0.1 seconds ((20 - 16) * 0.025)	A
Shift Solenoid B Control Circuit High	P0977	This DTC detects a short to ground in the Y valve control circuit. DTC Pass	Y Valve Electrical Status	HWIO circuitry detects an electrical hi pressure error is present. HWIO circuitry detects short to ground error is not present.	DTC P0977 *** Common Electrical Enables	Not failed this key on	Failure detected for 0.4 seconds (16 * 0.025) out of a 0.5 second (20 * 0.025) window 0.1 seconds ((20 - 16) * 0.025)	One Trip, Type A

Power Moding Diagnostics								
Ignition Switch Run/Start Position Circuit Low	P2534	Detects a run crank relay open circuit DTC Pass	Runk Crank Line voltage Run Crank Line Voltage	Ignition Run Crank line voltage <= 2 Volts Ignition Run Crank line voltage > 2 Volts	CAN Communication ECM run crank active data	enabled available and active	60 seconds (2400 * 0.025) in a 65 second window (2600 * 0.025) 5 seconds (200 * 0.025)	One Trip, Type A

Transm'n Fluid Thermostat								
Transmission Fluid Overtemperature	P0218	The DTC detects if the transmission fluid temperature is too high.	Transmission Sump Temperature	≥ 135 °C	Transmission Temperature	-50 °C ≤ TFT ≤ 150 °C for 10 seconds	≥ 300 seconds	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							Pass Conditions Transm'n Sump Temp ≤ 130 °C for 5 seconds	

TCM Substrate Temp Sensor								
Transmission Control Module (TCM) Internal Temperature Too High	P0634	The DTC detects the electronic circuitry is at high operating temperature.	Transmission Substrate Temperature OR Ignition Voltage AND Substrate Temperature	≥ 142 °C ≥ 18 V ≥ 50 °C	Transmission Substrate Temperature	-50 °C ≤ Transmission Substrate Temperature ≤ 146 °C for 0.25 seconds	≥ 5 seconds ≥ 2 seconds Pass Conditions Transm'n Substrate Temp ≤ 142 °C and Ignition Voltage is ≤ 18 V for 10 seconds OR Transm'n Substrate Temp ≤ 50 °C and Ignition Voltage is ≥ 18 V for 10 seconds	One Trip, Type A
Transmission Control Module (TCM) Substrate Temperature Sensor Circuit Range/Performance	P0667	The DTC detects the TCM substrate temperature sensor is reporting an incorrect value	Delta between TCM substrate temperature sensor and transmission fluid temperature sensor (TFT)	> Highest of transmission temperature sensors Temp Delta -40.1 256 -40 50 -20 20 0 20 30 15 60 15 100 15	IF vehicle speed is < 8 kph and accelerator position is > 20% for more than 7 seconds, then diagnostic is disabled. Once above conditions are removed > 20 seconds, diagnostic is re-enabled		> 300 seconds (3000 counts at 100ms)	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			AND Delta between TCM substrate temperature sensor and TCM powerup temperature sensor	149.0 15 Temp Delta -40.1 256 -40 10 -20 8 0 8 30 8 60 8 100 8 149.0 8 149.1 256	Transmission state Engine Torque Inaccurate Accelerator Position Sensor Failure P0721, P0722, P0723, P215C, P0658, P0668, P0669, P0712, P0713, P06AD, P06AE Engine Speed Vehicle Speed	NOT in park/neutral Must be FALSE Must be FALSE NOT Fault Active OR Failed This Key On 0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds Vehicle Speed ≤ 200 KPH for 5 seconds		
		DTC Pass	Transm'n substrate temp delta between powerup temp sensor AND fluid temp sensor	< value in fail criteria table			> 70 sec (700 counts at 100ms)	
Transmission Control Module (TCM) Substrate Temperature Sensor Circuit Low (Failed at a low temperature - circuit short to ground).	P0668	The DTC detects TCM substrate temperature sensor short to ground error.	TCM Substrate Temperature Sensor	≤ -60 °C	Engine Speed Vehicle Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds ≤ 200 KPH for 5 seconds	≥ 60 seconds Pass Conditions Transm'n Substrate Temp ≥ -55 °C for 4 seconds	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Transmission Control Module (TCM) Substrate Temperature Sensor Circuit High (Failed at a high temperature - circuit open or short to power).	P0669	The DTC detects TCM substrate temperature sensor open or short to power error.	TCM Substrate Temperature Sensor	≥ 160 °C	Engine Speed Vehicle Speed Transmission Output Speed Estimated Motor Power Loss	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds Vehicle Speed ≤ 200 KPH for 5 seconds Transmission Output Speed ≥ 200 RPM for 5 seconds cumulative. Estimated Motor Power Loss ≥ 0.4 kW for 200 seconds cumulative.	≥ 60 seconds Pass Conditions Transm'n Substrate Temp ≤ 150 °C for 4 seconds	Two Trips, Type B

TCM Powerup Temp Sensor								
Transmission Control Module (TCM) Powerup Temperature Sensor Circuit Range/Performance	P06AC	The DTC detects the TCM powerup temperature sensor is reporting an incorrect value	Delta between TCM powerup temperature sensor and transmission fluid temperature sensor (TFT)	>Highest of transmission temperature sensors Temp Delta -40.1 256 -40 50 -20 20 0 20 30 15 60 15 100 15 149.0 15 149.1 256	IF vehicle speed is < 8 kph and accelerator position is > 20% for more than 7 seconds, then diagnostic is disabled. Once conditions are removed > 20 seconds, diagnostic re-enabled		> 300 seconds (3000 counts at 100ms)	Two Trips, Type B
			AND Delta between TCM powerup	>Highest of	Transmission state	NOT in park/neutral		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							Transm'n Substrate Temp ≥ 40 °C for 4 seconds	
Transmission Control Module (TCM) Powerup Temperature Sensor Circuit High (Failed at a high temperature - circuit open or short to power).	P06AE	The DTC detects TCM powerup sensor open or short to power error.	TCM Power Up Temperature Sensor	≥ 164 °C	Engine Speed Vehicle Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds Vehicle Speed ≤ 200 KPH for 5 seconds	≥ 60 seconds Pass Conditions Transm'n Substrate Temp ≤ 150 °C for 4 seconds	Two Trips, Type B

Transm'n Fluid Temp Sensor								
Transmission Fluid Temperature Sensor Circuit Range/Performance	P0711	The DTC detects the transmission fluid temperature is reporting an incorrect value	Delta between transmission fluid temperature (TFT) and TCM powerup temperature sensor	> Highest of transmission temperature sensors Temp Delta -40.1 256 -40 50 -20 20 0 20 30 15 60 15 100 15 149.0 15	IF vehicle speed is < 8 kph and accelerator position is > 20% for more than 7 seconds, then diagnostic is disabled. Once conditions are removed > 20 seconds, diagnostic is re-enabled		> 300 seconds (3000 counts at 100ms)	Two Trips, Type B
			AND					
			Delta between transmission fluid temperature (TFT) and TCM substrate temperature sensor	> Highest of transmission temperature sensors Temp Delta -40.1 256 -40 50 -20 20 0 20 30 15 60 15 100 15 149.0 15 149.1 256	Transmission state Engine Torque Inaccurate Accelerator Position Sensor Failure	NOT in park/neutral Must be FALSE Must be FALSE		
					P0721, P0722, P0723, P215C, P0658, P0668, P0669, P0712, P0713, P06AD, P06AE	NOT Fault Active OR Failed This Key On		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Engine Speed Vehicle Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds Vehicle Speed ≤ 200 KPH for 5 seconds		
		DTC Pass	Transm'n substrate temp delta between powerup temp sensor AND fluid temp sensor	< value in fail criteria table			> 70 sec (700 counts at 100ms)	
Transmission Fluid Temperature Sensor Circuit Low (Failed at a low temperature - circuit short to ground).	P0712	The DTC detects transmission fluid sensor short to ground error.	Transmission Sump Temperature Sensor	≤ -60 °C	P0721, P0722, P0723, P077B, P215C Engine Speed Vehicle Speed Estimated Motor Power Loss	NOT Fault Active OR Failed This Key On 0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds Vehicle Speed ≤ 200 KPH for 5 seconds Estimated Motor Power Loss ≥ 0.4 kW for 200 seconds cumulative.	≥ 60 seconds Pass Conditions Transm'n Sump Temp ≥ -50 °C for 4 seconds	One Trip, Type A
Transmission Fluid Temperature Sensor Circuit High (Failed at a high temperature - circuit open or short to power).	P0713	The DTC detects substrate sensor open or short to power error.	Transmission Sump Temperature Sensor	≥ 160 °C	P0721, P0722, P0723, P077B, P215C Engine Speed	NOT Fault Active OR Failed This Key On 0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds	≥ 60 seconds	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Vehicle Speed	Vehicle Speed ≤ 200 KPH for 5 seconds	Pass Conditions Transm'n Substrate Temp ≤ 149 °C for 4 seconds	

Transm'n Output Speed Sensor								
Transmission Output Speed (TOS) Sensor Wrong Direction	P0721	The DTC detects incorrect TOS direction.	TOS Raw Direction	TOS Direction Raw is not Forward or Reverse	TOS Sample Period	≠ 0	≥ 2.5 seconds (100 counts at 25ms)	One Trip, Type A Pass Conditions TOS Direction Raw = Forward or Reverse for 3.125 seconds (125 counts at 25ms)
Transmission Output Speed (TOS) Sensor No Activity	P0722	The DTC detects no TOS sensor activity at low vehicle speed. (It compares expected output speed to an estimated output speed based on MtrA and MtrB divided by two.)			Axle Torque	150 ≤ Motor Estimated Transmission Output Speed ≤ 5200 RPM 110 ≤ Axle Torque ≤ 5000 Nm	Pass Conditions TOS ≥ 150 RPM for 4.5 seconds	Two Trips, Type B
Transmission Output Speed (TOS) Sensor Intermittent	P0723	The DTC detects an unrealistically large drop in TOS signal	TOS delta	≥ 1000 RPM	Engine Speed Vehicle Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds Vehicle Speed ≤ 200 KPH for 5 seconds	≥ 6 seconds	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							<p>Pass Conditions TOS ≥ 500 RPM and the change in TOS is ≤ 2000 RPM for 2 seconds</p>	
Output Speed Sensor Circuit - Direction Error	P077B	The DTC detects if the Transmission Output Speed Sensor Direction is Incorrect by Comparing with Calculated Direction from Motor Speed Sign	Transmission Output Speed Direction Raw	≠ Motor Direction	<p>CAN Communication Lost With Transmission</p> <p>P215C</p> <p>TOS Hardware Input Output Transmission</p> <p>Hybrid Motor Speed based Estimated Output Speed is Valid</p> <p>Transmission Output Speed and Motor Output Speed Difference</p> <p>Motor Estimated Transmission Output Speed</p>	<p>FALSE</p> <p>NOT Fault Active</p> <p>Valid</p> <p>Calculated based on M1 or M2 Speed Equation</p> <p>≤ 50 RPM</p> <p>≥ 50 RPM</p>	<p>0.35 seconds (14 counts at 25ms)</p> <p>Pass Conditions Opposite as FAIL for 5 seconds (200 counts at 25ms)</p>	One Trip, Type A
Output Shaft Speed (OSS) - Wheel Speed Correlation	P215C	The DTC Correlates the Transmission Output Speed with the ABS Wheel Speed and Motor Speed to Detect any Failures in the Transmission Output Speed Sensor.	Difference between Transmission Output Speed and the Calculated Average of Output Speed from the Motors and Wheel Speed Sensors	≥ 140 RPM	<p>WHEN Output Speed Calculated from Wheel Speeds AND Output Speed Calculated from Motor Speeds</p> <p>Output Speed Calculated from Motor Speeds AND Output Speed Calculated from Wheel Speeds Difference</p>	<p>≤ 150 RPM</p> <p>≤ 100 RPM</p>	200 ms (8 counts at 25ms)	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					OBD Wheel Speed Sensors Driven Wheel Estimated Vehicle Speed Fault Propulsion System Active Hybrid Motor Speed based Estimated Output Speed is Valid	TRUE FALSE TRUE Calculated based on M1 or M2 Speed Equation	Pass Conditions Difference between Transm'n Output Speed and the Calculated Average of Output Speed from the Motors and Wheel Speed Sensors ≤ 50 RPM for 0.5 seconds (20 counts at 25ms)	

Tap Up/ Down Switch								
Tap Up Switch Circuit	P0815	The DTC detects the following failure modes of the tap up switch circuit: AHS2 utilizes D6, 4-1 P, R, N						Special Type C
		Fail Case 1: Switch stuck on in D1, D2, D3, or D4	Tap Up Switch Request	Request in D1, D2, D3, or D4	P0826	NOT Fault Active OR Failed This Key On	≥ 3 seconds	
					Engine Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds		
					Vehicle Speed	Vehicle Speed ≤ 200 KPH for 5 seconds		
		Fail Case 2: Switch stuck on in D6, N, R, P	Tap Up Switch Request	Request in D6, N, R, P	P0826	NOT Fault Active OR Failed This Key On	≥ 600 seconds	
					Engine Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5		Pass Conditions Tap Up Switch

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Vehicle Speed	seconds Vehicle Speed ≤ 200 KPH for 5 seconds	Request not active in NonTap Mode for 3 seconds	
Tap Down Switch Circuit	P0816	The DTC detects the following failure modes of the tap down switch circuit:						Special Type C
		Fail Case 1: Switch stuck on in D1, D2, D3, or D4	Tap Down Switch Request	Request in D1, D2, D3, or D4	P0826	NOT Fault Active OR Failed This Key On	≥ 3 seconds	
					Engine Speed Vehicle Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds Vehicle Speed ≤ 200 KPH for 5 seconds		
		Fail Case 2: Switch stuck on in D6, N, R, P	Tap Down Switch Request	Request in D6, N, R, P	P0826	NOT Fault Active OR Failed This Key On	≥ 600 seconds	
					Engine Speed Vehicle Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds Vehicle Speed ≤ 200 KPH for 5 seconds	Pass Conditions Tap Down Switch Request not active in NonTap Mode for 3 seconds	
Tap Up and Down Shift Switch Circuit	P0826	The DTC detects the up/down shift switch circuit is at an illegal voltage.	Tap Up/Down Tap Switch Status	= Illegal Switch Active (Sensor ≤ 9.5V OR Sensor ≥ 17.5V)	Engine Speed Vehicle Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds Vehicle Speed ≤ 200 KPH for 5 seconds	≥ 8 seconds Pass Conditions Tap Up/Tap Down switch status not illegal for 1 second	Special Type C

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Tap Up and Down Shift Switch Signal Circuit Rolling Count	P1761	The DTC monitors the total continuous amount of tap up/down switch alive rolling count errors.	Tap Up/Down Tap Switch Status	= Illegal Switch Active	Engine Speed Vehicle Speed	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds Vehicle Speed ≤ 200 KPH for 5 seconds	≥ 10 seconds Pass Conditions No Rolling Count Errors for 0.1 seconds	Special Type C

Transm'n Internal Mode Switch								
Internal Mode Switch P Circuit High Voltage	P1824	The DTC monitors if the IMS P Circuit is shorted to a High Voltage	Transmission Direction State AND PRNDL P Circuit Sensed	PARK PRNDL P Circuit Has Not Been Observed Low	P1824 Transmission Direction State Fault Active	NOT Fault Active OR Failed This Key On FALSE	2.5 seconds + 1 count at 6.25ms Pass Conditions PRNDL P Circuit Has Been Observed Low for 1.5875 seconds	Two Trips, Type B
Internal Mode Switch A Circuit Low Voltage	P182A	The DTC monitors if the IMS A Circuit is shorted to a Low Voltage	PRNDL State AND Trans Direction State	Transitional 1 Trans Direction DRIVE	Automatic Transmission Type P182A PRNDL State AND PRNDL A Circuit Sensed Trans Direction State Fault Active	EVT NOT Fault Active OR Failed This Key On PARK AND NOT PRNDL A Circuit Has Been Observed High for 1 second FALSE	8 seconds + 1 count at 6.25ms Pass Conditions PRNDL A Circuit Has Been Observed High for 1.5875 seconds	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Internal Mode Switch B Circuit Low Voltage	P182B	The DTC monitors if the IMS B Circuit is shorted to a Low Voltage	Transmission Direction State AND PRNDL B Circuit Sensed	PARK PRNDL B Circuit Has Not Been Observed High	P182B Transmission Direction State Fault Active	NOT Fault Active OR Failed This Key On FALSE	2.5 seconds + 1 count at 6.25ms Pass Conditions PRNDL B Circuit Has Been Observed High for 1.5875 seconds	Two Trips, Type B
Internal Mode Switch B Circuit High Voltage	P182C	The DTC monitors if the IMS B Circuit is shorted to a High Voltage	PRNDL State AND Trans Direction State	Transitional 13 Trans Direction DRIVE	Automatic Transmission Type P182C PRNDL State AND PRNDL B Circuit Sensed Trans Direction State Fault Active	EVT NOT Fault Active OR Failed This Key On PARK PRNDL B Circuit Has Been Observed High for 1 second FALSE	8 seconds + 1 count at 6.25ms Pass Conditions PRNDL B Circuit Has Been Observed Low for 1.5875 seconds	Two Trips, Type B
Internal Mode Switch P Circuit Low Voltage	P182D	The DTC monitors if the IMS P Circuit is shorted to a Low Voltage	PRNDL State AND Trans Direction State	Transitional 8 Trans Direction DRIVE	Automatic Transmission Type P182D PRNDL State AND PRNDL P Circuit Sensed Trans Direction State Fault Active	EVT NOT Fault Active OR Failed This Key On PARK AND PRNDL P Circuit Has Been Observed Low for 1 second FALSE	8 seconds + 1 count at 6.25ms Pass Conditions PRNDL P Circuit Has Been Observed High for 1.5875 seconds	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Internal Mode Switch-Invalid Range	P182E	The DTC monitors if the IMS is in an Invalid Range	PRNDL State	Illegal	Engine Speed Vehicle Speed P182E P182E	0 ≤ Engine Speed ≤ 7500 RPM for 5 seconds Vehicle Speed ≤ 200 KPH for 5 seconds NOT Fault Active OR Failed This Key On NOT Fault Active OR Failed This Key On	5 seconds Pass Conditions PRNDL State is NOT Illegal for 5 seconds	Two Trips, Type B
Internal Mode Switch C Circuit High Voltage	P182F	The DTC monitors if the IMS C Circuit is shorted to a High Voltage	Transmission Direction State AND PRNDL C Circuit Sensed	DRIVE PRNDL C Circuit Has Not Been Observed Low	Automatic Transmission Type P182F Trans Direction State Fault Active	EVT NOT Fault Active OR Failed This Key On FALSE	2.5 seconds + 1 count at 6.25ms Pass Conditions PRNDL C Circuit Has Been Observed Low for 4 seconds + 1 count at 6.25ms	Two Trips, Type B
Internal Mode Switch A Circuit High Voltage	P1838	The DTC monitors if the IMS A Circuit is shorted to a High Voltage	Transmission Direction State AND PRNDL A Circuit Sensed	PARK PRNDL A Circuit Has Not Been Observed Low	P1838 Trans Direction State Fault Active	NOT Fault Active OR Failed This Key On FALSE	2.5 seconds + 1 count at 6.25ms Pass Conditions PRNDL A Circuit Has Been Observed Low for 1.5875 seconds	Two Trips, Type B
Internal Mode Switch C Circuit Low Voltage	P1839	The DTC monitors if the IMS C Circuit is shorted to a Low Voltage	Transmission Direction State AND	PARK	P1839	NOT Fault Active OR Failed This Key On	2.5 seconds + 1 count at 6.25ms	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			PRNDL C Circuit Sensed	PRNDL C Circuit Has Not Been Observed High	Trans Direction State Fault Active	FALSE	Pass Conditions PRNDL C Circuit Has Been Observed Low for 1.5875 seconds	

Controller Diagnostics								
Control Module Read Only Memory (ROM)	P0601	This DTC will be stored if any software or calibration check sum is incorrect	Calculated Checksum does not match stored checksum		Ignition Status	Run or Crank	1 failure if it occurs during the first ROM test of the ignition cycle, otherwise 5 failures Frequency: Runs continuously in the background	One Trip, Type A
Control Module Not Programmed	P0602	Indicates that the HCP needs to be programmed	Fails if No Start Calibration is set to true which is only available on a new un-programmed HCP		Ignition Status	Run or Crank	Runs once at power up	One Trip, Type A
Control Module Long Term Memory Reset	P0603	Non-volatile memory checksum error at controller power-up	Checksum at power-up does not match checksum at power-down		Ignition Status	Run or Crank	1 failure Frequency: Once at powerup	One Trip, Type A
Control Module Random Access Memory (RAM) Failure	P0604	Indicates that HCP is unable to correctly write and read data to and from RAM	Data read does not match data written		Ignition Status	Run or Crank	Should finish within 30 seconds at all operating conditions	One Trip, Type A
Bosch T43 TEHCM Security- Output Disable/IPT Test	P0606	HWIO executes the IPT (Inhibit Path Test) exactly once at every ignition on to test the ability of the external monitoring module (CG122) to shutoff high-side drivers to the transmission hydraulics and reset the main processor.			Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 1: Abort IPT, because HSD may be short-circuited to ground or to battery voltage	Actuator supply is out of voltage threshold range during more than 40 msec.		IPT test started	end of Initialization	3.125ms loop	One Trip, Type A
		Fail Case 2: Abort IPT, because HSD may be short-circuited to ground or to battery voltage	Actuator supply is lower than 90% of Batt. voltage or WD(Watch Dog for TCM main processor) error count is greater than 0 during more than 40 msec. AND Output stage is not interlocked AND Actuator supply is out of voltage threshold range.	or > 5.5 volts	IPT test started	end of Initialization	3.125ms loop	
		Fail Case 3: Abort IPT, because HSD may be short-circuited to ground or to battery voltage	Actuator supply is out of voltage threshold range during more than 40 msec. AND WD error counter is equal or higher than threshold. AND Output stage is interlocked AND Actuator supply is lower than 90% of Batt. Voltage.	- WD error counter: >=5	IPT test started	end of Initialization	3.125ms loop	
		Fail Case 4: WD error counter doesn't reach its desired level (sdi_Ufet = 1)	WD error count is higher than threshold	- WD error count: 0	IPT test started	end of Initialization	3.125ms loop	
		Fail Case 5: WD error counter does not reach its desired level (sdi_Ufet = 4)	WD error count is equal or higher than threshold	- WD error count: 4	IPT test started	end of Initialization	3.125ms loop	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 6: WD error counter does not reach its desired level (sdi_Ufet = 6)	WD error count is equal or higher than threshold	- WD error count: 6	IPT test started	end of Initialization	3.125ms loop	One Trip, Type A
		Fail Case 7: HSD(High Side Driver) cannot be switched on at WD error counter <= 4	Actuator supply is lower than 90% of Batt. Voltage or WD error count is higher than threshold during more than 40 msec. AND Output stage is not interlocked AND Actuator supply voltage is within range	- WD error counter: > 0 - actuator supply voltage: >1.5 volts and <= 5.5 volts	IPT test started	end of Initialization	3.125ms loop	
		Fail Case 8: DReset line = low level, HSD cannot be switched on (fgtr_DReset = True)	Actuator supply is lower than 90% of Batt. Voltage or WD error count is higher than 0 during more than 40 msec. AND Output stage is interlocked.		IPT test started	end of Initialization	3.125ms loop	
		Fail Case 9: HSD cannot be switched off at WD error counter >= 5	Actuator supply voltage is out of range or WD error count is lower than threshold during more than 40 msec. AND Output stage is interlocked AND Actuator supply voltage is equal or higher than 90% of the Batt. Voltage.	- actuator supply voltage: < 1.5 volts or > 5.5 volts -WD error counter:<5	IPT test started	end of Initialization	3.125ms loop	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 10: DReset line = high level, HSD cannot be switched off (fgtr_DReset = False)	Actuator supply voltage is out of threshold range during more than 40 msec. AND WD error count is equal or higher than threshold AND Output stage is not interlocked	- actuator supply voltage: < 1.5 volts or > 5.5 volts - WD error count:>= 5	IPT test started	end of Initialization	3.125ms loop	
		Fail Case 11: Run time of IPT function too long	IPT execution time is equal or greater than time threshold.	- time threshold : 300ms	IPT test started	end of Initialization	3.125ms loop	
Control Module Long Term Memory Performance	P062F	Indicates that the NVM Error flag has not been cleared	Last EEPROM write did not complete		Ignition voltage	≥ 5 volts	1 failure Frequency: Once at power-up	One Trip, Type A

Torque Security Faults								
Internal Control Module A/D Processing Performance	P060B	HWIO executes the A/D converter test. This test checks the Vref voltage at 3 levels.						
		Fail Case 1: AtoD converter test result is failed	0 x Vref is higher than voltage threshold	> approx. 0.01467 Volts	Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	6.25ms	One Trip, Type A
		Fail Case 2: AtoD converter test result is failed	0.5 x Vref is out of voltage threshold	< approx. 2.479 Volts OR > approx. 2.518 Volts			6.25ms	
		Fail Case 3: AtoD converter test result is failed	1.0 x Vref is out of voltage threshold.	< approx. 4.978 Volts OR > approx. 2.518 Volts			6.25ms	
Dual Store Fault	P16F3	Detect the dual store memory fault by comparing the primary value and the dual store value of the Hybrid Range State	Dual store value of the Hybrid Range State is not equal to primary dual store value.		Ignition switch	in crank or run	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Clutch pressure combination / valve commands do not fit to allowed range state	P16F7	Detects controller faults such that solenoid commands doesn't match with it's expected associated Range State value.						
		Fail Case 1	Transmission is 4 th gear position. AND Range State is 7 AND X Valve Command has been corrupted to 0 AND Y Valve Command is 1 AND PCS2 Command is higher than threshold AND PCS3 Command higher than threshold AND PCS4 Command lower than threshold during more than time threshold	- PCS2 Command > 1800kpa - PCS3 Command > 1800kpa -PCS4 Command < 100kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	One Trip, Type A
		Fail Case 2	Transmission is 4 th Gear position AND Range State is 7 AND X Valve Command is 1 AND Y Valve Command has been corrupted to 0 AND PCS2 Command is higher than threshold	- PCS2 Command > 1800kpa	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			AND PCS3 Command higher than threshold AND PCS4 Command lower than threshold during more than time threshold	- PCS3 Command > 1800kpa - PCS4 Command < 100kpa -time threshold: 200msec				
		Fail Case 3	Transmission is 3 rd Gear position AND Range State is 5 AND X Valve Command is 1 AND Y Valve Command is 0 AND PCS2 Command is higher than threshold AND PCS3 Command has been corrupted to equal to 0Kpa AND PCS4 Command is lower threshold during more than time threshold	- PCS2 Command > 1800kpa - PCS4 Command :< 100kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 4	Transmission is 2 nd Gear position AND Range State is 5 AND X Valve Command is 1 AND Y Valve Command is 0		Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			AND PCS2 Command has been corrupted to equal 0kpa AND PCS3 Command higher than threshold AND PCS4 Command is lower than threshold during more than time threshold	- PCS3 Command > 1800kpa - PCS4 Command < 100kpa -time threshold: 200msec				
		Fail Case 5	Transmission is in 4 th Gear position AND Range State is 7 AND X Valve Command is 1 AND Y Valve Command is 1 AND PCS2 Command is higher than threshold AND PCS3 Command is higher than threshold AND PCS4 Command has been corrupted to equal 2000kpa during more than time threshold	- PCS2 Command > 1800kpa - PCS3 Command > 1800kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 6	Transmission is in 2 nd Gear position AND Range State is 5 AND X Valve Command is 1		Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			AND Y Valve Command has been corrupted to equal 1 AND PCS2 Command is higher than threshold AND PCS3 Command is higher than threshold AND PCS4 Command is lower than threshold during more than time threshold	- PCS2 Command > 1800kpa - PCS3 Command > 1800kpa - PCS4 Command < 100kpa -time threshold: 200msec				
		Fail Case 7	Transmission is in 1 st Gear position AND Range State is 4 AND X Valve Command is 1 AND Y Valve Command is 0 AND PCS2 Command has been corrupted to equal 2000kpa AND PCS3 Command is higher than threshold AND PCS4 Command is higher than threshold during more than time threshold	-PCS3 Command > 1800kpa - PCS4 Command > 1800kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	
		Fail Case 8	Transmission is in 3 rd Gear position		Ignition switch	in crank or run	Executes in a 12.5ms loop	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			AND Range State is 6 AND X Valve Command is 1 AND Y Valve Command is 1 AND PCS2 Command is higher than threshold AND PCS3 Command has been corrupted to equal 2000kpa AND PCS4 Command is higher than threshold during more than time threshold	- PCS2 Command > 1800kpa -PCS4 Command > 1800kpa -time threshold: 200msec			Detects in 200ms	
		Fail Case 9	Transmission is in 3 rd gear position AND Range State is 6 AND X Valve Command is 1 AND Y Valve Command is 1 AND PCS2 Command is higher than threshold PCS3 Command is lower than threshold AND PCS4 Command has been corrupted to equal 0kpa during more than time threshold	- PCS2 Command > 1800kpa - PCS3 Command < 100kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	
EVT will shutdown	P16F8	Detect when command of all 3 control solenoids to high position						

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
the vehicle if a torque phase fault occurs		during torque phase exceeds time threshold						
		Fail Case 1	Transmission is in 4 th Gear position AND Range State has been corrupted to 19 AND X Valve Command is 1 AND Y Valve Command is 1 AND PCS2 Command is higher than threshold AND PCS3 Command is higher than threshold AND PCS4 Command has been corrupted to equal 2000kpa during more than time threshold	- PCS2 Command > 1800kpa - PCS3 Command > 1800kpa -time threshold: 200msec	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	One Trip, Type A
		Fail Case 2	Transmission is in 2 nd Gear position AND Range State has been corrupted to 11 AND X Valve Command is 1 AND Y Valve Command is 0 PCS2 Command is higher than threshold AND PCS3 Command is higher than	- PCS2 Command > 1800kpa - PCS3 Command > 1800kpa	Ignition switch	in crank or run	Executes in a 12.5ms loop Detects in 200ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			threshold AND PCS4 Command has been corrupted to equal 2000kpa during more than time threshold	-time threshold: 200msec				
Alive Rolling Count / Protection Value fault	P179B	Detect the ARC (Alive Rolling Count) or Protection Value fault by checking the ARC and Protection Value of the Hybrid Range State	Current ARC is not equal to previous ARC + 1 and Primary Value is not equal to protection value		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts OR < 18 Volts	10 fail counts out of 16 sample counts Executes in a 12.5ms loop Detects in 200ms	One Trip, Type A

Commun'n Diagnostics								
Control Module Communication Bus A Off	U0073	Detects that a CAN serial data bus shorted condition has occurred to force the CAN device driver to enter a bus-off state.	CAN device driver	= bus-off state.	Run/Crank Voltage OR Powertrain Relay Voltage HV_ManageVN_Actv PowerMode BusOffFaultActive NormalCommEnabled NormalMsgTransmission DiagSystemDsbl DiagEnblTmr	> 9.5 Volts =FALSE =RUN =FALSE =TRUE =TRUE =FALSE >=3 sec	3 failures out of 5 samples Detects in 450 msec at loop rate of 12.5 msec	One Trip, Type A
Lost Communication With ECM/PCM on Bus A	U0100	Detects that CAN serial data communication has been lost with the ECM on Bus A	Missed ECM Messages		Run/Crank Voltage OR Powertrain Relay Voltage	> 9.5 Volts	Detects within 500 msec at 6.25 msec loop rate	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					HV_ManageVN_Actv PowerMode BusOffFaultActive NormalCommEnabled NormalMsgTransmission DiagSystemDsbl DiagEnblTmr	=FALSE =RUN =FALSE =TRUE =TRUE =FALSE >=3 sec		
Lost Communication With Hybrid Controller	U0293	Detects that CAN serial data communication has been lost with the HCP	Missed HCP Messages		Run/Crank Voltage OR Powertrain Relay Voltage HV_ManageVN_Actv PowerMode BusOffFaultActive NormalCommEnabled NormalMsgTransmission DiagSystemDsbl DiagEnblTmr	> 9.5 Volts =FALSE =RUN =FALSE =TRUE =TRUE =FALSE >=3 sec	Detects within 500 msec at 6.25 msec loop rate	One Trip, Type A

P0711:

Start Up Transmission Temperature °C	Time for Transmission Temperature to Reach 20 °C
-50	3200
-25	2600
-10	2000
-5	1800
20	300

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
CAN Communication:								
CAN Communication Loss – HCP	U1885	Communication Error	No message from HCP (Contactor Command)	> 3.0 s	HS Comm Enable input BPCM Power Mode	= TRUE =RUN	3.0 s	Two Trips, Type B
CAN Communication Loss – ECM	U1886	Communication Error	No message from ECM (Vehicle Speed Average)	> 3.0 s	HS Comm Enable input BPCM Power Mode High Voltage Management Virtual Network Activation	= TRUE =RUN =Inactive	3.0 s	Two Trips Type B
CAN Communication Loss – CGM	U1862	Communication Error	No message from CGM (Fan Speed Limit)	> 75ms	HS Comm Enable input BPCM Power Mode High Voltage Management Virtual Network Activation	= TRUE =RUN =Inactive	75ms	Special Type "C"

Block 1 Voltage Sensor Circuit:								
Block 1 Voltage measurement – Out of Range - Low	P0B3D	Out of range low	Block 1	< 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 1 Voltage measurement – Out of Range - High	P0B3E	Out of range high	Block 1	> 23 V	12V System Voltage No active DTCs:	>= 9.0 V <= 18.0 V P0A1F	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Block 1 Voltage measurement – Rationality	P0B3C	Rationality compares block voltage sensor to pack voltage sensor	Block 1 * 20 - Battery Pack Voltage	> 70 V	BPCM Power Mode 12V System Voltage Block 1 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	=RUN >= 9.0 V <= 18.0 V = VALID P0B3D P0B3E P0ABC P0ABD P0ABB P0A1F =RUN > 200ms	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B

Block 2 Voltage Sensor Circuit:								
Block 2 Voltage measurement – Out of Range - Low	P0B42	Out of range low	Block 2 AND Block 3	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 2 Voltage measurement – Out of Range - High	P0B43	Out of range high	Block 2	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 2 Voltage measurement – Rationality	P0B41	Rationality compares block voltage sensor to pack voltage sensor	Block 2 * 20 - Battery Pack Voltage	> 70 V	12V System Voltage	>= 9.0 V <= 18.0 V	160 Failures out of 170 Samples	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			AND Block 3 * 20 - Battery Pack Voltage	> 70 V	Block 2 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	= VALID P0B42 P0B43 P0ABC P0ABD P0ABB P0A1F =RUN > 200ms	Frequency: 100ms	

Block 3 Voltage Sensor Circuit:								
Block 3 Voltage measurement – Out of Range - Low	P0B47	Out of range low	Block 3 AND Block 4	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 3 Voltage measurement – Out of Range - High	P0B48	Out of range high	Block 3	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 3 Voltage measurement – Rationality	P0B46	Rationality compares block voltage sensor to pack voltage sensor	Block 3 * 20 - Battery Pack Voltage AND Block 4 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 3 Voltage sensor input No active DTCs:	>= 9.0 V <= 18.0 V = VALID P0A1F	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					BPCM Power Mode Time since contactors closed	P0B47 P0B48 P0ABC P0ABD P0ABB =RUN > 200ms		

Block 4 Voltage Sensor Circuit:								
Block 4 Voltage measurement – Out of Range - Low	P0B4C	Out of range low	Block 4 AND Block 5	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 4 Voltage measurement – Out of Range - High	P0B4D	Out of range high	Block 4	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 4 Voltage measurement – Rationality	P0B4B	Rationality compares block voltage sensor to pack voltage sensor	Block 4 * 20 - Battery Pack Voltage AND Block 5 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 4 Voltage sensor input No active DTCs:	>= 9.0 V <= 18.0 V = VALID P0A1F P0B4C P0B4D P0ABC P0ABD	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					BPCM Power Mode Time since contactors closed	P0ABB =RUN > 200ms		

			Block 5 Voltage Sensor Circuit:					
Block 5 Voltage measurement – Out of Range - Low	P0B51	Out of range low	Block 5 AND Block 6	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 5 Voltage measurement – Out of Range - High	P0B52	Out of range high	Block 5	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 5 Voltage measurement – Rationality	P0B50	Rationality compares block voltage sensor to pack voltage sensor	Block 5 * 20 - Battery Pack Voltage AND Block 6 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 5 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B51 P0B52 P0ABC P0ABD P0ABB =RUN > 200ms	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Block 6 Voltage Sensor Circuit:					
Block 6 Voltage measurement - Out of Range - Low	P0B56	Out of range low	Block 6 AND Block 7	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 6 Voltage measurement - Out of Range - High	P0B57	Out of range high	Block 6	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 6 Voltage measurement - Rationality	P0B55	Rationality compares block voltage sensor to pack voltage sensor	Block 6 * 20 - Battery Pack Voltage AND Block 7 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 6 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B56 P0B57 P0ABC P0ABD P0ABB =RUN > 200ms	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B
			Block 7 Voltage Sensor Circuit:					
Block 7 Voltage measurement - Out of Range - Low	P0B5B	Out of range low	Block 7 AND Block 8	< 2 V < 2 V	12V System Voltage No active DTCs:	>= 9.0 V <= 18.0 V P0A1F	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					BPCM Power Mode	=RUN		
Block 7 Voltage measurement - Out of Range - High	P0B5C	Out of range high	Block 7	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 7 Voltage measurement - Rationality	P0B5A	Rationality compares block voltage sensor to pack voltage sensor	Block 7 * 20 - Battery Pack Voltage AND Block 8 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 7 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B5B P0B5C P0ABC P0ABD P0ABB =RUN > 200ms	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B

Block 8 Voltage Sensor Circuit:								
Block 8 Voltage measurement - Out of Range - Low	P0B60	Out of range low	Block 8 AND Block 9	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 8 Voltage	P0B61	Out of range high	Block 8	> 23 V	12V System Voltage	>= 9.0 V	15 Failures out of	Two Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
measurement - Out of Range - High					No active DTCs: BPCM Power Mode	<= 18.0 V P0A1F =RUN	20 Samples Frequency: 100ms	Type B
Block 8 Voltage measurement - Rationality	P0B5F	Rationality compares block voltage sensor to pack voltage sensor	Block 8 * 20 - Battery Pack Voltage AND Block 9 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 8 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B60 P0B61 P0ABC P0ABD P0ABB =RUN > 200ms	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B

Block 9 Voltage Sensor Circuit:								
Block 9 Voltage measurement - Out of Range - Low	P0B65	Out of range low	Block 9 AND Block 10	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 9 Voltage measurement - Out of Range - High	P0B66	Out of range high	Block 9	> 23 V	12V System Voltage No active DTCs:	>= 9.0 V <= 18.0 V P0A1F	15 Failures out of 20 Samples	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					BPCM Power Mode	=RUN	Frequency: 100ms	
Block 9 Voltage measurement - Rationality	P0B64	Rationality compares block voltage sensor to pack voltage sensor	Block 9 * 20 - Battery Pack Voltage AND Block 10 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 9 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B65 P0B66 P0ABC P0ABD P0ABB =RUN > 200ms	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B

Block 10 Voltage Sensor Circuit:								
Block 10 Voltage measurement - Out of Range - Low	P0B6A	Out of range low	Block 10 AND Block 11	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 10 Voltage measurement - Out of Range - High	P0B6B	Out of range high	Block 10	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 10 Voltage measurement -	P0B69	Rationality compares block voltage sensor to pack voltage	Block 10 * 20 - Battery Pack Voltage	> 70 V	12V System Voltage	>= 9.0 V <= 18.0 V	160 Failures out of 170 Samples	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Rationality		sensor	AND Block 11 * 20 - Battery Pack Voltage	> 70 V	Block 10 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	= VALID P0A1F P0B6A P0B6B P0ABC P0ABD P0ABB =RUN > 200ms	Frequency: 100ms	

Block 11 Voltage Sensor Circuit:								
Block 11 Voltage measurement - Out of Range - Low	P0B6F	Out of range low	Block 11 AND Block 12	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 11 Voltage measurement - Out of Range - High	P0B70	Out of range high	Block 11	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 11 Voltage measurement - Rationality	P0B6E	Rationality compares block voltage sensor to pack voltage sensor	Block 11 * 20 - Battery Pack Voltage AND	> 70 V	12V System Voltage Block 11 Voltage sensor input	>= 9.0 V <= 18.0 V = VALID	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Block 12 * 20 - Battery Pack Voltage	> 70 V	No active DTCs: BPCM Power Mode Time since contactors closed	P0A1F P0B6F P0B70 P0ABC P0ABD P0ABB =RUN > 200ms		

Block 12 Voltage Sensor Circuit:								
Block 12 Voltage measurement - Out of Range - Low	P0B74	Out of range low	Block 12 AND Block 13	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 12 Voltage measurement - Out of Range - High	P0B75	Out of range high	Block 12	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 12 Voltage measurement - Rationality	P0B73	Rationality compares block voltage sensor to pack voltage sensor	Block 12 * 20 - Battery Pack Voltage AND Block 13 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 12 Voltage sensor input No active DTCs:	>= 9.0 V <= 18.0 V = VALID P0A1F P0B74 P0B75 P0ABC	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					BPCM Power Mode Time since contactors closed	P0ABD P0ABB =RUN > 200ms		

Block 13 Voltage Sensor Circuit:								
Block 13 Voltage measurement - Out of Range - Low	P0B79	Out of range low	Block 13 AND Block 14	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 13 Voltage measurement - Out of Range - High	P0B7A	Out of range high	Block 13	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 13 Voltage measurement - Rationality	P0B78	Rationality compares block voltage sensor to pack voltage sensor	Block 13 * 20 - Battery Pack Voltage AND Block 14 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 13 Voltage sensor input No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V = VALID P0A1F P0B79 P0B7A P0ABC P0ABD P0ABB =RUN	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Time since contactors closed	> 200ms		

Block 14 Voltage Sensor Circuit:								
Block 14 Voltage measurement - Out of Range - Low	P0B7E	Out of range low	Block 14 AND Block 15	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 14 Voltage measurement - Out of Range - High	P0B7F	Out of range high	Block 14	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 14 Voltage measurement - Rationality	P0B7D	Rationality compares block voltage sensor to pack voltage sensor	Block 14 * 20 - Battery Pack Voltage AND Block 15 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 14 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B7E P0B7F P0ABC P0ABD P0ABB =RUN > 200ms	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Block 15 Voltage Sensor Circuit:								
Block 15 Voltage measurement - Out of Range - Low	P0B83	Out of range low	Block 15 AND Block 16	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 15 Voltage measurement - Out of Range - High	P0B84	Out of range high	Block 15	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 15 Voltage measurement - Rationality	P0B82	Rationality compares block voltage sensor to pack voltage sensor	Block 15 * 20 - Battery Pack Voltage AND Block 16 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 15 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B83 P0B84 P0ABC P0ABD P0ABB =RUN > 200ms	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B
Block 16 Voltage Sensor Circuit:								
Block 16 Voltage measurement - Out of Range - Low	P0B88	Out of range low	Block 16 AND Block 17	< 2 V < 2 V	12V System Voltage No active DTCs:	>= 9.0 V <= 18.0 V P0A1F	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					BPCM Power Mode	=RUN		
Block 16 Voltage measurement - Out of Range - High	P0B89	Out of range high	Block 16	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 16 Voltage measurement - Rationality	P0B87	Rationality compares block voltage sensor to pack voltage sensor	Block 16 * 20 - Battery Pack Voltage AND Block 17 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 16 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B88 P0B89 P0ABC P0ABD P0ABB =RUN > 200ms	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B

Block 17 Voltage Sensor Circuit:								
Block 17 Voltage measurement - Out of Range - Low	P0B8D	Out of range low	Block 17 AND Block 18	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 17 Voltage	P0B8E	Out of range high	Block 17	> 23 V	12V System Voltage	>= 9.0 V	15 Failures out of	Two Trips

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
measurement - Out of Range - High					No active DTCs: BPCM Power Mode	<= 18.0 V P0A1F =RUN	20 Samples Frequency: 100ms	Type B
Block 17 Voltage measurement - Rationality	P0B8C	Rationality compares block voltage sensor to pack voltage sensor	Block 17 * 20 - Battery Pack Voltage AND Block 18 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 17 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B8D P0B8E P0ABC P0ABD P0ABB =RUN > 200ms	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B

Block 18 Voltage Sensor Circuit:								
Block 18 Voltage measurement - Out of Range - Low	P0B92	Out of range low	Block 18 AND Block 19	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 18 Voltage measurement - Out of Range - High	P0B93	Out of range high	Block 18	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Block 18 Voltage measurement - Rationality	P0B91	Rationality compares block voltage sensor to pack voltage sensor	Block 18 * 20 - Battery Pack Voltage AND Block 19 * 20 - Battery Pack Voltage	> 70 V > 70 V	12V System Voltage Block 18 Voltage sensor input No active DTCs: BPCM Power Mode Time since contactors closed	>= 9.0 V <= 18.0 V = VALID P0A1F P0B92 P0B93 P0ABC P0ABD P0ABB =RUN > 200ms	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B

Block 19 Voltage Sensor Circuit:								
Block 19 Voltage measurement - Out of Range - Low	P0B97	Out of range low	Block 19 AND Block 20	< 2 V < 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 19 Voltage measurement - Out of Range - High	P0B98	Out of range high	Block 19	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 19 Voltage measurement - Rationality	P0B96	Rationality compares block voltage sensor to pack voltage sensor	Block 19 * 20 - Battery Pack Voltage AND	> 70 V	12V System Voltage Block 19 Voltage sensor input	>= 9.0 V <= 18.0 V = VALID	160 Failures out of 170 Samples	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Block 20 * 20 - Battery Pack Voltage	> 70 V	No active DTCs: BPCM Power Mode Time since contactors closed	P0A1F P0B97 P0B98 P0ABC P0ABD P0ABB =RUN > 200ms	Frequency: 100ms	

Block 20 Voltage Sensor Circuit:								
Block 20 Voltage measurement - Out of Range - Low	P0B9C	Out of range low	Block 20	< 2 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 20 Voltage measurement - Out of Range - High	P0B9D	Out of range high	Block 20	> 23 V	12V System Voltage No active DTCs: BPCM Power Mode	>= 9.0 V <= 18.0 V P0A1F =RUN	15 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B
Block 20 Voltage measurement - Rationality	P0B9B	Rationality compares block voltage sensor to pack voltage sensor	Block 20 * 20 - Battery Pack Voltage	> 70 V	12V System Voltage Block 20 Voltage sensor input No active DTCs:	>= 9.0 V <= 18.0 V = VALID P0A1F P0B9C P0B9D	160 Failures out of 170 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					BPCM Power Mode Time since contactors closed	P0ABC P0ABD P0ABB =RUN > 200ms		

Battery Pack Voltage Sensor Circuit:								
Hybrid Battery Pack Voltage Sense Circuit Low	P0ABC	Out of range low	Battery Pack Voltage	< 40 V	12V System Voltage BPCM Power Mode Time since contactors closed No active DTCs:	>= 9.0V <= 18.0V =RUN > 200ms P0A1F	300 Failures out of 400 Samples Frequency: 10ms	One Trip Type A
Hybrid Battery Pack Voltage Sense Circuit High	P0ABD	Out of range high	Battery Pack Voltage	> 430 V	12V System Voltage BPCM Power Mode Time since contactors closed No active DTCs:	>= 9.0V <= 18.0V =RUN > 200ms P0A1F	300 Failures out of 400 Samples Frequency: 10ms	One Trip Type A
Hybrid Battery Pack Voltage Sense Circuit Rationality	P0ABB	Rationality compares pack voltage sensor to sum of the block voltages	Sum of battery block voltages - Battery Pack voltage AND BPCM High Voltage Battery Pack Voltage Validity	> 50 V = VALID	12V System Voltage Pack Voltage sensor input BPCM Power Mode	>= 9.0V <= 18.0V = VALID =RUN	70 Failures out of 80 Samples Frequency: 100ms	One Trip Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Time since contactors closed No active DTCs:	> 200ms P0A1F P0ABC P0ABD		

Current sensor Circuit:								
Hybrid Battery Pack Current Sensor Circuit Low	P0AC1	Out of range low By convention, battery discharging corresponds to a positive current.	Current Sensed (High range) AND Current Sensed (Mid range) AND Current Sensed (Low range)	> 200 A > 52 A > 22 A	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P1A07 P0A1F	30 Failures out of 40 Samples Frequency: 100ms	One Trip Type A
Hybrid Battery Pack Current Sensor Circuit High	P0AC2	Out of range high By convention, battery charging corresponds to a negative current.	Current Sensed (High range) AND Current Sensed (Mid range) AND Current Sensed (Low range)	< -200 A < -52 A < -22 A	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P1A07 P0A1F	30 Failures out of 40 Samples Frequency: 100ms	One Trip Type A
Hybrid Battery Pack Current Sensor Circuit Rationality	P0AC0	Rationality checks sensor offset; rationalizes battery voltage change to net current (energy) input/output	(Current Sensor Offset (High range) OR Current Sensor Offset (Mid range)	> 5 A > 5 A	12V System Voltage Contactor Status Current Sensor sensor Input	>= 9.0V <= 18.0V =OPEN =VALID	3 Failures out of 10 Samples Frequency: 1000ms	One Trip Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			OR Current Sensor Offset (Low range))	> 5 A	No active DTCs:	P1A07 P0A1F P0AC1 P0AC2		
			OR (Current sensor Input (Hi range) AND Current sensor Input (Hi range) - Current sensor Input (Me range) AND Current sensor Input (Hi range) - Current sensor Input (Lo range))	<= 20A >= 4A >= 4A	BPCM Power Mode 12V System Voltage No active DTCs:	=RUN >= 9.0V <= 18.0V P1A07 P0A1F P0AC1 P0AC2	3 Failures out of 10 Samples Frequency: 1000ms	
			(Deviation of accumulated block voltage for 1sec AND Deviation of current for 1sec)	> 10 V < 0.5 A	BPCM Power Mode 12V System Voltage No active DTCs:	=RUN >= 9.0V <= 18.0V P1A07 P0A1F P0AC1 P0AC2	3 Failures out of 10 Samples Frequency: 1000ms	

Temperature sensor1 Circuit:								
Temperature Sensor 1 Circuit Low	P0A9D	Out of range low	Temperature Input1 AND (Temperature Input2	> 95 °C < 70 °C	12V System Voltage BPCM Power Mode	>= 9.0V <= 18.0V =RUN	30 Failures out of 40 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			OR Temperature Input3 OR Temperature Input4)	< 70 °C < 70 °C	No active DTCs:	P0A1F		
Temperature Sensor 1 Circuit High	P0A9E	Out of range high	Temperature Input1	< -45 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	30 Failures out of 40 Samples Frequency: 100ms	Two Trips Type B
Temperature Sensor 1 Circuit Rationality	P0A9C	Rationality compares temperature with the other 3 sensor values read	Temperature Input1 - Temperature Input2 AND Temperature Input1 - Temperature Input3 AND Temperature Input1 - Temperature Input4	> 15 °C > 15 °C > 15 °C	12V System Voltage BPCM Power Mode Temperature Sensor 1 Input No active DTCs:	>= 9.0V <= 18.0V =RUN = VALID P0A1F P0A9D P0A9E	90 Failures out of 100 Samples Frequency: 100ms	Two Trips Type B

Temperature sensor2 Circuit:								
Temperature Sensor 2 Circuit Low	P0AC7	Out of range low	Temperature Input2 AND (Temperature Input1 OR Temperature Input3	> 95 °C < 70 °C < 70 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	30 Failures out of 40 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			OR Temperature Input4)	< 70 °C				
Temperature Sensor 2 Circuit High	P0AC8	Out of range high	Temperature Input2	< -45 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	30 Failures out of 40 Samples Frequency: 100ms	Two Trips Type B
Temperature Sensor 2 Circuit Rationality	P0AC6	Rationality compares temperature with the other 3 sensor values read	Temperature Input2 - Temperature Input1 AND Temperature Input2 - Temperature Input3 AND Temperature Input2 - Temperature Input4	> 15 °C > 15 °C > 15 °C	12V System Voltage BPCM Power Mode Temperature Sensor 2 Input No active DTCs:	>= 9.0V <= 18.0V =RUN = VALID P0A1F P0AC7 P0AC8	90 Failures out of 100 Samples Frequency: 100ms	Two Trips Type B

Temperature sensor3 Circuit:								
Temperature Sensor 3 Circuit Low	P0ACC	Out of range low	Temperature Input3 AND (Temperature Input1 OR Temperature Input2 OR Temperature Input4)	> 95 °C < 70 °C < 70 °C < 70 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	30 Failures out of 40 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Temperature Sensor 3 Circuit High	P0ACD	Out of range high	Temperature Input3	< -45 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	30 Failures out of 40 Samples Frequency: 100ms	Two Trips Type B
Temperature Sensor 3 Circuit Rationality	P0ACB	Rationality compares temperature with the other 3 sensor values read	Temperature Input3 - Temperature Input1 AND Temperature Input3 - Temperature Input2 AND Temperature Input3 - Temperature Input4	> 15 °C > 15 °C > 15 °C	12V System Voltage BPCM Power Mode Temperature Sensor 3 Input No active DTCs:	>= 9.0V <= 18.0V =RUN = VALID P0A1F P0ACC P0ACD	90 Failures out of 100 Samples Frequency: 100ms	Two Trips Type B

Temperature sensor4 Circuit:								
Temperature Sensor 4 Circuit Low	P0AEA	Out of range low	Temperature Input4 AND (Temperature Input1 OR Temperature Input2 OR Temperature Input3)	> 95 °C < 70 °C < 70 °C < 70 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	30 Failures out of 40 Samples Frequency: 100ms	Two Trips Type B
Temperature Sensor 4 Circuit High	P0AEB	Out of range high	Temperature Input4	< -45 °C	12V System Voltage BPCM Power Mode	>= 9.0V <= 18.0V =RUN	30 Failures out of 40 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					No active DTCs:	P0A1F		
Temperature Sensor 4 Circuit Rationality	P0AE9	Rationality compares temperature with the other 3 sensor values read	Temperature Input4 - Temperature Input1 AND Temperature Input4 - Temperature Input2 AND Temperature Input4 - Temperature Input3	> 15 °C > 15 °C > 15 °C	12V System Voltage BPCM Power Mode Temperature Sensor 4 Input No active DTCs:	>= 9.0V <= 18.0V =RUN = VALID P0A1F P0AEA P0AEB	90 Failures out of 100 Samples Frequency: 100ms	Two Trips Type B

Inlet Air Temperature sensor Circuit:								
Inlet Air Temperature Sensor Circuit Low	P0AAE	Out of range low	Inlet Air Temperature Input	> 95 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	30 Failures out of 40 Samples Frequency: 100ms	Two Trips Type B
Inlet Air Temperature Sensor Circuit High	P0AAF	Out of range high	Inlet Air Temperature Input	< -45 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	30 Failures out of 40 Samples Frequency: 100ms	Two Trips Type B
Inlet Air Temperature Sensor Circuit Rationality	P0AAD	Rationalizes that inlet air temperature should not be higher than the outlet temperature	Powerup Inlet Air Temperature Input - Powerup Outlet Air Temperature Input	> 20 °C	12V System Voltage BPCM Power Mode	>= 9.0V <= 18.0V =RUN	Once at Powerup	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			AND Powerup Outlet Air Temperature Input - Powerup Max Module Temperature	≤ 10 °C	Engine Off Time Engine Off Time Validity Engine Off Time Mask Powerup Outlet Air Temperature Input Battery Max Module Temperature Time since Run/Crank Terminal status transitioned to Active No active DTCs:	> 8 hours = Valid = True ≥ -7°C = Valid ≥ 15 sec P0AAE P0AAF P0AB2 P0AB3 P0AB4 P0A1F		

Outlet Air Temperature sensor Circuit:								
Outlet Air Temperature Sensor Circuit Low	P0AB3	Out of range low	Temperature Sensor Outlet Air Input AND (Temperature Input1 OR Temperature Input2 OR Temperature Input3 OR	> 95 °C < 70 °C < 70 °C < 70 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	30 Failures out of 40 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Temperature Input4)	< 70 °C				
Outlet Air Temperature Sensor Circuit High	P0AB4	Out of range high	Temperature Sensor Outlet Air Input	< -45 °C	12V System Voltage BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V =RUN P0A1F	30 Failures out of 40 Samples Frequency: 100ms	Two Trips Type B
Outlet Air Temperature Sensor Circuit Rationality	P0AB2	Rationalizes that the outlet air temperature should not be higher than the highest battery pack module temperature	Temperature Sensor Outlet Air Input - BPCM High Voltage Battery Pack Max Module Temperature	> 10 °C	12V System Voltage Fan Command BPCM Power Mode No active DTCs:	>= 9.0V <= 18.0V = ON =RUN P0A1F P0A9C P0A9D P0A9E P0AB3 P0AB4 P0AC6 P0AC7 P0AC8 P0ACB P0ACC P0ACD P0AE9 P0AEA P0AEB P0A81	90 Failures out of 100 Samples Frequency: 100ms	Two Trips Type B

Battery Cooling Fan:								
Fan Relay Welded	P0BC1		Fan control signal monitor voltage	>= 0.9 V	12V System voltage BPCM Power Mode	>= 9.0 V <= 18.0 V =RUN	10 Failures out of 20 Samples Frequency: 100ms	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Fan command No active DTCs:	= OFF P0A1F P0A81		
Fan Unit Failure	P0A81		Fan control signal monitor voltage	>= 2.3 V OR <= 0.5 V	12V System voltage BPCM Power Mode Fan command Fan speed No active DTCs:	>= 9.0 V <= 18.0 V =RUN =ON >= 35 % P0A1F	50 Failures out of 50 Samples Frequency: 100ms	Two Trips Type B
			Fan control signal monitor voltage	>= 7.0 V	12V System voltage BPCM Power Mode No active DTCs:	>= 9.0 V <= 18.0 V =RUN P0A1F	30 Failures out of 40 Samples Frequency: 100ms	
			Fan control signal monitor voltage	> 4.0 V AND < 7.0 V	12V System voltage BPCM Power Mode Fan command No active DTCs:	>= 9.0 V <= 18.0 V =RUN =OFF P0A1F	90 Failures out of 100 Samples Frequency: 100ms	
			PWM signal monitor (SI)	< 0.15 V	12V System voltage BPCM Power Mode Fan command No active DTCs:	>= 9.0 V <= 18.0 V =RUN =ON P0A1F	30 Failures out of 40 Samples Frequency: 100ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			PWM signal monitor (SI)	> 9.0 V	12V System voltage BPCM Power Mode No active DTCs:	>= 9.0 V <= 18.0 V =RUN P0A1F	30 Failures out of 40 Samples Frequency: 100ms	
			PWM signal monitor (SI)	> 4.0 V AND < 7.0 V	12V System voltage BPCM Power Mode Fan command No active DTCs:	>= 9.0 V <= 18.0 V =RUN =OFF P0A1F	90 Failures out of 100 Samples Frequency: 100ms	
Battery Cooling System Performance	P0C32		Maximum Battery Module Temperature	> Temperature as defined in table below: Inlet Temp vs. Max Module Temp C C -30 45 -20 45 -10 45 -5 45 0 46 5 48 10 49 15 50 20 52 25 54 30 56 35 58 40 61 45 65 50 70 60 80	12V System voltage Battery Max Module Temperature No active DTCs: Fan command	>= 9.0 V <= 18.0 V =INVALID (less than 3 Module Temperature Sensors have associated circuit faults active) P0AAD P0AAE P0AAF P0A1F = ON	1200 Failures out of 1200 Samples Frequency: 100ms	Two Trips Type B

Current Sensor Voltage Supply:								
Current Sensor	P1A07	Out of range	Current Sensor Supply Voltage	< 4.8 V	12V System Voltage	>= 9.0V	8 Failures out of	One Trip Type

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Voltage Supply			OR Current Sensor Supply Voltage	> 5.2 V	No active DTCs:	<= 18.0V P0A1F	10 Samples Frequency: 100ms	A

High Voltage Interlock Circuit:								
High Voltage Interlock Circuit Low	P1AE3	Out of range low	HVIL Current Output AND HVIL Current Output AND HVIL Current Input	> 5 mA < 18 mA < 5 mA	12V System Voltage BPCM Power Mode HVIL State No active DTCs:	>= 9.0V <= 18.0V = RUN = Asserted P0A1F	1 Failures out of 1 Samples Frequency: 10ms	Special Type "C"
High Voltage Interlock Circuit High	P1AE4	Out of range high	HVIL Current Output AND HVIL Current Input	< 5 mA > 35 mA	12V System Voltage BPCM Power Mode HVIL State No active DTCs:	>= 9.0V <= 18.0V = RUN = Asserted P0A1F	1 Failures out of 1 Samples Frequency: 10ms	Special Type "C"
High Voltage Interlock Circuit Open	P1AE2	Open	HVIL Current Output AND HVIL Current Input	< 5 mA < 5 mA	12V System Voltage BPCM Power Mode HVIL State No active DTCs:	>= 9.0V <= 18.0V = RUN = Asserted P0A1F	1 Failures out of 1 Samples Frequency: 10ms	Special Type "C"

Pre-Charge Voltage :								
Pre-Charge too Fast	P0C77	HV bus = Open	((BPCM High Voltage pack Voltage	< 60V,	12V System Voltage	=> 9.0 V =< 18.0 V	1 time (5ms)	Special Type "C"

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			AND Precharge Time]	=0ms	BPCM Power Mode	= RUN		
			AND [BPCM High Voltage pack Voltage - Sum of battery block voltages	=< 23V	No active DTCs:	P0A1F P0AC0 P0AC1 P0AC2 P0ABC P0ABD P0ABB		
			AND Precharge Time])	=<20ms				
			OR				OR	
		HV bus = Short	(BPCM High Voltage Battery Pack Current	=> 25A			1 time (5ms)	
			AND Precharge Time)	> 100ms				

High Voltage Battery:								
Battery Module – Voltage deviation EOL	P0BBD	Voltage deviation is high	Maximum Block Voltage(n) - Block Voltage (n+1)	> 1.5 V	BPCM Power Mode 12V System Voltage Battery current Min. battery temp. No active DTC's:	= RUN >= 9.0V <= 18.0V >0.2A >= -7°C P0B3D P0B3E P0B3C P0B42 P0B43 P0B41 P0B47 P0B48 P0B46 P0B4C P0B4D P0B4B P0B51	3 Failures out of 3 Samples Frequency: 1s	Two Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						P0B52 P0B50 P0B56 P0B57 P0B55 P0B5B P0B5C P0B5A P0B60 P0B61 P0B5F P0B65 P0B66 P0B64 P0B6A P0B6B P0B69 P0B6F P0B70 P0B6E P0B74 P0B75 P0B73 P0B79 P0B7A P0B78 P0B7E P0B7F P0B7D P0B83 P0B84 P0B82 P0B88 P0B89 P0B87 P0B8D P0B8E P0B8C P0B92 P0B93 P0B91 P0B97 P0B98 P0B96		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						P0B9C P0B9D P0B9B P0A1F		
Battery Module – Over Voltage	P1A4E	Voltage too high	High Voltage Battery Pack Voltage	> 408 V	BPCM Power Mode 12V System Voltage Block voltage rationality	= RUN >= 9.0V <= 18.0V = Pass (at least 1block)	40 Failures out of 40 Samples Frequency: 100ms	Special Type "C"
			OR		No active DTC's:	P0B3D P0B3E P0B3C P0B42 P0B43 P0B41 P0B47 P0B48 P0B46 P0B4C P0B4D P0B4B P0B51 P0B52 P0B50 P0B56 P0B57 P0B55 P0B5B P0B5C P0B5A P0B60 P0B61 P0B5F P0B65 P0B66 P0B64 P0B6A P0B6B P0B69	OR 20 Failures out of 20 Samples Frequency: 100ms	
			Any Block Voltage N	> 20.4 V				

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						P0B6F P0B70 P0B6E P0B74 P0B75 P0B73 P0B79 P0B7A P0B78 P0B7E P0B7F P0B7D P0B83 P0B84 P0B82 P0B88 P0B89 P0B87 P0B8D P0B8E P0B8C P0B92 P0B93 P0B91 P0B97 P0B98 P0B96 P0B9C P0B9D P0B9B P0A1F		
Battery Module – Under Voltage	P1A1F	Voltage too low	High Voltage Battery Pack Voltage	< 168 V	BPCM Power Mode 12V System Voltage Block voltage rationality	= RUN >= 9.0V <= 18.0V = Pass (at least 1block)	40 Failures out of 40 Samples Frequency: 100ms	Special Type "C"
			OR Any Block Voltage N	< 8.4 V	No active DTC's:	P0B3D P0B3E P0B3C	OR 20 Failures out of 20 Samples	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						P0B42 P0B43 P0B41 P0B47 P0B48 P0B46 P0B4C P0B4D P0B4B P0B51 P0B52 P0B50 P0B56 P0B57 P0B55 P0B5B P0B5C P0B5A P0B60 P0B61 P0B5F P0B65 P0B66 P0B64 P0B6A P0B6B P0B69 P0B6F P0B70 P0B6E P0B74 P0B75 P0B73 P0B79 P0B7A P0B78 P0B7E P0B7F P0B7D P0B83 P0B84 P0B82 P0B88 P0B89	Frequency: 100ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						P0B87 P0B8D P0B8E P0B8C P0B92 P0B93 P0B91 P0B97 P0B98 P0B96 P0B9C P0B9D P0B9B P0A1F		
Battery Module – resistance High EOL	P0A80	High Module Resistance	Max Cell Resistance	> Resistance threshold as defined in table below; Bat. Temp. Vs Resistance C mOhm -10 141.33 -5 112.05 0 88.90 5 68.67 10 52.92 15 40.10 25 27.00 35 23.55 45 21.22 50 20.00	BPCM Power Mode System Voltage Battery current Charge samples in 60s Discharge samples in 60s Data sufficiently dispersed and symmetric n = # of measurements in 60s X = measured current Battery temperature # of calculated block resistances meeting above criteria	= RUN >= 9.0V <= 18.0V > -70 A < +100 A ≥ 15 ≥ 15 =TRUE > -10°C < +50°C >= 5blocks	10 Failures out of 10 Samples	One Trip Type A
			OR Avg Module Resistance/3.16	> Resistance threshold as defined	No Active DTC's:	P0A1F	Frequency: 60s	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
				in table below; Bat. Temp. Vs Resistance C mOhm -10 141.33 -5 112.05 0 88.90 5 68.67 10 52.92 15 40.10 25 27.00 35 23.55 45 21.22				
Battery – Over temperature	P1ABE	Battery temp. too high	2 or more Battery Module Temperatures	> 65°C	BPCM Power Mode System Voltage No active DTC's:	= RUN >= 9.0V <= 18.0V P0A9D P0A9E P0A9C P0AC7 P0AC8 P0AC6 P0ACC P0ACD P0ACB P0AEA P0AEB P0AE9 P0A1F	50 Failures out of 50 Samples Frequency: 100ms	Special Type "C"
			OR 1 or more Battery Module Temperatures	> 70°C				

Controller Faults (BPCM) :								
Controller – RAM Error	P1A05	Microcomputer detects RAM Failure	Read value does not match write value.	(Conduct a verify check by writing 4bytes pitch from the first digit accordingly. If the read value does not match write value when the test pattern of 0x55555555 and 0xAAAAAAAA are written.)	BPCM Power Mode	= RUN	1 Failures out of 1 Samples Frequency: 100ms	One Trip Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
Controller – ROM Error	P1A06	Microcomputer detects ROM Failure	Calculated CS of ROM and the already written CS in the GMHeader area is not the same.		BPCM Power Mode	= RUN	1 Failures out of 1 Samples Frequency: 100ms	One Trip Type A	
Controller – EEPROM Error	P1A01	Error occur at mirror check during EEPROM downloading	An error is detected when verifying check sum during startup EEPROM read at the following locations: a) Calibration area b) Parameter area c) Diag area (status history) d) Diag area (X/Y counter)		BPCM Power Mode	= RUN	Run Once at Startup (100ms)	One Trip Type A	
Micro controller failure	P0A1F	Microcomputer detects watchdog timeout.	Watchdog timer interruption occurred and the BPCM is reset.		BPCM Power Mode	= RUN	1 Failures out of 1 Samples Frequency: 100ms	One Trip Type A	
		OR							OR
		Processor StackOverflow	Usage of micro processor stack	> 80%			1 Failures out of 1 Samples Frequency: 10ms		
		OR							OR
		Program Processing Time-out	Previously activated DMA transmission incomplete				1 Failures out of 1 Samples Frequency: 10ms		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			OR					
		Program Processing Time-out	10msec transaction time	> 10ms (No waiting time available during 10ms process waiting time.)			OR 1 Failures out of 1 Samples Frequency: 10ms	
			OR					
		A/D Conversion Failure	A/D conversion interrupt does not activate the standard number of times in 10ms AND A/D conversion interrupt is not completed				OR 1 Failures out of 1 Samples Frequency: 10ms	
			OR					
		A/D Conversion Failure	A/D conversion interrupt does not activate the standard number of times in 1s				OR 1 Failures out of 1 Samples Frequency: 1s	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Wheel Speed Sensors								
Left Front Wheel Speed Sensor Circuit Low	C1232	The left front wheel speed sensor (WSS) is open.	WSS feedback voltage < Threshold Pass Threshold: > 0.20v	0.20v Nominal range: (0.20v < WSS voltage range < 2.20v)	Sys Voltage Sys Voltage Processing_Enabled No Active DTCs	> 9.0 < 19.5 True (Note 1) C1207	> 100ms	2 Trips Type B
Right Front Wheel Speed Sensor Circuit Low	C1233	The right front wheel speed sensor is open.	WSS feedback voltage < Threshold Pass Threshold: > 0.20v	0.20v Nominal range: (0.20v < WSS voltage range < 2.20v)	Sys Voltage Sys Voltage Processing_Enabled No Active DTCs	> 9.0 < 19.5 True (Note 1) C1208	> 100ms	2 Trips Type B
Left Rear Wheel Speed Sensor Circuit Low	C1234	The left rear wheel speed sensor is open.	WSS feedback voltage < Threshold Pass Threshold: > 0.20v	0.20v Nominal range: (0.20v < WSS voltage range < 2.20v)	Sys Voltage Sys Voltage Processing_Enabled No Active DTCs	> 9.0 < 19.5 True (Note 1) C1209	> 100ms	2 Trips Type B
Right Rear Wheel Speed Sensor Circuit Low	C1235	The right rear wheel speed sensor is open.	WSS feedback voltage < Threshold Pass Threshold: > 0.20v	0.20v Nominal range: (0.20v < WSS voltage range < 2.20v)	Sys Voltage Sys Voltage Processing_Enabled No Active DTCs	> 9.0 < 19.5 True (Note 1) C1210	> 100ms	2 Trips Type B
Left Front Wheel Speed Sensor Circuit High	C1207	The left front wheel speed sensor is shorted.	WSS feedback voltage > Threshold1	Threshold1 = 2.20v	Sys Voltage Sys Voltage	> 9.0 < 19.5	> 100ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			OR ORION ASIC detects current > Threshold2 Pass Threshold: < 2.2v	Threshold2 = 35ma Nominal range: (0.20v < WSS voltage range < 2.20v)	Processing_Enabled	True (Note 1)		
Right Front Wheel Speed Sensor Circuit High	C1208	The right front wheel speed sensor is shorted.	WSS feedback voltage > Threshold1 OR ORION ASIC detects current > Threshold2 Pass Threshold: < 2.2v	Threshold1 = 2.20v Threshold2 = 35ma Nominal range: (0.20v < WSS voltage range < 2.20v)	Sys Voltage Sys Voltage Processing_Enabled	> 9.0 < 19.5 True (Note 1)	> 100ms	2 Trips Type B
Left Rear Wheel Speed Sensor Circuit High	C1209	The left rear wheel speed sensor is shorted.	WSS feedback voltage > Threshold1 OR ORION ASIC detects current > Threshold2 Pass Threshold: < 2.2v	Threshold1 = 2.20v Threshold2 = 35ma Nominal range: (0.20v < WSS voltage range < 2.20v)	Sys Voltage Sys Voltage Processing_Enabled	> 9.0 < 19.5 True (Note 1)	> 100ms	2 Trips Type B
Right Rear Wheel Speed Sensor Circuit High	C1210	The right rear wheel speed sensor is shorted.	WSS feedback voltage > Threshold1	Threshold1 = 2.20v	Sys Voltage Sys Voltage	> 9.0 < 19.5	> 100ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			OR ORION ASIC detects current > Threshold2 Pass Threshold: < 2.2v	Threshold2 = 35ma Nominal range: (0.20v < WSS voltage range < 2.20v)	Processing_Enabled	True (Note 1)		
Left Front Wheel Speed Sensor Circuit	C1221	The left front WSS signal has dropped out. It has stopped producing edges.	Number of detected edges = 0	0 edges Nominal Range: (N/A)	Veh Vel System Voltage Processing_Enabled No Active DTCs	> 12.8kph < 19.5 True (Note 1) C1207	70ms	2 Trips Type B
		Missing signal. The left front wheel speed sensor is no longer being detected.	For Single Missing, TC Active, and Multiple Missing WSS's: Missing Threshold = Larger of: (0.2 x Max)m/s or 1.8m/s Max is the maximum filtered velocity from the other 3 wheels Pass Threshold: WSS signal is detected	See Malfunction Criteria Nominal Range: (0.6kph < WSS vel range < 240kph)	Accel (on all wheels) Veh Vel (largest from all 4 wheels) Processing_Enabled No Active DTCs	< 17.16m/s/s > 12.8kph True (Note 1) C1207	Single: Time > 5s Single TC Active: Time > 60s Multiple: Time > 2minutes / > 15 ms	
Right Front Wheel Speed Sensor Circuit	C1222	The right front WSS signal has dropped out. It has stopped producing edges.	Number of detected edges = 0	0 edges Nominal Range: (N/A)	Veh Vel System Voltage	> 12.8kph < 19.5	70ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Processing_Enabled No Active DTCs	True (Note 1) C1208		
		Missing signal. The right front wheel speed sensor is no longer being detected.	For Single Missing, TC Active, and Multiple Missing WSS's: Missing Threshold = Larger of: (0.2 x Max)m/s or 1.8m/s Max is the maximum filtered velocity from the other 3 wheels Pass Threshold: WSS signal is detected	See Malfunction Criteria Nominal Range: (0.6kph < WSS vel range < 240kph)	Accel (on all wheels) Veh Vel (largest from all 4 wheels) Processing_Enabled No Active DTCs	< 17.16m/s/s > 12.8kph True (Note 1) C1208	Single: Time > 5s Single TC Active: Time > 60s Multiple: Time > 2minutes / > 15 ms	
Left Rear Wheel Speed Sensor Circuit	C1223	The left rear WSS signal has dropped out. It has stopped producing edges.	Number of detected edges = 0	0 edges Nominal Range: (N/A)	Veh Vel System Voltage Processing_Enabled No Active DTCs	> 12.8kph < 19.5 True (Note 1) C1209	70ms	2 Trips Type B
		Missing signal. The left rear wheel speed sensor is no longer being detected.	For Single Missing, TC Active, and Multiple Missing WSS's: Missing Threshold = Larger of: (0.2 x Max)m/s or 1.8m/s	See Malfunction Criteria	Accel (on all wheels) Veh Vel (largest from all 4 wheels) Processing_Enabled	< 17.16m/s/s > 12.8kph True (Note 1)	Single: Time > 5s Single TC Active: Time > 60s Multiple: Time > 2minutes	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Max is the maximum filtered velocity from the other 3 wheels Pass Threshold: WSS signal is detected	Nominal Range: (0.6kph < WSS vel range < 240kph)	No Active DTCs	C1209	/ > 15 ms	
Right Rear Wheel Speed Sensor Circuit	C1224	The right rear WSS signal has dropped out. It has stopped producing edges.	Number of detected edges = 0	0 edges Nominal Range: (N/A)	Veh Vel System Voltage Processing_Enabled No Active DTCs	> 12.8kph < 19.5 True (Note 1) C1210	70ms	2 Trips Type B
		Missing signal. The right rear wheel speed sensor is no longer being detected.	For Single Missing, TC Active, and Multiple Missing WSS's: Missing Threshold = Larger of: (0.2 x Max)m/s or 1.8m/s Max is the maximum filtered velocity from the other 3 wheels Pass Threshold: WSS signal is detected	See Malfunction Criteria Nominal Range: (0.6kph < WSS vel range < 240kph)	Accel (on all wheels) Veh Vel (largest from all 4 wheels) Processing_Enabled No Active DTCs	< 17.16m/s/s > 12.8kph True (Note 1) C1210	Single: Time > 5s Single TC Active: Time > 60s Multiple: Time > 2minutes > 15 ms	
Left Front Wheel Speed Sensor Circuit Range/Performance	C1225	Erratic signal. The left front WSS is exhibiting erratic behavior with a large acceleration.	WSS Accel > Threshold Pass Threshold: < 491m/s/s	491m/s/s Nominal Range: (N/A)	Veh Vel Processing_Enabled No Active DTCs	> 12.8kph True (Note 1) C1207	280ms Pass >30s	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Right Front Wheel Speed Sensor Circuit Range/Performance	C1226	Erratic signal. The right front WSS is exhibiting erratic behavior with a large acceleration.	WSS Accel > Threshold Pass Threshold: < 491m/s/s	491m/s/s Nominal Range: (N/A)	Veh Vel Processing_Enabled No Active DTCs	> 12.8kph True (Note 1) C1208	280ms Pass >30s	2 Trips Type B
Left Rear Wheel Speed Sensor Circuit Range/Performance	C1227	Erratic signal. The left rear WSS is exhibiting erratic behavior with a large acceleration.	WSS Accel > Threshold Pass Threshold: < 491m/s/s	491m/s/s Nominal Range: (N/A)	Veh Vel Processing_Enabled No Active DTCs	> 12.8kph True (Note 1) C1209	280ms Pass >30s	2 Trips Type B
Right Rear Wheel Speed Sensor Circuit Range/Performance	C1228	Erratic signal. The right rear WSS is exhibiting erratic behavior with a large acceleration.	WSS Accel > Threshold Pass Threshold: < 491m/s/s	491m/s/s Nominal Range: (N/A)	Veh Vel Processing_Enabled No Active DTCs	> 12.8kph True (Note 1) C1210	280ms Pass >30s	2 Trips Type B
Tire Size Mismatch	C122E	This detects that there may be mismatched sized tires on the vehicle	WSS (one wheel) – WSS(other 3) / Wheel Vel(other 3) > Threshold	20% Nominal Range: N/A	Vehicle Velocity Cornering Wheel Slip Brake Pedal Apply Detected Processing_Enabled	>4m/s C1207 C1208 C1209 C1210 < 3% (Note 10) Not Detected (Note 10) True (Note 2) True (Note 1)	30ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					No Active DTCs	C1207 C1208 C1209 C1210		

			Pedal Travel					
Brake Pedal Position Sensor Power Circuit Low	C120F	The supply to the pedal position sensor is shorted to ground.	Pedal supply voltage < Threshold Pass Threshold > 0.5v	0.5v	Processing_Enabled	True (Note 1)	30ms	2 Trips Type B
Brake Pedal Position Sensor Reference Circuit	C12E5	Determines if the voltage supply to the pedal sensor is out of range.	Pedal supply voltage < Threshold Low Pedal supply voltage > Threshold High Pass Threshold 4.75 < Volt <5.25	Low = 4.75v High = 5.25v Nominal Range: (N/A)	Processing_Enabled	True (Note 1)	30ms	2 Trips Type B
Brake Pedal Position Sensor 3 Circuit Low	C129A	Brake pedal position 3 input signal voltage is low.	Brake Ped Pos 3 Voltage < Threshold Pass Threshold > 5% of sensor supply voltage	5% of sensor supply voltage (0.25v typically) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Sensor Supply Voltage Sensor Supply Voltage Processing_Enabled No Active DTCs	> 4.75v < 5.25 True (Note 1) C120F	75ms	2 Trips Type B
Brake Pedal Position Sensor 3 Circuit High	C129B	Brake pedal position 3 input signal voltage is high.	Brake Ped Pos 3 Voltage > Threshold Pass Threshold > 95% of sensor	95% of sensor supply voltage (4.75v typically) Nominal Range:	Sensor Supply Voltage Sensor Supply Voltage	> 4.75v < 5.25	75ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			supply voltage	(4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled No Active DTCs	True (Note 1) C120F		
Brake Pedal Position Sensor 3 Circuit Offset Error	C129C	The brake pedal position 3 input signal offset voltage is out of range	Brake Ped Pos 3 input offset > Threshold	5 mm (>1.07v typical)	Brake Pedal Apply Detected OR Pressure Zeroing Enable AND Processing_Enabled No Active DTCs	True (Note 2) True (Note 3) True (Note 1) C120F C127D C129A C129B C12E5 C12F8	15ms	2 Trips Type B
			Pass Threshold Brake Ped Pos 3 input offset < Threshold	Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)				
		Base brake pedal travel sensor 3 offset error	Brake Pedal Travel Sensor 3 > Max Threshold	Max Threshold = 5 mm	Brake Pedal Apply Detected	True (Note 2)	7ms	
Brake Pedal Position Sensor 3 Plausibility	C12F8	The brake pedal position 3 input signal does not correlate with the brake pedal position 4 signal or with the MC Pressure signal.	ABS{(Brake Ped Pos 3 input + Brake Ped Pos 4 input) - Sensor_Supply_Voltage} < Threshold	0.5v	Sensor Supply Voltage Sensor Supply Voltage Processing_Enabled No Active DTCs	> 4.75v < 5.25 True (Note 1) C120F C127D	30ms (condition 1) 150ms (condition 2)	2 Trips Type B
			Brake Ped Pos 3 input outside correlation table with M/C pressure input	Outside acceptance table (Note 4)				

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		The difference of the two travel sensor inputs is greater than a predefined threshold.	Pass Threshold conditions within thresholds (Input 1 + Input 2) - sensor supply voltage > Threshold	Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor) 0.5v	Pedal Supply Voltage Failure Brake Pedal Sensor is enabled Sensor Supply Voltage Sensor Supply Voltage Brake Pedal Position Sensor 1 Input = Valid Brake Pedal Position Sensor 2 Input = Valid	C129A C129B C129C C12E5 FALSE TRUE > 4.75v < 5.25 TRUE TRUE	30ms	
Brake Pedal Position Sensor 4 Circuit Low	C129D	Brake pedal position 4 input signal voltage is low.	Brake Ped Pos 4 Voltage < Threshold Pass Threshold >5% of sensor voltage	5% of sensor supply voltage (0.25v typically) Nominal Range: (4.75v - 5.25v - Supply 4.5 - 0.5v - Sensor)	Sensor Supply Voltage Sensor Supply Voltage Processing_Enabled No Active DTCs	> 4.75v < 5.25 True (Note 1) C120F	75ms	2 Trips Type B
Brake Pedal Position Sensor 4 Circuit High	C129E	Brake pedal position 4 input signal voltage is high.	Brake Ped Pos 4 Voltage > Threshold Pass Threshold <95% of sensor supply voltage	95% of sensor supply voltage (4.75v typically) Nominal Range: (4.75v - 5.25v - Supply	Sensor Supply Voltage Sensor Supply Voltage	> 4.75v < 5.25	75ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
				4.5 - 0.5v - Sensor)	Processing_Enabled No Active DTCs	True (Note 1) C120F		
Brake Pedal Position Sensor 4 Circuit Offset Error	C129F	The brake pedal position 2 input signal offset voltage is out of range	Brake Ped Pos 4 input offset > Threshold	5 mm (>1.07v typical)	Brake Pedal Apply Detected OR Pressure Zeroing Enable AND Processing_Enabled No Active DTCs	True (Note 2) True (Note 3) True (Note 1) C120F C127D C129D C129E C12E5 C120C	15ms	2 Trips Type B
			Pass Threshold Brake Ped Pos 4 input offset <Threshold	Nominal Range: 4.75v - 5.25v - Supply 4.5v - 0.5v - Sensor				
		Base brake pedal travel sensor 4 offset error	Brake Pedal Travel Sensor 4 > Max Threshold	Max Threshold = 5 mm	Brake Pedal Apply Detected	True (Note 2)	7 ms	
Brake Pedal Position Sensor 4 Plausibility	C120C	The brake pedal position 4 input signal does not correlate with the brake pedal position 3 signal or with the MC Pressure signal.	ABS{(Brake Ped Pos 3 input + Brake Ped Pos 4 input) - Sensor_Supply_Voltage} < Threshold	0.5v	Sensor Supply Voltage	> 4.75v	30ms (condition 1)	2 Trips Type B
			Brake Ped Pos 4 input outside correlation table with M/C pressure input	Outside acceptance table (Note 4)	Sensor Supply Voltage	< 5.25		
			Pass Threshold conditins within thresholds	Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	C120F C127D C129D C129E C129F C12E5	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		The difference of the two travel sensor inputs is greater than a predefined threshold.	$ (Input\ 1 + Input\ 2) - sensor\ supply\ voltage > Threshold$	0.5v	Pedal Supply Voltage Failure Brake Pedal Sensor is enabled Sensor Supply Voltage Sensor Supply Voltage Brake Pedal Position Sensor 1 Input = Valid Brake Pedal Position Sensor 2 Input = Valid	FALSE TRUE > 4.75v < 5.25 TRUE TRUE	30ms	

Pressure Sensors								
ABS Sensor Reference Output Circuit	C12E4	Determines if the internal 5v voltage supply is out of range.	Internal supply voltage < Threshold Low Internal supply voltage > Threshold High Pass Threshold 4.75 < Volt < 5.25	Low = 4.75v High = 5.25v Nominal Range: (N/A)	Processing_Enabled	True (Note 1)	30ms	2 Trips Type B
ABS Master Cylinder Pressure Sensor and Brake Pedal Position Sensor Correlation	C12B1	The Master Cylinder Pressure sensor reading does not correlate with the pedal travel sensor readings.	M/C pressure input outside correlation table with Brake Ped Pos x inputs M/C Pressure has not changed by more than Threshold 1 while	Outside acceptance table (Note 4) Threshold 1 = 50.0 kPa Threshold 2 = 2.0 mm (rod)	Processing_Enabled System self test complete One brake apply	True (Note 1) TRUE TRUE	150ms (condition 1) 100ms (condition 2)	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			pedal travel inputs have changed more than Threshold 2		M/C Pressure signal stable No Active DTCs	True (Note 5) C120C C120F C12B2 C12B3 C12B4 C128B C128E C127D C129A C129B C129C C129D C129E C129F C12E5 C12F8		
ABS Master Cylinder Pressure Sensor Circuit Open or Shorted Low	C12B2	Out of range Low The MCP sensor is either open or shorted to ground.	MCP Voltage < Threshold Pass Threshold: > 5%	5% Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	100ms	2 Trips Type B
ABS Master Cylinder Pressure Sensor Circuit Shorted High	C12B3	The MCP sensor signal is shorted high.	MCP Voltage > Supply Threshold Pass Threshold: < 95%	95% Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	100ms	2 Trips Type B
ABS Master Cylinder Pressure Sensor Performance	C12B4	An MCP erratic condition exist if the ohmic fault status has changed since the last time the ohmic check was performed.	Transitions from Valid to Open/Shorted State	Successive Loops	Processing_Enabled No active DTCs:	True (Note 1) C12B2 C12B3	100ms Pass =150ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Pass Threshold: Transitions do not occur.	Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)				
ABS Master Cylinder Pressure Sensor Offset Error	C128B	The MCP sensor's input signal offset is out of range.	MCP Offset > Threshold	800 kPa (0.7v typically) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	(Brake Switch Veh Accel Pump Motor) OR Brake Pedal Apply Detected AND Processing_Enabled No active DTCs:	False > 0.4m/s2 Not Active True (Note 2) True (Note 1) C12B2 C12B3 C128E	20ms	2 Trips Type B
		Emulator pressure offset is out of range.	Emulator Pressure Offset > Max Threshold	800 kPa	Emulator Pressure Detected	TRUE	7 ms	
ABS Master Cylinder Pressure Sensor Raw Offset Error	C128E	The MCP sensor's raw offset is out of range.	MCP Raw Offset > Threshold	5000 kPa (1.64v typical) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Brake Control Vehicle Acceleration Vehicle Velocity Accelerator Pedal Position Brake Switch Processing_Enabled	False (Note 6) > -0.5m/s/s > 2.0m/s < 10% FALSE True (Note 1)	1s	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					No active DTCs:	C12B2 C12B3 C128E		
ABS HPA Pressure Sensor Circuit Open or Shorted Low	C12B6	Out of range low. The HPA pressure sensor is either open or shorted to ground.	HPA Voltage < Threshold Pass Threshold: > 5%	5% Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	100ms	2 Trips Type B
ABS HPA Pressure Sensor Circuit Shorted High	C12B7	The HPA pressure sensor signal is shorted high.	HPA Voltage > Supply Threshold Pass Threshold: < 95%	95% Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	100ms	2 Trips Type B
ABS HPA Pressure Sensor Erratic	C12B8	An HPA pressure sensor erratic condition exist if the ohmic fault status has changed since the last time the ohmic check was performed	Transitions from Valid to Open/Shorted State Pass Threshold: Transitions do not occur.	Successive Loops Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled No active DTCs:	True (Note 1) C12B6 C12B7	100ms Pass = 150ms	2 Trips Type B
ABS Regenerative Axle Pressure Sensor Circuit Open or Shorted Low	C12B9	The regen axle pressure sensor is either open or shorted to ground.	Regen Axle Voltage < Threshold Pass Threshold: > 5%	5% Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	100ms	2 Trips Type B
ABS Regenerative Axle Pressure Sensor Circuit	C12BA	The regen axle pressure sensor signal is shorted high.	Regen Axle Voltage > Supply Threshold	95% Nominal Range:	Processing_Enabled	True (Note 1)	100ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Shorted High			Pass Threshold: < 95%	(4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)				
ABS Regenerative Axle Pressure Sensor Erratic	C12BB	A regen axle pressure sensor erratic condition exist if the ohmic fault status has changed since the last time the ohmic check was performed	Transitions from Valid to Open/Shorted State Pass Threshold: Transitions do not occur.	Successive Loops Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled No active DTCs:	True (Note 1) C12B9 C12BA	100ms Pass = 150ms	2 Trips Type B
ABS Regenerative Axle Pressure Sensor Raw Offset Error	C128F	The regen axle pressure sensor's raw offset is out of range.	Regen Axle Signal Raw Offset > Threshold	5000 kPa (1.64v typical) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Brake Control Vehicle Acceleration Vehicle Velocity Accelerator Pedal Position Brake Switch Processing_Enabled No active DTCs:	False (Note 6) > -0.5m/s/s > 2.0m/s < 10% FALSE True (Note 1) C12B9 C12BA C12BB	1s	2 Trips Type B
ABS Regenerative Axle Pressure Sensor Offset Error	C128C	The regen axle pressure sensor's input signal offset is out of range.	Regen Axle Signal Offset > Threshold Pass Threshold: < 800 kPa	800 kPa (0.7v typically) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Brake Switch Vehicle Acceleration Pump Motor Processing_Enabled	False > 0.4m/s ² Not Active True (Note 1)	20ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					No active DTCs:	C12B9 C12BA C12BB		
ABS Boost Pressure Sensor Circuit Open or Shorted Low	C12BC	The boost pressure sensor is either open or shorted to ground.	Boost Voltage < Threshold Pass Threshold: > 5%	5% Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	100ms	2 Trips Type B
ABS Boost Pressure Sensor Circuit Shorted High	C12BD	The boost pressure sensor signal is shorted high.	Boost Voltage > Supply Threshold Pass Threshold: < 95%	95% Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled	True (Note 1)	100ms	2 Trips Type B
ABS Boost Pressure Sensor Erratic	C12BE	A boost pressure sensor erratic condition exist if the ohmic fault status has changed since the last time the ohmic check was performed	Transitions from Valid to Open/Shorted State Pass Threshold: Transitions do not occur.	Successive Loops Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Processing_Enabled No active DTCs:	True (Note 1) C12BC C12BD	100ms Pass = 150ms	2 Trips Type B
ABS Boost Pressure Sensor Raw Offset Error	C128D	The boost pressure sensor's raw offset is out of range.	Boost Signal Raw Offset > Threshold	5000 kPa (1.64v typical) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Brake Control Vehicle Acceleration Vehicle Velocity Accelerator Pedal Position Brake Switch Processing_Enabled No active DTCs:	False (Note 6) > -0.5m/s/s > 2.0m/s < 10% False True (Note 1) C12BC	1s	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
						C12BD C12BE		
ABS Boost Pressure Sensor Offset Error	C128A	The boost pressure sensor's input signal offset is out of range.	Boost Signal Offset > Threshold Pass Threshold: < 800 kPa	800 kPa (0.7v typically) Nominal Range: (4.75v - 5.25v - Supply 0.5 - 4.5v - Sensor)	Brake Switch Vehicle Acceleration Pump Motor Processing_Enabled No active DTCs:	FALSE > 0.4m/s2 Not Active True (Note 1) C12BC C12BD C12BE	20ms	2 Trips Type B
ABS Boost Pressure Performance	C120A	Determines if the boost pressure being commanded is being achieved or not.	Boost Pres Diff(BPD) = Boost Pres(filtered, zeroed) – test command With VSC or TC or ABS active: BPD > Thrshld1 Without VSC and TC and ABS active: BPD > Thrshld2	Thrshld1 = 3000 kPa Thrshld2 = 1500 kPa Nominal Range: (N/A)	Processing_Enabled No active DTCs:	True (Note 1) C12B6 C12B7 C12B8 C12BC C12BD C12BE C128A C128D C127D C12E4	500ms	2 Trips Type B
ABS Boost Pressure Sensor and Regenerative Axle Pressure Sensor Correlation	C12F7	The regen axle pressure sensor is checked with the boost pressure sensor by equalizing pressure at the two sensors and comparing their difference to a trimmed threshold. The pressures are equalized by controlling the regen axle valves during the test.	(Regen axle pressure – Boost pressure) > Threshold Pass Threshold: < 500 kPa	500 kPa	All Wheel Speeds = 0 Brake Pedal Apply Detected	> 200msec True (Note 2)	100 ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Boost Pressure Regen Valves Active Processing_Enabled System Mode Skid Impending No active DTCs:	> 150 kPa FALSE True (Note 1) != Diagnostic Mode == False C127D C128A C128C C128D C128F C12B9 C12BA C12BB C12BC C12BD C12BE C12E4 C12F7		
ABS Boost Pressure Loss	C12FE	The Boost Loss Fault is used to allow the boost control function to keep operating, despite motor failures or other failures and conditions that cause the boost pressure to be limited to less than commanded. The boost control will continue, applying as much pressure as possible, until the boost pressure available is no greater than the master cylinder pressure the driver is applying, at which time a fault will be set and the system will revert to 'push through'.	Boost Press(slow filtered) < Threshold1 AND MC Press Greater Than Boost Press Time >= Time1 AND Accum Pres Filtered > Threshold2	Threshold1 = 7000 kPa Time1 = 250msec Threshold2 = 16000 kPa	Boost Pressure Valid Boost Loss Condition MC Press Greater Than Boost Press Time Incremented When: Boost Pressure Commanded > (Boost Press + 1500 kPa) AND MC Pressure > (Boost Press – 2	True FALSE	250 ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			OR Boost Loss First Apply Time > Time2	Time2 = 250msec	bar) No active DTCs	C12BC C12BD C12BE C128A C128D C127D C12E4		
		This diagnostic is set when the boost loss condition described in the "Boost Loss Fault" is a result of certain situations such as the Engine Run Active being low. This diagnostic is used to effect the proper system reaction without indicating a hardware fault.	Boost Press < Threshold1 AND MCP Greater Than Boost Press Time >= Time1 AND Accum Pres Filtered > Threshold2 OR Boost Loss First Apply Time > Time2	Threshold1 = 7000 kPa Time1 = 250msec Threshold2 = 16000 kPa Time2 = 250msec	Boost Pressure Valid Boost Loss Condition Boost Loss Condition Fault	True True FALSE	250 ms	

ESC Solenoids								
Traction Control Power Switch Circuit Open	C120D	When the power switch has been commanded on the voltage level is monitored for proper operation.	Voltage Level < Threshold Pass Threshold volt > 80% voltage	80% voltage Nominal Range: (N/A)	Power Switch Slip Control Enabled Power Switch Command	True (Note 7) On	50ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Traction Control Power Switch Circuit Shorted	C120E	When the power switch has been commanded off the voltage level should be at or near zero volts.	Voltage Level > Threshold Pass Threshold volt < 80% voltage	80% voltage Nominal Range: (N/A)	Power Switch Command	Off	50ms	2 Trips Type B
ABS Left Front Isolation Solenoid Driver Shorted	C12C2	Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high.	Solenoid feedback voltage < Threshold Pass Threshold: > 30%	30% battery Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms	2 Trips Type B
ABS Right Front Isolation Solenoid Driver Shorted	C12C5	Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high.	Solenoid feedback voltage < Threshold Pass Threshold: > 30%	30% battery Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms	2 Trips Type B
ABS Left Rear Isolation Solenoid Circuit Shorted	C12F2	This failsafe performs the shorted coil detection for HW CLC (Closed Loop Current) coils	Current Feedback > Threshold Pass Threshold: < 150% of requested current	150% of requested current Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply	True (Note 7) > 8v < 16v	15ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Coil Command	Off		
ABS Left Rear Isolation Solenoid Performance	C12F3	The current from the closed loop current controlled valve coil is diagnosed by checking if the difference of the measured current feedback and the commanded current is within a tolerance range.	Coil Feedback Current > Threshold Pass Threshold: < 25% of commanded current	25% of Commanded Current Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Commanded Current Commanded Current	True (Note 7) > 8v < 16v > 0.0a < 2.5a	100ms	2 Trips Type B
		Whenever the Power Switch Base Brake is closed and the driver transistor is not turned on (solenoid commanded off) the feedback current should be 0 amps.	Current feedback > Threshold Pass Threshold < 0.10amp	0.10amp Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 8) > 8v < 16v Off	30ms	
ABS Right Rear Isolation Solenoid Circuit Shorted	C12F5	This failsafe performs the shorted coil detection for HW CLC coils	Current Feedback > Threshold Pass Threshold: < 150% of requested current	150% of requested current Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Commanded Current	True (Note 7) > 8v < 16v > 0.25a	15ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.		
					Commanded Current	< 0.35a				
ABS Right Rear Isolation Solenoid Performance	C12F6	The current from the closed loop current controlled valve coil is diagnosed by checking if the difference of the measured current feedback and the commanded current is within a tolerance range.	Coil Feedback Current > Threshold	25% of Commanded Current	Power Switch Slip Control Enabled	True (Note 7)	100ms	2 Trips Type B		
			Pass Threshold: <25% of Commanded Current	Nominal Range: (8v > 16v)	Solenoid Power Supply	> 8v			Solenoid Power Supply	< 16v
		Whenever the Power Switch Base Brake is closed and the driver transistor is not turned on (solenoid commanded off) the feedback current should be 0 amps.	Current feedback > Threshold	0.10amp	Power Switch Base Brake Enabled	True (Note 8)	30ms			
			Pass Threshold < 0.10amp	Nominal Range: (8v > 16v)	Solenoid Power Supply	> 8v		Solenoid Power Supply	< 16v	Coil Command
ABS Left Front Dump Solenoid Driver Shorted	C12CC	Whenever the Power Switch Slip Control is closed and the driver transistor is turned off (solenoid commanded off) the feedback voltage should be High .	Solenoid feedback voltage < Threshold	30% battery	Power Switch Slip Control Enabled	True (Note 7)	30ms (Solenoid in ON/OFF Mode)	2 Trips Type B		
			Pass Threshold: > 30%	Nominal Range: (8v > 16v)	Solenoid Power Supply	> 8v			Solenoid Power Supply	< 16v

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Coil Command	Off		
ABS Right Front Dump Solenoid Driver Shorted	C12CF	Whenever the Power Switch Slip Control is closed and the driver transistor is turned off (solenoid commanded off) the feedback voltage should be High .	Solenoid feedback voltage < Threshold Pass Threshold: > 30%	30% battery Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms (Solenoid in ON/OFF Mode)	2 Trips Type B
ABS Left Rear Dump Solenoid Circuit Open	C12D0	Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be High .	Solenoid feedback voltage < Threshold Solenoid feedback voltage > Threshold Pass Threshold: > 80% Pass Threshold: < 30%	80% battery 30% battery Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms (Solenoid in ON/OFF Mode)	2 Trips Type B
		Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be High .	Solenoid feedback voltage < Threshold Solenoid feedback voltage > Threshold Pass Threshold >65.23%	65.23% battery 43.49% battery Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 8) > 8v < 16v Off		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
ABS Left Rear Dump Solenoid Circuit Shorted	C12D1	Whenever the Power Switch Slip Control is closed and the driver transistor is turned on (solenoid commanded on) the feedback voltage should be low .	Solenoid feedback voltage > Threshold Pass Threshold: < Threshold	30% of battery (Solenoid in ON/OFF Mode)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v On	15ms (Solenoid in ON/OFF Mode)	2 Trips Type B
		Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded on) the feedback voltage should be low .	Solenoid feedback voltage > Threshold Pass Pass Threshold < 85%	85% battery Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 8) > 8v < 16v On	21ms (Solenoid in PWM Mode)	
ABS Left Rear Dump Solenoid Driver Shorted	C12D2	Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high .	Solenoid feedback voltage < Threshold Pass Threshold: > 30%	30% battery Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms (Solenoid in ON/OFF Mode)	2 Trips Type B
		Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high .	Solenoid feedback voltage < Threshold Pass Pass Threshold > 43.49%	43.49% battery Nominal Range:	Power Switch Base Brake Enabled Solenoid Power Supply	True (Note 8) > 8v	21ms (Solenoid in PWM Mode)	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
				(8v > 16v)	Solenoid Power Supply Coil Command	< 16v Off		
ABS Right Rear Dump Solenoid Circuit Open	C12D3	Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high .	Solenoid feedback voltage < Threshold	80% battery	Power Switch Slip Control Enabled	True (Note 7)	30ms (Solenoid in ON/OFF Mode)	2 Trips Type B
			Solenoid feedback voltage > Threshold	30% battery	Solenoid Power Supply	> 8v		
			Pass Threshold: > 80%	Nominal Range: (8v > 16v)	Solenoid Power Supply	< 16v		
			Pass Threshold: < 30%		Coil Command	Off		
		Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high .	Solenoid feedback voltage < Threshold	65.23% battery	Power Switch Base Brake Enabled	True (Note 8)	21ms (Solenoid in PWM Mode)	
			Solenoid feedback voltage > Threshold	43.49% battery	Solenoid Power Supply	> 8v		
			Pass Threshold >65.23%	Nominal Range: (8v > 16v)	Solenoid Power Supply	< 16v		
					Coil Command	Off		
ABS Right Rear Dump Solenoid Circuit Shorted	C12D4	Whenever the Power Switch Slip Control is closed and the driver transistor is turned on (solenoid commanded on) the feedback voltage should be low .	Solenoid feedback voltage > Threshold	30% of battery (Solenoid in ON/OFF Mode)	Power Switch Slip Control Enabled	True (Note 7)	15ms (Solenoid in ON/OFF Mode)	2 Trips Type B
			Pass Threshold: < Threshold		Solenoid Power Supply	> 8v		
					Solenoid Power Supply	< 16v		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Coil Command	On		
		Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be low .	Solenoid feedback voltage > Threshold Pass Pass Threshold < 85%	85% battery Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 8) > 8v < 16v Off	21ms (Solenoid in PWM Mode)	
ABS Right Rear Dump Solenoid Driver Shorted	C12D5	Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high .	Solenoid feedback voltage < Threshold Pass Threshold >30%	30% battery Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms	2 Trips Type B
		Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high .	Solenoid feedback voltage < Threshold Pass Pass Threshold > 43.49%	43.49% battery Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 8) > 8v < 16v Off	21ms (Solenoid in PWM Mode)	

BB Solenoids

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
ABS Power Switch Circuit Open	C12E6	When the power switch has been commanded on the voltage level is monitored for proper operation.	Voltage Level (switched battery) < Threshold Pass Threshold > 80% bat volt	80% bat voltage Nominal Range: (N/A)	Power Switch Base Brake Enabled Power Switch Command	True (Note 8) On	50ms	2 Trips Type B
ABS Power Switch Circuit Shorted	C12E7	The Base Brake Power switch voltage decay is monitored after the power switch is turned off. Voltage too high indicates a shorted switch. Voltage too low indicates a missing filter capacitor.	Power Switch Short Fault: Power switch feedback > Threshold1 Power Switch Short FSM Capacitor Fault: Power switch feedback < Threshold2 Pass Threshold 80% < fdbk < 50%	Threshold1 = 80% bat volt Threshold2 = 50% bat volt Nominal Range: (N/A)	Power Switch Command Motor	Off != Running	50ms	2 Trips Type B
ABS Base Brake Open Solenoid Circuit Open	C12D6	Whenever the Power Switch Base Brake is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high. Whenever the Power Switch Base Brake is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high.	Solenoid feedback voltage < Threshold Solenoid feedback voltage > Threshold Pass Threshold >80% Pass Threshold <30% Solenoid feedback voltage < Threshold	80% battery 30% battery Nominal Range: (8v > 16v) 65.23% battery	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Coil Command Power Switch Base Brake Enabled	True (Note 8) > 8v < 16v Off True (Note 8)	30ms 21ms (Solenoid in PWM Mode)	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			Pass Threshold >65.23%	Nominal Range: (8v > 16v)	Solenoid Power Supply Solenoid Power Supply Coil Command	> 8v < 16v Off		
ABS Base Brake Open Solenoid Circuit Shorted	C12D7	Whenever the Power Switch Base Brake is closed and the driver transistor is turned on (solenoid commanded on) the feedback voltage should be low .	Solenoid feedback voltage > Threshold Pass Threshold: < Threshold	30% of battery (Solenoid in ON/OFF Mode)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v On	15ms (Solenoid in ON/OFF Mode)	2 Trips Type B
		Whenever the Power Switch Base Brake is closed and the driver transistor is turned on (solenoid commanded on) the feedback voltage should be low .	Solenoid feedback voltage > Threshold Pass Threshold: < 85%	85% of batter (Solenoid in PWM Mode) Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v On	21ms (Solenoid in PWM Mode)	
ABS Base Brake Open Solenoid Driver Shorted	C12D8	Whenever the Power Switch Base Brake is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high .	Solenoid feedback voltage < Threshold	30% battery	Power Switch Base Brake Enabled	True (Note 8)	30ms	2 Trips Type B
			Pass Threshold >30%	Nominal Range:	Solenoid Power Supply	> 8v		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
				(8v > 16v)	Solenoid Power Supply Coil Command	< 16v Off		
		Whenever the Power Switch Base Brake is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high .	Solenoid feedback voltage < Threshold Pass Pass Threshold > 43.49%	43.49% battery Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 8) > 8v < 16v Off	21ms (Solenoid in PWM Mode)	
ABS Base Brake Closed Solenoid Circuit Open	C12D9	Whenever the Power Switch Base Brake is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high .	Solenoid feedback voltage < Threshold Solenoid feedback voltage > Threshold Pass Threshold >80% Pass Threshold <30%	80% battery 30% battery Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 8) > 8v < 16v Off	30ms	2 Trips Type B
		Whenever the Power Switch Base Brake is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high .	Solenoid feedback voltage < Threshold Pass Threshold >65.23%	65.23% battery Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply	True (Note 8) > 8v	21ms (Solenoid in PWM Mode)	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Solenoid Power Supply Coil Command	< 16v Off		
ABS Base Brake Closed Solenoid Circuit Shorted	C12DA	Whenever the Power Switch Base Brake is closed and the driver transistor is turned on (solenoid commanded on) the feedback voltage should be low .	Solenoid feedback voltage > Threshold Pass Threshold: < Threshold	30% of battery (Solenoid in ON/OFF Mode)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v On	15ms (Solenoid in ON/OFF Mode)	2 Trips Type B
		Whenever the Power Switch Base Brake is closed and the driver transistor is turned on (solenoid commanded on) the feedback voltage should be low .	Solenoid feedback voltage > Threshold Pass Threshold: < Threshold	85% of batter (Solenoid in PWM Mode) Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v On	21ms (Solenoid in PWM Mode)	
ABS Base Brake Closed Solenoid Driver Shorted	C12DB	Whenever the Power Switch Base Brake is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high .	Solenoid feedback voltage < Threshold Pass Threshold >30%	30% battery Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply	True (Note 8) > 8v < 16v	30ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Coil Command	Off		
		Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback voltage should be high .	Solenoid feedback voltage < Threshold Pass Pass Threshold > 43.49%	43.49% battery Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 8) > 8v < 16v Off	21ms (Solenoid in PWM Mode)	
ABS Boost Valve Solenoid Circuit Shorted	C12DD	This failsafe is for shorted coil detection for HW CLC coils	Current Feedback > Threshold Pass Threshold: < 150% of requested current	150% of requested current Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Commanded Current Commanded Current	True (Note 8) > 8v < 16v > 0.25a < 0.35a	15ms	2 Trips Type B
ABS Boost Valve Solenoid Circuit Performance	C12A7	The current from the closed loop current controlled valve coil is diagnosed by checking if the difference of the measured current feedback and the commanded current is within a tolerance range.	Coil Feedback Current > Threshold Pass Threshold: < 25% of commanded current	25% of Commanded Current Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply	True (Note 8) > 8v < 16v	100ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Commanded Current Commanded Current	> 0.44a < 1.5a		
		Whenever the Power Switch Base Brake is closed and the driver transistor is not turned on (solenoid commanded off) the feedback current should be 0 amps.	Current feedback > Threshold Pass Threshold < 0.10amp	0.10amp Nominal Range: (8v > 16v)	Power Switch Base Brake Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 8) > 8v < 16v Off	30ms	
ABS Proportioning Valve Solenoid Circuit Shorted	C12DF	This failsafe is for shorted coil detection for HW CLC coils	Current Feedback > Threshold Pass Threshold: < 150% of requested current	150% of requested current Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Commanded Current Commanded Current	True (Note 7) > 8v < 16v > 0.25a < 0.35a	15ms	2 Trips Type B
ABS Proportioning Valve Solenoid Performance	C12F4	The current from the closed loop current controlled valve coil is diagnosed by checking if the difference of the measured current feedback and the commanded current is within a tolerance range.	Coil Feedback Current > Threshold Pass Threshold <25% of Commanded Current	25% of Commanded Current Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply	True (Note 7) > 8v	100ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					Solenoid Power Supply Commanded Current Commanded Current	< 16v > 0.0a < 2.5a		
		Whenever the Power Switch Slip Control is closed and the driver transistor is not turned on (solenoid commanded off) the feedback current should be 0 amps.	Current feedback > Threshold Pass Threshold <0.10amp	0.10amp Nominal Range: (8v > 16v)	Power Switch Slip Control Enabled Solenoid Power Supply Solenoid Power Supply Coil Command	True (Note 7) > 8v < 16v Off	30ms	

FSM Pump Motor								
ABS Pump Motor Run On	C12E9	This fault occurs if the Motor is continuously on for greater than 60s for 5 consecutive run times during an ignition cycle.	FSM Run-On Fault counter > Threshold Pass Threshold < 5	5 Nominal Range: (10v > 16v)	Motor_Enabled Motor ON	True (Note 9) > 60s	15 ms	2 Trips Type B
ABS Pump Motor Locked	C12E8	This fault is set when the motor control micro communicates to the system micro that the motor is unable or will not rotate.	FS_Motor_No_Edge_Counter < Threshold	50 Nominal Range: (10v > 16v)	Motor_Enabled	True (Note 9)	15 ms	2 Trips Type B
		This fault is set when the motor control micro communicates to the	Motor start PWM cycles > Threshold (without a recognized	750 cycles	Motor_Enabled	True (Note 9)	4.75 s	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		<p>system micro that the motor is unable or will not rotate.</p> <p>150 PWM cycles are applied to the FS motor during motor start. If a turning point is not recognized during those 150 PWM cycles the fault counter will be incremented by one. If the fault count increase to 5 the fault will set</p> <p>The turning point fault is monitored during motor start (not during motor spinning state).</p>	turning point)					
		<p>This fault is set when the motor control micro communicates to the system micro that the motor is unable or will not rotate.</p> <p>The interrupt order fault is set, if the calls of the requested interrupt-services are not in the correct order.</p> <p>The interrupt order fault is monitored during motor start and motor spinning state.</p>	Requested "interrupt-services" order = Value	Value = Incorrect order	Motor_Enabled	True (Note 9)	Interrupt frequency is tied to motor speed, so it is speed dependent.	
ABS Pump Motor Performance	C12E0	This fault checks to see if a condition exists in which the accumulator is not charging	<p>Accumulator Pressure < Threshold</p> <p>Pass Threshold > 12000 kPa</p>	<p>11000 kPa</p> <p>Nominal Range: (10v > 16v)</p>	<p>Brake Pedal Apply Detected</p> <p>Motor_Enabled</p> <p>Boost_Pressure < Command + 150 kPa</p>	<p>True (Note 2)</p> <p>True (Note 9)</p> <p>True</p>	100ms	2 Trips Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					No active DTCs:	C12B6 C12B7 C12B8 C127D C12E4		

Power Inputs								
EBCM Device Voltage Low	C12E1	System voltage is too low for certain operations. If the vehicle is not moving or if the vehicle is in park and the park signal is valid, the fault maturation time will be 20 sec. Otherwise the fault maturation time will be 100msec.	System voltage < Threshold Pass Threshold Volt >9.3v	9v Nominal Range: (N/A)	Ignition Vehicle Moving PRNDL OR PRNDL_P Signal Valid Wheel Speeds Valid	!= Crank != TRUE != Park FALSE FALSE	20s 100ms	Special C
EBCM Device Voltage High	C12E2	System voltage is too high for certain operations.	System voltage > Threshold Pass Threshold Volt <15.7v	16v Nominal Range: (N/A)	Ignition	!= Crank	100ms	2 Trips Type B

Controller								
EBCM Self Test Failed	C127C	The Built In Self Test (BIST) is responsible for testing the internal functionality of the core within the main microprocessor	Fail Consecutive Times = Threshold	2 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	1 Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
EBCM Processor Performance	C127B	<p>Normal Operation: The micro sends a watchdog enable command(WEC) via the SPI to the Orion ASIC every schedule loop. If the ASIC does not receive this message, the external watchdog circuit inhibits the power switches.</p> <p>Ignition Self-Test: The external watchdog circuit is tested by not sending the WEC via the SPI to the ASIC so that the external watchdog is off and then commanding the power switch to on.</p>	<p>Power Switch Slip Control Voltage Feedback > Threshold</p> <p>Pass Threshold < 80% bat volt</p>	<p>80% bat volt</p> <p>Nominal Range: (N/A)</p>		Run during Start-up	30ms	1 Trip, Type A
EBCM Random Access Memory (RAM)	C1255	<p>The following tests are continuously ran:</p> <ol style="list-style-type: none"> 1. Read/write of the micro's RAM registers. 2. Address check of the RAM address lines. 3. Verify that the RAM location used to store the persistent address line test address (offset) advances to the next address line address. 4. Perform data check on a RAM address that includes a dependency check against another RAM location that is address adjacent to the RAM location being tested. 5. Verify that the RAM location used to store the persistent data test address advances to the next test address. 	<p>If any of the tests fail, the system is forced into a reset by writing an invalid watchdog key to the system registers. If the RAM failure is NOT detected by the bootloader static RAM check algorithm then a fault code is set and the exact type of RAM failure is written to NVRAM.</p>	<p>See Malfunction Criteria</p> <p>Nominal Range: (N/A)</p>		Upon Starting Scheduler in the Application	15ms	1 Trip, Type A
EBCM Read Only Memory (ROM)	C1256	<p>This check is called from the scheduler each loop. Each ROM section is check-summed by byte. Each byte will be added to the current checksum for a section. If the byte being checked is the last byte of a section, then the section is verified for a correct checksum.</p>	<p>ROM Section's Checksum != Threshold</p>	<p>0</p> <p>Nominal Range: (N/A)</p>		Upon Starting Scheduler in the Application	Immediate	1 Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
EBCM Stack Overrun	C126E	To detect underflow and overflow of the system stacks, a word of RAM is reserved at the end of each of the system stacks. A word of RAM is also reserved at the upper-most address of the stack section. The contents of these reserved words will be monitored periodically to determine if they have been modified. To detect cases where the application could be pushing a value onto the stack that matches the test value, the test value that is stored at these reserved addresses will be changed each update.	End of Stack != Threshold	Set value changed every software release Nominal Range: (N/A)		Upon Starting Scheduler in the Application	Immediate	1 Trip, Type A
EBCM Processor Overrun	C121D	Processor did not perform a proper shutdown. NVRAM blocks written at shutdown do not match expected values upon startup. Processing interrupt occurred.	The contents of the two NVRAM blocks are compared upon start-up with expected values from shutdown process.	Blocks do not compare	Vehicle moving On Brake	True True Upon Starting Scheduler in the Application	15ms	2 Trips, Type B
EBCM Unimplemented Interrupt	C121E	This fault is set if an interrupt occurs that has no explicit interrupt handler defined.	Interrupt Set = Threshold	Not Defined Interrupt Handler Nominal Range: (N/A)		Upon Starting Scheduler in the Application	6 interrupts	2 Trips Type B
EBCM Unexpected Exception	C121F	This fault is set if an exception that is not supported in our system has been generated.	Exception Not Supported = Condition	N/A Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	2 Trips Type B
EBCM A/D Conversion Timeout	C127D	If the Analog to digital converter does not complete its conversion in a set amount of time then this fault is set.	A/D Conversion Counter = Threshold	0 (Counts down from 100) Nominal Range: (N/A)		Upon Starting Scheduler in the Application	100 clock cycles	1 Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
EBCM Non-Volatile Random Access Memory (NVRAM) / Non-volatile RAM	C12FF	Checksum Error Fault	NVRAM status bit sent out by core software reports a failed NVRAM	NVRAMDiagstat > 0 Fault Counts > 0 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	2 Trips Type B
EBCM Non-Volatile Random Access Memory (NVRAM) / Software Learn ID		Software ID held in NVRAM does not match ID hard coded in software	BB NVRAM SW BLOCK ID ~=Software ID	SwVerIDStat > 0 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	
EBCM High End Timer Performance	C127A	Execution of the High End Timer (HET) program is limited to the actual instructions of the HET program. Execution of default instructions indicates program execution error.	Default Instructions = Threshold	Executed Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	1 Trip, Type A
EBCM High End Timer Program Overflow	C123B	If the HET program does not complete execution time within one HET loop time, the current HET program is aborted and the next program execution is started and a fault code is set.	HET Program Execution Time > Threshold	HET Loop Time Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	1 Trip, Type A
EBCM High End Timer (HET) RAM Fault	C123C	The following tests are continuously ran: 1. Read/write of the micro's HET RAM registers. 2. Address check of the HET RAM address lines. 3. Verify that the HET RAM location used to store the persistent address line test address (offset) advances to the next address line address. 4. Perform data check on a HET RAM address that includes a dependency check against another HET RAM location that is address adjacent to the HET RAM location being tested. 5. Verify that the HET RAM location used to store the persistent data test address advances to the next test address.	If any of the tests fail, the system is forced into a reset by writing an invalid watchdog key to the system registers. If the RAM failure is NOT detected by the bootloader static RAM check algorithm then a fault code is set and the exact type of RAM failure is written to NVRAM.	See Malfunction Criteria Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	1 Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
EBCM High End Timer (HET) Watchdog	C123A	If the HET monitor task is not executed within the allowed time frame, a counter is decremented. When the counter decrements to zero, an interrupt is generated and this fault is set.	Counter = Threshold	0 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	1 Trip, Type A
EBCM High End Timer Periodic Interrupt	C123E	This failsafe verifies that a solenoid feedback interrupt generates a high end timer(HET) interrupt every loop cycle.	Solenoid Feedback Interrupt from the HET = Threshold	Calculated based on Solenoid activity Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	1 Trip, Type A
EBCM Solenoid Timeout	C123D	Each solenoid in the system should generate a HET interrupt. At the completion of the System Self-Test, the number of valid HET interrupts is expected to be equal to the number of solenoids in the system.	Number of Valid HET Interrupts != Number	12 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15ms	1 Trip, Type A

CAN / Communications								
EBCM Internal Communication Error	C121C	The periodic Internal Processor Communication (IPC) packet transmission service checks for previous transmission request completion before the new request is made. If the previous transmission was not completed, then the IPC handler declares an IPC packe	Slave micro has not sent a packet for 3.5 sec	Time Nominal Range: (N/A)	3.5 sec	Upon Starting Scheduler in the Application	15 ms	2 Trips, Type B
		The periodic Internal Processor Communication (IPC) packet transmission service checks for previous transmission request completion before the new request is made. If the previous transmission was not completed, then the IPC handler declares an IPC packe	Secondary micro-processor communication packet does not re-synchronize with expected start-up sequence and with in set time.	Time Nominal Range: (N/A)	100msec	Upon Starting Scheduler in the Application	15 ms	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
EBCM Serial Peripheral Interface Performance	C126F	2 data bytes are sent to the Orion ASIC. The Orion sends back the first byte.	Received Data != Sent Data for Threshold # of attempts	3 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	20 ms	1 Trip, Type A
EBCM Serial Peripheral Interface Inoperative	C123F	Each time data is sent out from the SPI port, a counter is loaded. The counter is decremented each check that the micro polls the SPI status to see if the data transfer is complete. The counter should never reach zero before the data transfer is complete. If the counter reaches zero, it means that the peripheral, NVRAM, appears to be non-functional.	Counter = Threshold	0 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15 ms	1 Trip, Type A
EBCM CAN Hardware Initialization	C12E3	The hardware confirmation timeout condition is monitored every time the CAN driver initialization service is called. The CAN driver init service is called after power up, in Bus Off, or in transmit acknowledgement recovery. The number of counts the CAN driver is allowed to wait for hardware confirmation is 11. If the confirmation is not received by this number then the fault is set.	# of initialization attempts > threshold	11		Upon Starting Scheduler in the Application	15 ms	2 Trips, Type B
Control Module Communication Bus B Off	U180F	The CAN peripheral monitors CAN bus activity and increments an error counter if the following errors are present: 1) BIT ERROR: If the bit sent does not match what was expected to be sent, increment the counter. 2) STUFF ERROR: This error has to be detected at the bit time of the 6th consecutive equal bit level	CAN Hardware Transmit Error Counter > Threshold	256 Nominal Range: (N/A)		Upon Starting Scheduler in the Application	15 ms	2 Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		<p>in a message field that should be coded by the method of bit stuffing.</p> <p>3) CRC ERROR: This error is detected if the calculated result of the receiver is not the same as that received from the transmitter.</p> <p>4) FORM ERROR: This error is detected when a fixed-form bit field contains one or more illegal bits.</p> <p>5) ACKNOWLEDGMENT ERROR: This error is detected by a transmitter whenever it does not monitor a dominant bit during the ACK SLOT. If the transmit error counter or receive error counter reach a value of 256 this fault is set.</p>						
EBCM Communication Bus "B" RAM Error	C126D	The first CAN device does not pass RAM check on the mailbox area. The CAN mailbox RAM check is executed once after power up or reset of the microprocessor.	RAM Read value != RAM Written value	0 Nominal Range: (N/A)		Executed once upon startup	15 ms	2 Trips, Type B
EBCM Communication Bus "B" Performance	C126C	The CAN frame does not receive acknowledgement for predefined amount of time. If this fault is enabled in the node supervisor then transmit confirmation is expected within 200 ms. Transmit request sets the timeout timer and successful transmission resets the timeout timer.	CAN Frame acknowledgement not received	Not Received Nominal Range: (N/A)		Upon Starting Scheduler in the Application	200ms	2 Trips, Type B
Antilock Brake System Control Module Lost Communication With Hybrid Powertrain Control Module on Bus B	U1843	PRIV_REGEN_BRAKING_STAT Communication message is missing.	The specified input packet with consistent data was not received by COMMS for a predefined time. Every periodic input packet is monitored for input deadline timeout. The deadline timeout is reset each time new packet data is received. The deadline timeout is either set in DBC file or during the configuration of the COMMS subsystem.	Nominal Range: (N/A)		Upon Starting Scheduler in the Application	190msec	2 Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		PRIV_EST_REGEN_TORQ_ARC	Out of the 16 received frames, 4 ARC values do not match the calculated values.	Nominal Range: (N/A)		Upon Starting Scheduler in the Application	190msec	
		PRIV_EST_REGEN_TORQ_PROT	Out of the 16 received frames, 4 protection values do not match the calculated values.	Nominal Range: (N/A)		Upon Starting Scheduler in the Application	190msec	
Antilock Brake System Control Module Lost Communication With Engine Control Module on Bus B	U1842	ENGINE_HYBRID_STAT_1 Communication message is missing.	The specified input packet with consistent data was not received by COMMS for a predefined time. Every periodic input packet is monitored for input deadline timeout. The deadline timeout is reset each time new packet data is received. The deadline timeout is either set in DBC file or during the configuration of the COMMS subsystem.	Nominal Range: (N/A)		Upon Starting Scheduler in the Application	190msec	2 Trips, Type B
		MISSING_ETEI_AXLE_TORQ_CMD_STAT Communication message is missing.	The specified input packet with consistent data was not received by COMMS for a predefined time. Every periodic input packet is monitored for input deadline timeout. The deadline timeout is reset each time new packet data is received. The deadline timeout is either set in DBC file or during the configuration of the COMMS subsystem.	Nominal Range: (N/A)		Upon Starting Scheduler in the Application	190msec	
		ETEI_AXLE_TORQUE_CMD_ARC_FAULT	Out of the 16 received frames, 4 ARC values do not match the calculated values.	Nominal Range: (N/A)		Upon Starting Scheduler in the Application	190msec	

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		ETEI_AXLE_TORQUE_CMD_PR OT_ERR	Out of the 16 received frames, 4 protection values do not match the calculated values.	Nominal Range: (N/A)		Upon Starting Scheduler in the Application	190msec	
Antilock Brake System Control Module Lost Communication With Engine Control Module	U186A	PPEI_TRANSFER_CASE_STAT Communication message is missing.	The specified input packet with consistent data was not received by COMMS for a predefined time. Every periodic input packet is monitored for input deadline timeout. The deadline timeout is reset each time new packet data is received. The deadline timeout is either set in DBC file or during the configuration of the COMMS subsystem.	Nominal Range: (N/A)		Upon Starting Scheduler in the Application	140msec	2 Trips, Type B
Antilock Brake System Control Module Lost Communication With Transmission Control Module	U186B	PPEI_TRANS_GEN_STAT_2 Communication message is missing.	The specified input packet with consistent data was not received by COMMS for a predefined time. Every periodic input packet is monitored for input deadline timeout. The deadline timeout is reset each time new packet data is received. The deadline timeout is either set in DBC file or during the configuration of the COMMS subsystem.	Nominal Range: (N/A)		Upon Starting Scheduler in the Application	175msec	2 Trips, Type B

Note #1 - Processing_Enable is set to FALSE when the following DTCs are set to 'Fault': C1255, C1256, C126E, C123C, C127C

Note #2 - Brake Pedal Apply Detected is the determination that the driver has applied the brake pedal. It is a combination of indications from the 4 driver inputs: Brake Switch, Master Cylinder Pressure, Brake Pedal Position 3 and Brake Pedal Position 4. Typically, 2 out of 4 sensors indicating Brake Apply will set the Brake Pedal Apply Detected flag.

Note #3 - Pressure Zeroing Enable. When the vehicle is in a known state that the driver brake pedal should be released, the Pressure Zeroing Enable is set. Typical vehicle conditions are:
 1) There is no vehicle brake control active
 2) Vehicle acceleration > -0.5m/s² (not decelerating)
 3) Vehicle velocity > 2.0m/s
 4) Accelerator pedal position < 10%
 5) Brake switch is not pressed

Note #4 - See Correlation Table below

Note #5 - M/C Pressure Sensor stable is a comparison of the raw M/C pressure reading against 2 filtered versions of the reading (0.5 Hz and 5 Hz.) If all 3 values are within a small tolerance (7 kpa) then the driver's input is considered stable.

Note #6 - Brake Control is considered 'False' when there is no activity being performed by the hydraulic modulator - no wheel control valves are being commanded and the motor is not being commanded.


Note #7 - Power Switch Slip Control Enable is used to open the power control FET in the electronics as a safety mechanism for the brake controller. It is set to FALSE when the following DTCs are set to 'Fault': C12C2, C12C5, C12D2, C12D5, C12CC, C12CF, C12C6, C12C8, C12DE, C12D8, C12D2, C1256, C1255, C126E, C123C, C127C, C121E, C121F, C120D, C127B

Note #8 - Power Switch Base Brake Control Enable is used to open the Base Brake power control FET in the electronics as a safety mechanism for the brake controller. It is set to FALSE when the following DTCs are set to 'Fault': C12DB, C12DC, C12D8, C12D3, C1256, C1255, C126E, C123C, C127C, C121E, C121F, C12E6, C127B

Note #9 - Motor_Enable is used to indicate when the motor is allowed to be commanded on. Motor_Enable is set to FALSE when the following DTCs are set to 'Fault': C12B7, C12B6, C12B8, C12D8, C12DB, C12DC, C12E9, C12E8, C1256, C1255, C126E, C123C, C123E, C123A, C127A, C123B, C127C, C121E, C121F, C123D, C126F, C121C, C120C, C12E6, C12E7, C127B

Note #10 - Cornering determination is a comparison of the 4 wheel speeds to estimate the percentage of road wheel angle of the drive wheels relative to their full amount of articulation. Wheel slip is the calculated ratio of individual wheel velocities to the calculated average vehicle velocity. Vehicle velocity is calculated from the 4 wheel speed sensors.

Note 4:
Correlation Table

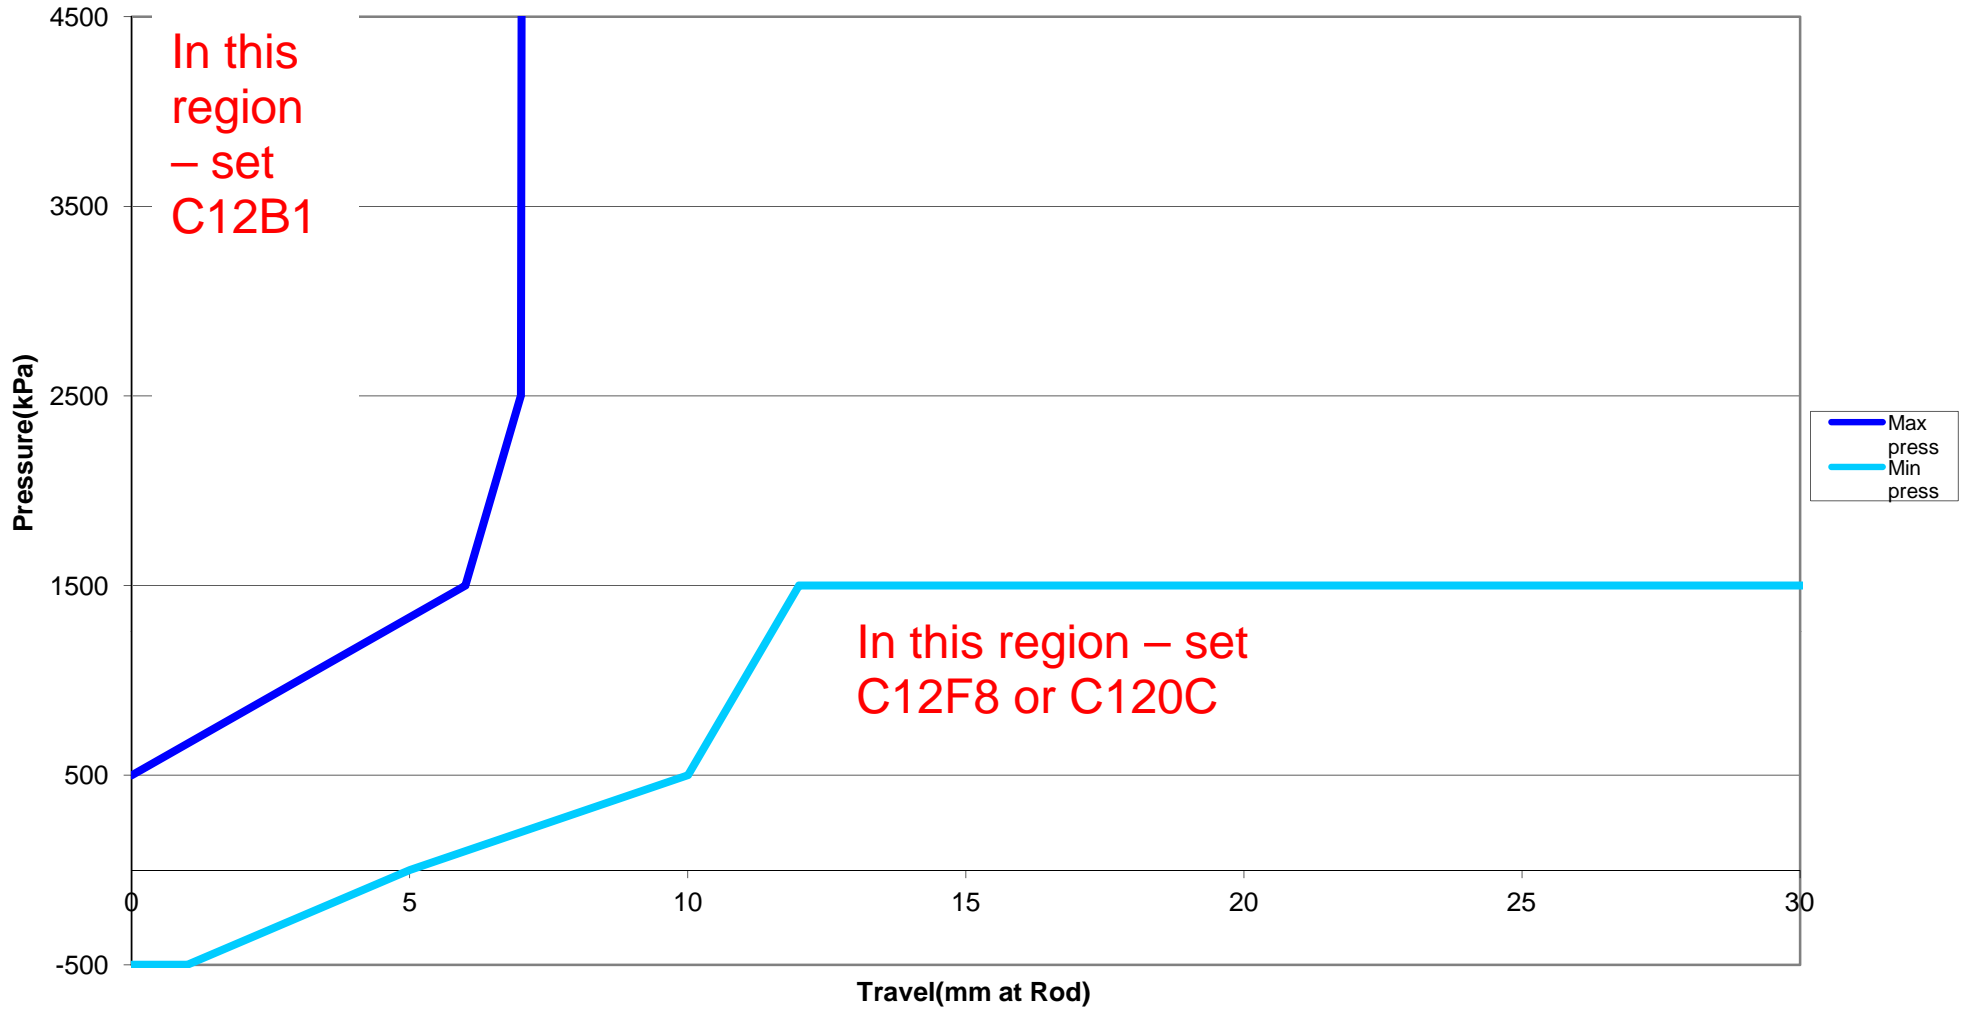

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Fuel Rail Pressure (FRP) Sensor Performance (rationality)	P018B	This DTC detects a fuel pressure sensor response stuck within the normal operating range	Absolute value of change in fuel pressure as sensed during intrusive test.	<= 30 kPa	1. FRP Circuit Low DTC (P018C) 2. FRP Circuit High DTC (P018D) 3. FuelPump Circuit Low DTC (P0231) 4. FuelPump Circuit High DTC (P0232) 5. FuelPump Circuit Open DTC (P023F) 6. Reference Voltage DTC (P0641) 7. Fuel Pump Control Module Driver Over-temperature DTC's (P064A, P1255) 8. Control Module Internal Performance DTC (P0606) 9. Engine run time 10. Emissions fuel level (PPEI \$3FB) AND Engine Run Time	not active not active not active not active not active not active not active not active >=5 seconds not low not low > 30 sec	Frequency: Continuous; 12.5 ms loop. 60 seconds between intrusive tests that pass Intrusive test requested if fuel system is clamped for >= 5 seconds or fuel pressure error variance <= typically (0.3 to 0.6) (calculated over a 2.5sec period); otherwise report pass Duration of intrusive test is fueling related (5 to 12 seconds). Intrusive test is run when fuel flow is below Max allowed fuel flow rate (Typical values in the range of 11 to 50 g/s)	1 Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					11. Fuel pump control 12. Fuel pump control state 13. Engine fuel flow 14. ECM fuel control system failure (PPEI \$1ED)	enabled normal or FRP Rationality control > 0.047 g/s failure has not occurred		
Fuel Rail Pressure (FRP) Sensor Circuit Low Voltage	P018C	This DTC detects if the fuel pressure sensor circuit is shorted to low	FRP sensor voltage	< 0.14 V	Ignition	Run or Crank	72 failures out of 80 samples 1 sample/ 12.5 ms	1 Trip, Type A
Fuel Rail Pressure (FRP) Sensor Circuit High Voltage	P018D	This DTC detects if the fuel pressure sensor circuit is shorted to high	FRP sensor voltage	> 4.86 V	Ignition	Run or Crank	72 failures out of 80 samples 1 sample/ 12.5 ms	1 Trip, Type A
Fuel Pump Control Circuit Low Voltage	P0231	This DTC detects if the fuel pump control circuit is shorted to low	Fuel Pump Current	> 14.48A	Ignition OR HS Comm OR Fuel Pump Control AND Ignition Run/Crank Voltage	Run or Crank enabled enabled 9V < voltage < 32V	72 test failures in 80 test samples if Fuel Pump Current <100A 3 test failures in 15 test samples if Fuel Pump Current >=100A 1 sample/ 12.5 ms	1 Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Fuel Pump Control Circuit High Voltage	P0232	This DTC detects if the fuel pump control circuit is shorted to high	Voltage measured at fuel pump circuit	> 3.86 V	Commanded fuel pump output Fuel pump control enable Time that above conditions are met	0% duty cycle (off) False >=4.0 seconds	36 test failures in 40 test samples; 1 sample/ 12.5ms Pass/Fail determination made only once per trip EXCEPT Hybrid vehicles in AutoStop mode. In Hybrid AutoStop, operation is continuous.	1 Trip, Type A
Fuel Pump Control Circuit (Open)	P023F	This DTC detects if the fuel pump control circuit is open	Fuel Pump Current AND Fuel Pump Duty Cycle	<=0.5A □ > 20%	Ignition OR HS Comm OR Fuel Pump Control AND Ignition Run/Crank voltage	Run or Crank Enabled Enabled 9V <voltage< 32V	72 test failures in 80 test samples; 1 sample/ 12.5ms	1 Trip, Type A
Fuel System Control Module Enable Control Circuit	P025A	This DTC detects if there is a fault in the fuel pump control enable circuit	PPEI (PPEI (Powertrain Platform Electrical Interface) Fuel System Request (\$1ED)	≠ Fuel Pump Control Module Enable Control Circuit	Ignition AND PPEI Fuel System Request (\$1ED)	Run or Crank Valid	72 failures out of 80 samples 1 sample/ 12.5 ms	1 Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Control Module Read Only Memory (ROM)	P0601	This DTC will be stored if any software or calibration check sum is incorrect	Calculated Checksum (CRC16)	≠ stored checksum for any of the parts (boot, software, application calibration, system calibration)	Ignition OR HS Comm OR Fuel Pump Control	Run or Crank enabled enabled	1 failure if it occurs during the first ROM test of the ignition cycle, otherwise 5 failures Frequency: Runs continuously in the background	1 Trip, Type A
Control Module Not Programmed	P0602	Indicates that the FSCM needs to be programmed	This DTC is set via calibration, when KeMEMD_b_NoStartCal	TRUE	Ignition OR HS Comm OR Fuel Pump Control	Run or Crank enabled enabled	Runs once at power up	1 Trip, Type A
Control Module Long Term Memory Reset	P0603	Non-volatile memory checksum error at controller power-up	Checksum at power-up	≠ checksum at power-down	Ignition OR HS Comm OR Fuel Pump Control	Run or Crank enabled enabled	1 failure Frequency: Once at power-up	1 Trip, Type A
Control Module Random Access Memory (RAM)	P0604	Indicates that control module is unable to correctly write and read data to and from RAM	Data read	≠ Data written	Ignition OR HS Comm OR Fuel Pump Control	Run or Crank enabled enabled	1 failure if it occurs during the first RAM test of the ignition cycle, otherwise 5 failures Frequency: Runs continuously in the background.	1 Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Control Module Internal Performance 1. Main Processor Configuration Register Test 2. Processor clock test 3. External watchdog test	P0606	This DTC indicates the FSCM has detected an internal processor fault or external watchdog fault (PID 2032 can tell what causes the fault.)	1. For all I/O configuration register faults: •Register contents 2. For Processor Clock Fault: •EE latch flag in EEPROM. OR • RAM latch flag. 3. For External Watchdog Fault: • Software control of fuel pump driver	Incorrect value. 0x5A5A 0x5A Control Lost	Ignition OR HS Comm OR Fuel Pump Control 1. For all I/O configuration register faults: •KeMEMD_b_ProcFitCfgRegEnbl 2. For Processor Clock Fault: •KeMEMD_b_ProcFitCLKDiagEnbl 3. For External Watchdog Fault: •KeFRPD_b_FPExtWDogDiagEnbl 3. For External Watchdog Fault: •Control Module ROM(P0601) 3. For External Watchdog Fault:	Run or Crank enabled enabled TRUE TRUE TRUE not active	Tests 1 and 2: 1 Failure Frequency: Continuously (12.5ms) Test 3 3 failures out of 15 samples 1 sample/ 12.5 ms	1 Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					•Control Module RAM(P0604)	not active		
Control Module Long Term Memory (EEPROM) Performance	P062F	Indicates that the NVM Error flag has not been cleared	Last EEPROM write	Did not complete	Ignition OR HS Comm OR Fuel Pump Control	Run or Crank enabled enabled	1 test failure Once on controller power-up	1 Trip, Type A
5Volt Reference Circuit (Short High/Low/Out of Range)	P0641	Detects continuous short or out of range on the #1 5V sensor reference circuit	Reference voltage AND Output OR Reference voltage AND Output OR Reference voltage AND Output OR Reference voltage □	>= 0.5V inactive >= 5.5V active <= 4.5V active > 102.5% nominal (i.e., 5.125V) OR <97.5% nominal (i.e., 4.875V)	Ignition	Run or Crank	15 failures out of 20 samples 1 sample/ 12.5 ms	1 Trip, Type A
Fuel Pump Control Module - Driver Over-temperature 1	P064A	This DTC detects if an internal fuel pump driver overtemperature condition exists under normal operating conditions (Tier 1 supplier Continental responsibility)	Module Range of Operation	1. Module is within Acceptable Operation Range (Motorola's responsibility - FSCM is in normal operating range for module voltage versus PWM duty cycle. Linear range from 100% @ 12.5V to 70% @ 18V.)	Ignition OR HS Comm OR Fuel Pump Control AND Ignition Run / Crank OR HS Comm OR	Run or Crank Enabled	3 failures out of 15 samples 1 sample/ 12.5 ms	2 Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			<p>AND</p> <p>Fuel pump driver Temp</p>	> 190C	<p>Fuel Pump Control</p> <p>AND</p> <p>Ignition Run / Crank</p> <p>KeFRPD_b_FPOverTempDiagEnbl</p>	<p>Enabled</p> <p>9V<voltage<32V</p> <p>TRUE</p>		
Fuel Pump Control Module - Driver Over-temperature 2	P1255	This DTC detects if an internal fuel pump driver overtemperature condition exists under extreme operating conditions (GM's responsibility)	<p>Module Range of Operation</p> <p>AND</p> <p>Fuel pump driver Temp</p>	<p>Outside normal range (FSCM is NOT in normal operating range for module voltage versus PWM duty cycle. Linear range from 100% @ 12.5V to 70% @ 18V.)</p> <p>> 190C</p>	<p>Ignition</p> <p>OR</p> <p>HS Comm</p> <p>OR</p> <p>Fuel Pump Control</p> <p>AND</p> <p>Ignition Run / Crank</p> <p>KeFRPD_b_FPOverTempDiagEnbl</p>	<p>Run or Crank</p> <p>Enabled</p> <p>Enabled</p> <p>9V<voltage<32V</p> <p>TRUE</p>	<p>3 failures out of 15 samples</p> <p>1 sample/ 12.5 ms</p>	2 Trips, Type B
Ignition 1 Switch Circuit Low Voltage	P2534	This DTC detects if the Ignition1 Switch circuit is shorted to low or open	Ignition 1 voltage	<= 6 V	Engine	Running	<p>180 failures out of 200 samples</p> <p>1 sample/ 25.0 ms</p>	1 Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Fuel Pump Flow Performance (rationality)	P2635	This DTC detects degradation in the performance of the SIDI electronic return-less fuel system	Filtered fuel rail pressure error	<= Low Threshold (function of desired fuel rail pressure and fuel flow rate. 15% of resultant Target Pressure) OR >= High Threshold (function of desired fuel rail pressure and fuel flow rate. 15% of resultant Target Pressure) (Supporting Tables available)	1. FRP Circuit Low DTC (P018C) 2. FRP Circuit High DTC (P018D) 3. Fuel Pressure Sensor Performance DTC (P018B) 4. FuelPump Circuit Low DTC (P0231) 5. FuelPump Circuit High DTC (P0232) 6. FuelPump Circuit Open DTC (P023F) 7. Reference Voltage DTC (P0641) 8. Fuel Pump Control Module Driver Over-temperature DTC's (P064A, P1255) 9. Control Module Internal Performance DTC (P0606) 10. An ECM fuel control system failure (PPEI \$1ED) 11. The Barometric pressure (PPEI \$4C1) signal	not active not active not active not active not active not active not active has not occurred valid (for absolute fuel pressure sensor)	Filtered fuel rail pressure error Time Constant = 12.5 seconds Frequency: Continuous 12.5 ms loop	2 Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					12. Engine run time 13. Emissions fuel level (PPEI \$3FB) AND Engine Run Time 14. Fuel pump control 15. Fuel pump control state 16. Battery Voltage 17. Fuel flow rate (Supporting Tables Available) 18. Fuel Pressure Control System	>= 30 seconds not low > 30 sec enabled normal 11V<=voltage=<32V > 0.047 g/s AND <= Max allowed fuel flow rate as a function of desired rail pressure & Vbatt (Typical values in the range of 11 to 50 g/s) Is not responding to an over-pressurization due to pressure build during DFCO or a decreasing desired pressure command.		
Control Module Communication Bus "A" Off	U0073	Detects that a CAN serial data bus shorted condition has occurred to force the CAN device driver to enter a bus-off state	Bus Status	Off	Power mode	Run/Crank	5 failures out of 5 samples (5 seconds)	2 Trips, Type B
Lost Communication With ECM/PCM "A"	U0100	Detects that CAN serial data communication has been lost with the ECM	Message \$0C9	Undetected	1. Power mode 2. Ignition Run/Crank Voltage 3. U0073	Run/Crank 11V<=voltage=<32V not active	12 failures out of 12 samples (12 seconds)	2 Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
MCPA Phase Current Diagnostics								
Drive Motor "A" Phase U-V-W Correlation	P0BFD	To detect electrical failure of phase current sensor.	Sum of 3 phase currents	>110 A	Main Relay Wakeup Signal	Closed On	X: 160 cts Y: 190 cts R: 0.083 - 0.5 ms T: 13.28 - 80 ms	One Trip, Type A
Drive Motor "A" Phase U-V-W Current Sensor Overcurrent	P0C01	Fail Case 1: To detect fast, repeated 3 Phase over currents and to protect IGBT.	U, V, or W Phase current sensor	> 600 A	Wakeup Signal	On	X: 2 cts Y: 10 cts R: 2.08 ms T: 2.08 ms	One Trip, Type A
		Fail Case 2: To detect slow, intermittent 3 Phase over currents and to protect IGBT.					X: 5 cts Y: 50 cts R: 2.08 ms T: 8.32 ms	
Drive Motor "A" Phase U-V-W Circuit/Open	P0C05	Drive Motor "A" Missing Motor Current checks for minimum current in each phase when rotor position is near that peak's phase axis. Each phase is checked individually as rotor turns.	Two Non-Peak Phase Sensors are BOTH AND THEN Peak Phase Axis Current	> ABS (9 A) < ABS (9 A)	Inverter State Inverter Voltage Rotor Position Peak Phase Current	RUN > 35 V -30 deg < Phase Axis < +30 deg >= 23 A	2 Task1 Loops delay = 4.2 ms PLUS X: 201 cts Y: N/A R: 0.083 - 0.5 ms T: 16.7 - 101 ms = 20.8 - 104.7 ms TOTAL	One Trip, Type A
Drive Motor "A" Phase U Current Sensor Circuit Low	P0BE7	Circuit Low monitor to detect the failure of U-phase current sensor circuit below valid range	U Phase current sensor output at highside	< -700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Two Trips, Type B
Drive Motor "A" Phase U Current Sensor Circuit High	P0BE8	Circuit High monitor to detect the failure of U-phase current sensor circuit above valid range	U Phase current sensor output at highside	> 700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "A" Phase U Current Sensor Offset Out-of Range	P0BE6	Offset Circuit monitor to detect the failure of U-phase offset current above valid range	U Phase offset current output at highside	>30 A	Wakeup Signal Power Stage P0BE7/P0BE8	On OPEN NOT ACTIVE	X: 100 cts Y: N/A R: 2.08ms T: 208ms	Two Trips, Type B
Drive Motor "A" Phase V Current Sensor Circuit Low	P0BEB	Circuit Low monitor to detect the failure of V-phase current sensor circuit below valid range	V Phase current sensor output at highside	< -700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Two Trips, Type B
Drive Motor "A" Phase V Current Sensor Circuit High	P0BEC	Circuit High monitor to detect the failure of V-phase current sensor circuit above valid range	V Phase current sensor output at highside	> 700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Two Trips, Type B
Drive Motor "A" Phase V Current Sensor Offset Out-of Range	P0BEA	Offset Circuit monitor to detect the failure of U-phase offset current above valid range	V Phase offset current output at highside	>30 A	Wakeup Signal Power Stage P0BEB/P0BEC	On OPEN NOT ACTIVE	X: 100 cts Y: N/A R: 2.08ms T: 208ms	Two Trips, Type B
Drive Motor "A" Phase W Current Sensor Circuit Low	P0BEF	Circuit Low monitor to detect the failure of W-phase current sensor circuit below valid range	W Phase current sensor output at highside	< -700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Two Trips, Type B
Drive Motor "A" Phase W Current Sensor Circuit High	P0BF0	Circuit High monitor to detect the failure of W-phase current sensor circuit above valid range	W Phase current sensor output at highside	> 700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Two Trips, Type B
Drive Motor "A" Phase W Current Sensor Offset Out-of Range	P0BEE	Offset Circuit monitor to detect the failure of U-phase offset current above valid range	W Phase offset current output at highside	>30 A	Wakeup Signal Power Stage P0BEF/P0BF0	On OPEN NOT ACTIVE	X: 100 cts Y: N/A R: 2.08ms T: 208ms	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
MCP A IGBT Diagnostics								
Drive Motor "A" Inverter Performance	P0A78	Detects IGBT Desaturation Faults	Phase A, B, or C High or Low Side Devices	OVERDRIVEN (Status Fault Bit)	Wakeup Signal	On	X: 1 ct Y: N/A R: 2.08ms T: 2.08ms	One Trip, Type A
Drive Motor "A" Inverter Power Supply Circuit/Open	P0C0B	Detects IGBT Bias Faults	Phase A, B, or C Power Supply	FAILED (Status Fault Bit)	Inverter State Run/Crank Voltage OR Powertrain Relay Voltage	Initialization Complete > 9.5 Volts OR < 18 Volts	X: 1 ct Y: N/A R: 2.08ms T: 2.08ms	One Trip, Type A
MCP A High Voltage (HV) Diagnostics								
Drive Motor "A" Hybrid Battery System Voltage High	P1AEE	To detect over voltage and to protect TPIM Vdc Circuit	HV Sensor Voltage	> 450V	WakeUp Signal	On	X: 5 cts Y: N/A R: 0.083 - 0.5 ms T: 0.42 - 2.50 ms	One Trip, Type A
Drive Motor "A" Control Module Hybrid Battery Voltage Sense Circuit Low Voltage	P1AE8	Circuit Low monitor to detect the failure of HV output voltage sensor circuit below valid range	HV Sensor Voltage	<0V	Inverter State	Initialization Complete	X: 70 cts Y: 100 cts R: 2.08ms T: 146ms	Two Trips, Type B
Drive Motor "A" Control Module Hybrid Battery Voltage Sense Circuit High Voltage	P1AE9	Circuit High monitor to detect the failure of HV output voltage sensor circuit above valid range	HV Sensor Voltage	>500 V	Inverter State	Initialization Complete	X: 50 cts Y: 100 cts R: 2.08ms T: 104ms	Two Trips, Type B
Drive Motor "A" Control Module Hybrid Battery System Voltage	P1AEC	To check correlation of HV_MCP with HV_Midpack and HV_Battery Voltages.	ABS(MCP HV voltage - HV Battery voltage) AND ABS(MCP HV voltage - MidPack voltage)	>= 34 V >= 90 V	WakeUp Signal	On	X: 18 cts Y: 30 cts R: 10.4ms T: 187ms	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "A" HV Interlock (HVIL) Break Detected	P1B05	To detect interlock circuit open or shorted	Raw HVIL Voltage	< 1 V OR > 3 V	WakeUp Signal HV CAN Msg Rx BPCM Sourcing MCP HVIL Status	On TRUE TRUE	250ms debounce time PLUS X: 10 cts Y: 14 cts R: 10.4ms T: 104ms= 354 ms total	Special Type C
Drive Motor "A" Control Module Hybrid Battery Voltage System Isolation Fault	P1AF0	Isolation Lost between Battery Pack and Chassis	Isolation Ratio (MidPack Voltage / HV Battery Voltage)	< 0.27 OR >1.80	HV Sensor Voltage No HV Clamp Fault or MidPack Sensor OOR Faults: P1AEE, P1AF4, and P1AF5	> 50V NOT ACTIVE	X: 450 cts Y: 500 cts R: 10.4ms T: 4689ms	Special Type C
Drive Motor "A" Control Module Hybrid Battery Voltage Isolation Sensor Circuit Low	P1AF4	Circuit Low monitor to detect the failure of HV MidPack voltage sensor circuit below valid range	MidPack Voltage	<0V	Inverter State	Initialization Complete	X: 70 cts Y: 100 cts R: 10.4ms T: 729ms	Two Trips, Type B
Drive Motor "A" Control Module Hybrid Battery Voltage Isolation Sensor Circuit High	P1AF5	Circuit High monitor to detect the failure of HV MidPack voltage sensor circuit above valid range	MidPack Voltage	>500 V	Inverter State	Initialization Complete	X: 50 cts Y: 100 cts R: 10.4ms T: 521ms	Two Trips, Type B
Motor A Temperature Sensor Diagnostics								
Drive Motor "A" Control Module Temperature Sensor Performance	P0A2B	Motor A Temperature Sensor In-Range Rationality Check	ABS(Motor Temp - PIM Temp Avg)	> 28 deg C	Ignition Off Time PIM Temp Average Motor Temp	>=360 min >=-40 deg C >=-40 deg C	8336ms Start Delay PLUS X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					No PIM or Motor Temp OOR Faults: P0AEF, P0AF0, P0BD3, P0BD4, P0BDD, P0BDE, P0A2C and P0A2D	NOT ACTIVE	=10.94 sec total	
Drive Motor "A" Control Module Temperature Sensor Circuit Out of Range High	P0A2D	To detect temperature sensor Out of Range high (voltage).	Motor Temperature	< -40 deg C (near 5V)	Wakeup Signal When malfunction present at start of trip: Cumulative Motor Warmup Time at or above Motor Warmup Torque Threshold	On >=1.5min >=ABS(20 Nm)	X: 900 cts Y:1800cts R: 10.4ms T: 9378ms	Two Trips, Type B
Drive Motor "A" Control Module Temperature Sensor Circuit Out of Range Low	P0A2C	To detect temperature sensor Out of Range low (voltage).	Motor Temperature	> 230 degC (near 0V)	WakeUp Signal	On	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Two Trips, Type B
Drive Motor "A" Over Temperature	P0A2F	To detect a sustained motor overtemperature condition	Motor Temperature exceeds initial fault threshold AND Does not decrease below reset threshold	> 200 deg C initial fault >135 deg C reset	Motor Temperature No Temp Performance Fault; P0A2B	IN RANGE NOT ACTIVE	X: 300 cts Y: 450 cts R: 10.4ms T: 3125ms	Two Trips, Type B
SPI / SCI Bus Timeout Diagnostics								
Drive Motor "A" Control Module Lost Communication With SPI Bus	P1AFC	To detect loss of communication on the SPI bus with the HCP module	SPI Receive Timeout flag	TRUE	Inverter State Run/Crank Voltage OR Powertrain Relay Voltage	Run > 9.5 Volts OR < 18 Volts	X: 241 cts Y: N/A R:10.42ms T: 2510ms	One Trip, Type A
Drive Motor "A" Control Module Lost Communication With SCI Bus	P1AFD	To detect loss of communication on the SCI bus with Motor "B" Control Module SCI Diag Timeout	SCI_Rx_Timeout	TRUE	Wakeup Signal	On	X: 200 cts Y: 300 cts R: 10.4ms T: 2083ms	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Motor Control Processor Voltage Diagnostics								
Sensor Reference Voltage "A" Circuit Low	P0642	Detects Sensor Voltage (5V) below an acceptable threshold.	Scaled 5V Supply Voltage	< 4.80V	Wakeup Signal Run/Crank Voltage OR Powertrain Relay Voltage	On > 9.5 Volts OR < 18 Volts	X: 70 cts Y: 100 cts R: 10.4ms T: 729ms	One Trip, Type A
Sensor Reference Voltage "A" Circuit High	P0643	Detects Sensor Voltage (5V) above an acceptable threshold.	Scaled 5V Supply Voltage	> 5.20V	Wakeup Signal	On	X: 70 cts Y: 100 cts R: 10.4ms T: 729ms	One Trip, Type A
Sensor Power Supply "A" Circuit Low	P06B1	Detects Sensor Power Supply (15V) below an acceptable threshold.	Scaled 15V Supply Voltage	< 12.0V	Wakeup Signal	On	X: 35 cts Y: 150 cts R: 10.4ms T: 365ms	Two Trips, Type B
Sensor Power Supply "A" Circuit High	P06B2	Detects Sensor Power Supply (15V) above an acceptable threshold.	Scaled 15V Supply Voltage	> 18.0V	Wakeup Signal	On	X: 100 cts Y: 150 cts R: 10.4ms T: 1042ms	Two Trips, Type B
Control Module Power Supply "A" Circuit Low	P1ADE	Detects Control Module Power Supply (12V) below an acceptable threshold.	Scaled 12V Supply Voltage	< 7.7V	Wakeup Signal	On	X: 35 cts Y: 50 cts R: 10.4ms T: 365ms	Special Type C
MCP A Controller Fault Diagnostics								
Drive Motor "A" Control Module Internal Performance	P0A1B	ALU calculation error, Register Overflow, or Watchdog Timer Fault	ALU HWIO Fault OR Stack Address Overrun OR EEPROM not completely written at Powerdown (Watchdog timer fault)	TRUE TRUE	For all: Wakeup Signal For Watchdog Fault Only: No power-on reset, stack overflow, or low 12V interrupt conditions	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	One Trip, Type A
Drive Motor "A" Control Module Random Access Memory (RAM)	P1A50	To detect an error in the MCPA RAM write area.	RAM check value	Outside RAM Address Range	Wakeup Signal	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "A" Control Module Read Only Memory (ROM)	P1A51	To detect an error in the MCP A ROM using a checksum calculation	FlashCellError	TRUE	Wakeup Signal	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	One Trip, Type A
Drive Motor "A" Control Module EEPROM Error	P1ADC	Detects mismatch between Flash and EEPROM Power Off Levels	EEpromCellStatus	TRUE	Wakeup Signal	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	One Trip, Type A
Drive Motor "A" Control Module Programmable Logic Device Not Programmed	P1AFA	Detects if PLD was not successfully programmed during initialization	PLDFault	TRUE	Wakeup Signal	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	One Trip, Type A
MCPA Not Program'd Diagnostic								
Drive Motor "A" Control Module Not Programmed	P1A4F	Drive Motor "A" Control Module Programmed with Test Code, or Motor B calibration (via Cal ID)	Calibration contains Test code identifier OR Motor B Identifier	TRUE		Always	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	One Trip, Type A
Motor A Inverter Temperature Sensor Diagnostics								
Drive Motor Inverter Temperature Sensor A Circuit Range/Performance	P0AEE	Inverter A Temperature Sensor #1 In-Range Rationality Check	ABS(PIM Temp 0 - PIM Temp Avg)	>15 deg C	Ignition Off Time PIM Temp Average Motor Temp No PIM or Motor Temp OOR Faults; P0AEF, P0AF0, P0BD3, P0BD4, P0BDD, P0BDE, P0A2C and P0A2D	>=360 min >=-40 deg C >=-40 deg C NOT ACTIVE	8336ms Start Delay PLUS X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Two Trips, Type B
Drive Motor Inverter Temperature Sensor A Circuit High	P0AF0	To detect Inverter A Temperature Sensor #1 Out of Range high (voltage)	PIM Temp 0 Temperature	< -40 deg C (near 5V)	Wakeup Signal When malfunction present at start of trip: Cumulative Inverter Warmup Time	ON	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
					at or above Inverter Warmup Torque Threshold	>=1.5min >=ABS(20 Nm)		
Drive Motor Inverter Temperature Sensor A Circuit Low	P0AEF	To detect Inverter A Temperature Sensor #1 Out of Range low (voltage)	PIM Temp 0 Temperature	> 125 degC (near 0V)	WakeUp Signal	On	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Two Trips, Type B
Drive Motor Inverter Temperature Sensor C Circuit Range/Performance	P0BD2	Inverter A Temperature Sensor #2 In-Range Rationality Check	ABS(PIM Temp 1 - PIM Temp Avg)	>15 deg C	Ignition Off Time PIM Temp Average Motor Temp No PIM or Motor Temp OOR Faults; P0AEF, P0AF0, P0BD3, P0BD4, P0BDD, P0BDE, P0A2C and P0A2D	>=360 min >=-40 deg C >=-40 deg C NOT ACTIVE	8336ms Start Delay PLUS X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Two Trips, Type B
Drive Motor Inverter Temperature Sensor C Circuit High	P0BD4	To detect Inverter A Temperature Sensor #2 Out of Range high (voltage)	PIM Temp 1 Temperature	< -40 deg C (near 5V)	WakeUp Signal When malfunction present at start of trip: Cumulative Inverter Warmup Time at or above Inverter Warmup Torque Threshold	ON >=1.5min >=ABS(20 Nm)	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Two Trips, Type B
Drive Motor Inverter Temperature Sensor C Circuit Low	P0BD3	To detect Inverter A Temperature Sensor #2 Out of Range low (voltage)	PIM Temp 1 Temperature	> 125 degC (near 0V)	WakeUp Signal	On	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor Inverter Temperature Sensor E Circuit Range/Performance	P0BDC	Inverter A Temperature Sensor #3 In-Range Rationality Check	ABS(PIM Temp 2 - PIM Temp Avg)	>15 deg C	Ignition Off Time PIM Temp Average Motor Temp No PIM or Motor Temp OOR Faults; P0AEF, P0AF0, P0BD3, P0BD4, P0BDD, P0BDE, P0A2C and P0A2D.	>=360 min >=-40 deg C >=-40 deg C NOT ACTIVE	8336ms Start Delay PLUS X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Two Trips, Type B
Drive Motor Inverter Temperature Sensor E Circuit High	P0BDE	To detect Inverter A Temperature Sensor #3 Out of Range high (voltage).	PIM Temp 2 Temperature	< -40 deg C (near 5V)	WakeUp Signal When malfunction present at start of trip: Cumulative Inverter Warmup Time at or above Inverter Warmup Torque Threshold	ON >=1.5min >=ABS(20 Nm)	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Two Trips, Type B
Drive Motor Inverter Temperature Sensor E Circuit Low	P0BDD	To detect Inverter A Temperature Sensor #3 Out of Range low (voltage).	PIM Temp 2 Temperature	> 125 degC (near 0V)	WakeUp Signal	On	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Two Trips, Type B
Drive Motor "A" Inverter Phase U Over Temperature	P0C11	To detect an in-range overtemperature condition that can potentially damage inverter	PIM Temp 0 Temperature exceeds initial fault threshold AND Does not decrease below reset threshold	> 88 deg C initial fault >85 deg C reset	PIM Temperature No Perf Fault; P0AEE	IN RANGE NOT ACTIVE	X: 500 cts Y: 650 cts R: 10.4ms T: 5208ms	One Trip, Type A
Drive Motor "A" Inverter Phase V Over Temperature	P0C12	To detect an in-range overtemperature condition that can potentially damage inverter	PIM Temp 2 Temperature exceeds initial fault threshold AND Does not decrease below reset threshold	> 88 deg C initial fault >85 deg C reset	PIM Temperature No Perf Fault; P0BDC	IN RANGE NOT ACTIVE	X: 500 cts Y: 650 cts R: 10.4ms T: 5208ms	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "A" Inverter Phase W Over Temperature	P0C13	To detect an in-range overtemperature condition that can potentially damage inverter	PIM Temp 1 Temperature exceeds initial fault threshold AND Does not decrease below reset threshold	> 88 deg C initial fault >85 deg C reset	PIM Temperature No Perf Fault; P0BD2	IN RANGE NOT ACTIVE	X: 500 cts Y: 650 cts R: 10.4ms T: 5208ms	One Trip, Type A
Motor A Resolver Sensors - Discrete Diagnostics								
Drive Motor "A" Position Sensor Circuit	P0A3F	To detect Loss of Signal or converter error (line open, short) in the Motor Resolver circuit	Sin or Cos Signal	<2.3V	Resolver Initialization Delay Run/Crank Voltage OR Powertrain Relay Voltage	500ms > 9.5 Volts OR <18 Volts	X: 140 cts Y: 165 cts R: 0.083 - 0.5 ms T: 11.62 - 70.0 ms	One Trip, Type A
Drive Motor "A" Position Sensor Circuit Range/Performance	P0A40	To detect a Degradation of Signal fault in the angle data read by the Motor Resolver circuit.	Sin or Cos Signal	>4.0V	Resolver Initialization Delay	500ms	X: 140 cts Y: 165 cts R: 0.083 - 0.5 ms T: 11.62 - 70.0 ms	One Trip, Type A
Drive Motor "A" Position Sensor Circuit Loss of Tracking	P1B03	To detect a Loss of Tracking fault in the Motor Resolver circuit.	Internal Tracking Error	> 5 deg	Resolver Initialization Delay	500ms	X: 140 cts Y: 165 cts R: 0.083 - 0.5 ms T: 11.62 - 70.0 ms	One Trip, Type A
Drive Motor "A" Position Sensor Circuit Overspeed	P1B0D	To detect when Motor A has exceeded operational maximum speed	ABS(Motor speed) initially AND then ABS(Motor Speed)	>8500 rpm >7500 rpm	Wakeup Signal	On	X: 30 cts Y: 37 cts R: 10.4ms T: 312ms	One Trip, Type A
Drive Motor "A" Position Sensor Not Learned	P0C17	To detect an unvalidated Resolver Offset Learn Value and No Stored Previously Valid Value	Fail Case 1: Offset Learn DIDN'T complete because: ABS(Motor Speed) OR Filtered DC Voltage OR ALL Phase Current Max-Min Delta	>50 rpm < 192 V <15 A	Key Off Wakeup Signal ABS(Motor Speed) followed by Start Delay	TRUE ON < 20 rpm 400 Task 1 Counts (400 * 2.08 ms) =832 ms	832ms Start Delay PLUS 300 ms learn time = 1132 ms total	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
			For Time Period OR Fail Case 2: Offset Learn Completes AND ABS(Offset Correction Angle) >30 deg	> 20% of 0.3s learn time (>60ms)	Valid Stored Offset	FALSE		
Motor A Resolver Sensors - Circuit Diagnostics								
Drive Motor "A" Position Sensor Circuit "A" Low	P0C52	To detect Resolver Circuit S1/3 Out of Range Low	Resolver S13 Circuit Reference Voltage	< 0.5 v	Wakeup Signal	On	X: 50 cts Y: 80 cts R: 10.4ms T: 521ms	One Trip, Type A
Drive Motor "A" Position Sensor Circuit "A" High	P0C53	To detect Resolver Circuit S1/3 Out of Range High	Resolver S13 Circuit Reference Voltage	> 3.0 v	Wakeup Signal	On	X: 20 cts Y: 30 cts R: 10.4ms T: 208ms	One Trip, Type A
Drive Motor "A" Position Sensor Circuit "B" Low	P0C5C	To detect Resolver Circuit S2/4 Out of Range Low	Resolver S24 Circuit Reference Voltage	< 0.5 v	Wakeup Signal	On	X: 50 cts Y: 80 cts R: 10.4ms T: 521ms	One Trip, Type A
Drive Motor "A" Position Sensor Circuit "B" High	P0C5D	To detect Resolver Circuit S2/4 Out of Range High	Resolver S24 Circuit Reference Voltage	> 3.0 v	Wakeup Signal	On	X: 20 cts Y: 30 cts R: 10.4ms T: 208ms	One Trip, Type A
Motor A Crank Pulse Diagnostics								
Drive Motor "A" Control Module Crankshaft Position Sensor Circuit	P1AC6	Detects Lack of Response from 58X Crank Sensor	Crank Synchronization	NO ACTIVITY	Wakeup Signal	On	X: 200 cts Y: 300 cts R: 10.4ms T: 2083ms	Two Trips, Type B
Drive Motor "A" Control Module Crankshaft Position Sensor Performance	P1AC7	Detects Invalid 58X Crank Sensor Signal	CPC Signal	NOT VALID	Engine Movement Detected OR Edges Seen	> 5rpm > 0	X: 700 cts Y: 800 cts R: 10.4ms T: 7294ms	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.	
Torque Security Faults									
Drive Motor A Torque Delivered Performance	P0C19	Fail Case 1: Test of three phase current correlation	The sum of three phase currents is higher than current threshold during more than threshold time	Current threshold: 110 A Threshold time: 200ms	Ignition switch	in crank or run	86 fail counts out of 96 sample counts Executes in a 2.08ms loop Detects in 200ms	One Trip, Type A	
		Fail Case 2: Static Variable test	Verify the calculated check sum (CRC) is not equal to previous saved check sum (CRC)		Ignition switch	in crank or run	2.08 ms loop		
		Fail Case 3: Monitor torque command by checking the SPI communication status	SPI rolling count fails to update more than threshold time	Threshold time: 104ms	Ignition switch	in crank or run	45 fail counts out of 50 sample counts Detects in 104ms 2.08 ms loop		
		Fail Case 4: Check the DC current flow direction with respect to torque command/motor speed	DC current fails to show correct sign and magnitude more than current threshold during more than threshold time	Current threshold: 10 A to 80 A (function of motor speed.) Time threshold: 200 ms	MCP power stage	Active	86 fail counts out of 96 sample counts Detects in 200ms 2.08 ms loop		
		Fail Case 5: Check the secured motor torque achieved error with respect to torque command	The absolute error between calculated motor torque achieved and motor torque command is higher than torque threshold during more than threshold time	Torque threshold: 86.18 Nm Time threshold: 200 ms	MCP power stage	Active	86 fail counts out of 96 sample counts Detects in 200ms 2.08 ms loop		One Trip, Type A
		Fail Case 6: Check the Task1 reported motor torque achieved vs. torque command	The absolute error between Task1 reported motor torque achieved and motor torque command is higher than torque threshold during more than threshold time	Torque threshold: 86.18 Nm Time threshold: 200 ms	Ignition switch	in crank or run	86 fail counts out of 96 sample counts Detects in 200ms 2.08 ms loop		

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 7: Check the secured calculated three phase short motor torque vs. the reported task1 motor torque	The absolute error between secured calculated three phase short torque vs. Task1 reported motor torque is higher than torque threshold during more than threshold time	Torque threshold: 52 Nm Time threshold: 200 ms	MCP power stage	Motor 3-phase short	86 fail counts out of 96 sample counts Detects in 200ms 2.08 ms loop	
		Fail Case 8: Check the secured calculated three phase open motor torque vs. the reported task1 motor torque	The absolute error between secured calculated three phase open torque vs. Task1 reported motor torque is higher than torque threshold during more than threshold time	Torque threshold: 52 Nm Time threshold: 200 ms	MCP power stage	Motor 3-phase open	86 fail counts out of 96 sample counts Detects in 200ms 2.08 ms loop	One Trip, Type A
Drive Motor A Control Module Programmable Logic Device Security Code	P1AFB	Fail Case 1: Detect the validity of the Seeds sent by PLD	The number of identical seed in consecutive loops sent from PLD is higher than threshold	191 counts	Ignition switch	in crank or run	191 fail counts out of 250 sample counts 0.083 ms to 0.5 ms (function of motor speed)	One Trip, Type A
		Fail Case 2: Detect the validity of response by PLD when MCP sends repeated bad keys to PLD	The number of bad response from PLD when MCP is sending bad key is higher than threshold	191 counts	Ignition switch	in crank or run	191 fail counts out of 5000 sample counts 0.083 ms to 0.5 ms (function of motor speed)	
Drive Motor "A" Control Module Shutdown Performance	P1AF8	Detect the duration MCP used to conduct shut down path verification after key-on initialization.	The number of Task 2 loops used in shut down path verification is higher than threshold	40 counts	Initialization	ON	40 fail counts out of 50 sample counts 10 ms loop	One Trip, Type A
Common Diagnostics								
Lost Communication With Battery Pack Control Module	U1875	Detects that CAN serial data communication has been lost with the BPCM on Bus A	Missed BPCM Messages		Ignition switch	Run	X: 12 cts Y: 12 cts R: 10.4ms plus 1 sec cntdwn timer before each cnt incr= T: 12.17	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
							sec total	
Lost Communication With ECM/PCM	U1876	Detects that CAN serial data communication has been lost with the ECM	Missed ECM Messages		Ignition switch	Run	X: 12 cts Y: 12 cts R: 10.4ms plus 1 sec cntdwn timer before each cnt incr= T: 12.17 sec total	Two Trips, Type B

APPENDIX

- ALU= Arithmetic Logic Unit
- BPCM= Batt Pack Ctrl Module
- HWIO= Hardware Input/Output
- IGBT= Insulated Gate Bipolar Transistors (Phase Current Controllers)
- OOR= Out of Range

GMT9x1/926 Inverter Temperature Sensor Mapping Grid				SAE
Drive Motor A	Phase U	PIM_A	PIM_0	A
	Phase V	PIM_C	PIM_2	E
	Phase W	PIM_B	PIM_1	C
Drive Motor B	Phase U	PIM_C	PIM_2	F
	Phase V	PIM_A	PIM_0	B
	Phase W	PIM_B	PIM_1	D

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
MCP B Phase Current Diagnostics								
Drive Motor "B" Phase U-V-W Correlation	P0BFE	To detect electrical failure of phase current sensor.	Sum of 3 phase currents	>110 A	Main Relay Wakeup Signal	Closed On	X: 160 cts Y: 190 cts R: 0.083 - 0.5 ms T: 13.28 - 80 ms	One Trip, Type A
Drive Motor "B" Phase U-V-W Current Sensor Overcurrent	P0C04	Fail Case 1: To detect fast, repeated 3 Phase over currents and to protect IGBT.	U, V, or W Phase current sensor	> 600 A	Wakeup Signal	On	X: 2 cts Y: 10 cts R: 2.08 ms T: 2.08 ms	One Trip, Type A
		Fail Case 2: To detect slow, intermittent 3 Phase over currents and to protect IGBT.					X: 5 cts Y: 50 cts R: 2.08 ms T: 8.32 ms	
Drive Motor "B" Phase U-V-W Circuit/Open	P0C08	Drive Motor "B" Missing Motor Current checks for minimum current in each phase when rotor position is near that peak's phase axis. Each phase is checked individually as rotor turns.	Two Non-Peak Phase Sensors are BOTH AND THEN Peak Phase Axis Current	> ABS (9 A) < ABS (9 A)	Inverter State Inverter Voltage Rotor Position Peak Phase Current	RUN > 35 V -30 deg < Phase Axis < +30 deg >= 23 A	2 Task1 Loops delay = 4.2 ms PLUS X: 201 cts Y: N/A R: 0.083 - 0.5 ms T: 16.7 - 101 ms = 20.8 - 104.7 ms TOTAL	One Trip, Type A
Drive Motor "B" Phase U Current Sensor Circuit Low	P0BF3	Circuit Low monitor to detect the failure of U-phase current sensor circuit below valid range	U Phase current sensor output at highside	< -700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Two Trips, Type B
Drive Motor "B" Phase U Current Sensor Circuit High	P0BF4	Circuit High monitor to detect the failure of U-phase current sensor circuit above valid range	U Phase current sensor output at highside	> 700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "B" Phase U Current Sensor Offset Out-of Range	P0BF2	Offset Circuit monitor to detect the failure of U-phase offset current above valid range	U Phase offset current output at highside	>30 A	Wakeup Signal Power Stage P0BF3/P0BF4	On OPEN NOT ACTIVE	X: 100 cts Y: N/A R: 2.08ms T: 208ms	Two Trips, Type B
Drive Motor "B" Phase V Current Sensor Circuit Low	P0BF7	Circuit Low monitor to detect the failure of V-phase current sensor circuit below valid range	V Phase current sensor output at highside	< -700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Two Trips, Type B
Drive Motor "B" Phase V Current Sensor Circuit High	P0BF8	Circuit High monitor to detect the failure of V-phase current sensor circuit above valid range	V Phase current sensor output current at highside	> 700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Two Trips, Type B
Drive Motor "B" Phase V Current Sensor Offset Out-of Range	P0BF6	Offset Circuit monitor to detect the failure of U-phase offset current above valid range	V Phase offset current output at highside	>30 A	Wakeup Signal Power Stage P0BF7/P0BF8	On OPEN NOT ACTIVE	X: 100 cts Y: N/A R: 2.08ms T: 208ms	Two Trips, Type B
Drive Motor "B" Phase W Current Sensor Circuit Low	P0BFB	Circuit Low monitor to detect the failure of W-phase current sensor circuit below valid range	W Phase current sensor output at highside	< -700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Two Trips, Type B
Drive Motor "B" Phase W Current Sensor Circuit High	P0BFC	Circuit High monitor to detect the failure of W-phase current sensor circuit above valid range	W Phase current sensor output at highside	> 700 A	Wakeup Signal PWMOutputEnable	On FALSE	X: 10 cts Y: 15 cts R: 2.08ms T: 20.8ms	Two Trips, Type B
Drive Motor "B" Phase W Current Sensor Offset Out-of Range	P0BFA	Offset Circuit monitor to detect the failure of U-phase offset current above valid range	W Phase offset current output at highside	>30 A	Wakeup Signal Power Stage P0BFB/P0BFC	On OPEN NOT ACTIVE	X: 100 cts Y: N/A R: 2.08ms T: 208ms	Two Trips, Type B
MCP B IGBT Diagnostics								

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "B" Inverter Performance	P0A79	Detects IGBT Desaturation Faults	Phase A, B, or C High or Low Side Devices	OVERDRIVEN (Status Fault Bit)	Wakeup Signal	On	X: 1 ct Y: N/A R: 2.08ms T: 2.08ms	One Trip, Type A
Drive Motor "B" Inverter Power Supply Circuit/Open	P0C0E	Detects IGBT Bias Faults	Phase A, B, or C Power Supply	FAILED (Status Fault Bit)	Inverter State Run/Crank Voltage OR Powertrain Relay Voltage	Initialization Complete > 9.5 Volts OR < 18 Volts	X: 1 ct Y: N/A R: 2.08ms T: 2.08ms	One Trip, Type A
MCP B High Voltage (HV) Diagnostics								
Drive Motor "B" Hybrid Battery System Voltage High	P1AEF	To detect over voltage and to protect TPIM Vdc Circuit	HV Sensor Voltage	> 450V	WakeUp Signal	On	X: 5 cts Y: N/A R: 0.083 - 0.5 ms T: 0.42 - 2.50 ms	One Trip, Type A
Drive Motor "B" Control Module Hybrid Battery Voltage Sense Circuit Low Voltage	P1AEA	Circuit Low monitor to detect the failure of HV output voltage sensor circuit below valid range	HV Sensor Voltage	<0V	Inverter State	Initialization Complete	X: 70 cts Y: 100 cts R: 2.08ms T: 146ms	Two Trips, Type B
Drive Motor "B" Control Module Hybrid Battery Voltage Sense Circuit High Voltage	P1AEB	Circuit High monitor to detect the failure of HV output voltage sensor circuit above valid range	HV Sensor Voltage	>500 V	Inverter State	Initialization Complete	X: 50 cts Y: 100 cts R: 2.08ms T: 104ms	Two Trips, Type B
Drive Motor "B" Control Module Hybrid Battery System Voltage	P1AED	To check correlation of HV_MCP with HV_Midpack and HV_Battery Voltages.	ABS(MCP HV voltage - HV Battery voltage) AND ABS(MCP HV voltage - MidPack voltage)	>= 34 V >= 90 V	WakeUp Signal	On	X: 18 cts Y: 30 cts R: 10.4ms T: 187ms	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "B" HV Interlock (HVIL) Break Detected	P1B06	To detect interlock circuit open or shorted	Raw HVIL Voltage	< 1 V OR > 3 V	WakeUp Signal HV CAN Msg Rx BPCM Sourcing MCP HVIL Status	On TRUE TRUE	250ms debounce time PLUS X: 10 cts Y: 14 cts R: 10.4ms T: 104ms= 354 ms total	Special Type C
Drive Motor "B" Control Module Hybrid Battery Voltage System Isolation Fault	P1AF2	Isolation Lost between Battery Pack and Chassis	Isolation Ratio (MidPack Voltage / HV Battery Voltage)	< 0.27 OR >1.80	HV Sensor Voltage No HV Clamp Fault or MidPack Sensor OOR Faults: P1AEF, P1AF6, and P1AF7	> 50V NOT ACTIVE	X: 450 cts Y: 500 cts R: 10.4ms T: 4689ms	Special Type C
Drive Motor "B" Control Module Hybrid Battery Voltage Isolation Sensor Circuit Low	P1AF6	Circuit Low monitor to detect the failure of HV MidPack voltage sensor circuit below valid range	MidPack Voltage	<0V	Inverter State	Initialization Complete	X: 70 cts Y: 100 cts R: 10.4ms T: 729ms	Two Trips, Type B
Drive Motor "B" Control Module Hybrid Battery Voltage Isolation Sensor Circuit High	P1AF7	Circuit High monitor to detect the failure of HV MidPack voltage sensor circuit above valid range	MidPack Voltage	>500 V	Inverter State	Initialization Complete	X: 50 cts Y: 100 cts R: 10.4ms T: 521ms	Two Trips, Type B
Motor B Temperature Sensor Diagnostics								
Drive Motor "B" Control Module Temperature Sensor Performance	P0A31	Motor B Temperature Sensor In-Range Rationality Check	ABS(Motor Temp - PIM Temp Avg)	> 28 deg C	Ignition Off Time PIM Temp Average Motor Temp No PIM or Motor Temp OOR Faults: P0AF4, P0AF5, P0BD8, P0BD9, P0BE2, P0BE3, P0A32 and P0A33	>=360 min >=-40 deg C >=-40 deg C NOT ACTIVE	8336ms Start Delay PLUS X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.94 sec total	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "B" Control Module Temperature Sensor Circuit Out of Range High	P0A33	To detect temperature sensor Out of Range high (voltage).	Motor Temperature	< -40 deg C (near 5V)	Wakeup Signal When malfunction present at start of trip: Cumulative Motor Warmup Time at or above Motor Warmup Torque Threshold	On >=1.5min >=ABS(20 Nm)	X: 900 cts Y:1800cts R: 10.4ms T: 9378ms	Two Trips, Type B
Drive Motor "B" Control Module Temperature Sensor Circuit Out of Range Low	P0A32	To detect temperature sensor Out of Range low (voltage).	Motor Temperature	> 230 degC (near 0V)	WakeUp Signal	On	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Two Trips, Type B
Drive Motor "B" Over Temperature	P0A35	To detect a sustained motor overtemperature condition	Motor Temperature exceeds initial fault threshold AND Does not decrease below reset threshold	> 200 deg C initial fault >135 deg C reset	Motor Temperature No Temp Performance Fault; P0A31	IN RANGE NOT ACTIVE	X: 300 cts Y: 450 cts R: 10.4ms T: 3125ms	Two Trips, Type B
SPI / SCI Bus Timeout Diagnostics								
Drive Motor "B" Control Module Lost Communication With SPI Bus	P1B02	To detect loss of communication on the SPI bus with the HCP module	SPI Receive Timeout flag	TRUE	Inverter State Run/Crank Voltage OR Powertrain Relay Voltage	Run > 9.5 Volts OR < 18 Volts	X: 241 cts Y: N/A R:10.42ms T: 2510ms	One Trip, Type A
Motor Control Processor Voltage Diagnostics								
Sensor Reference Voltage "B" Circuit Low	P0652	Detects Sensor Voltage (5V) below an acceptable threshold.	Scaled 5V Supply Voltage	< 4.80V	Wakeup Signal Run/Crank Voltage OR Powertrain Relay Voltage	On > 9.5 Volts OR < 18 Volts	X: 70 cts Y: 100 cts R: 10.4ms T: 729ms	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Sensor Reference Voltage "B" Circuit High	P0653	Detects Sensor Voltage (5V) above an acceptable threshold.	Scaled 5V Supply Voltage	> 5.20V	Wakeup Signal	On	X: 70 cts Y: 100 cts R: 10.4ms T: 729ms	One Trip, Type A
Sensor Power Supply "B" Circuit Low	P06B4	Detects Sensor Power Supply (15V) below an acceptable threshold.	Scaled 15V Supply Voltage	< 12.0V	Wakeup Signal	On	X: 35 cts Y: 150 cts R: 10.4ms T: 365ms	Two Trips, Type B
Sensor Power Supply "B" Circuit High	P06B5	Detects Sensor Power Supply (15V) above an acceptable threshold.	Scaled 15V Supply Voltage	> 18.0V	Wakeup Signal	On	X: 100 cts Y: 150 cts R: 10.4ms T: 1042ms	Two Trips, Type B
Control Module Power Supply "B" Circuit Low	P1AE0	Detects Control Module Power Supply (12V) below an acceptable threshold.	Scaled 12V Supply Voltage	< 7.7V	Wakeup Signal	On	X: 35 cts Y: 50 cts R: 10.4ms T: 365ms	Special Type C
MCP B Controller Fault Diagnostics								
Drive Motor "B" Control Module Internal Performance	P0A1C	ALU calculation error, Register Overflow, or Watchdog Timer Fault	ALU HWIO Fault OR Stack Address Overrun OR EEPROM not completely written at Powerdown (Watchdog timer fault)	TRUE TRUE	For all: Wakeup Signal For Watchdog Fault Only: No power-on reset, stack overflow, or low 12V interrupt conditions	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	One Trip, Type A
Drive Motor "A" Control Module Random Access Memory (RAM)	P1A53	To detect an error in the MCPA RAM write area.	RAM check value	Outside RAM Address Range	Wakeup Signal	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "B" Control Module Read Only Memory (ROM)	P1A51	To detect an error in the MCP B ROM using a checksum calculation	FlashCellError	TRUE	Wakeup Signal	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	One Trip, Type A
Drive Motor "B" Control Module EEPROM Error	P1ADD	Detects mismatch between Flash and EEPROM Power Off Levels	EEpromCellStatus	TRUE	Wakeup Signal	On	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	One Trip, Type A
MCPB Not Program'd Diagnostic								
Drive Motor "B" Control Module Not Programmed	P1A52	Drive Motor "B" Control Module Programmed with Test Code, or Motor A calibration (via Cal ID)	Calibration contains Test code identifier OR Motor A Identifier	TRUE		Always	X: 1 ct Y: N/A R: 10.4ms T: 10.4ms	One Trip, Type A
Motor B Inverter Temperature Sensor Diagnostics								
Drive Motor Inverter Temperature Sensor B Circuit Range/Performance	P0AF3	Inverter B Temperature Sensor #1 In-Range Rationality Check	ABS(PIM Temp 0 - PIM Temp Avg)	>15 deg C	Ignition Off Time PIM Temp Average Motor Temp No PIM or Motor Temp OOR Faults; P0AF4, P0AF5, P0BD8, P0BD9, P0BE2, P0BE3, P0A32 and P0A33	>=360 min >=-40 deg C >=-40 deg C NOT ACTIVE	8336ms Start Delay PLUS X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Two Trips, Type B
Drive Motor Inverter Temperature Sensor B Circuit High	P0AF5	To detect Inverter B Temperature Sensor #1 Out of Range high (voltage)	PIM Temp 0 Temperature	< -40 deg C (near 5V)	Wakeup Signal When malfunction present at start of trip: Cumulative Inverter Warmup Time at or above Inverter Warmup Torque Threshold	ON >=1.5min >=ABS(20 Nm)	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor Inverter Temperature Sensor B Circuit Low	P0AF4	To detect Inverter B Temperature Sensor #1 Out of Range low (voltage)	PIM Temp 0 Temperature	> 125 degC (near 0V)	WakeUp Signal	On	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Two Trips, Type B
Drive Motor Inverter Temperature Sensor D Circuit Range/Performance	P0BD7	Inverter B Temperature Sensor #2 In-Range Rationality Check	ABS(PIM Temp 1 - PIM Temp Avg)	>15 deg C	Ignition Off Time PIM Temp Average Motor Temp No PIM or Motor Temp OOR Faults; P0AF4, P0AF5, P0BD8, P0BD9, P0BE2, P0BE3, P0A32 and P0A33	>=360 min >=-40 deg C >=-40 deg C NOT ACTIVE	8336ms Start Delay PLUS X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms =10.9 sec total	Two Trips, Type B
Drive Motor Inverter Temperature Sensor D Circuit High	P0BD9	To detect Inverter B Temperature Sensor #2 Out of Range high (voltage)	PIM Temp 1 Temperature	< -40 deg C (near 5V)	Wakeup Signal When malfunction present at start of trip: Cumulative Inverter Warmup Time at or above Inverter Warmup Torque Threshold	ON >=1.5min >=ABS(20 Nm)	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Two Trips, Type B
Drive Motor Inverter Temperature Sensor D Circuit Low	P0BD8	To detect Inverter B Temperature Sensor #2 Out of Range low (voltage)	PIM Temp 1 Temperature	> 125 degC (near 0V)	WakeUp Signal	On	X: 250 cts Y: 350 cts R: 10.4ms T: 2604ms	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor "B" Inverter Phase W Over Temperature	P0C16	To detect an in-range overtemperature condition that can potentially damage inverter	PIM Temp 1 Temperature exceeds initial fault threshold AND Does not decrease below reset threshold	> 88 deg C initial fault >85 deg C reset	PIM Temperature No Perf Fault; P0BD7	IN RANGE NOT ACTIVE	X: 500 cts Y: 650 cts R: 10.4ms T: 5208ms	One Trip, Type A
Motor B Resolver Sensors - Discrete Diagnostics								
Drive Motor "B" Position Sensor Circuit	P0A45	To detect Loss of Signal or converter error (line open, short) in the Motor Resolver circuit	Sin or Cos Signal	<2.3V	Resolver Initialization Delay Run/Crank Voltage OR Powertrain Relay Voltage	500ms > 9.5 Volts OR <18 Volts	X: 140 cts Y: 165 cts R: 0.083 - 0.5 ms T: 11.62 - 70.0 ms	One Trip, Type A
Drive Motor "B" Position Sensor Circuit Range/Performance	P0A46	To detect a Degradation of Signal fault in the angle data read by the Motor Resolver circuit.	Sin or Cos Signal	>4.0V	Resolver Initialization Delay	500ms	X: 140 cts Y: 165 cts R: 0.083 - 0.5 ms T: 11.62 - 70.0 ms	One Trip, Type A
Drive Motor "B" Position Sensor Circuit Loss of Tracking	P1B04	To detect a Loss of Tracking fault in the Motor Resolver circuit.	Internal Tracking Error	> 5 deg	Resolver Initialization Delay	500ms	X: 140 cts Y: 165 cts R: 0.083 - 0.5 ms T: 11.62 - 70.0 ms	One Trip, Type A
Drive Motor "B" Position Sensor Circuit Overspeed	P1B0E	To detect when Motor A has exceeded operational maximum speed	ABS(Motor speed) initially AND then ABS(Motor Speed)	>1000 rpm >9000 rpm	Wakeup Signal	On	X: 9 cts Y: 12 cts R: 10.4ms T: 93.6ms	One Trip, Type A
Drive Motor "B" Position Sensor Not Learned	P0C18	To detect an unvalidated Resolver Offset Learn Value and No Stored Previously Valid Value	Fail Case 1: Offset Learn DIDN'T complete because: ABS(Motor Speed) OR Filtered DC Voltage OR ALL Phase Current Max-Min Delta	>50 rpm < 192 V <15 A	Key Off Wakeup Signal ABS(Motor Speed) followed by Start Delay	TRUE ON < 20 rpm 400 Task 1 Counts (400 * 2.08 ms) =832 ms	832ms Start Delay PLUS 300 ms learn time = 1132 ms total	Two Trips, Type B

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
		Fail Case 3: Monitor torque command by checking the SPI communication status	SPI rolling count fails to update more than threshold time	Threshold time: 104msec	Ignition switch	in crank or run	45 fail counts out of 50 sample counts Detects in 104ms 2.08 ms loop	
		Fail Case 4: Check the DC current flow direction with respect to torque command/motor speed	DC current fails to show correct sign and magnitude more than current threshold during more than threshold time	Current threshold: 10 A to 80 A (function of motor speed.) Time threshold: 200 ms	MCP power stage	Active	86 fail counts out of 96 sample counts Detects in 200ms 2.08 ms loop	
		Fail Case 5: Check the secured motor torque achieved error with respect to torque command	The absolute error between calculated motor torque achieved and motor torque command is higher than torque threshold during more than threshold time	Torque threshold: 86.18 Nm Time threshold: 200 ms	MCP power stage	Active	86 fail counts out of 96 sample counts Detects in 200ms 2.08 ms loop	One Trip, Type A
		Fail Case 6: Check the Task1 reported motor torque achieved vs. torque command	The absolute error between Task1 reported motor torque achieved and motor torque command is higher than torque threshold during more than threshold time	Torque threshold: 86.18 Nm Time threshold: 200 ms	Ignition switch	in crank or run	86 fail counts out of 96 sample counts Detects in 200ms 2.08 ms loop	
		Fail Case 7: Check the secured calculated three phase short motor torque vs. the reported task1 motor torque	The absolute error between secured calculated three phase short torque vs. Task1 reported motor torque is higher than torque threshold during more than threshold time	Torque threshold: 52 Nm Time threshold: 200 ms	MCP power stage	Motor 3-phase short	86 fail counts out of 96 sample counts Detects in 200ms 2.08 ms loop	
		Fail Case 8: Check the secured calculated three phase open motor torque vs. the reported task1 motor torque	The absolute error between secured calculated three phase open torque vs. Task1 reported motor torque is higher than torque threshold during more than threshold time	Torque threshold: 52 Nm Time threshold: 200 ms	MCP power stage	Motor 3-phase open	86 fail counts out of 96 sample counts Detects in 200ms 2.08 ms loop	One Trip, Type A

COMPONENT/ SYSTEM	FAULT CODE	MONITOR STRATEGY DESCRIPTION	MALFUNCTION CRITERIA	THRESHOLD VALUE	SECONDARY PARAMETERS	ENABLE CONDITIONS	TIME REQUIRED	MIL ILLUM.
Drive Motor B Control Module Programmable Logic Device Security Code	P1B01	Fail Case 1: Detect the validity of the Seeds sent by PLD	The number of identical seed in consecutive loops sent from PLD is higher than threshold	191 counts	Ignition switch	in crank or run	191 fail counts out of 250 sample counts 0.083 ms to 0.5 ms (function of motor speed)	One Trip, Type A
		Fail Case 2: Detect the validity of response by PLD when MCP sends repeated bad keys to PLD	The number of bad response from PLD when MCP is sending bad key is higher than threshold	191 counts	Ignition switch	in crank or run	191 fail counts out of 5000 sample counts 0.083 ms to 0.5 ms (function of motor speed)	
Drive Motor "B" Control Module Shutdown Performance	P1AFE	Detect the duration MCP used to conduct shut down path verification after key-on initialization.	The number of Task 2 loops used in shut down path verification is higher than threshold	40 counts	Initialization	ON	40 fail counts out of 50 sample counts 10 ms loop	One Trip, Type A
Common Diagnostics								
Lost Communication With Battery Pack Control Module	U1878	Detects that CAN serial data communication has been lost with the BPCM on Bus A	Missed BPCM Messages		Ignition switch	Run	X: 12 cts Y: 12 cts R: 10.4ms plus 1 sec cntdwn timer before each cnt incr= T: 12.17 sec total	Two Trips, Type B
Lost Communication With ECM/PCM	U1879	Detects that CAN serial data communication has been lost with the ECM	Missed ECM Messages		Ignition switch	Run	X: 12 cts Y: 12 cts R: 10.4ms plus 1 sec cntdwn timer before each cnt incr= T: 12.17 sec total	Two Trips, Type B

APPENDIX

ALU= Arithmetic Logic Unit
 BPCM= Batt Pack Ctrl Module
 HWIO= Hardware Input/Output
 IGBT= Insulated Gate Bipolar Transistors (Phase Current Controllers)
 OOR= Out of Range

GM19x1/926 Inverter Temperature Sensor Mapping Grid				SAE
Drive Motor A	Phase U	PIM_A	PIM_0	A
	Phase V	PIM_C	PIM_2	E
	Phase W	PIM_B	PIM_1	C
Drive Motor B	Phase U	PIM_C	PIM_2	F
	Phase V	PIM_A	PIM_0	B
	Phase W	PIM_B	PIM_1	D

Closed Loop Enable Criteria

Engine run time greater than

KIFSTA_t_ClosedLoopAutostar (HYBRID ONLY)

AutoStart Coolant	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
Close Loop Enable Time	120.0	90.0	65.0	45.0	25.0	10.0	10.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0

and

KIFSTA_t_ClosedLoopTime

Start-Up Coolant	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
Close Loop Enable Time	120.0	90.0	65.0	45.0	25.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0

and pre converter O2 sensor voltage less than

KIFULC_U_O2_SensorReadyThrsHc

Voltage	< 350 millVolts
---------	-----------------

for

KcFULC_O2_SensorReadyEvents

Time (events * 12.5 milliseconds)	> 10 events
-----------------------------------	-------------

and
COSC (Converter Oxygen Storage Control) not enabled

and
Consumed AirFuel Ratio is stoichiometry i.e. not in component protection

and
POPD or Catalyst Diagnostic not intrusive

and
Turbo Scavenging Mode not enablec

and
All cylinders whose valves are active also have their injectors enabled

and
O2S_Bank_1_TFTKO, O2S_Bank_2_TFTKO, FuelInjectorCircuit_FA and CylinderDeacDriverTFTKO = False

CylinderDeacDriverTFTKO = False

Long Term FT Enable Criteria

Closed Loop Enable and

Coolant greater than

KIFCLL_T_AdaptiveLoCoolant

Coolant	> 39 Celcius
---------	--------------

or less than

KIFCLL_T_AdaptiveHiCoolant

Coolant	< 140 Celcius
---------	---------------

and

KIFCLL_p_AdaptiveLowMAP_Limi

Barometric Pressure	65	70	75	80	85	90	95	100	105
Manifold Air Pressure	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0

and
TPS_ThrottleAuthorityDefaulted = False

and
Flex Fuel Estimate Algorithm is not active

and
Excessive fuel vapors boiling off from the engine oil algorithm (BOFR) is not enabled

and
Catalyst or EVAP large leak test not intrusive

Secondary Fuel Trim Enable Criteria

Closed Loop Enable and

KIFCLP_U_O2ReadyThrsHLo

Voltage	< 350 millVolts
---------	-----------------

for

KcFCLP_Cnt_O2RdyCyclesThrsH

Time (events * 12.5 milliseconds)	> 10 events
-----------------------------------	-------------

Long Term Secondary Fuel Trim Enable Criteria

KIFCLP_t_PostIntgIDisableTime

Start-Up Coolant	-40	-29	-18	-6	5	16	28	39	50	61	73	84	95	106	118	129	140
Post Integral Enable Time	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0	150.0

Plus

KIFCLP_t_PostIntgIRampInTime

Start-Up Coolant	-40	-29	-18	-6	5	16	28	39	50	61	73	84	95	106	118	129	140
Post Integral Ramp In Time	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0

and

KeFCLP_T_IntegrationCatalystMax Modeled Catalyst Temperature

Modeled Catalyst Temperature	< 950 Celcius
------------------------------	---------------

and

KeFCLP_T_IntegrationCatalystMir Modeled Catalyst Temperature

Modeled Catalyst Temperature	> 500 Celcius
------------------------------	---------------

and

FASD Section

The following tables define the Lean and Rich failure thresholds for FASD

P0171 & P0174 (LONG TERM ONLY)

% Ethanol
Long Term Fuel Trim Lean Threshold

Long Term Trim Lean (Lean Fail threshold)																
0.00	6.25	12.50	18.75	25.00	31.25	37.50	43.75	50.00	56.25	62.50	68.75	75.00	81.25	87.50	93.75	100.00
1.325	1.325	1.325	1.325	1.325	1.325	1.325	1.325	1.325	1.325	1.325	1.325	1.325	1.325	1.325	1.325	1.325

P0172 & P0175 (LONG TERM ONLY)

% Ethanol
Long Term Fuel Non-Purge Rich Threshold

Non Purge Rich Limit (Rich Fail threshold)																
0.00	6.25	12.50	18.75	25.00	31.25	37.50	43.75	50.00	56.25	62.50	68.75	75.00	81.25	87.50	93.75	100.00
0.700	0.700	0.700	0.700	0.700	0.700	0.700	0.700	0.700	0.700	0.700	0.700	0.700	0.700	0.700	0.700	0.700

P0172 & P0175 (LONG TERM ONLY)

% Ethanol
Long Term Fuel Purge Rich Threshold

Purge Rich Limit (Triggers Rich Intrusive test)																
0.00	6.25	12.50	18.75	25.00	31.25	37.50	43.75	50.00	56.25	62.50	68.75	75.00	81.25	87.50	93.75	100.00
0.705	0.705	0.705	0.705	0.705	0.705	0.705	0.705	0.705	0.705	0.705	0.705	0.705	0.705	0.705	0.705	0.705

Long-Term Fuel
Trim Cell Usage

The following table defines the Long Fuel Trim cells utilized for FASD diagnosis (cells identified with a "Yes" are enabled, and with a "NO" are disabled)

Cell I.D.	CeFADR_e_Cell00_P	CeFADR_e_Cell01	CeFADR_e_Cell02	CeFADR_e_Cell03	CeFADR_e_Cell04	CeFADR_e_Cell05	CeFADR_e_Cell06	CeFADR_e_Cell07_Pur	CeFADR_e_Cell08	CeFADR_e_Cell09	CeFADR_e_Cell10	CeFADR_e_Cell11	CeFADR_e_Cell12	CeFADR_e_Cell13	CeFADR_e_Cell14	CeFADR_e_Cell15
urgOnAirMode5	_PurgOnAirMode4	_PurgOnAirMode3	_PurgOnAirMode2	PurgOnAirMode1	_PurgOnAirMode0	_PurgOnIdle	gOnDecel	_PurgOffAirMode5	_PurgOffAirMode4	_PurgOffAirMode3	_PurgOffAirMode2	_PurgOffAirMode1	_PurgOffAirMode0	_PurgOffIdle	_PurgOffDecel	

FASD Cell Usage	CeFADD_e_Selected	CeFADD_e_Select	CeFADD_e_Select	CeFADD_e_Select	CeFADD_e_Select	CeFADD_e_Select	CeFADD_e_Select	CeFADD_e_Select	CeFADD_e_SelectedPu	CeFADD_e_Select	CeFADD_e_Select	CeFADD_e_Select	CeFADD_e_Select	CeFADD_e_Select	CeFADD_e_Select	CeFADD_e_Select	CeFADD_e_Select	CeFADD_e_Select
PurgeCell	edPurgeCell	edPurgeCell	edPurgeCell	edPurgeCell	dPurgeCell	edPurgeCell	edPurgeCell	edPurgeCell	rgeCell	edNonPurgeCell	edNonPurgeCell	edNonPurgeCell	edNonPurgeCell	edNonPurgeCell	edNonPurgeCell	edNonPurgeCell	edNonPurgeCell	edNonPurgeCell
FASD Enabled In Cell? Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes

X axis is fuel level
in %
Y axis is
temperature in deg
C

	0.0000	6.2499	12.4998	18.7497	24.9996	31.2495	37.4994	43.7493	49.9992	56.2491	62.4990	68.7490	74.9989	81.2488	87.4987	93.7486	99.9985
-10.0000	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
-4.3750	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
1.2500	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
6.8750	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
12.5000	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
18.1250	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
23.7500	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
29.3750	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
35.0000	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
40.6250	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
46.2500	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
51.8750	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
57.5000	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
63.1250	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
68.7500	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
74.3750	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810
80.0000	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810	-498.1810

EAT Valid Conditioning Time (in seconds)

Axis is Ignition Off Time (in seconds)

Axis	Curve
0	300
600	450
1200	500
1800	600
2400	650
3000	650
3600	650
4200	650
4800	650
5400	650
6000	625
6600	600
7200	575
7800	550
8400	525
9000	500
9600	480
10200	460
10800	440
11700	420
12600	400
13500	380
14400	360
15300	340
16200	320
17100	300
18000	280
18200	280
20400	240
21600	220
22800	200
24000	200
25200	200

P0442: Engine Off Time Before Vehicle Off
Maximum as a Function of Estimated Ambient
Temperature

Axis Curve	Engine Off Time Before Vehicle Off Maximum Table (in seconds)																
	-10	-4	1	7	13	19	24	29	35	41	46	52	58	63	69	74	80
	44	44	44	44	68	82	105	153	320	480	480	480	480	480	480	480	480

P0496: Purge Valve Leak Test Engine Vacuum
Test Time (Cold Start) as a Function of Fuel Level

Purge Valve Leak
Test Engine
Vacuum Test
Time (in seconds)
Axis is Fuel Level
in %

Axis	Curve
0	55
6	54
12	52
19	51
25	49
31	48
37	46
44	45
50	43
56	42
62	41
69	39
75	38
81	36
87	35
94	33
100	32

P0461, P2066, P2636: Transfer Pump Enable

Transfer Pump
TimeLimit (in
seconds)
Axis is Fuel Level
in %

Axis	Curve
0	0
3	0
6	0
9	0
13	0
16	0
19	0
22	0
25	0
28	0
31	0
34	0
38	0
41	0
44	0
47	0
50	0
53	0
56	0
59	0
63	0
66	0
69	0
72	0
75	0
78	0
81	0
84	0
88	0
91	0
94	0
97	0
100	0

P0326 Knock Detection Enabled Factors

FastRtdMax:

X - axis = Engine Speed (RPM)
Y - axis = Manifold Pressure (kPa)

	0	512	1024	1536	2048	2560	3072	3584	4096	4608	5120	5632	6144	6656	7168	7680	8192
20	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
30	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
40	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
50	0.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
60	0.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0
70	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
80	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
90	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
100	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
110	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
120	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
130	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
140	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
150	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
160	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
170	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0
180	0.0	6.0	8.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0

Knock Detection Enabled Factors

Knock Detection Enabled =
FastAttackRate * FastAttackCoolGain *
FastAttackBaroGain

FastAttackRate:	RPM: 0	512	1024	1536	2048	2560	3072	3584	4096	4608	5120	5632	6144	6656	7168	7680	8192
	3.00	3.00	3.00	2.83	2.67	2.50	2.33	2.17	2.00	2.00	2.12	2.63	3.00	3.00	3.00	3.00	3.00
ECT (deg. C):	-40	-30	-20	-10	0	10	20	30	40	50	60	70	80	90	100	110	120
FastAttackCoolGain:	0.00	0.00	0.00	0.00	0.00	0.00	0.25	0.50	0.75	1.00	1.00	1.00	1.00	1.00	1.10	1.10	1.20
Baro:	55.00	61.25	67.50	73.75	80.00	86.25	92.50	98.75	105.00								
FastAttackBaroGain:	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00	1.00								

P0116: Fail if power up ECT exceeds IAT by these values

Z-axis is the Fast Failure temp difference (°C)
X-axis is IAT Temperature at Power up (°C)

	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
	80	80	80	60	60	40	40	30	30	30	30	30	30	30	30	30	30

P0128: Maximum Accumulated Airflow for IAT and Start-up ECT conditions

Z-axis is the accumulated airflow failure threshold (grams)
X-axis is ECT Temperature at Power up (°C)
Y-axis is IAT min during test (°C)

	Low	Hi	-40	-28	-16	-4	8	20	32	44	56	68	80
Primary	10.0 °C	52.0 °C	15876	15876	15876	15876	15876	14132	12387	10642	8898	7153	5409
Alternate	-7.0 °C	10.0 °C	14376	14376	14376	12917	11460	10000	8542	7084	5625	5625	5625

P0133 - O2S Slow Response Bank 1 Sensor 1*
Pass/Fail Threshold table

Z axis is the pass/fail result (see note below)
A axis is Lean to Rich response time (msec)
Y axis is Rich to Lean response time (msec)
contains a "0" then the fault is not indicated, if it contains a "1" a fault is indicated

	0.000	0.060	0.077	0.094	0.111	0.128	0.145	0.162	0.179	0.196	0.213	0.230	0.247	0.264	0.281	0.298	63.999
0.000	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0
0.070	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0
0.087	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0
0.104	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0
0.121	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0
0.138	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0
0.155	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0
0.172	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0
0.189	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0
0.206	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0
0.223	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0
0.240	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	0
0.257	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1	0
0.274	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	0
0.291	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	0
0.308	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	0
63.999	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

P0133 - O2S Slow Response Bank 2 Sensor 1*
Pass/Fail Threshold table

Z axis is the pass/fail result (see note below)
A axis is Lean to Rich response time (msec)
Y axis is Rich to Lean response time (msec)
contains a "0" then the fault is not indicated, if it contains a "1" a fault is indicated

	0.000	0.060	0.077	0.094	0.111	0.128	0.145	0.162	0.179	0.196	0.213	0.230	0.247	0.264	0.281	0.298	63.999
0.000	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0
0.070	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0
0.087	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0
0.104	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0
0.121	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0
0.138	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0
0.155	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0
0.172	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0
0.189	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0
0.206	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0
0.223	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0
0.240	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	0
0.257	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1	0
0.274	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	0
0.291	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	0
0.308	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	0
63.999	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

P1133 - O2S HC L to R Switches Limit Bank 1
Sensor 1" Pass/Fail Threshold table

Z axis is Limit for
L/R HC switches
Y axis is Average
flow during the
response test (gps)
X axis is estimated
Ethanol percentage
where, the sensor
contains the
minimum
switches

	0.0	10.0	20.0	50.0	80.0
0.0	20	20	20	20	20
6.3	20	20	20	20	20
12.5	20	20	20	20	20
18.8	20	20	20	20	20
25.0	20	20	20	20	20
31.3	20	20	20	20	20
37.5	20	20	20	20	20
43.8	20	20	20	20	20
50.0	20	20	20	20	20
56.3	20	20	20	20	20
62.5	20	20	20	20	20
68.8	20	20	20	20	20
75.0	20	20	20	20	20
81.3	20	20	20	20	20
87.5	20	20	20	20	20
93.8	20	20	20	20	20
100.0	20	20	20	20	20

P1133 - O2S HC R to L Switches Limit Bank 1
Sensor 1" Pass/Fail Threshold table

Z axis is Limit for
R/L HC switches
Y axis is Average
flow during the
response test (gps)
X axis is estimated
Ethanol percentage
where, the sensor
contains the
minimum
switches

	0.0	10.0	20.0	50.0	80.0
0.0	20	20	20	20	20
6.3	20	20	20	20	20
12.5	20	20	20	20	20
18.8	20	20	20	20	20
25.0	20	20	20	20	20
31.3	20	20	20	20	20
37.5	20	20	20	20	20
43.8	20	20	20	20	20
50.0	20	20	20	20	20
56.3	20	20	20	20	20
62.5	20	20	20	20	20
68.8	20	20	20	20	20
75.0	20	20	20	20	20
81.3	20	20	20	20	20
87.5	20	20	20	20	20
93.8	20	20	20	20	20
100.0	20	20	20	20	20

P1153 - O2S HC L to R Switches Limit Bank 2
Sensor 1* Pass/Fail Threshold table

Z axis is Limit for
L/R HC switches
Y axis is Average
flow during the
response test (gps)
X axis is estimated
Ethanol percentage
Sensor 1 is new
contains the
minimum
switches

	0.0	10.0	20.0	50.0	80.0
0.0	20	20	20	20	20
6.3	20	20	20	20	20
12.5	20	20	20	20	20
18.8	20	20	20	20	20
25.0	20	20	20	20	20
31.3	20	20	20	20	20
37.5	20	20	20	20	20
43.8	20	20	20	20	20
50.0	20	20	20	20	20
56.3	20	20	20	20	20
62.5	20	20	20	20	20
68.8	20	20	20	20	20
75.0	20	20	20	20	20
81.3	20	20	20	20	20
87.5	20	20	20	20	20
93.8	20	20	20	20	20
100.0	20	20	20	20	20

P1153 - O2S HC R to L Switches Limit Bank 2
Sensor 1* Pass/Fail Threshold table

Z axis is Limit for
R/L HC switches
Y axis is Average
flow during the
response test (gps)
X axis is estimated
Ethanol percentage
Sensor 1 is new
contains the
minimum
switches

	0.0	10.0	20.0	50.0	80.0
0.0	20	20	20	20	20
6.3	20	20	20	20	20
12.5	20	20	20	20	20
18.8	20	20	20	20	20
25.0	20	20	20	20	20
31.3	20	20	20	20	20
37.5	20	20	20	20	20
43.8	20	20	20	20	20
50.0	20	20	20	20	20
56.3	20	20	20	20	20
62.5	20	20	20	20	20
68.8	20	20	20	20	20
75.0	20	20	20	20	20
81.3	20	20	20	20	20
87.5	20	20	20	20	20
93.8	20	20	20	20	20
100.0	20	20	20	20	20

Green Sensor Delay Criteria:

The specific diagnostic (from summary table) will not be enabled until the next ignition cycle after the airflow criteria below (by sensor location) has been met:

- * B1S1 Airflow greater than 22 gps for 120000 grams of accumulated flow non-continuously.
- * B1S2 Airflow greater than 22 gps for 120000 grams of accumulated flow non-continuously.
- * B2S1 Airflow greater than 22 gps for 120000 grams of accumulated flow non-continuously.
- * B2S2 Airflow greater than 22 gps for 120000 grams of accumulated flow non-continuously.

Note that all other enable criteria must be met on the next ignition cycle for the test to run on that ignition cycle.
Note: This feature is only enabled when the vehicle is new and cannot be enabled in service

Tables supporting Engine Oil Temperature Sensor

P0196

		Coolant Temperature at ECM Power-up, Degrees C																
Axis	Curve	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
	FastFailTempDiff	75.0	60.0	45.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0

		Engine Oil temperature, Curve is accumulated engine grams airflow																
Axis	Curve	-40	-28	-16	-4	8	20	32	44	56	68	80	92	104	116	128	140	152
	TotalAccumulatedFlow	15000	14000	13000	12000	11000	10000	9000	8000	7000	6000	5000	4000	5000	4000	3000	3000	3000

Tables supporting Deactivation System Performance

P3400

		time in seconds, Curve is minimum engine run time after start																
Axis	Curve	0	5	10	30	60	100	120	140	160	180	240	300	360	420	600	700	800
	MinEngRunAfterAutoStopTable	5.0	5.0	5.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	20.0	20.0

		Curve is Engine Speed										
Axis	Curve	1st Gear	2nd Gear	3rd Gear	4th Gear	5th Gear	6th Gear	EV1	EV2	Neutral	Reverse	Park
	EngSpeedLwrLimitEnableTable	925	575	925	925	925	925	575	575	925	925	925

		Curve is Engine Speed										
Axis	Curve	1st Gear	2nd Gear	3rd Gear	4th Gear	5th Gear	6th Gear	EV1	EV2	Neutral	Reverse	Park
	EngSpeedUpLimitEnableTable	2800	2800	2800	2800	2800	2800	2800	2800	2800	2800	2800

		Curve is Engine Speed										
Axis	Curve	1st Gear	2nd Gear	3rd Gear	4th Gear	5th Gear	6th Gear	EV1	EV2	Neutral	Reverse	Park
	EngSpeedLwrLimitDisableTable	850	500	850	850	850	850	500	500	850	850	850

		Curve is Engine Speed										
Axis	Curve	1st Gear	2nd Gear	3rd Gear	4th Gear	5th Gear	6th Gear	EV1	EV2	Neutral	Reverse	Park
	EngSpeedUpLimitDisableTable	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000	3000

HalfCylToAllCylVacuum

Gear State, Vertical axis is Engine RPM

RPM	1st Gear	2nd Gear	3rd Gear	4th Gear	5th Gear	6th Gear	EV11	EV12	Neutral	Park	Reverse
0.0	0	0	0	0	0	30	0	0	0	0	0
100.0	0	0	0	0	0	30	0	0	0	0	0
200.0	0	0	0	0	0	30	0	0	0	0	0
300.0	0	0	0	0	0	30	0	0	0	0	0
400.0	0	0	0	0	0	30	0	0	0	0	0
500.0	0	0	0	0	0	30	0	0	0	0	0
600.0	0	0	0	0	0	30	0	0	0	0	0
700.0	0	0	0	0	0	25	0	0	0	0	0
800.0	0	0	0	0	0	20	0	0	0	0	0
900.0	0	0	0	0	0	15	0	0	0	0	0
1000.0	0	0	0	0	0	10	0	0	0	0	0
1100.0	0	0	0	0	0	5	0	0	0	0	0
1200.0	0	0	0	0	0	5	0	0	0	0	0
1300.0	0	0	0	0	0	5	0	0	0	0	0
1400.0	0	0	0	0	0	5	0	0	0	0	0
1500.0	0	0	0	0	0	5	0	0	0	0	0
1600.0	0	0	0	0	0	5	0	0	0	0	0
1700.0	0	0	0	0	0	5	0	0	0	0	0
1800.0	0	0	0	0	0	5	0	0	0	0	0
1900.0	0	0	0	0	0	5	0	0	0	0	0
2000.0	0	0	0	0	0	5	0	0	0	0	0
2100.0	0	0	0	0	0	5	0	0	0	0	0
2200.0	0	0	0	0	0	5	0	0	0	0	0
2300.0	0	0	0	0	0	5	0	0	0	0	0
2400.0	0	0	0	0	0	5	0	0	0	0	0
2500.0	0	0	0	0	0	5	0	0	0	0	0
2600.0	0	0	0	0	0	5	0	0	0	0	0
2700.0	0	0	0	0	0	5	0	0	0	0	0
2800.0	0	0	0	0	0	5	0	0	0	0	0
2900.0	0	0	0	0	0	5	0	0	0	0	0
3000.0	0	0	0	0	0	5	0	0	0	0	0
3100.0	0	0	0	0	0	5	0	0	0	0	0
3200.0	0	0	0	0	0	5	0	0	0	0	0

HalfCylDisabledPRNDL

PRNDL Drive 1	1
PRNDL Drive 2	1
PRNDL Drive 3	1
PRNDL Drive 4	1
PRNDL Drive 5	1
PRNDL Drive 6	0
PRNDL Neutral	1
PRNDL Reverse	1
PRNDL Park	1
PRNDL Transitional 1	1
PRNDL Transitional 2	1
PRNDL Transitional 4	1
PRNDL Transitional 7	1
PRNDL Transitional 8	1
PRNDL Transitional 11	1
PRNDL Transitional 13	1
PRNDL Transitional Illegal	1
PRNDL Transitional Between State	1

PRNDLDeviceControl

PRNDL Drive 1	1
PRNDL Drive 2	1
PRNDL Drive 3	1
PRNDL Drive 4	1
PRNDL Drive 5	1
PRNDL Drive 6	0
PRNDL Neutral	0
PRNDL Reverse	1
PRNDL Park	0
PRNDL Transitional 1	1
PRNDL Transitional 2	1
PRNDL Transitional 4	1
PRNDL Transitional 7	1
PRNDL Transitional 8	1
PRNDL Transitional 11	1
PRNDL Transitional 13	1
PRNDL Transitional Illegal	1
PRNDL Transitional Between State	1

Axis Curve

AXIS is Gear State

1st Gear	2nd Gear	3rd Gear	4th Gear	5th Gear	6th Gear	EV11	EV12	Neutral	Reverse	Park
1	0	0	0	0	0	0	0	1	0	1

Axis Curve

HalfCylDisabledTransDeviceControl

AXIS is Gear State

1st Gear	2nd Gear	3rd Gear	4th Gear	5th Gear	6th Gear	EV11	EV12	Neutral	Reverse	Park
0	0	0	0	0	0	0	0	0	0	0

RPM	Gear State, Vertical axis is Engine RPM										
	1st Gear	2nd Gear	3rd Gear	4th Gear	5th Gear	6th Gear	EV11	EV12	Neutral	Park	Reverse
0.0	0	0	0	0	0	0	0	0	0	0	0
100.0	0	0	0	0	0	0	0	0	0	0	0
200.0	0	0	0	0	0	0	0	0	0	0	0
300.0	0	0	0	0	0	0	0	0	0	0	0
400.0	0	0	0	0	0	0	0	0	0	0	0
500.0	0	0	0	0	0	0	0	0	0	0	0
600.0	0	0	0	0	0	0	0	0	0	0	0
700.0	0	0	0	0	0	0	0	0	0	0	0
800.0	0	0	0	0	0	0	0	0	0	0	0
900.0	0	0	0	0	0	0	0	0	0	0	0
1000.0	0	0	0	0	0	0	0	0	0	0	0
1100.0	0	0	0	0	0	0	0	0	0	0	0
1200.0	0	0	0	0	0	0	0	0	0	0	0
1300.0	0	0	0	0	0	0	0	0	0	0	0
1400.0	0	0	0	0	0	0	0	0	0	0	0
1500.0	0	0	0	0	0	0	0	0	0	0	0
1600.0	0	0	0	0	0	0	0	0	0	0	0
1700.0	0	0	0	0	0	0	0	0	0	0	0
1800.0	0	0	0	0	0	0	0	0	0	0	0
1900.0	0	0	0	0	0	0	0	0	0	0	0
2000.0	0	0	0	0	0	0	0	0	0	0	0
2100.0	0	0	0	0	0	0	0	0	0	0	0
2200.0	0	0	0	0	0	0	0	0	0	0	0
2300.0	0	0	0	0	0	0	0	0	0	0	0
2400.0	0	0	0	0	0	0	0	0	0	0	0
2500.0	0	0	0	0	0	0	0	0	0	0	0
2600.0	0	0	0	0	0	0	0	0	0	0	0
2700.0	0	0	0	0	0	0	0	0	0	0	0
2800.0	0	0	0	0	0	0	0	0	0	0	0
2900.0	0	0	0	0	0	0	0	0	0	0	0
3000.0	0	0	0	0	0	0	0	0	0	0	0
3100.0	0	0	0	0	0	0	0	0	0	0	0
3200.0	0	0	0	0	0	0	0	0	0	0	0

Tables supporting Engine Oil Pressure Rationality

P0521

Axis Curve	EngSpeedWeightFactorTable								
	0	500	900	1000	2000	3000	4000	4200	5000
	0.00	0.00	0.00	0.45	0.45	0.45	0.46	0.44	0.00

Axis Curve	EngOilTempWeightFactorTable								
	-10	-5	60	80	90	100	110	115	120
	0.00	0.70	0.70	0.70	0.70	0.70	0.70	0.70	0.00

Axis Curve	EngLoadStabilityWeightFactorTable								
	0	5	10	20	30	50	100	200	399
	1.00	1.00	0.50	0.30	0.00	0.00	0.00	0.00	0.00

Axis Curve	EngOilPredictionWeightFactorTable								
	0	170	250	275	360	375	400	500	600
	0.00	0.00	0.10	1.00	1.00	1.00	1.00	0.86	0.00

P0101, P0106, P0121, P1101: IFRD Residual Weighting Factors

TPS Residual Weight Factor based on RPM

RPM	0	250	750	1250	1750	2250	2750	3250	3750	4250	4750	5250	5750	6250	6750	7250	9000
	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	0.993	0.629	0.566	0.519	0.519	0.519	0.519

MAF Residual Weight Factor based on RPM

RPM	0	250	750	1250	1750	2250	2750	3250	3750	4250	4750	5250	5750	6250	6750	7250	9000
	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	0.857	0.857	0.750	0.750	0.667	0.667	0.667

MAF Residual Weight Factor Based on MAF Estimate

gm/sec	0.0	40.0	47.0	56.0	67.0	79.0	93.0	111.0	131.0	156.0	184.0	218.0	259.0	307.0	363.0	431.0	510.0
	1.000	1.000	0.909	0.836	0.773	0.719	0.660	0.584	0.501	0.408	0.336	0.294	0.268	0.243	0.219	0.191	0.159

MAP1 Residual Weight Factor based on RPM

RPM	0	250	750	1250	1750	2250	2750	3250	3750	4250	4750	5250	5750	6250	6750	7250	9000
	0.625	0.625	1.000	1.000	1.000	1.000	1.000	1.000	1.000	0.417	0.417	0.417	0.417	0.417	0.417	0.417	0.417

MAP2 Residual Weight Factor based on RPM

RPM	0	250	750	1250	1750	2250	2750	3250	3750	4250	4750	5250	5750	6250	6750	7250	9000
	0.625	0.625	1.000	1.000	1.000	1.000	1.000	1.000	1.000	0.417	0.417	0.417	0.417	0.417	0.417	0.417	0.417

P0108: MAP Cold Run Time Threshold

Coolant Temperature in Deg C

Temp	-30	-15	0	15	30
	1.5	1.2	0.8	0.5	0.0

P0068: MAP / MAF / TPS Correlation

X-axis is TPS (%)
Data is MAP threshold (kPa)

X-axis Data	4.9988	9.9991	14.9994	19.9997	25.0000	29.9988	34.9991	39.9994	99.9985
	29.7422	32.3594	32.5703	22.9531	17.9844	15.0234	100.0000	100.0000	100.0000

X-axis is TPS (%)
Data is MAF threshold (grams/sec)

X-axis Data	4.9988	9.9991	14.9994	19.9997	25.0000	29.9988	34.9991	39.9994	99.9985
	27.7578	34.2500	41.0000	34.8359	36.0781	48.3594	255.0000	255.0000	255.0000

X-axis is Engine Speed (RPM)
Data is max MAP vs RPM (grams/sec)

X-axis Data	600.0000	25.0000	60.0000	100.0000	140.0000	180.0000	220.0000	250.0000	280.0000	300.0000
-------------	----------	---------	---------	----------	----------	----------	----------	----------	----------	----------

X-axis is battery Voltage (V)
Data is max MAP vs Voltage (grams/sec)

X-axis Data	6.0000	0.0000	18.0000	40.0000	75.0000	135.0000	250.0000	500.0000	500.0000	500.0000
-------------	--------	--------	---------	---------	---------	----------	----------	----------	----------	----------

P1682: Ignition Voltage Correlation

X-axis is IAT (DegC)
Data is Voltage threshold (V)

X-axis Data	23.0000	85.0000	95.0000	105.0000	125.0000
	7.0000	8.6992	9.0000	9.1992	10.0000

P16F3: No fast unmanaged retarded spark above the applied spark

X-axis is Erpm
Y-axis is Air per Cylinder (mg)
Data is spark delta threshold (kPa)

KISPRK_phi_DeltaTorqueScryAdv

APC/Erpm	500.00	980.74	1461.48	1942.23	2422.97	2903.71	3384.45	3865.20	4345.94	4826.68	5307.42	5788.16	6268.91	6749.65	7230.39	7711.13	8191.88
80.00	32.16	37.55	28.53	32.33	34.14	34.20	30.44	28.47	26.09	20.25	20.02	17.03	17.03	17.03	17.03	17.03	17.03
160.00	35.20	38.52	22.81	22.22	21.84	21.78	20.23	19.02	17.44	14.80	14.67	12.97	12.97	12.97	12.97	12.97	12.97
240.00	38.86	39.16	19.77	15.89	15.42	15.22	14.64	14.55	13.41	11.94	11.80	10.63	10.63	10.63	10.63	10.63	10.63
320.00	29.11	27.61	18.14	14.08	13.30	13.47	13.45	13.28	12.06	10.92	10.59	9.67	9.67	9.67	9.67	9.67	9.67
400.00	19.59	17.23	17.38	12.77	12.23	12.83	13.27	12.77	11.31	10.23	9.78	9.05	9.05	9.05	9.05	9.05	9.05
480.00	19.20	12.64	13.05	12.86	12.27	12.84	13.13	12.17	10.69	9.69	9.16	8.50	8.50	8.50	8.50	8.50	8.50
560.00	33.19	13.23	9.94	9.83	11.56	13.11	11.50	10.13	9.20	8.53	7.84	7.84	7.84	7.84	7.84	7.84	7.84
640.00	29.84	11.81	8.61	8.19	8.55	11.53	11.88	10.72	9.64	8.73	7.88	7.11	7.11	7.11	7.11	7.11	7.11
720.00	52.58	11.83	8.33	6.78	7.39	7.78	8.73	8.88	8.52	7.59	7.00	6.48	6.48	6.48	6.48	6.48	6.48
800.00	57.98	10.75	8.48	5.84	6.66	6.34	6.66	7.09	7.11	6.31	5.67	5.39	5.39	5.39	5.39	5.39	5.39
880.00	64.64	9.86	7.80	5.34	5.83	6.02	6.61	6.52	5.78	5.41	5.20	4.89	4.89	4.89	4.89	4.89	4.89
960.00	64.64	9.86	7.80	5.34	5.83	6.02	6.61	6.52	5.78	5.41	5.20	4.89	4.89	4.89	4.89	4.89	4.89
1040.00	64.64	9.86	7.80	5.34	5.83	6.02	6.61	6.52	5.78	5.41	5.20	4.89	4.89	4.89	4.89	4.89	4.89
1120.00	64.64	9.86	7.80	5.34	5.83	6.02	6.61	6.52	5.78	5.41	5.20	4.89	4.89	4.89	4.89	4.89	4.89
1200.00	64.64	9.86	7.80	5.34	5.83	6.02	6.61	6.52	5.78	5.41	5.20	4.89	4.89	4.89	4.89	4.89	4.89
1280.00	64.64	9.86	7.80	5.34	5.83	6.02	6.61	6.52	5.78	5.41	5.20	4.89	4.89	4.89	4.89	4.89	4.89
1360.00	64.64	9.86	7.80	5.34	5.83	6.02	6.61	6.52	5.78	5.41	5.20	4.89	4.89	4.89	4.89	4.89	4.89

P16F3: Absolute difference of redundant calculated engine speed

X-axis is engine speed (rpm)
Data is engine speed delta (rpm)

X-axis	0.0000	250.0000	500.0000	750.0000	1000.0000
Data	1000.0000	750.0000	500.0000	300.0000	300.0000

P16F3: Absolute difference of the calculated Intake Manifold Pressure during engine event versus during time event

X-axis is engine torque (Nm)
Data is IMAIP delta threshold (kPa)

X-axis	0.0000	50.0000	100.0000	150.0000	407.0000	408.0000
Data	18.0000	18.0000	18.0000	18.0000	18.0000	255.0000

KtPHSD_phi_CamPosErrorLimlc1

X axis is Deg C
Y axis is RPM

	-40.0000	-28.0000	-16.0000	-4.0000	8.0000	20.0000	32.0000	44.0000	56.0000	68.0000	80.0000	92.0000	104.0000	116.0000	128.0000	140.0000	152.0000
400	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
800	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
1200	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
1600	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
2000	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
2400	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
2800	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
3200	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
3600	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
4000	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
4400	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
4800	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
5200	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
5600	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
6000	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
6400	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000
6800	13.0000	13.0000	10.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	8.0000	10.0000	10.0000

KtPHSD_t_StablePositionTimeEc2

X axis is Deg C
Y axis is RPM

	-40.0000	-28.0000	-16.0000	-4.0000	8.0000	20.0000	32.0000	44.0000	56.0000	68.0000	80.0000	92.0000	104.0000	116.0000	128.0000	140.0000	152.0000
400	1.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
800	1.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
1200	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
1600	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
2000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
2400	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
2800	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
3200	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
3600	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
4000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
4400	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
4800	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
5200	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
5600	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
6000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
6400	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
6800	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000

P0300-P0308: Idle SCD

(decel index (> Idle
SCD AND > Idle
SCD ddt Tables))

load
Load

	400	500	600	700	800	900	1000	1100	1200				
8	675	575	475	325	250	170	135	100	70				
9	650	550	450	300	220	150	120	80	60				
11	645	535	425	280	190	130	105	63	55				
12	580	515	450	285	175	125	90	60	53				
13	525	500	475	290	180	120	95	75	55				
14	563	525	488	295	185	128	103	80	57				
15	600	550	500	300	190	135	110	85	58				
16	613	563	513	313	195	143	120	88	59				
17	625	575	525	325	200	150	130	90	60				
18	638	588	538	338	213	163	138	95	63				
19	650	600	550	350	225	175	145	100	65				
21	663	613	563	363	238	183	150	108	68				
22	675	625	575	375	250	190	155	115	70				
24	688	638	588	388	263	195	160	120	73				
25	700	650	600	400	275	200	165	125	75				
27	713	663	613	413	288	208	170	133	80				
29	725	675	625	425	300	215	175	140	85				

P0300-P0308: Idle SCD ddt

load

	400	500	600	700	800	900	1000	1100	1200				
8	725	625	525	325	250	170	135	100	70				
9	700	600	500	300	220	150	120	70	60				
11	665	565	465	280	190	130	105	58	50				
12	640	545	450	280	175	125	90	50	48				
13	565	520	475	290	180	120	95	60	50				
14	583	535	488	295	185	128	103	70	53				
15	600	550	500	300	190	135	110	80	55				
16	613	563	513	313	195	143	120	83	56				
17	625	575	525	325	200	150	130	85	58				
18	638	588	538	338	213	163	138	88	60				
19	650	600	550	350	225	175	145	90	62				
21	663	613	563	363	238	183	150	100	64				
22	675	625	575	375	250	190	155	110	66				
24	688	638	588	388	263	195	160	118	68				
25	700	650	600	400	275	200	165	125	70				
27	713	663	613	413	288	208	170	133	72				
29	725	675	625	425	300	215	175	140	74				

P0300-P0308: SCD Delta

(>SCD Delta AND >
SCD Delta ddt
Tables))

load
Load

	400	500	600	700	800	900	1000	1100	1200	1400	1600	1800	2000
8	675	575	475	325	250	170	135	100	70	35	32767	32767	32767
9	650	550	450	300	220	150	120	80	60	30	32767	32767	32767
11	645	535	425	280	190	130	105	63	55	28	32767	32767	32767
12	580	515	450	285	175	125	90	60	53	28	32767	32767	32767
13	525	500	475	290	180	120	95	75	55	30	32767	32767	32767
15	600	550	500	300	190	135	110	85	58	35	32767	32767	32767
17	625	575	525	325	200	150	130	90	60	40	32767	32767	32767
19	650	600	550	350	225	175	145	100	65	48	32767	32767	32767
22	675	625	575	375	250	190	155	115	70	55	32767	32767	32767
25	700	650	600	400	275	200	165	125	75	65	32767	32767	32767
29	725	675	625	425	300	215	175	140	85	70	32767	32767	32767
33	750	700	650	450	325	230	185	155	105	75	32767	32767	32767
38	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
42	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
48	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
54	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
61	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767

P0300-P0308: SCD Delta ddt

load

	400	500	600	700	800	900	1000	1100	1200	1400	1600	1800	2000
8	725	625	525	325	250	170	135	100	70	40	32767	32767	32767
9	700	600	500	300	220	150	120	70	60	35	32767	32767	32767
11	665	565	465	280	190	130	105	58	50	30	32767	32767	32767
12	640	545	450	280	175	125	90	50	48	28	32767	32767	32767
13	565	520	475	290	180	120	95	60	50	30	32767	32767	32767
15	600	550	500	300	190	135	110	80	55	35	32767	32767	32767
17	625	575	525	325	200	150	130	85	65	40	32767	32767	32767
19	650	600	550	350	225	175	145	90	75	48	32767	32767	32767
22	675	625	575	375	250	190	155	110	80	55	32767	32767	32767
25	700	650	600	400	275	200	165	125	85	65	32767	32767	32767
29	775	700	625	425	300	215	175	140	90	80	32767	32767	32767
33	850	750	650	450	325	230	185	150	105	85	32767	32767	32767
38	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
42	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
48	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
54	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
61	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767

P0300-P0308: Idle Cyl Mode

load
Load

(-Idle Cyl Mode
AND> Idle Cyl
Mode ddt Tables))

	400	500	600	700	800	900	1000	1100	1200				
8	1550	1350	1150	900	650	600	450	220	200				
9	1500	1300	1100	800	600	500	350	200	175				
11	1425	1250	1075	700	450	350	300	185	165				
12	1250	1150	1050	650	425	300	200	175	160				
13	1300	1200	1100	675	400	250	175	155	145				
14	1300	1225	1150	688	400	238	188	165	150				
15	1300	1250	1200	700	400	225	200	175	155				
16	1300	1263	1225	725	413	238	208	180	160				
17	1300	1275	1250	750	425	215	215	185	165				
18	1313	1288	1263	775	438	255	223	188	170				
19	1325	1300	1275	800	450	260	230	190	175				
21	1338	1313	1288	825	463	268	238	193	180				
22	1350	1325	1300	850	475	275	245	195	185				
24	1363	1338	1313	875	488	288	255	198	190				
25	1375	1350	1325	900	500	300	265	200	195				
27	1413	1375	1338	950	525	325	283	225	205				
29	1450	1400	1350	1000	550	350	300	250	215				

P0300-P0308: Idle Cyl Mode ddt

load

	400	500	600	700	800	900	1000	1100	1200				
8	1600	1350	1100	900	650	600	580	200	175				
9	1550	1300	1050	800	600	500	350	180	155				
11	1500	1250	1000	700	450	350	300	165	145				
12	1300	1150	1000	625	425	300	200	160	125				
13	1400	1200	1000	650	385	275	200	135	120				
14	1400	1225	1050	663	380	263	200	145	130				
15	1400	1250	1100	675	375	250	200	155	140				
16	1375	1263	1150	688	388	250	208	160	145				
17	1350	1275	1200	700	400	250	215	165	150				
18	1350	1288	1225	725	413	255	223	170	158				
19	1350	1300	1250	750	425	260	230	175	165				
21	1350	1313	1275	763	438	268	238	180	170				
22	1350	1325	1300	775	450	275	245	185	175				
24	1363	1338	1313	788	463	288	255	193	178				
25	1375	1350	1325	800	475	300	265	200	180				
27	1413	1375	1338	825	488	325	283	225	190				
29	1450	1400	1350	850	500	350	300	250	200				

Cyl Mode AND >
Cyl Mode ddt
(Tables))

P0300-P0308: Cyl Mode

Load

	400	500	600	700	800	900	1000	1100	1200	1400	1600	1800	2000	2200	2400	2600
8	1550	1350	1150	1000	650	600	450	220	200	110	70	55	36	21	18	15
9	1500	1300	1100	900	600	500	350	200	175	105	65	50	34	20	17	14
11	1425	1250	1075	775	450	375	300	185	165	100	60	45	32	22	18	15
12	1250	1150	1050	725	425	325	230	175	160	95	65	40	33	25	18	15
13	1300	1200	1100	800	400	275	200	155	145	100	70	50	35	33	25	18
15	1300	1250	1200	850	425	250	225	180	160	115	85	55	43	35	28	21
17	1300	1275	1250	900	450	275	250	200	175	125	105	70	48	38	30	24
19	1325	1300	1275	850	475	300	275	215	180	155	110	75	55	40	32	26
22	1350	1325	1300	1000	500	325	300	230	200	185	120	90	65	45	35	28
25	1375	1350	1325	1050	550	350	325	250	225	210	140	100	75	55	45	33
29	1450	1400	1350	1100	650	450	400	300	265	225	160	120	85	65	50	35
33	1525	1450	1375	1150	750	550	450	400	325	250	180	130	90	75	60	45
38	1600	1500	1400	1200	800	600	475	450	350	275	200	140	110	90	65	50
42	1750	1600	1450	1250	850	625	500	475	375	300	225	160	120	95	70	55
48	1900	1700	1500	1300	900	600	525	500	400	325	250	180	140	100	75	60
54	2050	1800	1550	1350	950	700	550	525	425	350	275	200	150	105	80	70
61	2200	1900	1600	1400	1000	750	600	550	425	375	300	220	175	110	90	80

Load

	2800	3000	3500	4000	4500	5000	5500	6000	6500	7000
8	13	11	10	9	9	9	9	9	32767	32767
9	13	10	9	8	8	8	8	8	32767	32767
11	11	10	8	8	8	8	8	8	32767	32767
12	11	10	8	7	7	7	7	7	32767	32767
13	14	12	7	7	7	6	6	6	32767	32767
15	16	13	8	7	6	6	6	6	32767	32767
17	19	14	8	7	6	5	5	5	32767	32767
19	21	16	9	8	6	5	5	5	32767	32767
22	24	18	10	8	6	5	4	4	32767	32767
25	26	20	10	9	7	5	4	4	32767	32767
29	32	25	11	10	7	5	4	4	32767	32767
33	35	28	13	11	8	5	5	4	32767	32767
38	45	30	16	12	8	6	5	5	32767	32767
42	50	33	19	14	9	6	6	5	32767	32767
48	55	40	22	16	10	7	6	6	32767	32767
54	60	43	25	18	11	7	7	6	32767	32767
61	65	45	28	20	13	9	8	7	32767	32767

P0300-P0308: Cyl Mode ddt

Load

	400	500	600	700	800	900	1000	1100	1200	1400	1600	1800	2000	2200	2400	2600
8	1600	1350	1100	1000	650	600	580	200	175	115	70	55	36	24	19	15
9	1550	1300	1050	900	600	500	350	180	155	110	60	50	34	23	19	14
11	1500	1250	1000	750	450	375	300	165	145	90	50	43	32	22	18	14
12	1300	1150	1000	625	425	325	230	160	125	75	45	35	28	25	19	14
13	1400	1200	1000	700	400	275	200	135	120	80	50	38	30	28	22	16
15	1400	1250	1100	725	410	250	210	160	140	90	65	40	38	30	25	18
17	1350	1275	1200	800	425	275	225	180	150	100	85	60	43	33	28	20
19	1350	1300	1250	750	450	300	250	200	165	130	90	65	50	35	32	22
22	1350	1325	1300	775	475	325	275	210	180	160	100	80	60	40	35	25
25	1375	1350	1325	800	500	350	300	225	200	185	120	90	70	45	45	30
29	1450	1400	1350	850	625	450	350	300	235	200	140	110	80	60	50	35
33	1525	1450	1375	900	750	525	425	400	300	225	160	115	85	65	60	45
38	1600	1500	1400	950	800	550	450	425	325	250	180	125	90	80	65	50
42	1750	1600	1450	1000	850	600	475	450	350	275	200	140	100	85	70	55
48	1900	1700	1500	1050	900	650	500	475	375	300	225	160	125	90	75	60
54	2000	1800	1600	1100	950	700	525	500	400	325	250	180	135	95	80	70
61	2100	1900	1700	1150	1000	750	575	525	425	350	275	200	150	100	90	80

Load

	2800	3000	3500	4000	4500	5000	5500	6000	6500	7000
8	13	12	0	0	0	0	0	0	32767	32767
9	11	11	0	0	0	0	0	0	32767	32767
11	10	9	0	0	0	0	0	0	32767	32767
12	11	10	0	0	0	0	0	0	32767	32767
13	13	10	0	0	0	0	0	0	32767	32767
15	14	11	0	0	0	0	0	0	32767	32767
17	17	11	0	0	0	0	0	0	32767	32767
19	19	13	0	0	0	0	0	0	32767	32767
22	20	16	0	0	0	0	0	0	32767	32767
25	22	20	0	0	0	0	0	0	32767	32767
29	28	28	0	0	0	0	0	0	32767	32767
33	35	30	0	0	0	0	0	0	32767	32767
38	45	35	0	0	0	0	0	0	32767	32767
42	50	38	0	0	0	0	0	0	32767	32767
48	55	40	0	0	0	0	0	0	32767	32767
54	60	43	0	0	0	0	0	0	32767	32767
61	65	45	0	0	0	0	0	0	32767	32767

P0300-P0308: Rev Mode Table

OR (decal index >
Rev Mode Table)

Load

	400	500	600	700	800	900	1000	1100	1200	1400	1600	1800	2000	2200	2400	2600
8	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
9	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
11	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
12	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
13	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
15	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
17	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
19	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
22	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
25	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
29	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
33	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
38	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
42	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
48	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
54	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767
61	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767	32767

Load

	2800	3000	3500	4000	4500	5000	5500	6000	6500	7000
8	32767	160	140	115	100	120	120	120	32767	32767
9	32767	145	120	100	75	100	100	100	32767	32767
11	32767	130	100	90	55	80	80	80	32767	32767
12	32767	120	90	85	50	50	55	60	32767	32767
13	32767	95	80	75	55	42	42	40	32767	32767
15	32767	90	85	65	40	40	35	35	32767	32767
17	32767	100	88	80	65	50	35	30	32767	32767
19	32767	150	95	90	70	60	40	35	32767	32767
22	32767	170	105	100	80	70	50	40	32767	32767
25	32767	190	115	110	90	80	60	50	32767	32767
29	32767	225	125	120	100	90	70	60	32767	32767
33	32767	250	140	130	110	100	80	70	32767	32767
38	32767	300	170	140	125	110	90	80	32767	32767
42	32767	350	200	160	140	120	100	90	32767	32767
48	32767	400	250	180	160	130	115	100	32767	32767
54	32767	450	300	200	175	140	125	110	32767	32767
61	32767	500	350	225	200	150	135	120	32767	32767

P0300-P0308: AFM Mode Table

OR (decal index >
AFM Table if active
fuel management)

Load

	400	500	600	700	800	900	1000	1100	1200	1400	1600	1800	2000	2200	2400	2600
11	1350	1250	1150	900	750	600	500	350	250	160	125	80	65	50	35	30
12	1300	1200	1100	800	700	550	450	310	245	145	110	70	55	45	30	25
13	1250	1150	1050	750	650	500	420	275	215	130	100	60	53	43	28	23
14	1200	1100	1000	700	600	450	385	240	205	125	95	55	50	40	26	21
16	1150	1050	950	675	550	435	350	250	190	120	80	53	48	38	28	20
18	1100	1000	900	650	525	425	340	265	200	130	85	50	45	35	29	21
21	1150	1050	950	625	500	415	345	275	215	140	95	65	48	38	30	22
23	1200	1100	1000	675	440	405	350	300	240	160	115	80	50	45	33	24
27	1250	1150	1050	675	460	415	375	325	270	180	140	100	55	50	40	30
30	1400	1250	1100	750	500	425	400	350	300	200	160	120	65	60	45	35
35	1450	1300	1150	825	550	450	450	400	350	225	180	130	75	65	50	40
40	1500	1350	1200	900	600	500	500	450	400	250	200	140	90	70	55	45
45	1550	1400	1250	950	625	550	500	450	400	220	150	110	80	60	50	40
51	1600	1450	1300	1000	650	600	600	550	500	350	240	160	120	85	65	55
58	1650	1500	1350	1075	675	650	650	600	550	400	260	170	130	90	70	60
65	1700	1550	1400	1150	700	700	700	650	600	450	280	180	140	95	75	65
74	1750	1600	1450	1250	750	750	750	700	650	500	300	190	150	100	80	70

Load

	2800	3000	3500	4000	4500	5000	5500	6000	6500	7000
11	25	20	32767	32767	32767	32767	32767	32767	32767	32767
12	23	19	32767	32767	32767	32767	32767	32767	32767	32767
13	20	18	32767	32767	32767	32767	32767	32767	32767	32767
14	19	17	32767	32767	32767	32767	32767	32767	32767	32767
16	18	16	32767	32767	32767	32767	32767	32767	32767	32767
18	17	15	32767	32767	32767	32767	32767	32767	32767	32767
21	18	16	32767	32767	32767	32767	32767	32767	32767	32767
23	20	17	32767	32767	32767	32767	32767	32767	32767	32767
27	22	18	32767	32767	32767	32767	32767	32767	32767	32767
30	25	22	32767	32767	32767	32767	32767	32767	32767	32767
35	30	25	32767	32767	32767	32767	32767	32767	32767	32767
40	35	30	32767	32767	32767	32767	32767	32767	32767	32767
45	40	35	32767	32767	32767	32767	32767	32767	32767	32767
51	45	40	32767	32767	32767	32767	32767	32767	32767	32767
58	50	45	32767	32767	32767	32767	32767	32767	32767	32767
65	55	50	32767	32767	32767	32767	32767	32767	32767	32767
74	60	55	32767	32767	32767	32767	32767	32767	32767	32767

P0300-P0308: Zero torque engine load

Zero Torque: All
Cylinders active

RPM	Pct load
400	9.00
500	8.54
600	8.15
700	7.93
800	7.80
900	7.88
1000	7.98
1100	8.04
1200	8.12
1400	8.28
1600	8.44
1800	8.60
2000	8.76
2200	8.92
2400	9.08
2600	9.24
2800	9.40
3000	9.56
3500	11.73
4000	13.89
4500	16.06
5000	18.23
5500	20.40
6000	22.56
6500	24.73
7000	26.90

Baro KPa	Multiplier
65	0.82
70	0.85
75	0.88
80	0.90
85	0.93
90	0.95
95	0.97
100	1.00
105	1.03

Active Fuel
Management
(AFM)

RPM	Pct load
400	10.20
500	9.80
600	9.65
700	9.55
800	9.60
900	9.65
1000	9.70
1100	9.75
1200	9.80
1400	9.95
1600	10.10
1800	10.25
2000	10.40
2200	10.55
2400	10.70
2600	10.85
2800	11.00
3000	11.15
3500	13.05
4000	14.95
4500	16.86
5000	18.76
5500	20.66
6000	22.56
6500	24.47
7000	26.37

Note: Zero torque is adjusted for Baro. Mistfire thresholds are relative to (maximum air density PID \$1188 SAE xxx) and do not shift appreciably with altitude compared to (current density as defined PID \$04 SAE 1979)

Catalyst Damaging
Mistfire Percentage

	0	1000	2000	3000	4000	5000	6000	7000
0	11	11	11	10	7	5	5	5
10	11	11	11	10	7	5	5	5
20	11	11	10	7	5	5	5	5
30	10	10	10	6	5	5	5	5
40	7	7	5	5	5	5	5	5
50	6	6	5	5	5	5	5	5
60	5	5	5	5	5	5	5	5
70	5	5	5	5	5	5	5	5
80	5	5	5	5	5	5	5	5
90	5	5	5	5	5	5	5	5
100	5	5	5	5	5	5	5	5

load
Load

Transfer Case HIGH Ratio Margin

X-axis is Veh Spd
km/hr
Y-axis is Engine Torq
N-m
Data is Ratio Margin

	0.0	3.0	5.0	5.1	12.0	15.0	18.0	21.0	24.0
-200.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
-150.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
-100.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
-50.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
0.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
50.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
100.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
150.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
200.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1

Transfer Case LOW Ratio Margin

X-axis is Veh Spd
km/hr
Y-axis is Engine Torq
N-m
Data is Ratio Margin

	0.0	3.0	5.0	5.1	12.0	15.0	18.0	21.0	24.0
-200.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
-150.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
-100.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
-50.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
0.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
50.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
100.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
150.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1
200.0	8.0	8.0	8.0	0.1	0.1	0.1	0.1	0.1	0.1

Transfer Case NEUTRAL Ratio Margin

X-axis is Veh Spd
km/hr
Y-axis is Engine Torq
N-m
Data is Ratio Margin

	0.0	3.0	5.0	5.1	12.0	15.0	18.0	21.0	24.0
-200.0	8.0	8.0	8.0	1.0	0.1	0.1	0.1	0.1	0.1
-150.0	8.0	8.0	8.0	1.0	1.0	1.0	0.5	0.5	0.5
-100.0	8.0	8.0	8.0	2.0	2.0	2.0	1.0	1.0	1.0
-50.0	8.0	8.0	8.0	4.0	4.0	4.0	2.0	2.0	2.0
0.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
50.0	8.0	8.0	8.0	4.0	4.0	4.0	2.0	2.0	2.0
100.0	8.0	8.0	8.0	2.0	2.0	2.0	1.0	1.0	1.0
150.0	8.0	8.0	8.0	1.0	1.0	1.0	0.5	0.5	0.5
200.0	8.0	8.0	8.0	1.0	0.1	0.1	0.1	0.1	0.1

Cert Doc Bundle Name	Pcodes							
CatalystSysEfficiencyLoB1_FA	P0420							
CatalystSysEfficiencyLoB2_FA	P0430							
A/F Imbalance Bank1	P219A							
A/F Imbalance Bank2	P219B							
FuelTrimSystemB1_FA	P0171	P0172						
FuelTrimSystemB2_FA	P0174	P0175						
FuelTrimSystemB1_TFTKO	P0171	P0172						
FuelTrimSystemB2_TFTKO	P0174	P0175						
EvapPurgeSolenoidCircuit_FA	P0443							
EvapFlowDuringNonPurge_FA	P0496							
EvapVentSolenoidCircuit_FA	P0449							
EvapSmallLeak_FA	P0442							
EvapEmissionSystem_FA	P0455	P0446						
FuelTankPressureSnsrCkt_FA	P0462	P0453						
CoolingFanSpeedTooHigh_FA	P0495							
FanOutputDriver_FA	P0480	P0481	P0482					
FuelLevelDataFault	P0461	P0462	P0463	P2066	P2067	P2068		
PowertrainRelayFault	P1682							
PowertrainRelayStateOn_FA	P0685							
PowertrainRelayStateOn_Error	P0685							
IgnitionOffTimer_FA	P2610							
IgnitionOffTimeValid	P2610							
EngineModeNotRunTimerError	P2610							
EngineModeNotRunTimer_FA	P2610							
VehicleSpeedSensor_FA	P0502	P0503	P0722	P0723				
VehicleSpeedSensorError	P0502	P0503	P0722	P0723				
KS_Ckt_Perf_B1B2_FA	P0324	P0325	P0326	P0327	P0328	P0330	P0332	P0333
IgnitionOutputDriver_FA	P0351	P0352	P0353	P0354	P0355	P0356	P0357	P0358
ECT_Sensor_Ckt_FA	P0117	P0118	P0119					
ECT_Sensor_Ckt_TPTKO	P0117	P0118	P0119					
ECT_Sensor_Ckt_TFTKO	P0117	P0118	P0119					
ECT_Sensor_DefaultDetected	P0117	P0118	P0116	P0125				
ECT_Sensor_FA	P0117	P0118	P0116	P0125	P0128			
ECT_Sensor_TFTKO	P0117	P0118	P0116	P0125	P0119			
ECT_Sensor_Perf_FA	P0116							
ECT_Sensor_Ckt_FP	P0117	P0118						
ECT_Sensor_Ckt_High_FP	P0118							
ECT_Sensor_Ckt_Low_FP	P0117							
THMR_Insuff_Flow_FA	P0087							
THMR_Therm_Control_FA	P0597	P0598	P0599					
THMR_RCT_Sensor_Ckt_FA	P0083	P0084						
THMR_ECT_Sensor_Ckt_FA	P0117	P0118	P0116	P0125	P0086			

Cert Doc Bundle Name	Pcodes											
O2S_Bank_1_TFTKO	P0131	P0132	P0134	P2A00								
O2S_Bank_2_TFTKO	P0151	P0152	P0154	P2A03								
O2S_Bank_1_Sensor_1_FA	P2A00	P0131	P0132	P0133	P0134	P0135	P0053	P1133	P015A	P015B	P0030	
O2S_Bank_1_Sensor_2_FA	P013A	P013B	P013E	P013F	P2270	P2271	P0137	P0138	P0140	P0141	P0054	P0036
O2S_Bank_2_Sensor_1_FA	P2A03	P0151	P0152	P0153	P0154	P0155	P0059	P1153	P015C	P015D	P0050	
O2S_Bank_2_Sensor_2_FA	P013C	P013D	P014A	P014B	P2272	P2273	P0157	P0158	P0160	P0161	P0060	P0056
PO2S_Bank_1_Snsr_2_FA	P0137	P0138	P0140	P0036	P0054	P0141	P2270	P2271				
PO2S_Bank_2_Snsr_2_FA	P0157	P0158	P0160	P0056	P0060	P0161	P2272	P2273				
If sensor application if modeled	EngOilTempSensorCircuitFA	P0197	P0198									
	EngOilModeledTempValid	ECT_Sensor_FA	IAT_SensorCircuitFA									
EngOilPressureSensorCktFA	P0522	P0523										
EngOilPressureSensorFA	P0521	P0522	P0523									
CylinderDeacDriverTFTKO	P3401	P3409	P3417	P3425	P3433	P3441	P3449					
BrakeBoosterSensorFA	P0556	P0557	P0558									
if modeled	GetBBVR_b_BrkBoostVacVld	BrakeBoosterVacuumValid	VehicleSpeedSensor_FA	MAP_SensorFA								
CylinderDeacDriverTFTKO	P3401	P3409	P3417	P3425	P3433	P3441	P3449					
EngineTorqueEstInaccurate	EngineMisfireDetected_FA	FuelInjtorCircuit_FA	FuelInjtorCircuit_TFTKO	FuelTrimSystemB1_FA	FuelTrimSystemB2_FA	MAF_SensorTFTKO	MAP_SensorTFTKO	EGRValuePerforamnce_FA				
AmbientAirPressCktFA	P2228	P2229										
AmbientAirPressCktFA_NoSnsr	P0106	P0107	P0108									
AmbientAirDefault_NA	P0106	P0107	P0108	P2227	P2228	P2229						
AmbientAirDefault_SC	P012B	P012C	P012D	P2227	P2228	P2229						
AmbientAirDefault_NoSnsr	P0106	P0107	P0108									
AmbientAirDefault	Normally Aspirated, SC if suprecharged, NoSnsr is Normally Aspirated with no Baro Sensor											
IAT_SensorCircuitTFTKO	P0112	P0113										
IAT_SensorCircuitFA	P0112	P0113										
IAT_SensorCircuitFP	P0112	P0113										
IAT_SensorTFTKO	P0111	P0112	P0113									
IAT_SensorFA	P0111	P0112	P0113									
IAT2_SensorCktTFTKO	P0097	P0098										
IAT2_SensorCktTFTKO_NoSnsr	P0112	P0113										
IAT2_SensorCircuitFA	P0097	P0098										
IAT2_SensorCircuitFA_NoSnsr	P0112	P0113										
IAT2_SensorcircuitFP	P0097	P0098										
IAT2_SensorcircuitFP_NoSnsr	P0112	P0113										
IAT2_SensorTFTKO	P0096	P0097	P0098									
IAT2_SensorTFTKO_NoSnsr	P0111	P0112	P0113									
IAT2_SensorFA	P0096	P0097	P0098									
IAT2_SensorFA_NoSnsr	P0111	P0112	P0113									

Cert Doc Bundle Name	Pcodes										
SuperchargerBypassValveFA	P2261										
CylDeacSystemTFTKO	P3400										
MAF_SensorPerfFA	P0101										
MAF_SensorPerfTFTKO	P0101										
MAP_SensorPerfFA	P0106										
MAP_SensorPerfTFTKO	P0106										
SCIAP_SensorPerfFA	P012B										
SCIAP_SensorPerfTFTKO	P012B										
ThrottlePositionSnsrPerfFA	P0121										
ThrottlePositionSnsrPerfTFTKO	P0121										
MAF_SensorFA	P0101	P0102	P0103								
MAF_SensorTFTKO	P0101	P0102	P0103								
MAF_SensorFP	P0102	P0103									
MAF_SensorCircuitFA	P0102	P0103									
MAF_SensorCircuitTFTKO	P0102	P0103									
MAP_SensorTFTKO	P0106	P0107	P0108								
MAP_SensorFA	P0106	P0107	P0108								
SCIAP_SensorFA	P012B	P012C	P012D								
SCIAP_SensorTFTKO	P012B	P012C	P012D								
SCIAP_SensorCircuitFP	P012C	P012D									
AfterThrottlePressureFA_NA	P0106	P0107	P0108								
AfterThrottlePressureFA_SC	P012B	P012C	P012D								
AfterThrottleVacuumTFTKO_NA	P0106	P0107	P0108								
AfterThrottleVacuumTFTKO_SC	P012B	P012C	P012D								
SCIAP_SensorCircuitFA	P012C	P012D									
AfterThrottlePressTFTKO_NA	P0106	P0107	P0108								
AfterThrottlePressTFTKO_SC	P012B	P012C	P012D								
MAP_SensorCircuitFA	P0107	P0108									
MAP_EngineVacuumStatus	P0108 Pending										
PPS1_OutOfRange_Composite	P2122	P2123	P0651								
PPS2_OutOfRange_Composite	P2127	P2128	P0641								
PPS1_OutOfRange_Composite	P2122	P2123	P0651								
PPS2_OutOfRange_Composite	P2127	P2128	P0641								
PPS1_OutOfRange	P2122	P2123									
PPS2_OutOfRange	P2127	P2128									
PPS1_OutOfRange	P2122	P2123									
PPS2_OutOfRange	P2127	P2128									
AcceleratorPedalFailure	P2122	P2123	P2127	P2128	P2138	P0641	P0651				
ControllerRAM_Error_FA	P0604										
ControllerProcessorPerf_FA	P0606										
TPS1_OutOfRange_Composite	P0122	P0123	P0651								
TPS2_OutOfRange_Composite	P0222	P0223	P0652								
TPS_FA	P0120	P0122	P0123	P0220	P0222	P0223	P2135				
TPS_TFTKO	P0120	P0122	P0123	P0220	P0222	P0223	P2135				
TPS_Performance_FA	P0068	P0121	P1516	P2101							
TPS_Performance_TFTKO	P0068	P0121	P1516	P2101							
TPS_FaultPending	P0120	P0122	P0123	P0220	P0222	P0223	P2135				
TPS_ThrottleAuthorityDefaulted	P0068	P0120	P0122	P0123	P0220	P0222	P0223	P1516	P2135	P2176	
EnginePowerLimited	P0068	P0606	P0120	P0122	P0123	P0220	P0222	P0223	P0641	P0651	
	P1516	P2101	P2120	P2122	P2123	P2125	P2127	P2128	P2135	P2138	P2176
5VoltReferenceA_FA	P0641										
5VoltReferenceB_FA	P0651										

Cert Doc Bundle Name	Pcodes								
AnyCamPhaser_FA	P0010	P0011	P0013	P0014	P0020	P0021	P0023	P0024	
AnyCamPhaser_TFTKO	P0010	P0011	P0013	P0014	P0020	P0021	P0023	P0024	
IntkCamPhaser_FA	P0010	P0011	P0020	P0021					
EGRValvePerformance_FA	P0401	P042E							
EGRValveCircuit_FA	P0403	P0404	P0405	P0406					
EGRValve_FP	P0405	P0406	P042E						
EGRValveCircuit_TFTKO	P0403	P0404	P0405	P0406					
EGRValvePerformance_TFTKO	P0401	P042E							
CrankIntakeCamCorrelationFA	P0016	P0018							
IntakeCamSensorTFTKO	P0016	P0018	P0340	P0341	P0345	P0346			
CrankSensorTFTKO	P0335	P0336							
CrankExhaustCamCorrelationFA	P0017	P0019							
ExhaustCamSensorTFTKO	P0017	P0019	P0365	P0366	P0390	P0391			
MAP_SensorFA	P0106	P0107	P0108						
MAF_SensorFA	P0101	P0102	P0103						
MAF_SensorTFTKO	P0101	P0102	P0103						
FuelInjectorCircuit_FA	P0201	P0202	P0203	P0204	P0205	P0206	P0207	P0208	
IAT_SensorFA	P0111	P0112	P0113						
ECT_Sensor_Ckt_FA	P0117	P0118	P0119						
EngineMisfireDetected_FA	P0300	P0301	P0302	P0303	P0304	P0305	P0306	P0307	P0308
Ethanol Composition Sensor FA	P0178	P0179	P2269						
IAC_SystemRPM_FA	P0506	P0507							
ControllerProcessorPerf_FA	P0606								
ControllerRAM_Error_FA	P0604								
5VoltReferenceB_FA	P0651								
5VoltReferenceMAP_OOR_Fit	P0697								
VehicleSpeedSensor_FA	P0502	P0503	P0722	P0723					
CrankSensorFA	P0335	P0336							
EngineMisfireDetected_TFTKO	P0300	P0301	P0302	P0303	P0304	P0305	P0306	P0307	P0308
EngineMisfireDetected_FA	P0300	P0301	P0302	P0303	P0304	P0305	P0306	P0307	P0308
Other Definitions	-----								
LowFuelConditionDiagnostic	< 10 % AND No Active DTCs: FuelLevelDataFault P0462 P0463 for at least 30 seconds.								
Transfer Pump is Commanded On	----- Tank < 0.0 liters AND Fuel Volume in Secondary Fuel Tank ≥ 100.0 liters AND Transfer Pump on Time < TransferPumpOnTimeLimit Table AND Transfer Pump had been Off for at least 0.0 seconds AND Evap Diagnostic (Purge Valve Leak Test, Large Leak Test, and Waiting for Purge) is not running AND Engine Running								